

Ersatzteilinformation
Sparepart information

58300000115889_ABZ_INT_B

28.03.2008

3/5

F10-S_D_5500000022635_5500000021355

Attention, important note!
Code must absolutely be adjusted to the unit to be repaired. Since otherwise consequential damage may occur.

Variant-Codification		Display
Activation of coding mode	Set the program selector switch to „9 o'clock position“ (Pos. 12) Wait until Start-LED starts to flash Press speed selector button and hold it pressed, while setting the program selector switch to position 11 Release speed selector button	Start-LED illuminates permanently
Choose variant to set	Set program selector to: Position 2: Setting of key variant Position 3: Setting of speed variant Position 4: Setting of aquastop variant Position 5: Setting of hot water (hc-fill) variant	Start-LED illuminates permanently siehe table 1 siehe table 2 siehe table 3 siehe table 4
Setting of variant	The variant code value is incremented by pressing the appliances with display by ==> appliances without display ==>	0 – 15 at display without display, binaric coded display via speed indicator LED's



Table 1

Push buttons on panel				With display	Without display speed indicator LED's	Push buttons on panel				With display	Without display speed indicator LED's
Int	Pre	Li	Xrin	0	○ ○ ○ ● ○ ○ ○ ○ ○ ○ ○ ○	Int	Pre	Li	8	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○	
Int	Pre	Li	AqX	1	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○	Int	Pre	Xrin	9	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○	
Int	Pre	Li		2	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○	Int	Pre	AqX	10	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○	
Int	Pre	Xrin		3	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○						
Int	Pre	AqX		4	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○						
Int	Pre			7	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○						

Copyright © by BSH Bosch und Siemens Hausgeräte GmbH

Ersatzteilinformation
Sparepart information

58300000115889_ABZ_INT_B

28.03.2008

4/5

F10-S_D_5500000022635_5500000021355

Table 2
Speed variant

variant	Reduced spin button	Without display speed indicator LED's
0	1600 / 1400	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
1	1500 / 1300	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
2	1200	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
3	1100	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
4	1000	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
5	900	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
6	800	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
7	700	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

Table 3
Aquastop-variant

variant		Without display speed indicator LED's
0	Without	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
1	with	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

Table 4
Hot-cold water variant

variant		Without display speed indicator LED's
0	Cold water	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
1	Hot water	○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

Legende

Push button declaration	
Int	Extended washing time
Pre	Pre wash
Li	Less Ironing
Xrin	Extra rinse
AqX	Aqua extra

Copyright © by BSH Bosch und Siemens Hausgeräte GmbH