



## Kit de dépannage alimentation R4000 R5000 CAT 1



**35065920**

Qté	Désignation	Position
1	10 $\mu$ F 50V	CP007
1	100 $\mu$ F 20% 25V	CP008
1	220 $\mu$ F 20% 10V	CP041
1	47 $\mu$ F 20% 50V	CP071
1	1000 $\mu$ F 20% 16V	CP081
1	1000 $\mu$ F 20% 16V	CP082
1	470 $\mu$ F 20% 25V (R5000 SENSAR)	CP082
1	MUR115/BYW100	DP095
1	1AT	FP001
1	U4614B	IP001
1	1R5 5% 0.25W	RP018
1	2K2 5% 0.30W	RP021
1	OR1 10% 0,4W R4000	RP091
1	OR47 10% 0,40W R5000	RP091
1	BUL310XI/BUL310TF	TP001
1	2SA1020Y	TP091

