



	Every 10 minutes the operating point is adjusted by the remote control.
SLEEP	Press this button to activate the SLEEP function. The set point is adjusted automatically to increase comfort when sleeping.
TIMER	Press this button to set the time of automatic startup and/or shutdown.
SET - F/C	2) To resend the actual operating setting SET: 1) To confirm the TIME SETTING if temperature is displayed this function is enabled.
CLOCK	°F/°C: Choose the temperature measurement unit between Celsius (°C) or Fahrenheit (°F). Pressing the "CLOCK" button for a time longer than 2 seconds, it is possible to modify the "TIME SETTINGS". Pressing the "CLOCK" button for a time longer than 2 seconds, it is possible to modify the "TIME SETTINGS".
ROOM	This button works also when the remote control is displaying instead the local temperature is displayed instead the set point. Pressing this button the room symbol is displayed and the local temperature is displayed instead the set point.
LIGHT++	Pressing the light key on the airconditioner diffuser is switched off (if equipped). The light button works also when the remote control is off.
DIMMER LIGHT	Pressing this button it is possible to modify the air conditioner light level. To modify the light level pressing the "+" and "-" buttons.
PURE FUNCTION	Pressing this button it is possible to enable or disable the PURE FUNCTION.
ON/OFF	Press the ON/OFF button to start the airconditioner. When it's OFF all the symbols are OFF except the clock and you can use the ROOM and the LIGHT buttons.
Q	Press the ON/OFF button to start the airconditioner. When it's OFF all the symbols are OFF except the clock and you can use the ROOM and the LIGHT buttons.
I FEEL	Measuring the room symbol after pressing the "I FEEL" button works also when the remote control is off.
SLEEP	Press this button to activate the SLEEP function. The set point is adjusted automatically to increase comfort when sleeping.
TIMER	Press this button to set the time of automatic startup and/or shutdown.
SET - F/C	2) To resend the actual operating setting SET: 1) To confirm the TIME SETTING if temperature is displayed this function is enabled.
CLOCK	°F/°C: Choose the temperature measurement unit between Celsius (°C) or Fahrenheit (°F). Pressing the "CLOCK" button for a time longer than 2 seconds, it is possible to modify the "TIME SETTINGS".
ROOM	This button works also when the remote control is displaying instead the local temperature is displayed instead the set point. Pressing this button the room symbol is displayed and the local temperature is displayed instead the set point.
LIGHT++	Pressing the light key on the airconditioner diffuser is switched off (if equipped). The light button works also when the remote control is off.
DIMMER LIGHT	Pressing this button it is possible to modify the air conditioner light level. To modify the light level pressing the "+" and "-" buttons.
PURE FUNCTION	Pressing this button it is possible to enable or disable the PURE FUNCTION.
ON/OFF	Press the ON/OFF button to start the airconditioner. When it's OFF all the symbols are OFF except the clock and you can use the ROOM and the LIGHT buttons.
Q	Press the ON/OFF button to start the airconditioner. When it's OFF all the symbols are OFF except the clock and you can use the ROOM and the LIGHT buttons.
I FEEL	Measuring the room symbol after pressing the "I FEEL" button works also when the remote control is off.

BUTTON DESCRIPTION

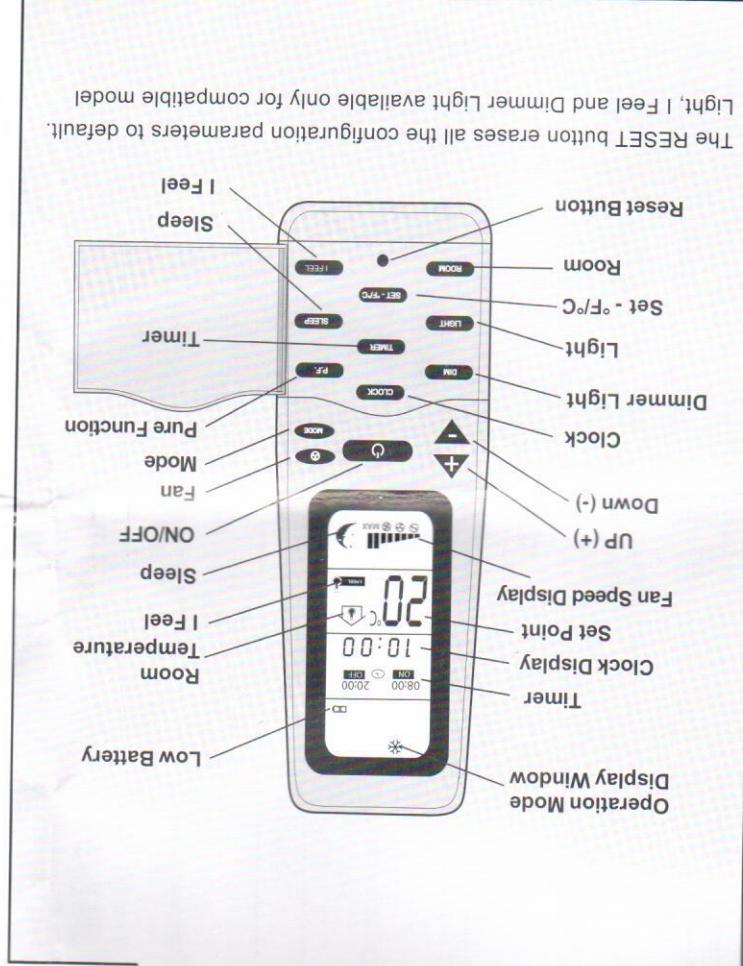

REMOTE CONTROL

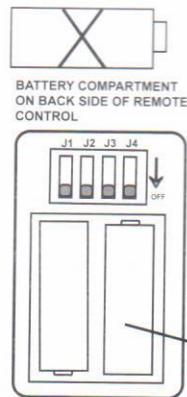


Low battery
The low battery symbol will appear in the display window when the low battery condition exists.


In this case after each command, the "low voltage symbol" flickers for 2 seconds. In these 2 seconds the remote control is not able to send other commands.

Replace the batteries
2x1.5V AAA


Configuring the remote control

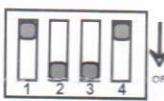


For models:
B1600 - B2200

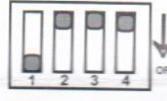

For models:
Freshjet

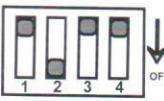


For models:
FRESHLIGHT

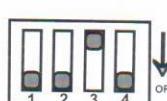

For models:
FreshWell 3000

Note: Press RESET and reset the clock after each modification.

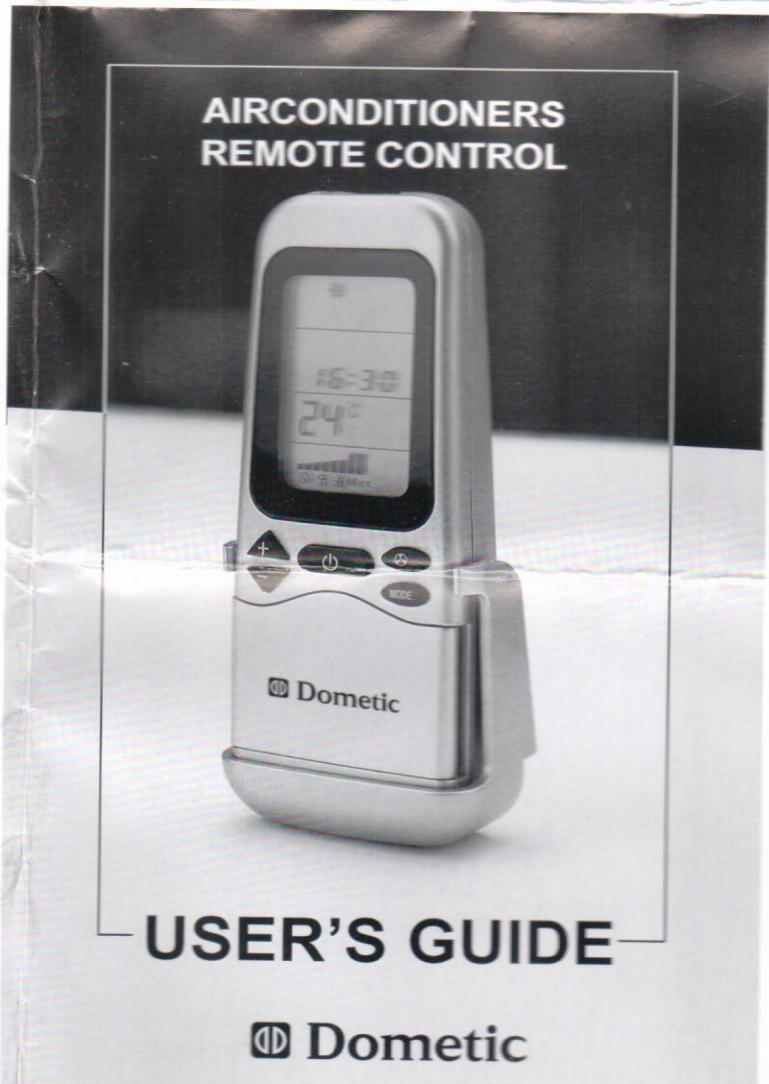

 Press the ON/OFF button to start the airconditioner

AUTOMATIC MODE




COOL / HEAT MODE

	Press the MODE button. Set to "AUTO"
	Choose the Set Point available only for compatible model

In this mode the fan button is disabled.
You can use the LIGHT and ROOM button.

FAN MODE

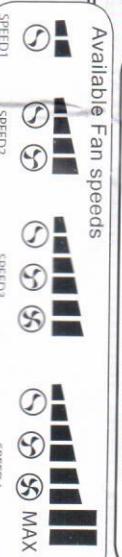

	Press the MODE button. Set to "COOL" or "HEAT"
	Choose the Set Point
	Choose the Fan Speed

	Press the MODE button. Set to "FAN"
	Choose the Fan Speed

TIMER



Note: Every time the timer button is pressed, the display flashes for 15 seconds while waiting for the settings to be modified. Remember to set the clock to the correct time before using this function.

Setting the "ON" timer (automatic startup)

- 1) Press the TIMER button and the ON clock will start to flash.
- 2) Set the time required using the + and - buttons
- 3) Point the remote control at the receiver and press the "SET" button to confirm

Setting the "OFF" timer (automatic shutdown)

- 1) Press the TIMER button twice and the OFF clock will start to flash.
- 2) Set the time required using the + and - buttons
- 3) Point the remote control at the receiver and press the "SET" button to confirm

SLEEP



- 1) Select the required temperature.
- 2) Press the SLEEP button

Note: The SLEEP function lowers the set temperature by 1° after one hour and by 2° after two hours.

ACTIVE VENTILATION



	Press the MODE button. Set to "ACTIVE VENTILATION" available only for compatible model
	In this mode the fan button is disabled. You can use the LIGHT and ROOM button.

I FEEL

- 1) Press the I FEEL button to enable the function.
- 2) Position the remote control so that it is possible to send signals to the receiver.
- 3) The operating temperature is adjusted to the temperature detected by the remote control.

Note: The remote control must not be in an area that is much warmer or much cooler than the normal room temperature (e.g.: exposed to direct sunlight or to the cold air coming from the diffuser.)

DEHUMIDIFY MODE



	Press the MODE button. Set to "dehumidify"
	Choose the Set Point

In this mode the fan button is disabled.
You can use the LIGHT and ROOM button.