

MECHANICAL PARTS LIST

1	4822 444 40476	Front for CD52
1	4822 444 40472	Front for CD42
1	4822 444 40477	Front for CD32
2	4822 459 10747	Wordmark
3	4822 450 61767	Window for CD52, CD42
3	4822 450 61785	Window for CD32
4	4822 410 61465	Button, push for CD52
4	4822 410 61459	Button, push for CD42
4	4822 410 61517	Button, push for CD32
5	4822 410 61457	Button, push
6	4822 410 61466	Set of knobs for CD52
8	4822 410 61467	Button, Head Phone for CD52
32	4822 402 50276	Bracket, Switch
33	4822 492 52123	Sprng, Compres.
33	4822 492 52123	Sprng, Compres.
55	4822 361 21452	Motor
56	4822 528 81447	Pulley
57	4822 528 81329	Pulley
58	4822 358-10115	Belt, Driving
65	4822 492 51902	Sprng, Compres.
69	4822 466 61587	Foam
73	4822 402 61253	Guide
75	4822 402 61252	Guide
77	4822 492 52094	Sprng, Compres. Unit CDM-4
86	4822 402 61196	Support
95	4822 466 93011	Plate
96	4822 528 90638	Roller
98	4822 325 50177	Grommet, Cable
110	4822 444 50603	Tray
111	4822 532 51756	Grommet
113	4822 444 60568	Lid
114	4822 528 90639	Roller
116	4822 402 61207	Holder
118	4822 530 80503	Ring, Pressure
120	4822 466 92257	Plate
121	4822 520 40177	Ball
125	4822 492 32883	Sprng, Tension
130	4822 410 61458	Button, Push
131	4822 535 93251	Rod
141	4822 462 41859	Foot
167	4822 502 30677	Screw, Selftap
170	4822 454 30456	Plate, Ornament
171	4822 459 11048	Plate, Name
172	4822 459 11047	Plate, Name
185	4822 444 60766	Cover
186	4822 502 30678	Screw, Selftap
195	4822 466 40577	Felt
301	4822 321 10249	AC-Cord for /02B
301	4822 321 10719	AC-Cord for /05B
302	4822 321 22832	Cable, Connect
309	4822 736 21196	User's Manual for CD52
309	4822 736 21187	User's Manual for CD42, CD32
352	4822 218 10419	Remote Control for CD52, CD42
455	4822 600 70643	Box for CD52
455	4822 600 70641	Box for CD42
455	4822 600 70645	Box for CD32
460	4822 600 10294	Cushion
475	4822 535 92907	Key

EXPLODED VIEW



