

Codes de programmation pour télécommandes Jolly par récepteur.

Marque	Référence	Référence télécommande				
		925.011	925.012	925.013	925.017	925.018
ASTON	3260253	04997	04997	04997	4997	4997
ASTON	DIVA	04997	04997	04997	4997	4997
ASTON	DIVAPREMIUM	04997	04997	04997	4997	4997
FREESAT	TSF4000	04442	04442	04442	4442	4442
FREESAT	TSF8500HD	00658	00658	00658	4058	00658
HIRSCMANN	CSR1200	04555	04555	04555	-	4555
LENSON	LD8000	00744	00744	00744	4373	00744
LENSON	LD9000	04895	04895	04895	4895	04895
LENSON	LD9010	04895	04895	04895	4895	04895
LENSON	LD9500	00714	00714	00714	4150	00714
LENSON	LT2010	04784	04784	04784	4784	04784
LENSON	LT3008	04784	04784	04784	4784	04784
LENSON	LT4008	00602	00602	00602	4002	00602
LENSON	LT5008	00602	00602	00602	4002	00602
LENSON	LT5010	-	-	-	-	-
NELI	990.060	00811	00811	00811	4345	00811
PHILIPS	DTR230	04829	04829	04829	4829	04829
SAGEM	BPRSI88250HD	-	-	-	-	-
SAGEM	DS77	04718	04718	04718	4718	04718
SAGEM	DS86	04689	04689	04689	4689	04689
SAGEM	DS87HD	00715	00715	00715	4151	00715
SAGEM	DTR84250THD	04457	04457	04457	4457	04457
SAGEM	DTR94160SHD	-	-	-	-	-
SAGEM	ISD74	04718	04718	04718	4718	04718
SAGEM	ISD75	04718	04718	04718	4718	04718
SAGEM	ISD91	04689	04689	04689	4689	04689
SERVIMAT	TNT59USB	04851	04851	04851	4851	04851
SERVISAT	TSV6000	04611	04611	04611	4611	04611
SERVISAT	TSV6500HD	00658	00658	00658	4058	00658
SERVISAT	TSV7500HD	00658	00658	00658	4058	00658
TELEVES	7117	04715	04715	04715	4715	04715
TELEVES	7229	04153	04153	04153	-	04153
TELEVES	7118	04736	04736	04736	4736	04736
TELEVES	7175	04937	04937	04937	4937	04937
TRIAX	TTR301	04784	04784	04784	4784	04784
WISI	OR03HD	00658	00658	00658	4058	00658
WISI	OR03S	04442	04442	04442	4442	4442
WIZZ	DUO	04229	04229	04229	4229	04229
WIZZ	DUOCINE	04229	04229	04229	4229	04229
WIZZ	EASY	04784	04784	04784	4784	04784
WIZZ	FIRST	04229	04229	04229	4229	04229