


5. REPAIR PARTS LIST

5-1-9. MECHANICAL CHASSIS BLOCK ASSEMBLY

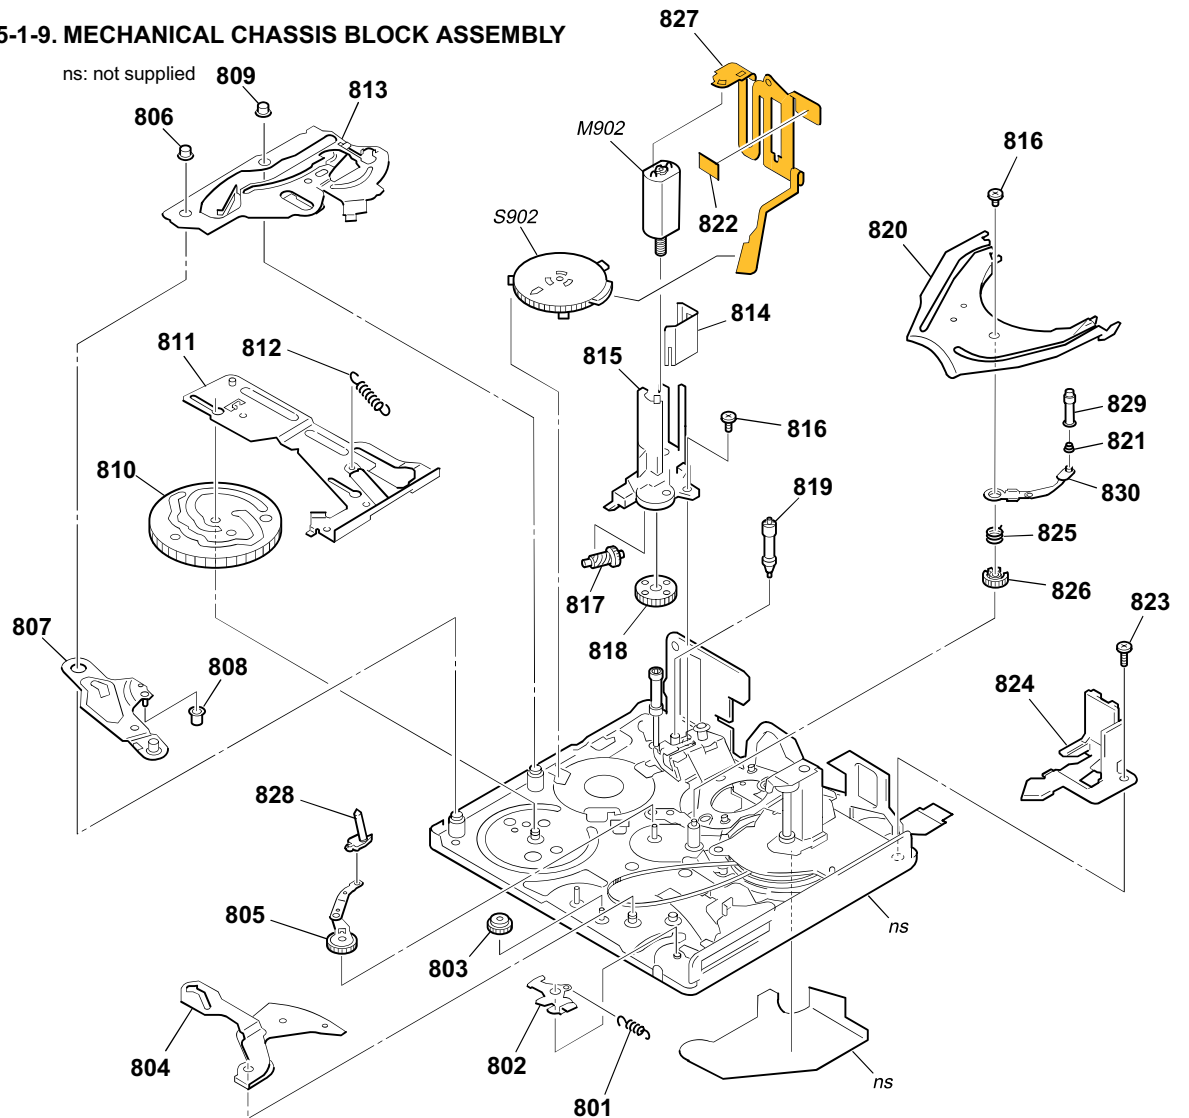

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
801	3-079-314-01	SPRING (EJ), EXTENSION	817	3-079-308-01	SHAFT, WORM
802	3-079-327-01	ARM, EJ	818	3-079-309-01	GEAR, DECELERATION
803	3-079-323-01	GEAR, CONVERSION	819	X-3952-942-2	ROLLER ASSY, TG3
804	3-079-324-01	ARM, GL DRIVING	820	3-079-325-01	RAIL, GUIDE
805	X-3952-928-1	GL (S) ASSY	821	3-079-295-02	SPRING, TG5
806	3-079-315-01	ROLLER (S1), LS GUIDE	822	1-677-049-11	FP-228 FLEXIBLE BOARD (DEW SENSOR)
807	X-3952-925-1	ARM ASSY, LS	823	3-079-328-01	SCREW (M1.4), SPECIAL HEAD
808	3-079-320-01	ROLLER, LS	824	3-079-326-02	SUPPORT, TG7
809	3-079-316-01	ROLLER (S2), LS GUIDE	825	3-079-301-01	SPRING (GLT), TORSION
810	3-079-319-01	GEAR, CAM	826	3-079-298-01	GEAR (T), GL
811	X-3954-274-2	SLIDER ASSY (N), M	827	1-686-798-11	FP-467 FLEXIBLE BOARD
812	3-079-321-02	SPRING (PINCH), EXTENSION	828	X-3952-927-2	COASTER (S) ASSY
813	X-3954-273-2	PLATE ASSY (N), TG2 CAM	829	X-3952-930-3	ROLLER ASSY, TG5
814	3-079-312-01	SHIELD, MOTOR	830	X-3952-929-1	COASTER (T) ASSY
815	3-079-307-02	HOLDER, MOTOR	M902	A-7095-396-A	MOTOR BLOCK ASSY, L (LOADING)
816	3-085-330-01	SCREW, SPECIAL	S902	1-477-679-11	ROTARY, ENCODER (SWITCH) (MODE SWITCH)