

12. EXPLODED VIEW AND PARTS LIST

12.1 CHASSIS

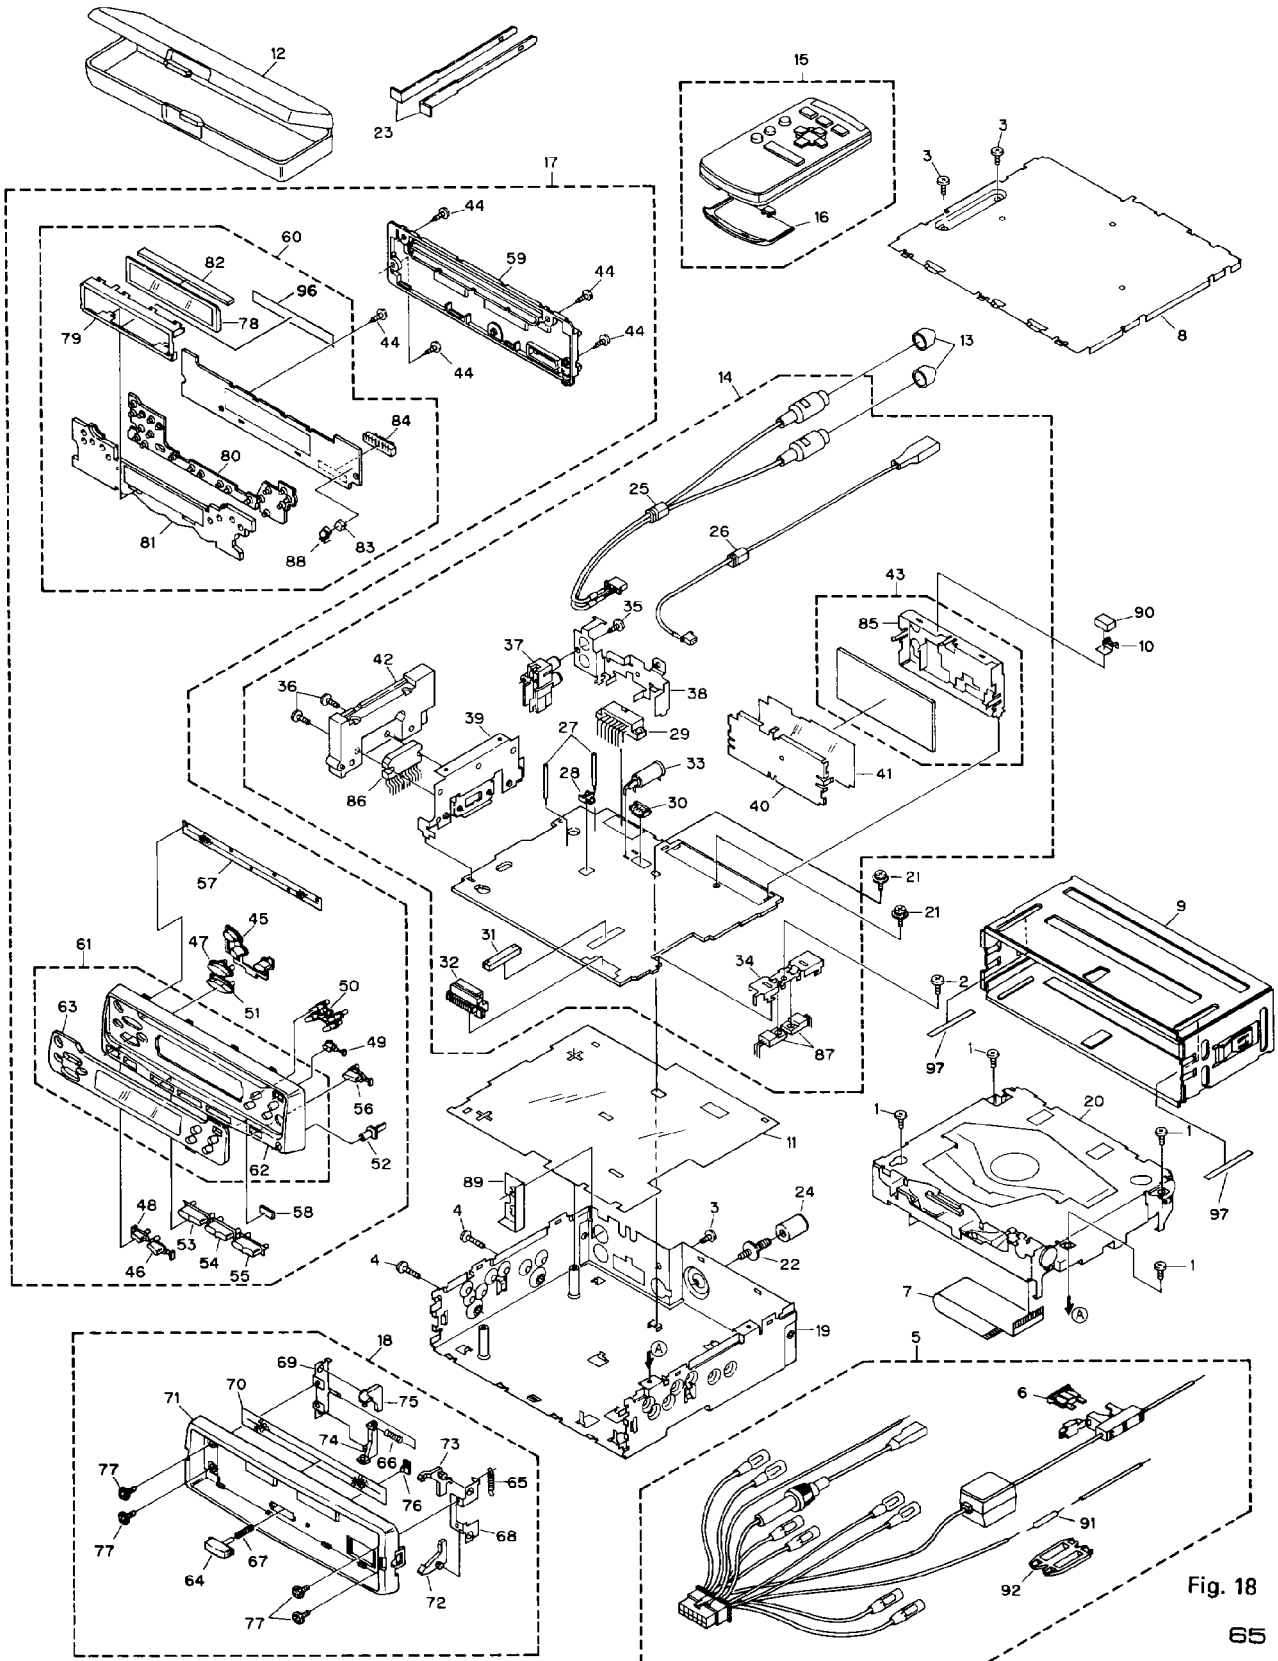


Fig. 18

DEH-625R,624R,525R,524R,424R,424,425

NOTE:

● Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.

● Parts List

| Mark No. | Description | Part No. | Mark No. | Description | Part No. |
|----------|-----------------------|--------------|----------|------------------|--------------|
| 1 | Screw | BSZ26P050FMC | 41 | Insulator | CNM4684 |
| 2 | Screw | BSZ26P080FMC | 42 | Heat Sink | CNR1407 |
| 3 | Screw | BSZ30P050FMC | 43 | FM/AM Tuner Unit | CWE1416 |
| 4 | Screw | BSZ30P160FMC | 44 | Screw | BPZ20P100FZK |
| 5 | Cord | CDE4867 | 45 | Button (S,SEEK) | CAC4469 |
| 6 | Fuse | CEK1136 | 46 | Button (BAND) | CAC4470 |
| 7 | Cable | CDE4869 | 47 | Button (+) | CAC4471 |
| 8 | Case | CNB1989 | 48 | Button (SOURCE) | CAC4472 |
| 9 | Holder | CNC4946 | 49 | Button (EJECT) | CAC4473 |
| 10 | Holder | CNC6469 | 50 | Button (*,-) | CAC4474 |
| 11 | Insulator | CNM4522 | 51 | Button (-) | CAC4542 |
| 12 | Case | CNS3860 | 52 | Button (DETACH) | CAC4547 |
| 13 | Cap | CNV2680 | 53 | Button (1 2) | CAC4578 |
| 14 | Tuner Amp Unit | CWM4483 | 54 | Button (3 4) | CAC4579 |
| 15 | Remote Control Assy | CXA7390 | 55 | Button (5 6) | CAC4580 |
| 16 | Battery Cover | CNS3383 | 56 | Button (BSM) | CAC4581 |
| 17 | Detach Grille Assy | CXA8575 | 57 | Cover | CNM4704 |
| 18 | Panel Assy | CXA8578 | 58 | Spacer | CNM4776 |
| 19 | Chassis Unit | CXA8904 | 59 | Cover | CNS3694 |
| 20 | CD Mechanism Module | CXK5001 | 60 | Key Board Unit | CWM4605 |
| 21 | Screw | PSB30P060FMC | 61 | Grille Unit | CXA9109 |
| 22 | Screw | CBA1284 | 62 | Grille | CNS4040 |
| 23 | Handle | CNC4947 | 63 | Plate | CNS3989 |
| 24 | Bush | CNV1009 | 64 | Button | CAC3776 |
| 25 | Cord | CDE4770 | 65 | Spring | CBH1834 |
| 26 | Cord | CDE4771 | 66 | Spring | CBH1835 |
| 27 | Clamper | CEF1005 | 67 | Spring | CBH1858 |
| 28 | Plug(CN601)(2P) | CKM1129 | 68 | Bracket | CNC6135 |
| 29 | Plug(CN951)(12P) | CKM1225 | 69 | Bracket | CNC6136 |
| 30 | Plug(CN422)(4P) | CKS1238 | 70 | Cover | CNM4875 |
| 31 | Connector(CN681)(25P) | CKS2228 | 71 | Panel | CNS3744 |
| 32 | Connector(CN651)(8P) | CKS2884 | 72 | Arm | CNV4358 |
| 33 | Antenna Jack(CN501) | CKX1006 | 73 | Arm | CNV4359 |
| 34 | Holder | CNC6132 | 74 | Arm | CNV4437 |
| 35 | Screw | BPZ26P080FMC | 75 | Arm | CNV4438 |
| 36 | Screw | BSZ26P120FMC | 76 | Lens | CNV4479 |
| 37 | Connector(CN421) | CKS3357 | 77 | Screw | PMS20P030FZK |
| 38 | Bracket | CNC6130 | 78 | LCD | CAW1350 |
| 39 | Holder | CNC6131 | 79 | Holder | CNC6134 |
| 40 | Holder | CNC6356 | 80 | Rubber | CNV4354 |

DEH-625R,624R,525R,524R,424R,424,425

| Mark No. | Description | Part No. | Mark No. | Description | Part No. |
|----------|----------------------|----------|----------|----------------------|-------------|
| 81 | Lens | CNV4355 | 86 | IC(IC551) | PAL003A |
| 82 | Connector | CNV4449 | 87 | Transistor(Q981,991) | 2SD2396 |
| 83 | Spacer | CNM4740 | 88 | IC(IC902) | RPM-678CBR |
| 84 | Connector(CN901)(8P) | CKS2883 | 89 | Insulator | CNM4811 |
| 85 | Holder | CNC6555 | 90 | Cushion | CNM4870 |
| | | | 91 | Resistor | RS1/2P102JL |
| | | | 92 | Cap | CNS1472 |
| | | | 93-95 | ***** | |
| | | | 96 | Spacer | CNM4871 |
| | | | * 97 | Spacer | CNM4888 |

● The DEH-624R/EW, DEH-525R/EW, DEH-524R/EW, DEH-424R/GR, DEH-424/EW, and DEH-425/IT Parts Lists enumerate the parts which differ from those enumerated in the DEH-625R/EW Parts List only. The parts other than those enumerated in the former are identical with those in the latter, to which you are requested to refer, accordingly. The DEH-625R/EW Parts List is given on page 65.

| Mark No. | Description | 625R/EW | 624R/EW | 525R/EW | 524R/EW | 424R/GR | 424/EW | 425/IT |
|----------|---------------------|----------|----------|----------|----------|----------|----------|----------|
| | | Part No. | Part No. | Part No. | Part No. | Part No. | Part No. | Part No. |
| 13 | Cap | CNV2680 | CNV2680 | ***** | ***** | ***** | ***** | ***** |
| 14 | Tuner Amp Unit | CWM4483 | CWM4483 | CWM4484 | CWM4484 | CWM4492 | CWM4493 | CWM4493 |
| 15 | Remote Control Assy | CXA7390 | CXA8336 | ***** | ***** | ***** | ***** | ***** |
| 16 | Battery Cover | CNS3383 | CNS3383 | ***** | ***** | ***** | ***** | ***** |
| 17 | Detach Grille Assy | CXA8575 | CXA8214 | CXA8576 | CXA8249 | CXA8257 | CXA8258 | CXA8577 |
| 18 | Panel Assy | CXA8578 | CXA8215 | CXA8579 | CXA8296 | CXA8296 | CXA8296 | CXA8579 |
| 19 | Chassis Unit | CXA8904 | CXA8211 | CXA8905 | CXA8228 | CXA8906 | CXA8907 | CXA8231 |
| 25 | Cord | CDE4770 | CDE4770 | ***** | ***** | ***** | ***** | ***** |
| 26 | Cord | CDE4771 | CDE4771 | ***** | ***** | ***** | ***** | ***** |
| 27 | Clamper | CEF1005 | CEF1005 | ***** | ***** | ***** | ***** | ***** |
| 28 | Plug(CN601) | CKM1129 | CKM1129 | ***** | ***** | ***** | ***** | ***** |
| 30 | Plug(CN422) | CKS1238 | CKS1238 | ***** | ***** | ***** | ***** | ***** |
| 40 | Holder | CNC6356 | CNC6356 | CNC6356 | CNC6356 | CNC6356 | ***** | ***** |
| 41 | Insulator | CNM4684 | CNM4684 | CNM4684 | CNM4684 | CNM4684 | ***** | ***** |
| 43 | FM/AM Tuner Unit | CWE1416 | CWE1416 | CWE1416 | CWE1416 | CWE1420 | CWE1416 | CWE1416 |
| 45 | Button(S,SEEK) | CAC4469 | CAC4622 | CAC4469 | CAC4622 | CAC4622 | CAC4622 | CAC4469 |
| 46 | Button(BAND) | CAC4470 | CAC4621 | CAC4470 | CAC4621 | CAC4621 | CAC4621 | CAC4470 |
| 47 | Button(+) | CAC4471 | CAC4584 | CAC4471 | CAC4584 | CAC4584 | CAC4584 | CAC4471 |
| 48 | Button(SOURCE) | CAC4472 | CAC4734 | CAC4472 | CAC4734 | CAC4734 | CAC4734 | CAC4472 |
| 50 | Button(+,-) | CAC4474 | CAC4623 | CAC4474 | CAC4623 | CAC4623 | CAC4623 | CAC4474 |
| 51 | Button(-) | CAC4542 | CAC4585 | CAC4542 | CAC4585 | CAC4585 | CAC4585 | CAC4542 |
| 52 | Button(DETACH) | CAC4547 | CAC4586 | CAC4547 | CAC4586 | CAC4586 | CAC4586 | CAC4547 |
| 53 | Button(1 2) | CAC4578 | CAC4587 | CAC4578 | CAC4587 | CAC4587 | CAC4587 | CAC4578 |
| 54 | Button(3 4) | CAC4579 | CAC4588 | CAC4579 | CAC4588 | CAC4588 | CAC4588 | CAC4579 |
| 55 | Button(5 6) | CAC4580 | CAC4589 | CAC4580 | CAC4589 | CAC4589 | CAC4589 | CAC4580 |
| 56 | Button(BSM) | CAC4581 | CAC4590 | CAC4581 | CAC4590 | CAC4590 | CAC4590 | CAC4581 |
| 59 | Cover | CNS3694 | CNS3817 | CNS3694 | CNS3817 | CNS3817 | CNS3817 | CNS3694 |
| 60 | Key Board Unit | CWM4605 | CWM4499 | CWM4606 | CWM4500 | CWM4503 | CWM4608 | CWM4607 |
| 61 | Grille Unit | CXA9109 | CXA9108 | CXA8281 | CXA8581 | CXA8289 | CXA8290 | CXA8582 |
| 62 | Grille | CNS4040 | CNS4041 | CNS3813 | CNS3812 | CNS3812 | CNS3812 | CNS3813 |

DEH-625R,624R,525R,524R,424R,424,425

| Mark No. | Description | 625R/EW | 624R/EW | 525R/EW | 524R/EW | 424R/GR | 424/EW | 425/IT |
|----------|-------------|------------|------------|----------|----------|----------|----------|----------|
| | | Part No. | Part No. | Part No. | Part No. | Part No. | Part No. | Part No. |
| 63 | Plate | CNS3989 | CNS3814 | CNS3696 | CNS3815 | CNS3698 | CNS3739 | CNS3816 |
| 71 | Panel | CNS3744 | CNS3818 | CNS3744 | CNS3818 | CNS3818 | CNS3818 | CNS3744 |
| 76 | Lens | CNV4479 | CNV4479 | ***** | ***** | ***** | ***** | ***** |
| 78 | LCD | CAW1350 | CAW1328 | CAW1350 | CAW1328 | CAW1328 | CAW1330 | CAW1330 |
| 79 | Holder | CNC6134 | CNC6134 | CNC6134 | CNC6134 | CNC6134 | CNC6430 | CNC6430 |
| 83 | Spacer | CNM4740 | CNM4740 | ***** | ***** | ***** | ***** | ***** |
| 88 | IC(IC902) | RPM-678CBR | RPM-678CBR | ***** | ***** | ***** | ***** | ***** |

DEH-625R,624R,525R,524R,424R,424,425

● Parts List

| Mark No. | Description | Part No. | Mark No. | Description | Part No. |
|----------|-------------------|--------------|----------|-------------------------|--------------|
| 1 | Control Unit | CWX1889 | 46 | Arm | CNV4124 |
| 2 | CD Mechanism Unit | CXA8870 | 47 | Arm | CNV4125 |
| 3 | Screw | PMS26P035FMC | 48 | Gear | CNV4128 |
| 4 | Screw | BMZ20P030FMC | 49 | Gear | CNV4129 |
| 5 | Screw | BSZ20P040FMC | 50 | Gear | CNV4130 |
| 6 | Screw(M2X3) | CBA1077 | 51 | Gear | CNV4131 |
| 7 | Screw(M2X2) | CBA1250 | 52 | Arm | CNV4136 |
| 8 | Screw(M2X5) | CBA1296 | 53 | Holder | CNV4663 |
| 9 | Screw(M2X3.85) | CBA1362 | 54 | Arm | CNV4138 |
| 10 | Spring | CBH1916 | 55 | Arm | CNV4139 |
| 11 | Spring | CBH1724 | 56 | Clamper | CNV4140 |
| 12 | Spring | CBH1727 | 57 | Holder | CNV4664 |
| 13 | Spring | CBH1729 | 58 | Guide | CNV4484 |
| 14 | Spring | CBH1730 | 59 | Roller | CNV4509 |
| 15 | Spring | CBH1731 | 60 | Chassis Unit | CXA8561 |
| 16 | Spring | CBH1732 | 61 | Arm Unit | CXA8565 |
| 17 | Spring | CBH1736 | 62 | Lever Unit | CXA8567 |
| 18 | Spring | CBH1745 | 63 | Screw Unit | CXA8699 |
| 19 | Spring | CBH1832 | 64 | Gear Unit | CXA8701 |
| 20 | Spring | CBH1833 | 65 | Load Motor Unit(M3) | CXA8702 |
| 21 | Spring | CBH1848 | 66 | CRG Motor Unit(M2) | CXA8986 |
| 22 | Spring | CBH1849 | 67 | Motor Unit(M1) | CXA9100 |
| 23 | Spring | CBH1863 | 68 | Screw | JFZ20P025FMC |
| 24 | Spring | CBL1214 | 69 | Connector(CN101) | CKS1953 |
| 25 | Spring | CBL1269 | 70 | Connector(CN701) | CKS2774 |
| 26 | Connector(CN1) | CDE4576 | 71 | Connector(CN801) | CKS2196 |
| 27 | PU Unit | CGY1070 | * 72 | Gathering P.C.Board | CNX2445 |
| 28 | Roller | CLA2627 | 73 | Photo-transistor(Q1, 2) | CPT-230S-X |
| 29 | Frame | CNC5796 | 74 | Sheet | CNM4873 |
| 30 | Frame | CNC5797 | 75 | Cushion | CNM3917 |
| 31 | Arm | CNC5799 | | | |
| * 32 | Arm | CNC5801 | | | |
| 33 | Bracket | CNC5871 | | | |
| 34 | Lever | CNC6054 | | | |
| 35 | Bracket | CNC6056 | | | |
| * 36 | Bracket | CNC6376 | | | |
| 37 | Spacer | CNM3315 | | | |
| 38 | Sheet | CNM4849 | | | |
| 39 | P.C.Board | CNP4230 | | | |
| 40 | Bearing | CNR1415 | | | |
| 41 | Belt | CNT1071 | | | |
| 42 | Damper | CNV3974 | | | |
| 43 | Arm | CNV4120 | | | |
| 44 | Arm | CNV4122 | | | |
| 45 | Arm | CNV4123 | | | |

13. PACKING METHOD

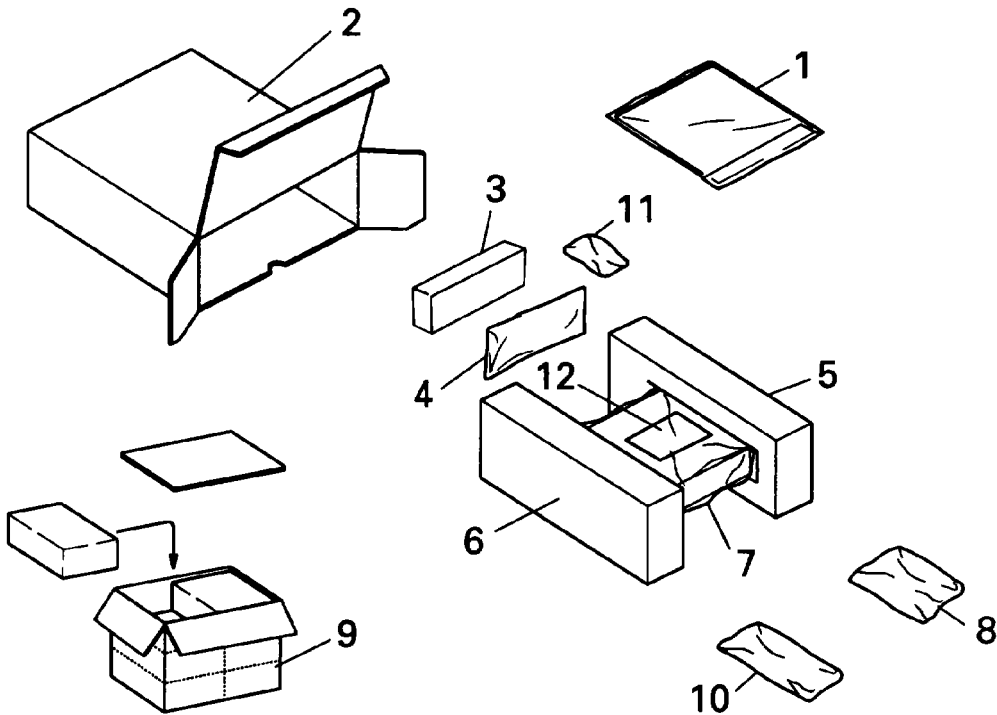


Fig. 20

● Parts List(DEH-625R/EW)

| Mark No. | Description | Part No. |
|----------|---------------------|----------|
| 1-1 | Owner's Manual | CRD1940 |
| 1-2 | Owner's Manual | CRD1941 |
| 1-3 | Owner's Manual | CRD1998 |
| 1-4 | Installation Manual | CRD1956 |
| * 1-5 | Warranty Card | CRY1087 |
| * 1-6 | Passport | CRY1013 |
| * 1-7 | Label | CRW1343 |
| 1-8 | Polyethylene Bag | CEG1116 |
| 2 | Carton | CHG2842 |
| 3 | Case | CNS3860 |

* : Non Spare Part

| Mark No. | Description | Part No. |
|----------|---------------------|----------|
| 4 | Cord | CDE4867 |
| 5 | Protector | CHP1769 |
| 6 | Protector | CHP1768 |
| 7 | Polyethylene Bag | CEG-162 |
| 8 | Accessory Assy | CEA1917 |
| 9 | Contain Box | CHL2842 |
| 10 | Accessory Assy | CEA1473 |
| 11 | Remote Control Assy | CXA7390 |
| * 12 | Caution Card | CRP1145 |

● Owner's Manual

| Model | Part No. | Language |
|---------------------------------------|----------|----------------------------------|
| DEH-625R/EW | CRD1940 | English, Spanish |
| DEH-624R/EW | CRD1941 | French, German |
| | CRD1998 | Italian, Dutch |
| DEH-525R/EW | CRD1942 | English, Spanish |
| DEH-524R/EW | CRD1943 | Italian, Dutch |
| DEH-525R/EW, DEH-524R/EW, DEH-424R/GR | CRD1959 | French, German |
| DEH-424/EW | CRD1944 | English, French, German, Spanish |
| DEH-424/EW, DEH-425/IT | CRD1958 | Italian, Dutch |

● Installation Manual

| Model | Part No. | Language |
|---|----------|----------------------------------|
| DEH-625R/EW, DEH-624R/EW | CRD1956 | English, Spanish, French, German |
| DEH-525R/EW, DEH-524R/EW, DEH-424R/GR, DEH-424/EW, DEH-425/IT | CRD1957 | Italian, Dutch |


DEH-625R, 624R, 525R, 524R, 424R, 424, 425

- The DEH-624R/EW, DEH-525R/EW, DEH-524R/EW, DEH-424R/GR, DEH-424/EW, and DEH-425/IT Parts Lists enumerate the parts which differ from those enumerated in the DEH-625R/EW Parts List only. The parts other than those enumerated in the former are identical with those in the latter, to which you are requested to refer, accordingly. The DEH-625R/EW Parts List is given on page 71.

| Mark No. | Description | 625R/EW | 624R/EW | 525R/EW | 524R/EW | 424R/GR | 424/EW | 425/IT |
|----------|---------------------|----------|----------|----------|----------|----------|----------|----------|
| | | Part No. | Part No. | Part No. | Part No. | Part No. | Part No. | Part No. |
| 1-1 | Owner's Manual | CRD1940 | CRD1940 | CRD1942 | CRD1942 | CRD1959 | CRD1944 | |
| 1-2 | Owner's Manual | CRD1941 | CRD1941 | CRD1943 | CRD1943 | | | |
| 1-3 | Owner's Manual | CRD1998 | CRD1998 | CRD1959 | CRD1959 | | CRD1958 | CRD1958 |
| * 1-4 | Installation Manual | CRD1956 | CRD1956 | CRD1957 | CRD1957 | CRD1957 | CRD1957 | CRD1957 |
| * 1-6 | Passport | CRY1013 | CRY1013 | CRY1013 | CRY1013 | CRY1013 | CRY1013 | |
| * 1-7 | Label | CRW1343 | CRW1343 | | | | | |
| 2 | Carton | CHG2842 | CHG2841 | CHG2844 | CHG2843 | CHG2850 | CHG2849 | CHG2851 |
| 9 | Contain Box | CHL2842 | CHL2841 | CHL2844 | CHL2843 | CHL2850 | CHL2849 | CHL2851 |
| 10 | Accessory Assy | CEA1473 | CEA1473 | | | | | |
| 11 | Remote Control Assy | CXA7390 | CXA8336 | | | | | |

● Accessory Assy

Accessory Assy CEA1917

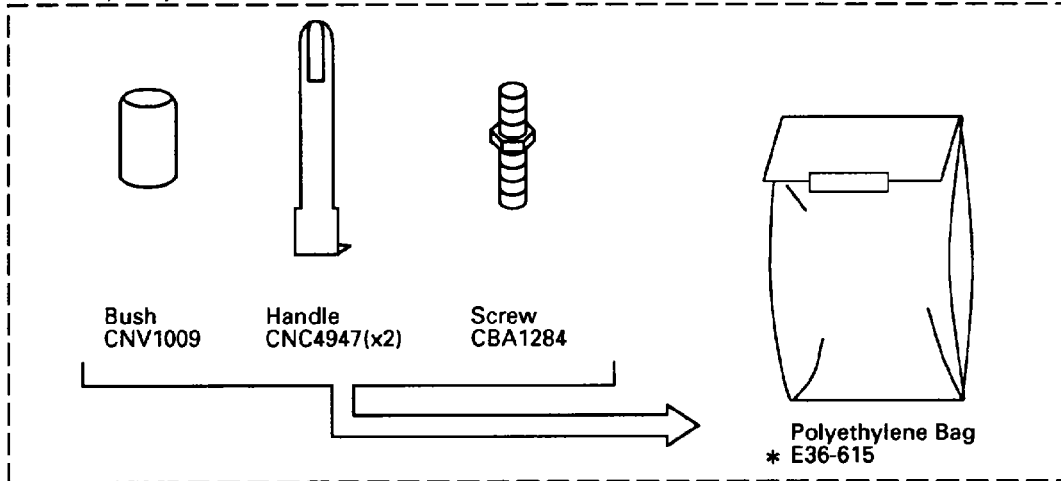

Accessory Assy CEA1473

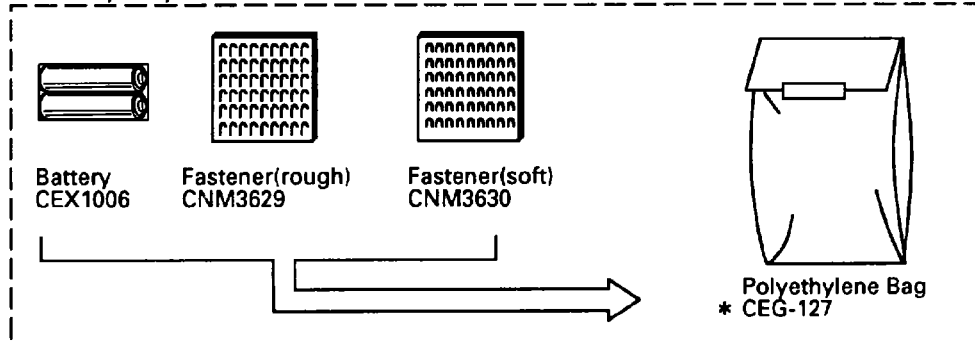


Fig. 21