


Mechanism Assembly

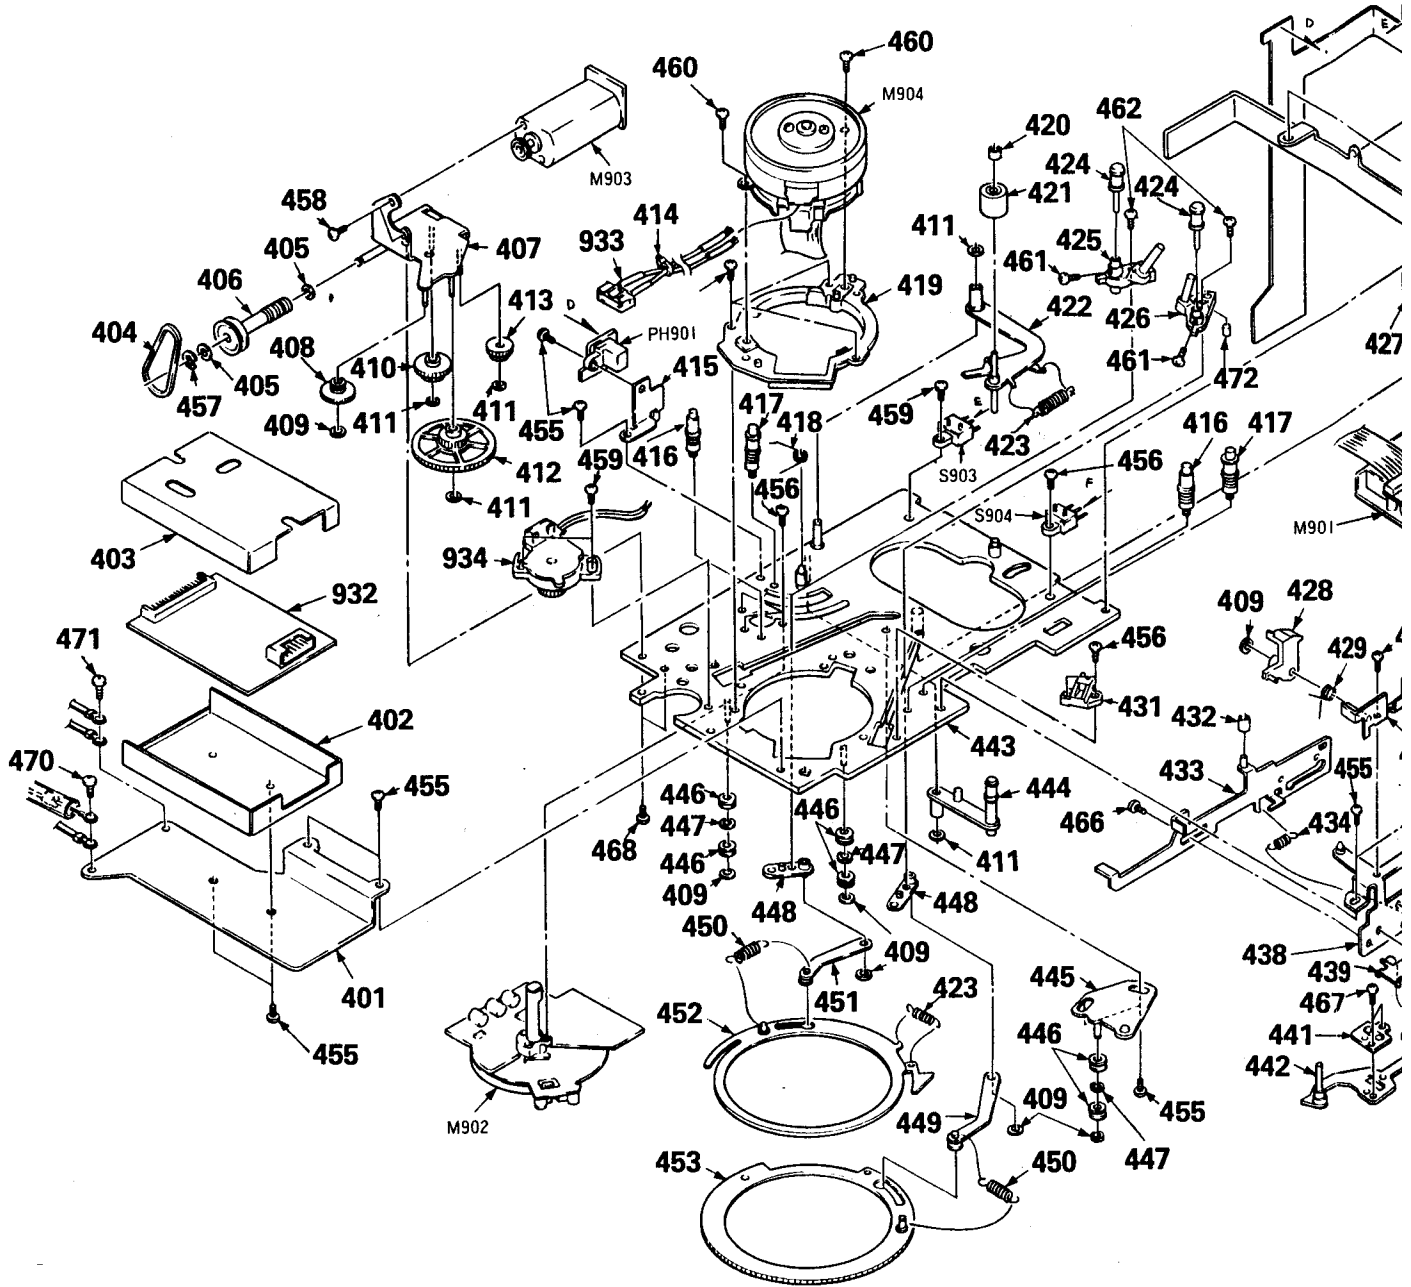

No.	Part No.	Description	Remarks
401	*3-337-666-01	BRACKET, RF	
402	*3-337-686-01	CASE (LOWER), SHIELD	
403	*3-337-682-01	CASE (UPPER), SHIELD	
404	3-337-652-01	BELT, CONTROL	
405	3-701-437-21	WASHER	
406	3-337-650-01	GEAR, WORM	
407	*X-3337-617-1	BRACKET ASSY, CONTROL MOTOR	
408	3-337-669-01	GEAR, MIDWAY	
409	3-559-408-11	WASHER, POLYETHYLENE, DIA.1.2	
410	3-337-649-01	WHEEL, WORM	

No.	Part No.	Description	Remarks
411	3-701-436-11	WASHER, STOPPER	
412	3-337-647-01	GEAR (A), LOADING	
413	3-337-648-01	GEAR (B), LOADING	
414	3-701-748-00	CLAMP	
415	*3-337-610-01	BRACKET (RIGHT), E DETECTION	
416	X-3337-623-1	GUIDE (5.0) ASSY, FIXED	
417	X-3337-621-1	GUIDE (4.0) ASSY, FIXED	
418	3-337-654-01	SPRING	
419	*X-3337-614-1	SLANT ASSY	
420	3-337-626-01	CAP, PINCH ROLLER	