
DVP5980/XX,DVP5982/XX Mechanical Exploded View

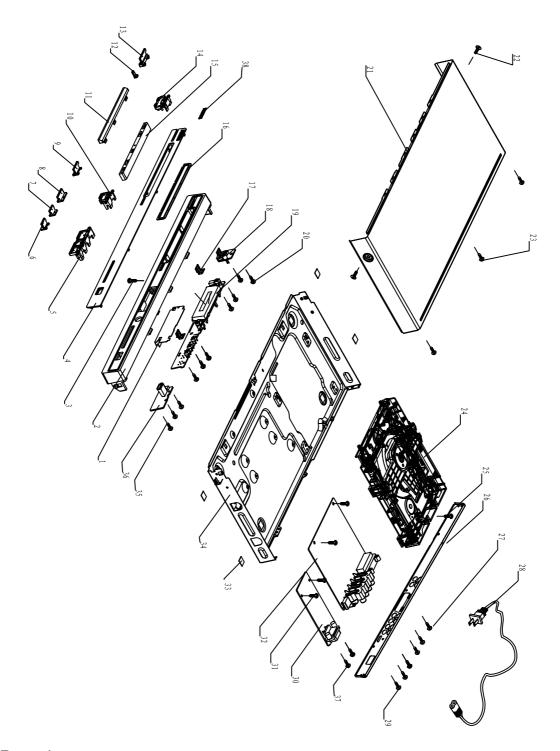

Remark:


Ass'y1 is the assemble component for location 2,4,5,6,7,8,9,10,12,13,14,16,38 Ass'y2 is the assemble compoient for location 11,15

It's a general Mechanical Exploded View for DVP5980/XX,DVP5982/XX, Detailed information please refer to Model set.

ENCASING & ACCESSORIES PARTS LIST SCREW LIST No 12NC No. Part Name Q'ty No 12NC No. Part Name Q'ty 1 / **ESD Plate** 1 3 Machine Screw Ass'y1 Front Panel Ass'y for DVP5980/05/12 1 20 S/T Screw B 2.6 X 8 BF / Front Panel Ass'y for DVP5982/37 22 Machine Screw 2 Machine Screw Ass'y2 Front Door Ass'y for DVP5980/05/12 23 3 / Front Door Ass'y for DVP5982/37 25 Machine Screw **Earthing Plate** Machine Screw 17 1 27 2 18 Ass'y-Switch Board 1 29 Machine Screw 1 31 Machine Screw 5 Triangle M/C Screw B 3 X 6 19 Ass'y- Front Board 1 35 2 S/T SCREW B 3 X 8 BF 2 21 Top cover 1 37 24 Loader 1 26 Rear Cabinet for DVP5980/05/12 1 Rear Cabinet for DVP5982/37 28 Power Cord for DVP5980/05 1 Power Cord for DVP5980/12 Power Cord for DVP5982/37 30 Ass'y-Power Board for DVP5980/05/12 1 Ass'y-Power Board for DVP5982/37 32 1 Ass'y-Main Board for DVP5980/05/12 Ass'y-Main Board for DVP5982/37 33 Pad 4 **Bottom Cabinet** 34 36 Ass'y -USB Board 1

Note:Only the parts mentioned in this list are normal service spare parts

DVP5980K/XX Mechanical Exploded View

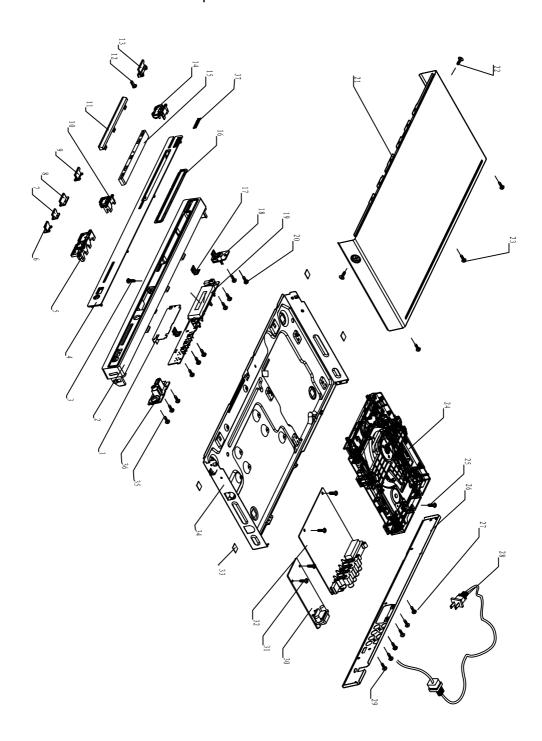

Remark:


Ass'y1 is the assemble component for location 2,4,5,6,7,8,9,10,12,13,14,16,38 Ass'y2 is the assemble compoient for location 11,15

It's a general Mechanical Exploded View for DVP5980K/XX, Detailed information please refer to Model set.

ENCASING & ACCESSORIES PARTS LIST				SCREW LIST			
No	12NC No.	Part Name	Q'ty	No	12NC No.	Part Name	Q'ty
1	1	ESD Plate	1	3	1	Machine Screw	1
Ass'y1	996510002165	Front Panel Ass'y	1	20	1	S/T Screw B 2.6 X 8 BF	7
Ass'y2	996510002164	Front Doorl Ass'y	1	22	1	Machine Screw	2
17	1	Earthing Plate	1	23	1	Machine Screw	3
18	996510001860	Ass'y-Switch Board	1	25	1	Machine Screw	1
19	996510001861	Ass'y- Front Board	1	27	/	Machine Screw	2
21	1	Top cover	1	29	1	Machine Screw	1
24	996510001864	Loader	1	31	1	Machine Screw	5
26	1	Rear Cabinet for DVP5980K/55	1	35	1	Triangle M/C Screw B 3 X 6	3
	1	Rear Cabinet for DVP5980K/75					
28	1	Power Cord for DVP5980K/55	1	Accessory			
	996510002166	Power Cord for DVP5980K/75		AVCAB	996510001106	VIDEO CABLE 1500mm	1
30	1	Power Board for DVP5980K/55	1	RC	996510001865	REMOTE CONTROL	1
	996510001859	Power Board for DVP5980K/75					
				Cable			
32	996510002163	Main Board for DVP5980K/55	1	CN2	996510001192	PH-5Y/PH-5Y L=130MM	1
33	1	Pad	4	J2	996510001222	HS 6P PH-6Y/PH-6Y	1
34	1	Bottom Cabinet	1	HA1	996510001108	24PIN FLAT WIRE	1
36	996510001863	Ass'y USB+OK Board	1	CON302	996510001868	CABLE HS 4P UL20080#28 160MM	1
				CON301	996510001867	CABLE HS PH-12Y/JC20-12P	1
				CN601	996510001866	CABLE 8P HS	1
				CON2	996510000546	8PIN HS	1

Note:Only the parts mentioned in this list are normal service spare parts

DVP5986K/XX Mechanical Exploded View

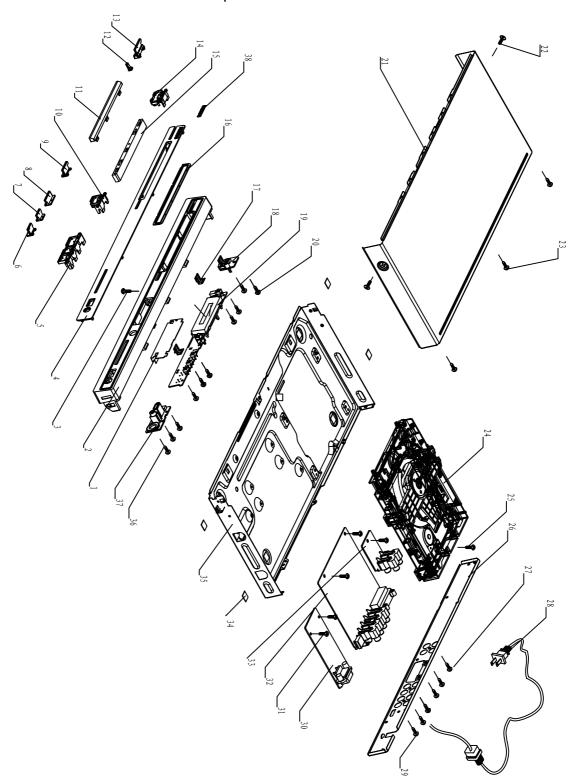

Remark:

Ass'y1 is the assemble component for location 2,4,5,6,7,8,9,10,12,13,14,16,38 Ass'y2 is the assemble compoient for location 11,15

It's a general Mechanical Exploded View for DVP5986K/XX, Detailed information please refer to Model set.

ENCASING & ACCESSORIES PARTS LIST SCREW LIST 12NC No. 12NC No. No Part Name Q'ty No Part Name Q'ty **ESD Plate** 3 1 / 1 Machine Screw 1 Front Panel Ass'y S/T Screw B 2.6 X 8 BF Ass'y1 20 7 Ass'y2 Front Door Ass'y 1 22 Machine Screw 2 17 / Earthing Plate 23 Machine Screw 3 1 Ass'y-Switch Board 25 Machine Screw 18 1 Ass'y- Front Board 27 Machine Screw 2 19 1 Top cover 29 Machine Screw 21 1 1 24 Loader 31 Machine Screw 5 26 Rear Cabinet for DVP5986K/98 36 Triangle M/C Screw B 3 X 6 3 Rear Cabinet for DVP5986K/93 Rear Cabinet for DVP5986K/51 28 Power Cord for DVP5986K/98 Power Cord for DVP5986K/93 Power Cord for DVP5986K/51 30 Ass'y-Power Board for DVP5986K/51/93 1 Ass'y-Power Board for DVP5986K/98 32 Ass'y-Main Board 1 Ass'y-AV Board 1 33 34 Pad **Bottom Cabinet** 1 35

1

Note:Only the parts mentioned in this list are normal service spare parts

Ass'y USB+OK Board

37

/