


## 12. DOOR ASSEMBLY

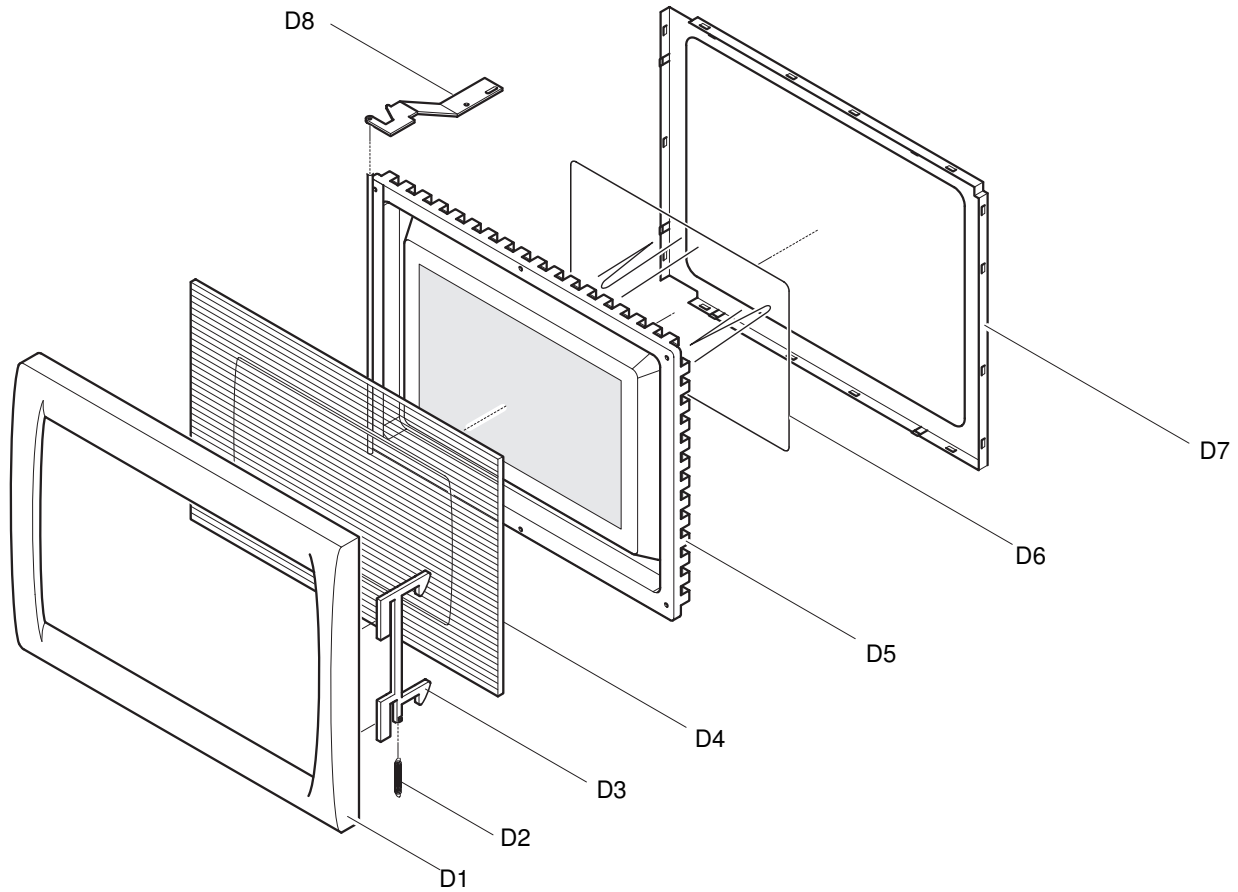

Ref. No.	Part No.	Part Name and Description	Pcs/Set	Remarks
D1	E30014L20HBP	DOOR A	1	NN-F369WB NN-F359WB
D1	E30014L20KUP	DOOR A	1	NN-F369BB
D2	E30214000AP	DOOR KEY SPRING	1	
D3	E30184L00GS	DOOR KEY A	1	
D4	E31464L60UP	DOOR SCREEN B	1	
D5	E302K4L00GS	DOOR E AND SCREEN A UNIT	1	
D6	E31454L00GS	SCREEN A	1	
D7	E30854L00GS	DOOR C	1	
D8	E30064L00GS	UPPER HINGE	1	

NOTE: When ordering any door component also order door C as this part may become damaged during disassembly.