



Exploded View of General Assembly and Parts List

Block No. M 1 M M

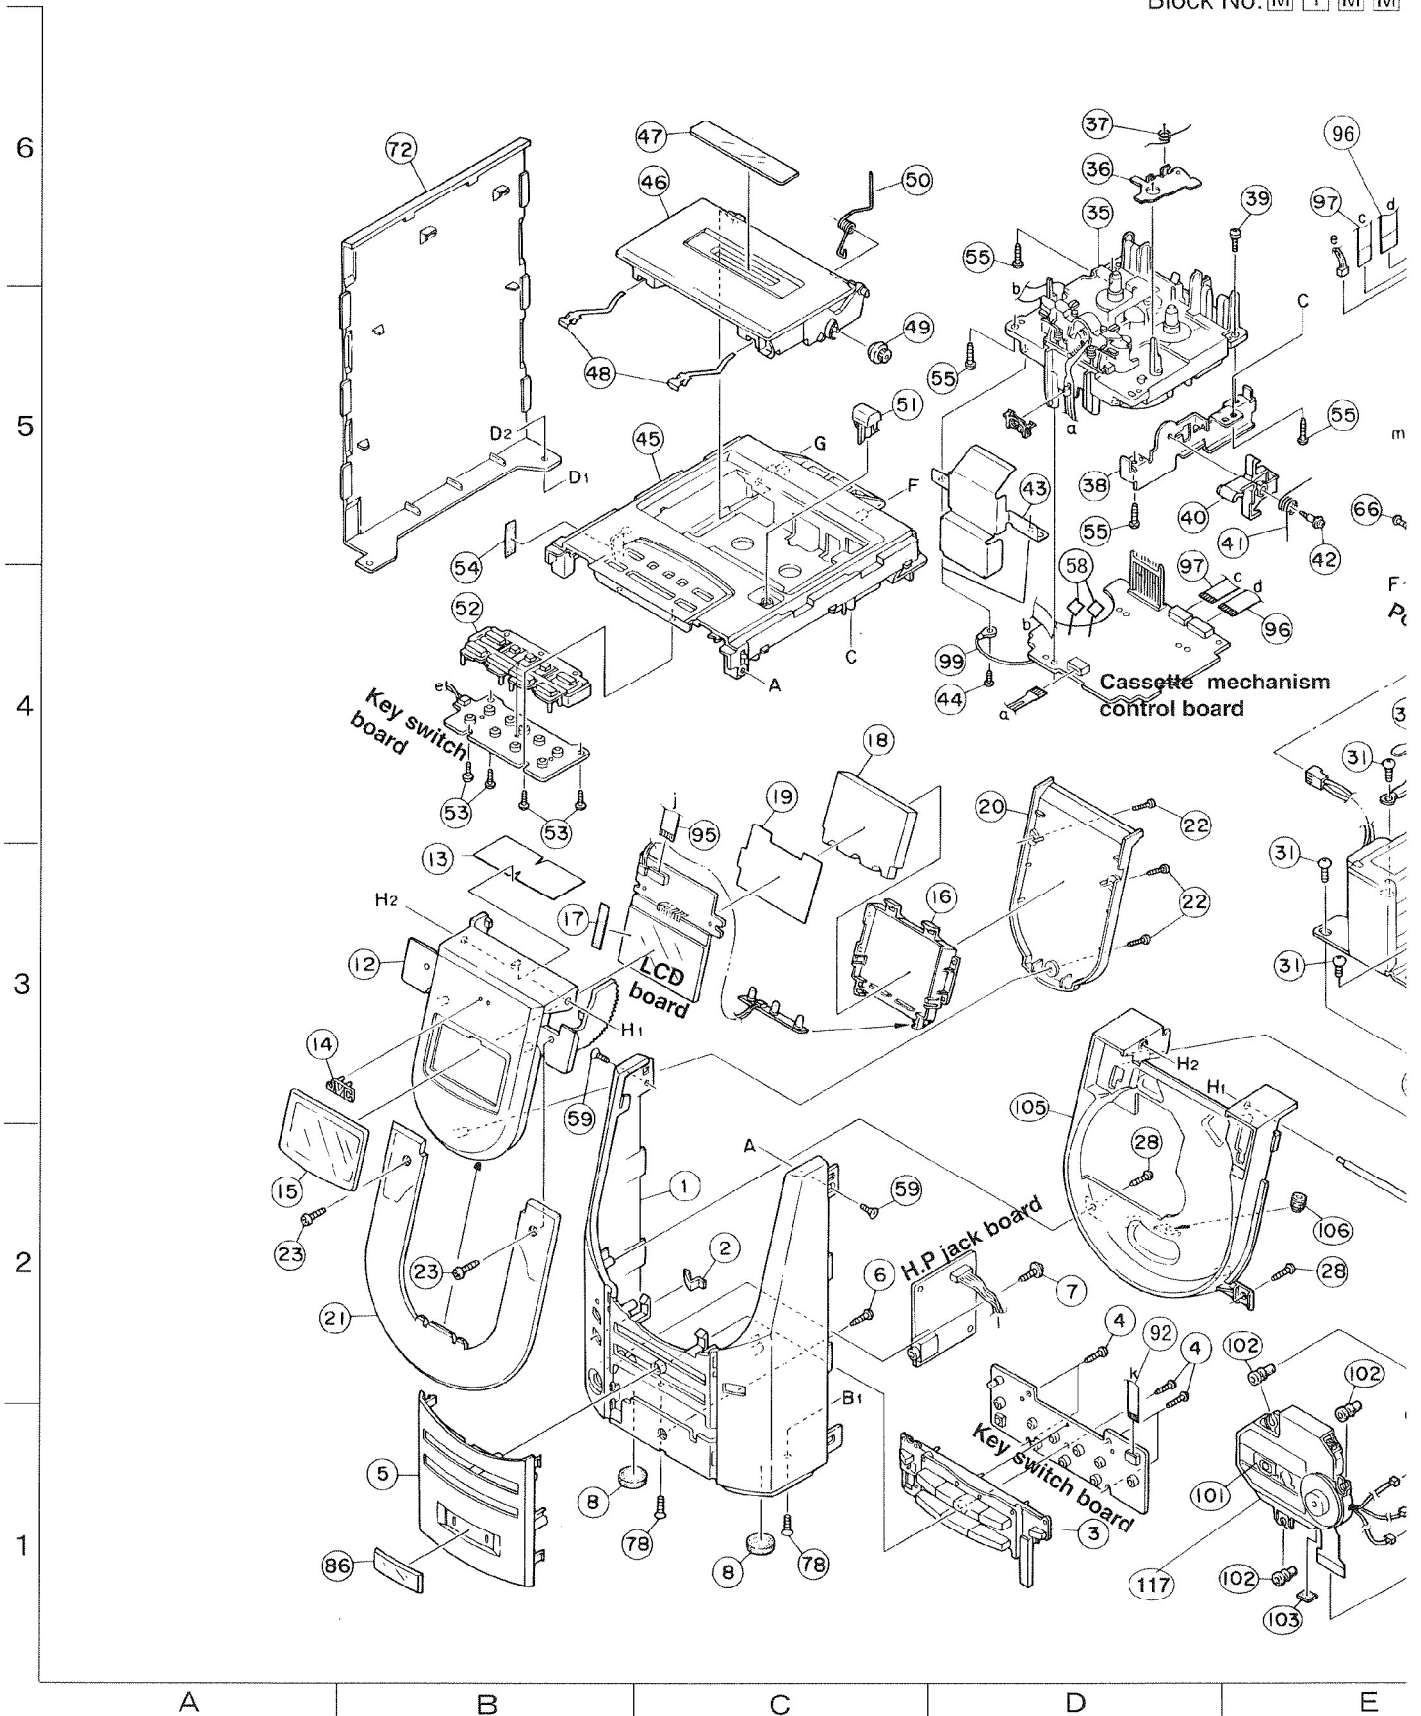

M M

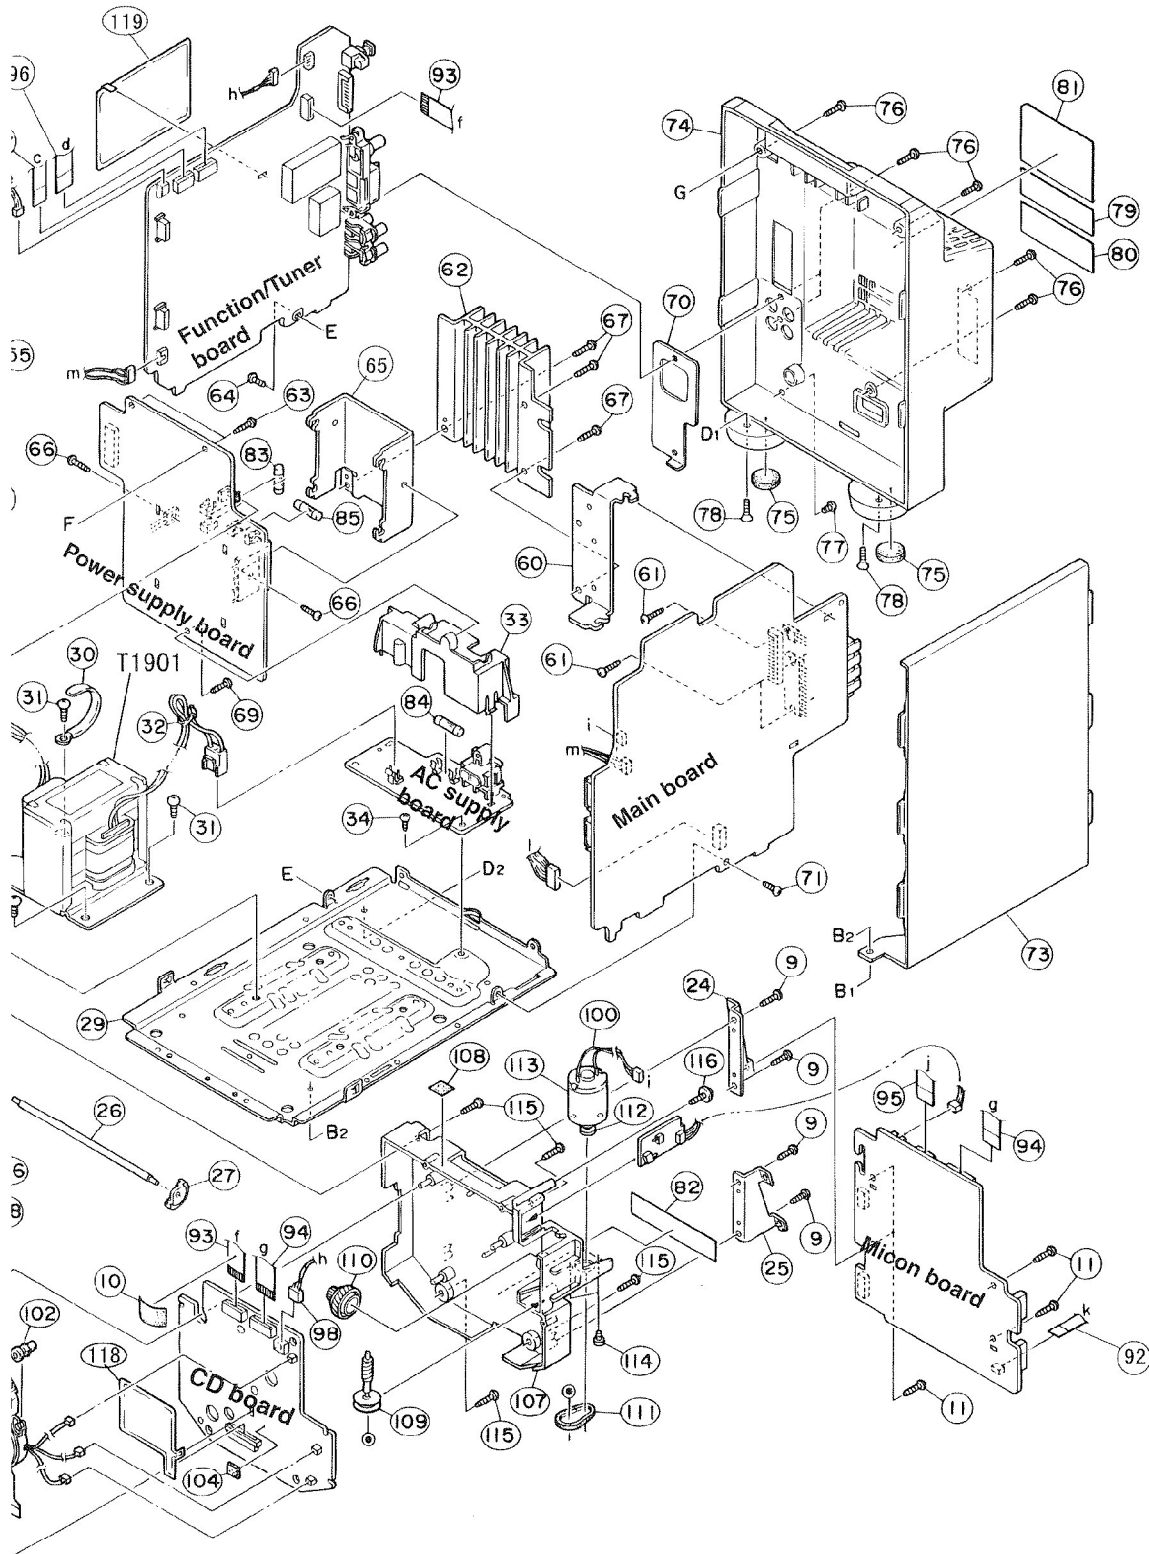


E F G H I

CD Mechanism Assembly and Parts List

Block No. M 2 M M

KSM-33AAN

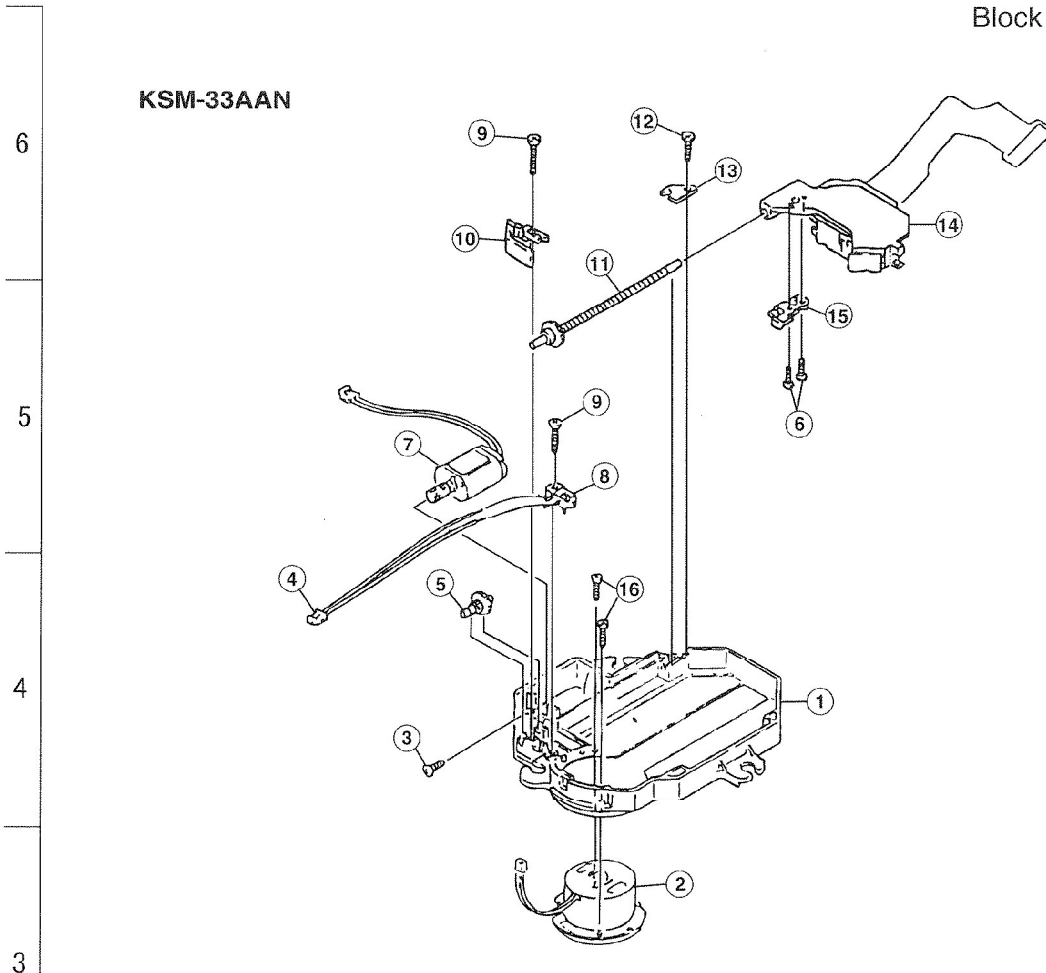

CD Mechanism Assembly Parts List

	Item	Parts Number	Parts Name	Q'ty	Description	Area
	1	2-625-415-05	CHASSIS	1		
	2	X-2625-485-1SA	MOTOR ASS'Y	1		
	3	3-732-988-01	SCREW	1		
	4	1-948-418-21	HARNES	1		
	5	2-625-410-01	GEAR(B)	1		
	6	7-627-852-17	SCREW	2	FOR RACK	
	7	X-2625-171-2	FEED MOTOR ASS'Y	1		
	8	1-570-771-11	SWITCH	1		
	9	2-625-623-11	SCREW	2	FOR SWITCH	
	10	2-625-412-02	LEAF SPRING	1		
	11	X-2625-483-1	SHAFT GEAR	1		
	12	2-625-623-01	SCREW	1	SHAFT GEAR	
	13	2-625-411-01	GEAR GUIDE	1		
	14	8-848-289-31SA	OPTICAL PICK UP	1		
	15	2-625-414-02	RACK	1		
	16	7-627-852-18	SCREW	2	FOR MOTOR	

A

B

C

D

E

UX-V3/UX-V5
UX-V5R/FS-V5

Cassette Mechanism Assembly and Parts List

Block No. M 3 M M

