



# 9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

- The  $\triangle$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to  $\nabla$  mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)


## 9.1 PACKING SECTION

### • CD Receiver

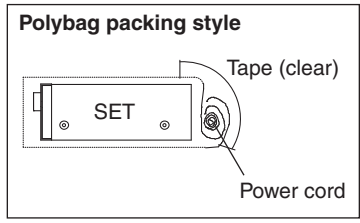
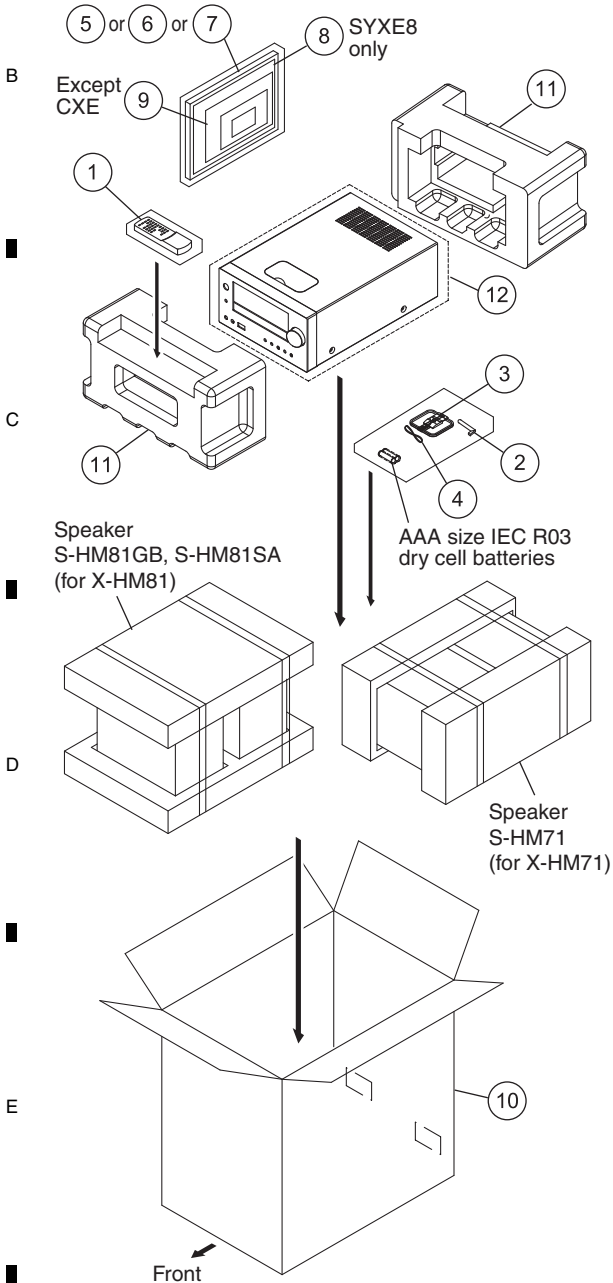


### • Speaker

#### • Speaker S-HM81GB (for X-HM81/SYXE8), S-HM81SA (for X-HM71-S/AXQ5)

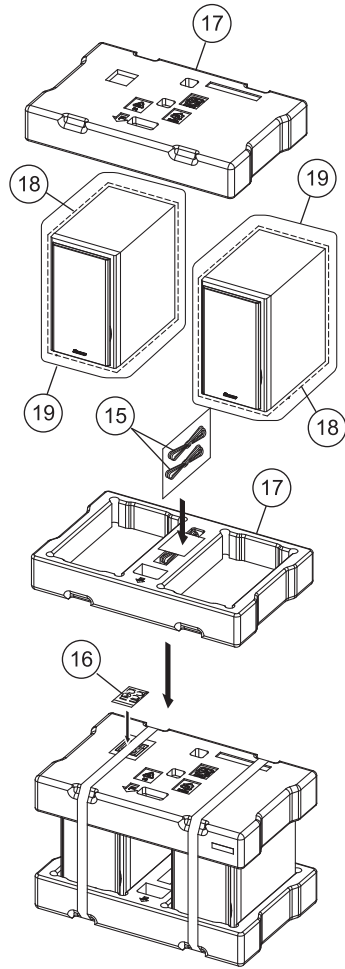

#### • Speaker S-HM71 (for X-HM71)

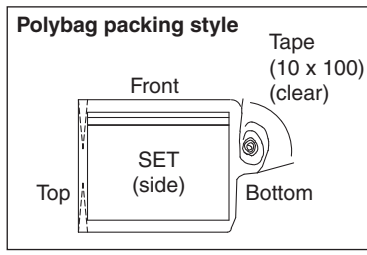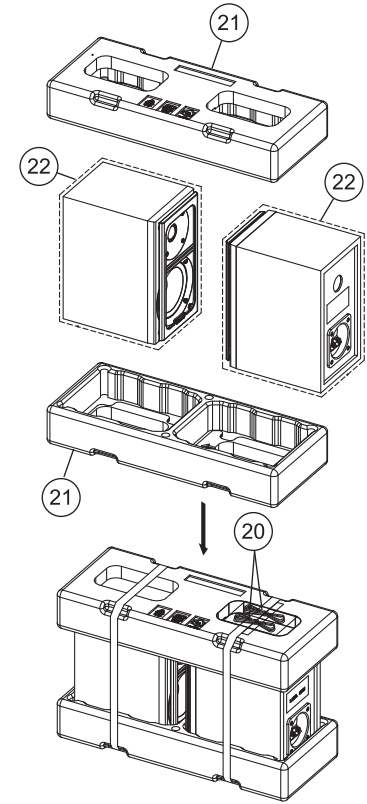

**(1) PACKING SECTION PARTS LIST**

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Remote Control	See Contrast table (2)	11	Cushion, Snow	6230213174000-IL
2	WLAN antenna	E600223170010-IL	12	PE, Sheet	6327210009000-IL
3	AM Loop Antenna	E601019000010-IL	13	•••••	
4	FM Wire Antenna	E605010140010-IL	14	•••••	
5	Operating Instructions (CD-ROM)	See Contrast table (2)	15	Speaker Wires	See Contrast table (2)
6	Operating Instructions	See Contrast table (2)	16	Non Skid Pad	See Contrast table (2)
7	Operating Instructions	See Contrast table (2)	17	Snow Cushion	See Contrast table (2)
8	Quick Start Guide	See Contrast table (2)	18	Soft Sheet	See Contrast table (2)
NSP 9	Warranty Card	See Contrast table (2)	19	Soft Sheet	See Contrast table (2)
10	Box, Gift	See Contrast table (2)	20	Speaker Wires	See Contrast table (2)
			21	Snow Cushion	See Contrast table (2)
			22	Bag Poly	See Contrast table (2)

**(2) CONTRAST TABLE**

X-HM81-K/SYXE8, X-HM81-S/SYXE8, XC-HM81-K/SYXE8, XC-HM81-S/SYXE8, X-HM71-K/SYXE8, X-HM71-K/CXE, X-HM71-S/SYXE8 and X-HM71-S/AXQ5 are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>X-HM81-K/SYXE8</u>	<u>X-HM81-S/SYXE8</u>	<u>XC-HM81-K/SYXE8</u>	<u>XC-HM81-S/SYXE8</u>
NSP	1	Remote Control	8300767600010-IL	8300767600010-IL	8300767600010-IL	8300767600010-IL
	5	Operating Instructions (CD-ROM)	6517000000821-IL	6517000000821-IL	6517000000821-IL	6517000000821-IL
	6	Operating Instructions (En, Fr)	Not used	Not used	Not used	Not used
	7	Operating Instructions (Zhcn)	Not used	Not used	Not used	Not used
	8	Quick Start Guide	5707000006941-IL	5707000006941-IL	5707000006941-IL	5707000006941-IL
	9	Warranty Card	ARY7158	ARY7158	ARY7158	ARY7158
	10	Box, Gift	6007212120210-IL	6007212120200-IL	6007212110030-IL	6007212110020-IL
	15	Speaker Wires	8952SHM810016-IL	8952SHM810016-IL	Not used	Not used
	16	Non Skid Pad	8952SHM810018-IL	8952SHM810018-IL	Not used	Not used
	17	Snow Cushion	8952SHM810040-IL	8952SHM810040-IL	Not used	Not used
	18	Soft Sheet	8952SHM810020-IL	8952SHM810020-IL	Not used	Not used
	18	Bag Poly	Not used	Not used	Not used	Not used
	19	Soft Sheet	8952SHM810030-IL	8952SHM810030-IL	Not used	Not used
	20	Speaker Wires	Not used	Not used	Not used	Not used
	21	Snow Cushion	Not used	Not used	Not used	Not used
	22	Bag Poly	Not used	Not used	Not used	Not used

<u>Mark</u>	<u>No.</u>	<u>Symbol and Description</u>	<u>X-HM71-K/SYXE8</u>	<u>X-HM71-S/SYXE8</u>	<u>X-HM71-K/CXE</u>	<u>X-HM71-S/AXQ5</u>
NSP	1	Remote Control	8300767600010-IL	8300767600010-IL	8300768000010-IL	8300768000010-IL
	5	Operating Instructions (CD-ROM)	6517000000821-IL	6517000000821-IL	Not used	Not used
	6	Operating Instructions (En, Fr)	Not used	Not used	5707000006970-IL	Not used
	7	Operating Instructions (Zhcn)	Not used	Not used	Not used	5707000006980-IL
	8	Quick Start Guide	5707000006941-IL	5707000006941-IL	Not used	Not used
	9	Warranty Card	ARY7158	ARY7158	Not used	ARY7137
	10	Box, Gift	6007212110210-IL	6007212110200-IL	6007212110100-IL	6007212120110-IL
	15	Speaker Wires	Not used	Not used	Not used	8952SHM810016-IL
	16	Non Skid Pad	Not used	Not used	Not used	8952SHM810018-IL
	17	Snow Cushion	Not used	Not used	Not used	8952SHM810040-IL
	18	Soft Sheet	Not used	Not used	Not used	Not used
	18	Bag Poly	Not used	Not used	Not used	8952SHM810039-IL
	19	Soft Sheet	Not used	Not used	Not used	Not used
	20	Speaker Wires	8952SHM700042-IL	8952SHM700042-IL	8952SHM700042-IL	Not used
	21	Snow Cushion	8952SHM700045-IL	8952SHM700045-IL	8952SHM700045-IL	Not used
	22	Bag Poly	8952SHM700044-IL	8952SHM700044-IL	8952SHM700044-IL	Not used