

SECTION 6

REPAIR PARTS LIST

6-1. EXPLODED VIEWS

NOTE:


- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

• Abbreviation

EE : East European Model
NE : North European Model
RU : Russian Model
HK : Hong Kong Model
AUS : Australian Model
CN : Chinese Model

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


6-1-1. CABINET (L) BLOCK ASSEMBLY

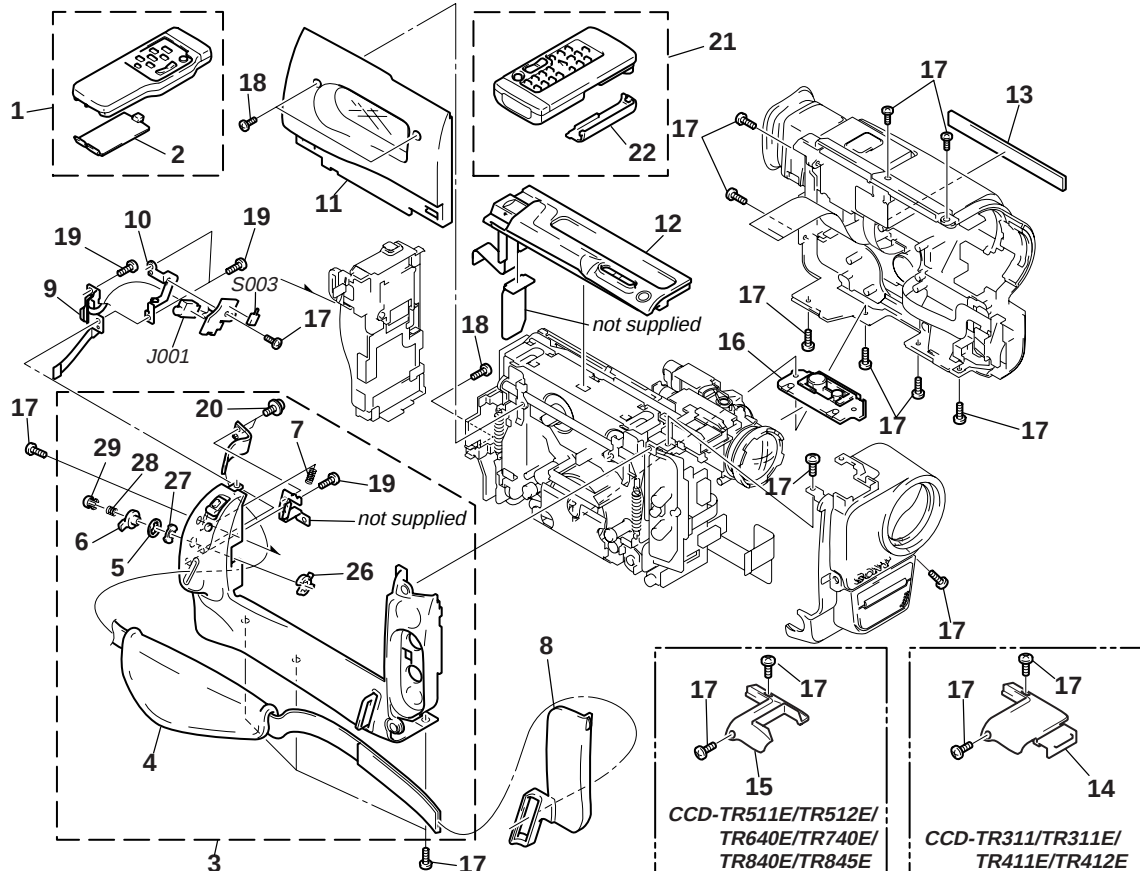

Ref. No.	Part No.	Description	Remark
1	1-467-574-21	REMOTE COMMANDER (RMT-708) (EXCEPT TR311/TR311E/TR411E/TR845E)	
2	3-958-131-01	LID-BATTERY CASE (FOR RMT-708) (EXCEPT TR311/TR311E/TR411E/TR845E)	
3	X-3948-205-1	CABINET (L) ASSY (TR840E/TR845E)	
3	X-3948-208-1	CABINET (L) ASSY (EXCEPT TR730E/TR840E/TR845E)	
3	X-3948-213-1	CABINET (L) ASSY (TR730E)	
4	3-969-339-31	BELT, GRIP	
5	3-970-854-01	SPRING, STAND-BY	
6	3-969-081-01	KNOB, STAND-BY	
7	3-302-492-00	SPRING, COMPRESSION	
8	3-975-522-01	COVER, JACK	
9	1-475-619-11	SWITCH BLOCK, CONTROL (SS-8500) (EXCEPT TR730E)	
9	1-475-619-21	SWITCH BLOCK, CONTROL (SS-8500) (TR730E)	
* 10	3-975-532-01	HOLDER, EL	
11	X-3948-222-1	LID ASSY, CASSETTE (TR840E/TR845E)	
11	X-3948-223-1	LID ASSY, CASSETTE (EXCEPT TR840E/TR845E)	
12	1-475-617-11	SWITCH BLOCK, CONTROL (FK8500) (TR311/TR311E/TR411E/TR412E)	
12	1-475-617-31	SWITCH BLOCK, CONTROL (FK-8500) (EXCEPT TR311/TR311E/TR411E/TR412E/AUS)	
12	1-475-617-61	SWITCH BLOCK, CONTROL (FK-8500) (TR840E/AUS)	
13	3-987-748-21	PLATE (860), ORNAMENTAL (TR840E)	
13	3-987-748-51	PLATE (860), ORNAMENTAL (TR640E)	

Ref. No.	Part No.	Description	Remark
13	3-987-748-61	PLATE (860), ORNAMENTAL (TR511E)	
13	3-987-748-71	PLATE (860), ORNAMENTAL (TR845E)	
13	3-987-748-81	PLATE (860), ORNAMENTAL (TR411E)	
13	3-987-749-01	PLATE (860), ORNAMENTAL (TR730E)	
13	3-987-749-11	PLATE (860), ORNAMENTAL (TR412E)	
13	3-987-749-31	PLATE (860), ORNAMENTAL (TR311)	
13	3-987-749-41	PLATE (860), ORNAMENTAL (TR512E)	
13	3-987-749-91	PLATE (860), ORNAMENTAL (TR311E)	
14	3-987-645-01	CABINET (N) (TR311/TR311E/TR411E/TR412E)	
15	3-987-639-01	CABINET (S(870)) (EXCEPT TR311/TR311E/TR411E/TR412E)	
16	3-987-717-01	SCREW, TRIPOD	
17	3-962-826-01	SCREW (2X4)	
18	3-713-786-21	SCREW (M2X3)	
19	3-948-339-61	TAPPING	
20	3-679-362-11	SCREW	
21	8-917-593-90	COMMANDER, REMOTE (RMT-717) (TR845E)	
22	3-742-854-01	LID-BATTERY CASE (FOR RMT-717) (TR845E)	
26	3-949-192-01	HOLDER, STAND-BY KNOB	
27	3-975-966-01	SHEET METAL (2), SS	
28	3-979-642-01	SPRING, COMPRESSION	
29	3-960-566-01	BUTTON, S/S	
J001	1-565-276-31	JACK, ULTRA SMALL 1P (LANC)	
S003	1-572-688-11	SWITCH, PUSH (EJECT)	

6-1-2. FRONT PANEL BLOCK ASSEMBLY

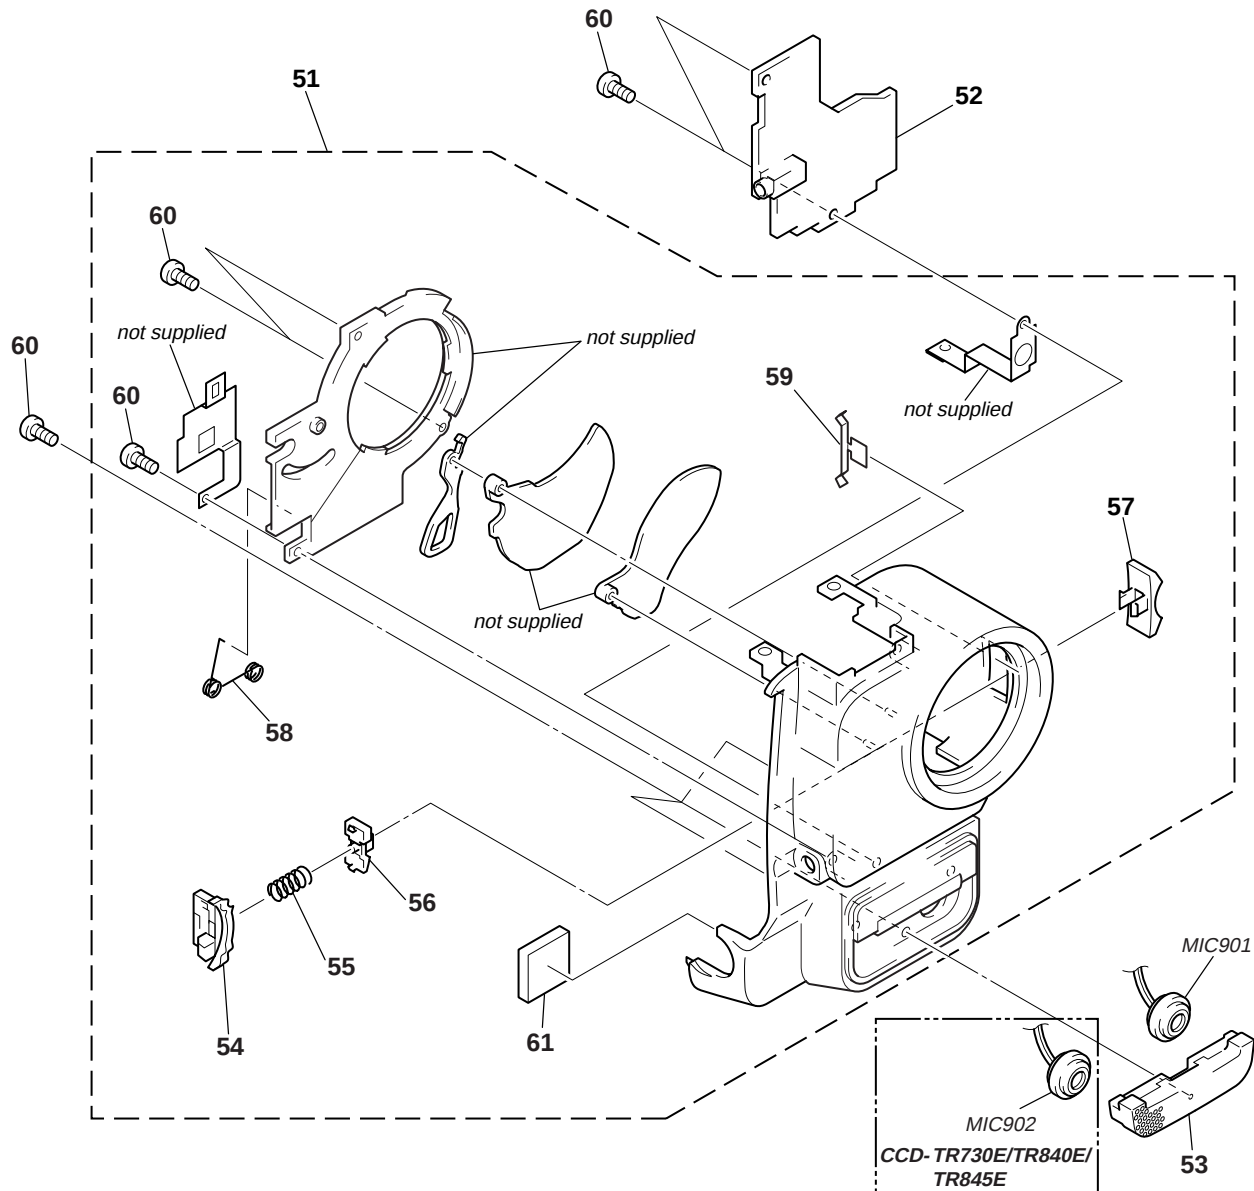


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	X-3948-184-1	PANEL (870) ASSY, FRONT (TR840E:AEP,EE,NE,RU,UK/TR845E)		52	A-7073-504-A	MA-311(7Z) BOARD, COMPLETE (TR412E)	
51	X-3948-187-1	PANEL (870) ASSY, FRONT (TR640E)		53	X-3948-170-1	GRILLE (870) ASSY, MICROPHONE	
51	X-3948-188-1	PANEL (870) ASSY, FRONT (TR511E/TR512E)		54	3-987-632-01	HOLDER, P KNOB	
51	X-3948-189-1	PANEL (870) ASSY, FRONT (TR311/TR311E/TR411E)		55	3-973-619-01	SPRING, COMPRESSION	
51	X-3948-190-1	PANEL (870) ASSY, FRONT (TR730E)		56	3-987-633-01	BUTTON, LOCK	
51	X-3948-191-1	PANEL (870) ASSY, FRONT (TR840:AUS)		57	3-987-631-01	KNOB, P (TR-511E:AEP,EE,NE,RU,UK/TR640E/TR840E:AEP,EE,NE,RU,UK/TR845E)	
51	X-3948-192-1	PANEL (870) ASSY, FRONT (TR412E)		57	3-987-631-02	KNOB, P (EXCEPT TR-511E:AEP,EE,NE,RU,UK/TR640E/TR840E:AEP,EE,NE,RU,UK/TR845E)	
52	A-7073-449-A	MA-311(HO) BOARD, COMPLETE (TR730E/TR840E/TR845E)		58	3-987-882-01	SPRING, TORSION	
52	A-7073-463-A	MA-311(7ZL) BOARD, COMPLETE (TR311/TR311E/TR411E)		59	3-987-642-01	SPRING, CLICK	
52	A-7073-493-A	MA-311(MMO) BOARD, COMPLETE (TR511E/TR512E/TR640E)		60	3-948-339-61	TAPPING	
				* 61	3-989-247-01	MA CUSHION	
				MIC901	1-542-312-11	MICROPHONE (L-CH)	
				MIC902	1-542-312-11	MOCROPHONE (R-CH)(TR730E/TR840E/TR845E)	

6-1-3. CABINET (R) BLOCK ASSEMBLY

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
101	1-475-620-11	SWITCH BLOCK, CONTROL(MF-8500) (TR511E/TR512E/TR640E/TR730E/TR840E/TR845E)	
102	X-3948-254-1	CABINET (R) (860) ASSY (TR511E:AEP,UK/TR640E:AEP,UK)	
102	X-3948-255-1	CABINET (R) (864) ASSY (TR840E:AEP/TR845E)	
102	X-3948-256-1	CABINET (R) (843) ASSY (TR412E:AEP)	
102	X-3948-257-1	CABINET (R) (842) ASSY (TR411E:AEP,UK)	
102	X-3948-258-1	CABINET (R) (852) ASSY (TR511E:E,HK,AUS,CN/TR512E/TR730E)	
102	X-3948-259-1	CABINET (R) (863) ASSY (TR840E:EE,NE,RU,AUS,UK)	
102	X-3948-261-1	CABINET (R) (840) ASSY (TR311/TR311E)	
102	X-3948-262-1	CABINET (R) (843-2) ASSY (TR412E:EE,NE,RU)	
102	X-3948-462-1	CABINET (R) (8401-2) ASSY (TR411E:EE,NE,RU)	
103	3-472-222-99	SPRING, TENSION	
* 104	3-987-842-01	SHEET, VF FLEXIBLE RETAINER (EXCEPT TR730E)	
105	3-987-786-01	BASE (878), VF	
106	3-987-783-01	LOCK, TILT	
107	1-783-240-11	CABLE, FLEXIBLE FLAT (FFC-236)	
108	A-7073-425-A	CF-49(C) BOARD, COMPLETE (TR512E)	
108	A-7073-450-A	CF-49(MM) BOARD, COMPLETE (TR511E/TR640E/TR840E/TR845E)	
108	A-7073-475-A	CF-49(7L) BOARD, COMPLETE (TR311/TR311E/TR411E/TR412E)	
108	A-7073-545-A	CF-49(CR) BOARD, COMPLETE (TR730E)	
109	X-3948-248-1	COVER (860) ASSY, TR (TR511E/TR512E/TR640E)	
109	X-3948-249-1	COVER (864C) ASSY, TR (TR840E)	
109	X-3948-251-1	COVER (843) ASSY, TR (TR311/TR311E/TR411E/TR412E)	
109	X-3948-265-1	COVER (861) ASSY, TR (TR730E)	
109	X-3948-393-1	COVER (864D) ASSY, TR (TR845E)	
* 110	3-987-755-01	HOLDER (864), LCD (TR730E/TR840E/TR845E)	
* 110	3-987-755-11	HOLDER (864), LCD (EXCEPT TR730E/TR840E/TR845E)	
111	3-948-339-61	TAPPING	
112	3-987-744-01	KNOB, IR (TR511E/TR512E/TR640E/TR730E/TR840E/TR845E)	
113	3-987-739-01	SPRING, LINK PLATE (TR511E/TR512E/TR640E/TR730E/TR840E/TR845E)	
114	3-969-465-01	SPRING, AE	
115	3-948-339-01	SCREW, TAPPING	
LCD901	A-7093-473-A	INDICATION LCD BLOCK ASSY (TR311/TR311E/TR411E/TR412E/TR730E)	
LCD901	A-7093-486-A	INDICATION LCD BLOCK ASSY (TR840E/TR845E)	
LCD901	A-7093-509-A	INDICATION LCD BLOCK ASSY (TR511E/TR640E/TR840E/TR845E)	
Δ ND801	1-517-759-11	LIGHT, BACK (TR840E/TR845E)	
CCDTRV3E_9-974-038			


6-1-4. EVF BLOCK ASSEMBLY (B/W EVF) (EXCEPT TR512E/TR730E)

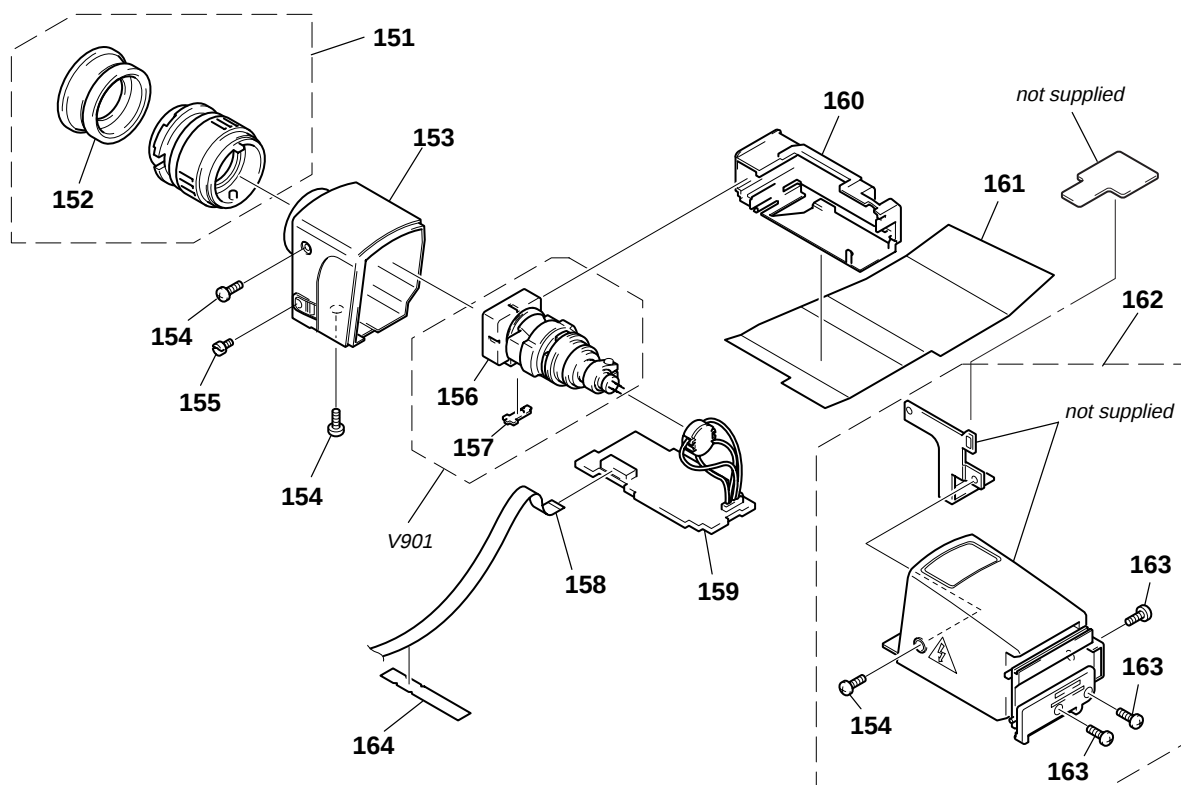

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	X-3944-966-1	FINDER ASSY		160	X-3948-279-1	HOLDER (878) ASSY, CRT	
152	3-963-391-01	EYE CUP		* 161	3-987-844-01	SHEET, VF (B/W) ELECTRSTATIC	
153	X-3948-278-1	CABINET (REAR) (878) B ASSY		162	X-3948-277-1	CABINET (FRONT) (878) B ASSY	
154	3-968-729-61	SCREW (M2X3), LOCK ACE, P2					(TR840E/TR845E)
155	3-975-898-01	SCREW (T), F LOCK		162	X-3948-363-1	CABINET (FRONT) (872) B ASSY	
							(TR511E/TR640E)
156	3-977-292-01	MASK, CRT		162	X-3948-364-1	CABINET (FRONT) (887D) B ASSY	
157	3-725-130-01	COVER, HINGE VOLTAGE					(TR311/TR311E/TR411E/TR412E)
158	1-783-241-11	CABLE, FLEXIBLE FLAT (FFC-235)		163	3-948-339-61	TAPPING	
159	A-7066-774-A	VF-99(HP) BOARD, COMPLETE(EXCEPT TR311)		* 164	3-987-843-01	SHEET, VF FLEXIBLE LOCK	
159	A-7066-792-A	VF-99(VHL4) BOARD, COMPLETE (TR311)		$\triangle$ V901	1-452-673-31	CRT ASSY (M01KXX90WB)	


6-1-5. EVF BLOCK ASSEMBLY (COLOR EVF) (TR512E/TR730E)

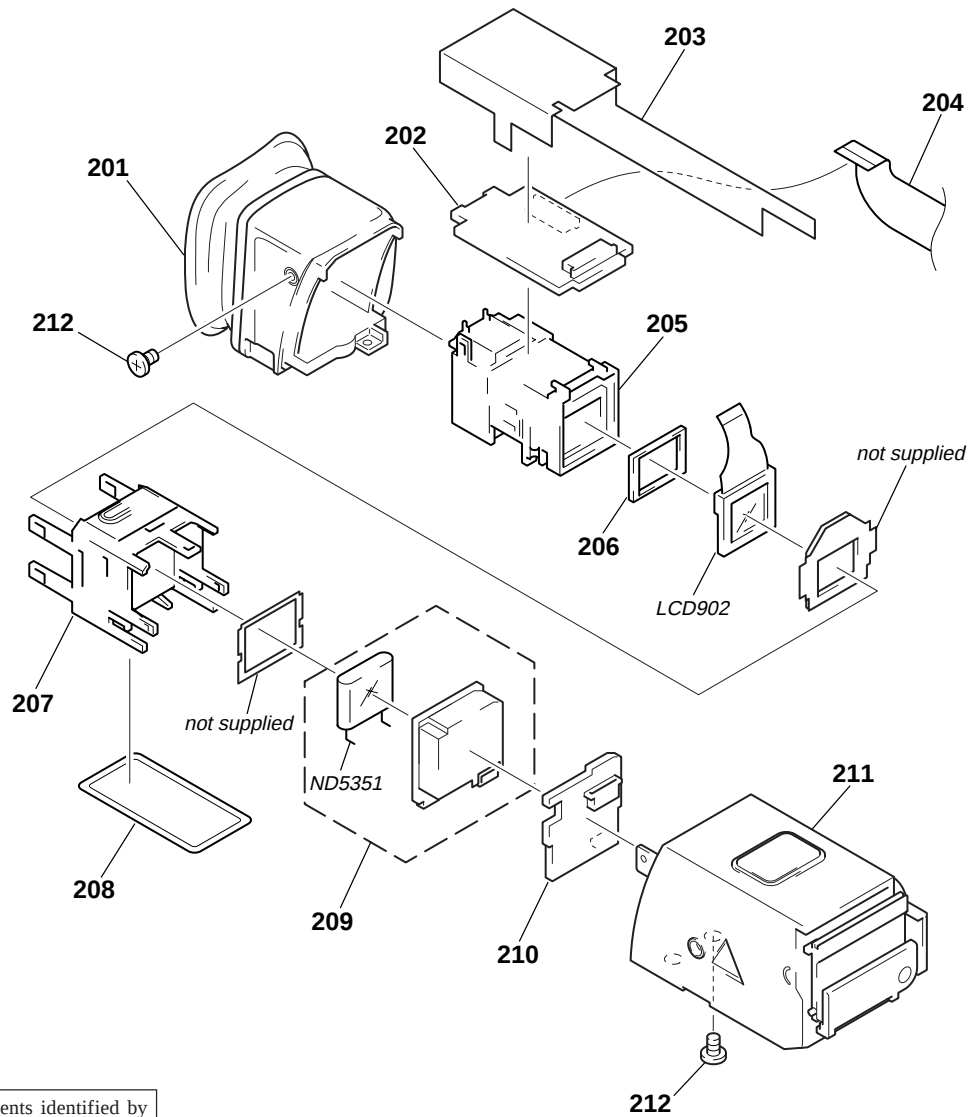

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	X-3948-237-1	CABINET (REAR)(SC)(N) ASSY, EVF		* 208	3-987-667-01	SHEET, VF LIGHT INTERCEPTION	
202	A-7073-437-A	VF-119 BOARD, COMPLETE		209	A-7073-439-A	LB-54 BOARD, COMPLETE	
* 203	3-987-666-01	SHEET (860), INSULATING, VF		210	A-7073-438-A	VF-120 BOARD, COMPLETE	
204	1-668-962-11	FP-638 FLEXIBLE BOARD					
205	X-3948-229-1	LENS ASSY (860), VF		211	X-3948-233-1	CABINET (FRONT)(864) ASSY, EVF	
* 206	3-960-302-11	CUSHION (1), LCD		212	3-968-729-61	SCREW (M2X3), LOCK ACE, P2	
207	X-3946-886-1	HOLDER ASSY, PRISM		LCD902	8-753-023-36	LCX024AK-5	
				$\triangle$ ND5351	1-517-414-51	FLUORESCENT TUBE (0.55 INCH)	

6-1-6. MAIN BOARDS BLOCK ASSEMBLY

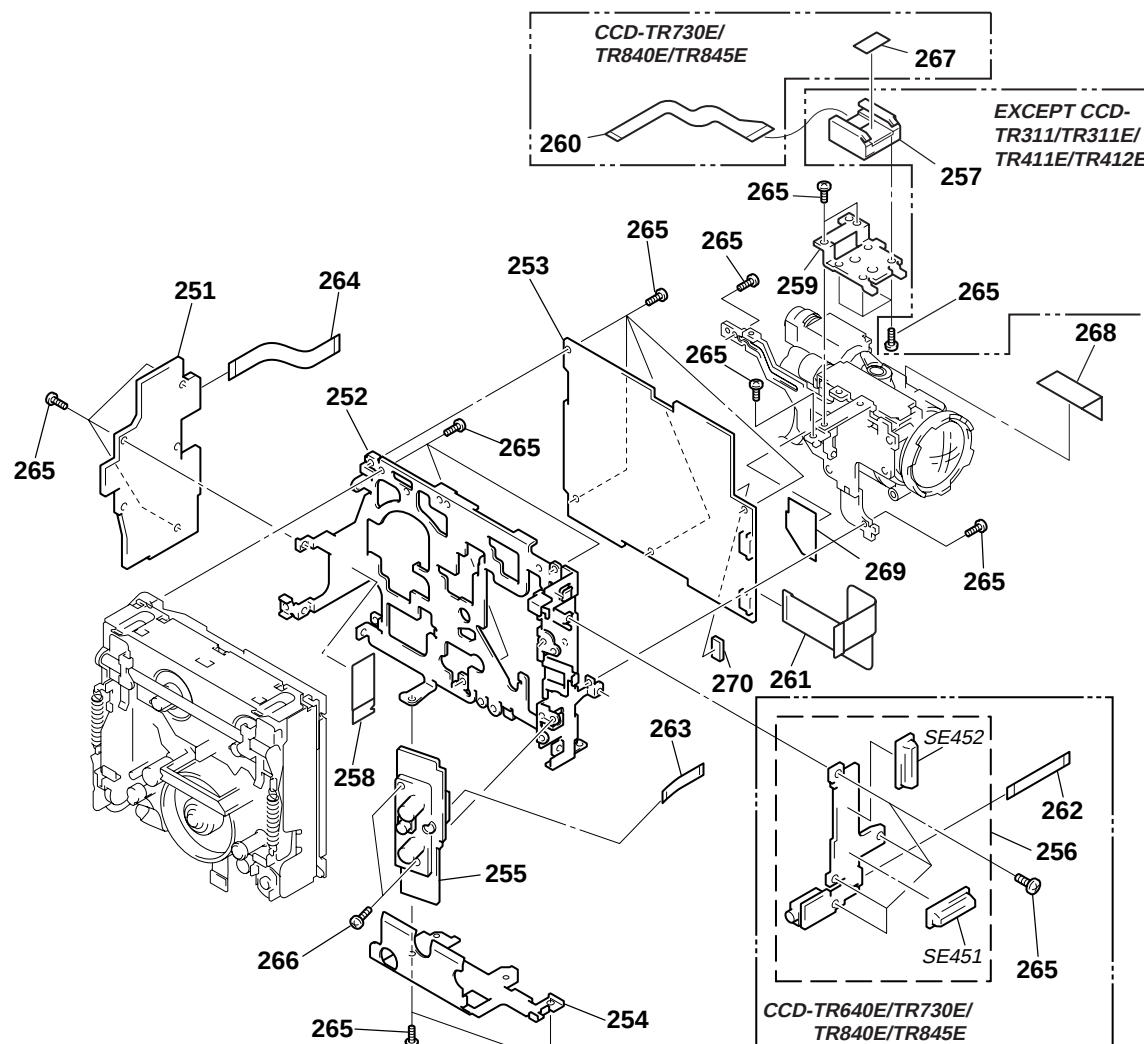

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	A-7073-448-A	DD-105(H) BOARD, COMPLETE (TR840E/TR845E)		256	A-7073-427-A	SE-65(H) BOARD, COMPLETE (TR730E/TR840E/TR845E)	
251	A-7073-544-A	DD-105(MCR) BOARD, COMPLETE (TR730E)		257	1-774-867-31	CONNECTOR, EXTERNAL (HOT SHOE) 8P (TR730E/TR840E/TR845E)	
251	A-7073-474-A	DD-105(MM) BOARD, COMPLETE (TR311/TR311E/TR411E/TR412E/TR511E/TR640E)		257	X-3946-197-1	SHOE ASSY (TR511E/TR512E/TR640E)	
251	A-7073-506-A	DD-105(C) BOARD, COMPLETE (TR512E)		* 258	3-987-716-01	PROTECTOR, LS FLEXIBLE	
252	3-987-711-01	FRAME (A), MD		259	3-987-719-01	BRACKET, SHOE	
253	A-7093-440-A	VC-195(7ZCBU) BOARD, COMPLETE (TR311)		260	1-668-978-11	FP-633 FLEXIBLE BOARD (TR511E/TR512E/TR640E)	
253	A-7093-442-A	VC-195(HOGP) BOARD, COMPLETE (TR840E:AUS)		261	1-668-960-11	FP-629 FLEXIBLE BOARD	
253	A-7093-443-A	VC-195(MCROP) BOARD, COMPLETE (TR730E)		262	1-668-956-11	FP-620 FLEXIBLE BOARD (TR640E/TR730E/TR840E/TR845E)	
253	A-7093-444-A	VC-195(ZCOP) BOARD, COMPLETE (TR512E)		263	1-668-957-11	FP-621 FLEXIBLE BOARD	
253	A-7093-445-A	VC-195(HODE) BOARD, COMPLETE (TR845E)		264	1-668-958-11	FP-622 FLEXIBLE BOARD	
253	A-7093-446-A	VC-195(HOE) BOARD, COMPLETE (TR840E:AEP,EE,NE,RU,UK)		265	3-713-786-21	SCREW (M2X3)	
253	A-7093-447-A	VC-195(MMOE) BOARD, COMPLETE (TR640E)		266	3-962-826-01	SCREW (2X4)	
253	A-7093-448-A	VC-195(ZOE) BOARD, COMPLETE (TR311E/TR411E/TR412E/TR511E)		267	2-532-810-00	CUSHION (TR730E/TR840E/TR845E)	
254	3-987-675-01	FRAME (B), MD		* 268	3-989-122-01	SHEET, LENS INSULATING	
255	A-7073-422-A	PJ-81(M) BOARD, COMPLETE (EXCEPT TR730E/TR840E/TR845E)		* 269	3-987-718-01	PROTECTOR, HS FLEXIBLE (TR730E/TR840E/TR845E)	
255	A-7073-426-A	PJ-81(H) BOARD, COMPLETE (TR840E/TR845E)		* 270	3-989-470-01	CUSHION, LENS	
255	A-7073-543-A	PJ-81(S) BOARD, COMPLETE (TR730E)		SE451	1-803-041-11	SENSOR, ANGULAR VELOCITY (YAW)	
256	A-7073-423-A	SE-65(MM) BOARD, COMPLETE (TR640E)		SE452	1-803-041-21	SENSOR, ANGULAR VELOCITY (PITCH)	


6-1-7. BATTERY PANEL AND LENS BLOCK ASSEMBLY

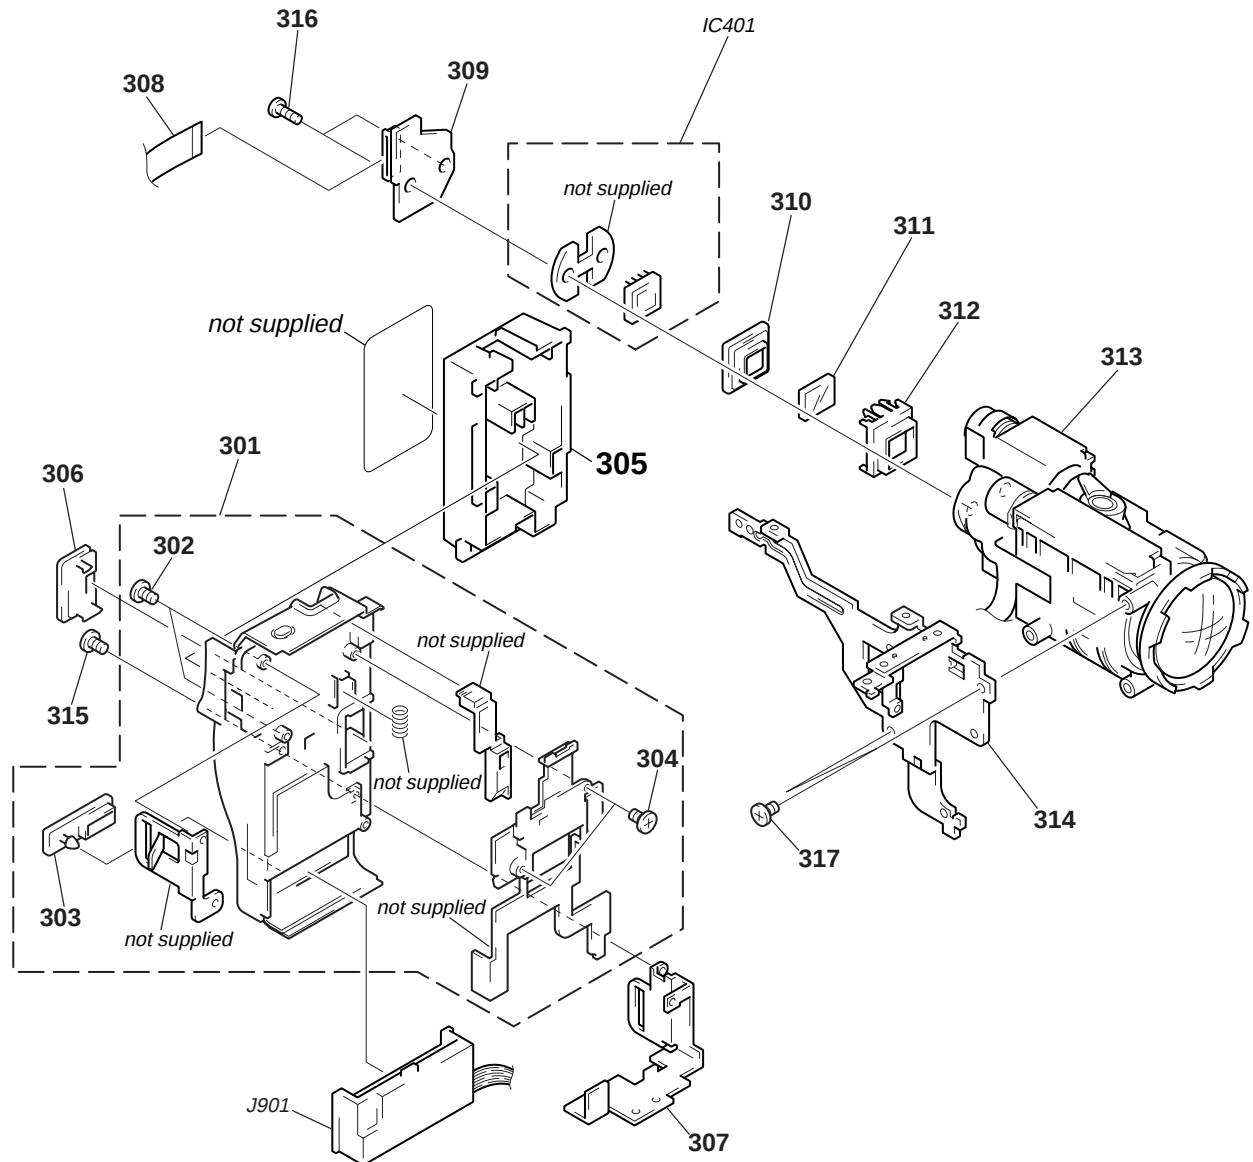

Be sure to read "Note on the CCD Imager replacement" on page 4-8 when changing the CCD imager.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
301	X-3948-171-1	PANEL ASSY, BATTERY (EXCEPT TR730E)		311	1-758-133-21	FILTER BLOCK, OPTICAL (TR311/TR311E/TR411E/TR412E/TR511E/TR512E)	
301	X-3948-174-1	PANEL ASSY, BATTERY (TR730E)		312	3-978-981-11	ADAPTOR (FK), CCD FITTING	
302	3-968-729-11	SCREW (M2X3), LOCK ACE, P2		313	8-848-724-01	DEVICE, LENS, LSV-601A (SOC) (TR311/TR311E/TR411E/TR412E)	
303	3-987-656-01	LID, JACK		313	8-848-722-01	DEVICE, LENS LSV-600A(SOC) (EXCEPT TR311/TR311E/TR411E/TR412E)	
304	3-713-791-51	SCREW (M1.7X3.5), TAPPING, P2		314	3-987-712-01	FRAME, LENS	
* 305	3-987-683-01	LID, BATTERY		315	3-962-826-01	SCREW (2X4)	
306	3-975-752-01	LID (BT), CPC		316	3-318-203-11	SCREW (B1.7X6), TAPPING	
307	3-987-679-01	SHEET METAL (LOWER), STRAP		317	3-948-339-61	TAPPING	
308	1-668-959-11	FP-623 FLEXIBLE BOARD		IC401	A-7030-862-A	CCD BLOCK ASSY (206 SERVICE) (TR311)	
309	A-7073-420-A	CD-181 BOARD, COMPLETE		IC401	A-7030-871-A	CCD BLOCK ASSY (211 SERVICE) (TR640E/TR730E/TR840E/TR845E)	
310	3-953-817-01	RUBBER (F), SEAL (TR311/TR311E/TR411E/TR412E/TR511E/TR512E)		IC401	A-7030-874-A	CCD BLOCK ASSY (207 SERVICE) (TR311E/TR411E/TR412E/TR511E/TR512E)	
310	3-968-054-11	RUBBER (FM), SHIELD (TR640E/TR730E/TR840E/TR845E)		J901	1-694-384-11	TERMINAL BOARD, BATTERY	
311	1-758-084-21	FILTER BLOCK, OPTICAL (TR640E/TR730E/TR840E/TR845E)					

6-1-8. ZOOM LENS BLOCK ASSEMBLY

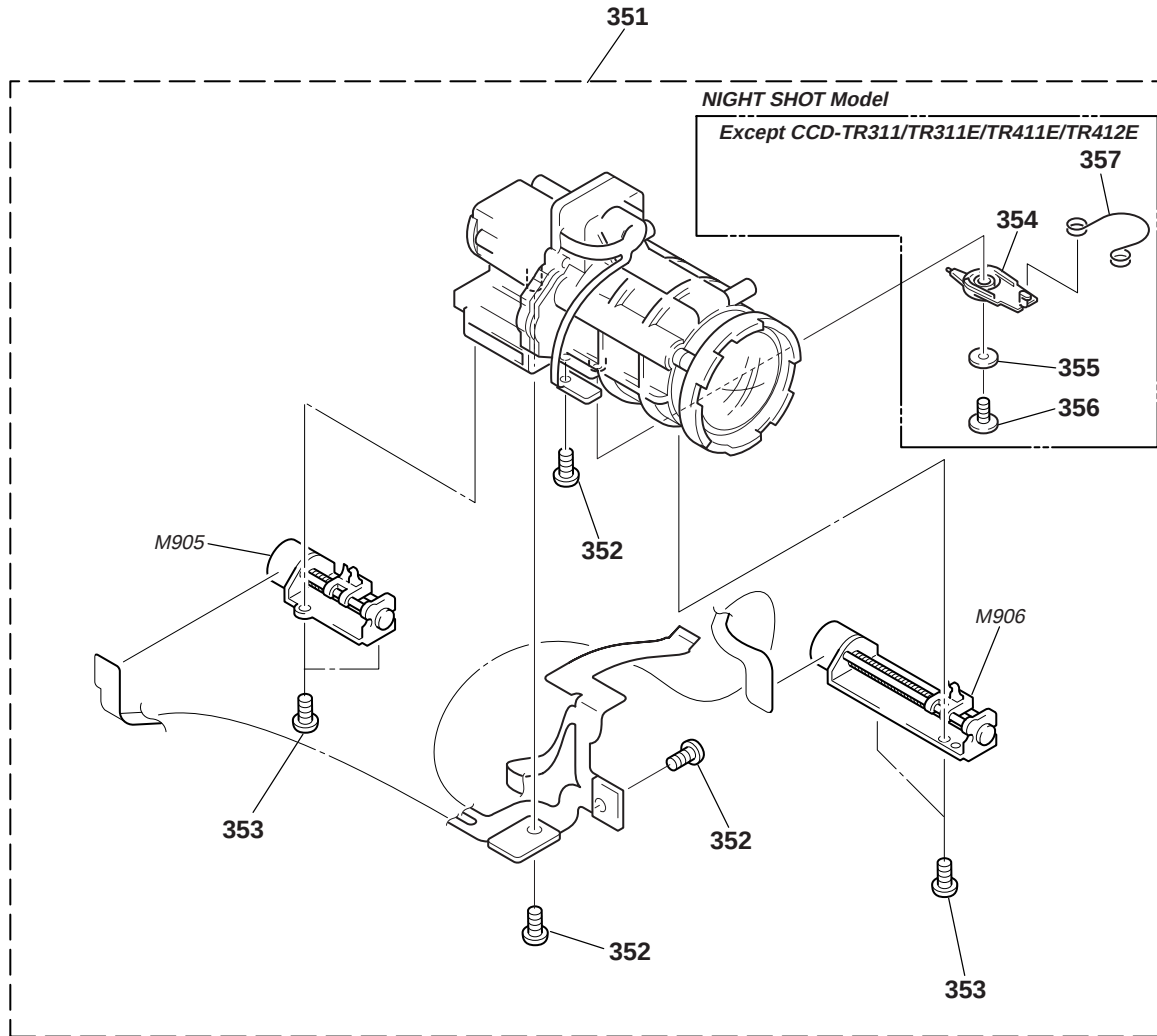


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
351	8-848-722-01	DEVICE, LENS LSV-600A (SOC) (EXCEPT TR311/TR311E/TR411E/TR412E)		355	2-327-405-01	WASHER (EXCEPT TR311/TR311E/TR411E/TR412E)	
351	8-848-724-01	DEVICE, LENS LSV-601A (SOC) (TR311/TR311E/TR411E/TR412E)		356	2-623-756-21	SCREW (B1.7X5), P (EXCEPT TR311/TR311E/TR411E/TR412E)	
352	3-713-791-51	SCREW (M1.7X3.5), TAPPING, P2		357	3-979-037-11	SPRING, RETURN (EXCEPT TR311/TR311E/TR411E/TR412E)	
353	3-713-791-41	SCREW (M1.7X5), TAPPING PS		M905	1-763-047-11	MOTOR, FOCUS STEPPING	
354	3-979-029-01	LEVER, IR (EXCEPT TR311/TR311E/TR411E/TR412E)		M906	1-763-046-11	MOTOR, ZOOM STEPPING	

6-1-9. CASSETTE COMPARTMENT ASSEMBLY

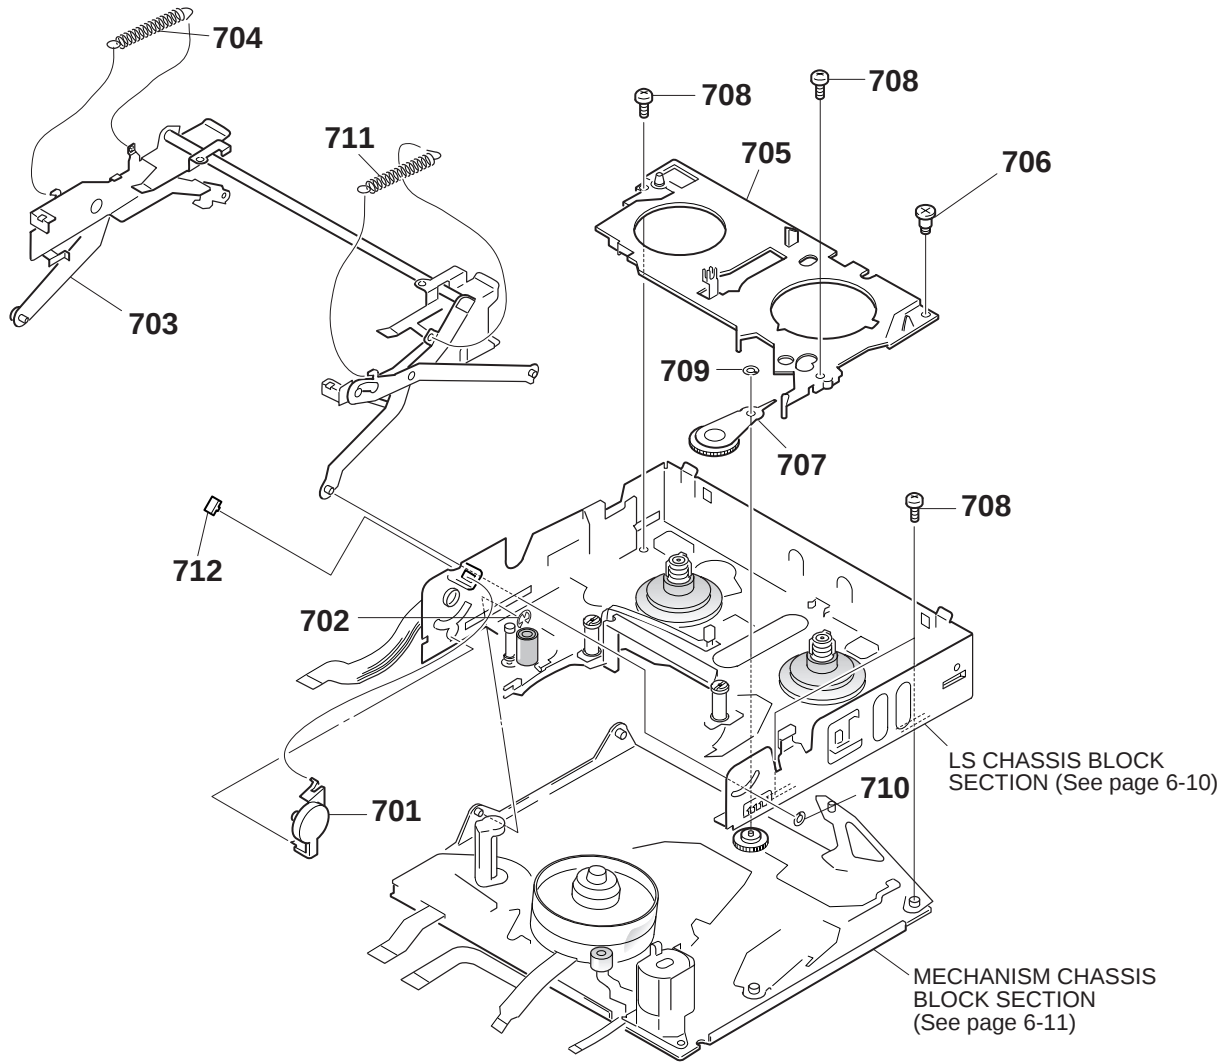


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
701	A-7040-421-A	DAMPER ASSY		707	X-3945-399-1	GEAR ASSY, GOOSENECK	
702	7-624-102-04	STOP RING 1.5, TYPE -E		708	3-947-503-01	SCREW (M1.4X2.5)	
703	X-3945-400-X	CASSETTE COMPARTMENT ASSY		709	3-331-007-21	WASHER	
704	3-965-587-03	SPRING, TENSION		710	3-727-176-01	WASHER, STOPPER	
705	3-965-584-08	RETAINER, GOOSENECK		711	3-973-268-01	SPRING, TENSION	
706	3-976-055-01	SCREW (M1.4X1)		712	3-971-076-01	FASTENER, D	

6-1-10. LS CHASSIS ASSEMBLY

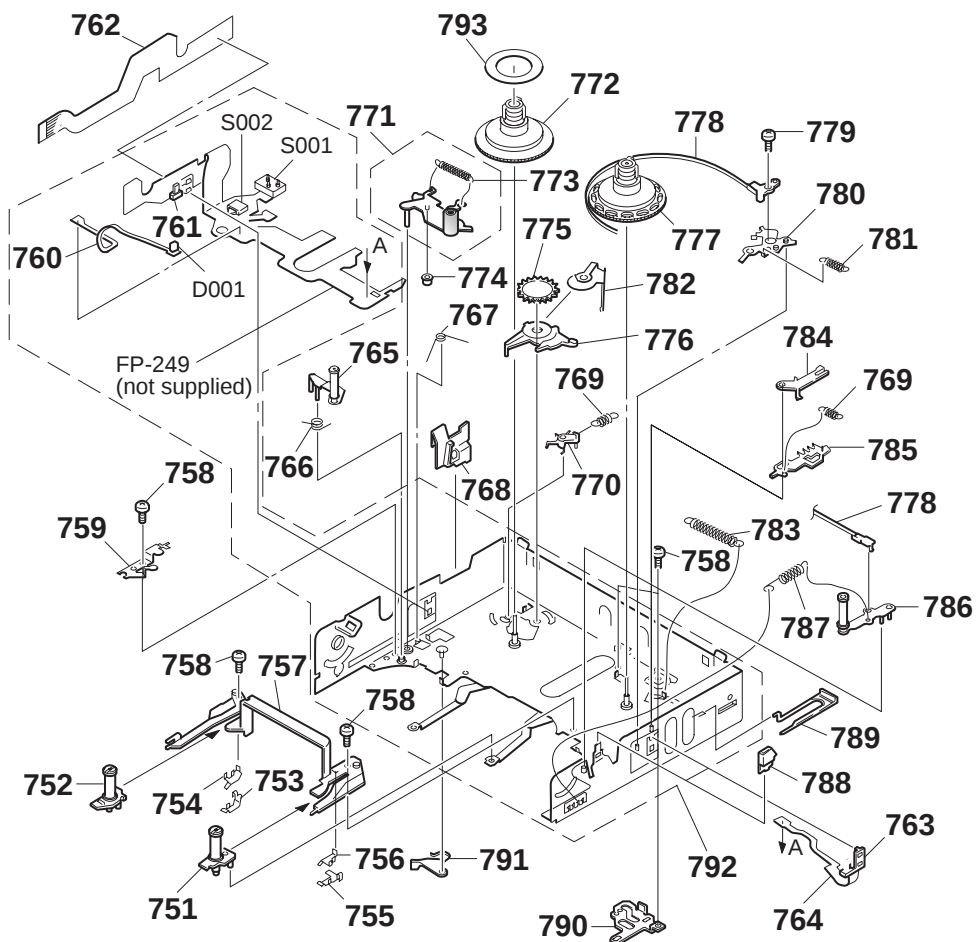

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
751	A-7040-419-A	BASE (S) BLOCK ASSY, GUIDE		775	3-965-563-01	GEAR, T SOFT	
752	A-7040-418-B	BASE (T) BLOCK ASSY, GUIDE		776	3-965-565-01	CLAW, T SOFT	
753	3-965-559-01	STOPPER (T)		777	X-3945-397-1	DECK ASSY, REEL, S	
754	3-965-557-01	STOPPER (T), GB		778	X-3945-396-1	BAND ASSY, TENSION REGULATOR	
755	3-965-558-01	STOPPER (S)		779	3-945-756-01	SCREW (M1.4X3)	
756	3-965-556-01	STOPPER (S), GB		780	3-965-583-01	ARM, RVS	
757	3-965-553-01	RAIL, GUIDE		781	3-965-580-01	SPRING, TENSION	
758	3-947-503-01	SCREW (M1.4X2.5)		782	3-966-384-01	SPRING, T SOFT	
759	3-965-573-01	RETAINER, TG4		783	3-965-578-01	SPRING, TENSION COIL	
760	1-658-213-11	FP-355 FLEXIBLE BOARD		784	3-965-560-01	RATCHET, S	
761	3-965-552-01	HOLDER (T), SENSOR		785	3-965-561-01	PLATE, RELEASE, S RATCHET	
762	1-657-786-13	FP-221 FLEXIBLE BOARD		786	X-3945-395-1	ARM ASSY, TG1	
763	3-965-551-01	HOLDER (S), SENSOR		787	3-965-576-01	SPRING (TG1), TENSION	
764	1-658-214-11	FP-356 FLEXIBLE BOARD		788	3-965-567-01	LID OPEN	
765	A-7040-417-A	ARM BLOCK ASSY, TG4		789	3-965-566-01	COVER, LS GUIDE	
766	3-965-574-01	SPRING, TORSION		* 790	3-965-577-01	PLATE, CAM, LS	
767	3-965-575-01	SPRING (PINCH), TORSION		791	3-965-569-01	ARM, EJ	
768	3-965-568-01	GUIDE, LOCK		792	A-7040-427-A	CHASSIS (S1) ASSY, LS	
769	3-965-562-01	SPRING (RATCHET), TENSION		* 793	3-972-838-01	SPACER, REEL	
770	3-965-581-03	RATCHET, T		D001	8-719-988-42	DIODE GL453	
771	X-3945-394-1	ARM ASSY, PINCH		S001	1-692-614-11	SWITCH, PUSH (3 KEY) (Hi8 MP, ME/MP, REC PROOF)	
772	X-3945-398-2	DECK ASSY, REEL, T		S002	1-572-688-11	SWITCH, PUSH (1 KEY)(C.C. LOCK)	
773	3-965-648-01	SPRING (PINCH), TENSION					
774	3-965-579-01	ROLLER, PINCH PRESS					

6-1-11. MECHANISM CHASSIS ASSEMBLY

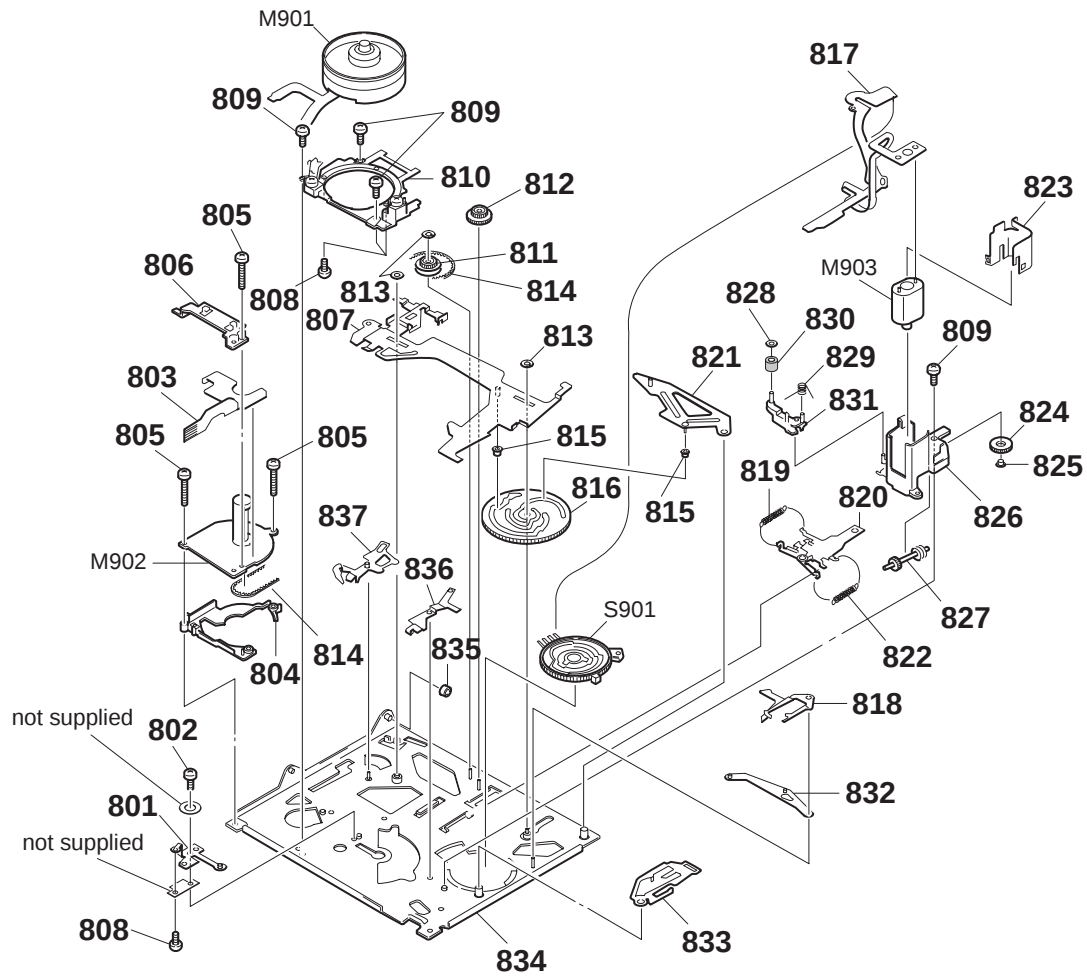

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
801	X-3947-343-1	GROUND (IM) ASSY, SHAFT		822	3-965-535-01	SPRING (LIMITER ARM S), COIL	
802	3-965-550-02	SCREW (M1.7X1.6)		823	3-965-542-01	SHIELD, MOTOR	
803	1-657-785-11	FP-248 FLEXIBLE BOARD		824	3-965-539-01	GEAR (A)	
804	3-965-545-01	SPACER, CAPSTAN		825	3-965-538-01	SLEEVE, MOTOR HOLDER	
805	3-965-549-01	SCREW (M1.4 X 6.5)					
806	3-966-349-01	HOLDER, FLEXIBLE		826	3-965-540-01	HOLDER, MOTOR	
807	3-971-644-01	SLIDER (2), M		827	3-965-541-01	SHAFT, WORM	
808	3-971-939-01	SCREW (M1.4)		828	3-321-393-01	WASHER, STOPPER	
809	3-947-503-01	SCREW (M1.4X2.5)		829	3-965-724-01	SPRING, TORSION	
810	A-7040-416-A	BASE BLOCK ASSY, DRUM		830	A-7040-423-A	ROLLER BLOCK ASSY, HC	
811	3-965-527-01	GEAR, CHANGE		831	X-3945-407-1	ARM ASSY, HC ROLLER	
812	3-965-544-01	GEAR, RELAY		832	3-965-531-01	ARM, GL	
813	3-331-007-21	WASHER		833	3-965-530-01	PLATE (2), REGULATOR, TENSION	
814	3-965-546-01	BELT, TIMING		834	X-3947-915-2	CHASSIS ASSY, MECHANICAL	
815	3-965-533-01	ROLLER, LS		835	3-965-526-02	ROLLER, LS GUIDE	
816	3-965-528-01	GEAR, CAM		836	3-965-547-01	ARM, HC DRIVING	
817	1-657-784-11	FP-220 FLEXIBLE BOARD		837	3-965-534-01	PLATE, PRESS, PINCH	
818	3-965-529-01	PLATE, REGULATOR (LIMITER ARM T), COIL		M901	A-7048-868-A	DRUM ASSY (DGH-0E2A-R) (PAL)	
819	3-965-536-01	SPRING (LIMITER ARM T), COIL		M901	A-7048-870-A	DRUM ASSY (DGH-0E3A-R) (NTSC)	
820	X-3945-388-1	SLIDER ASSY, GL		M902	8-835-531-32	CAPSTAN ASSY	
821	3-965-532-01	ARM, LS		M903	X-3945-401-1	MOTOR ASSY, DC (LOADING)	
				S901	1-762-436-15	SWITCH, ROTARY (ENCODER)	