


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION

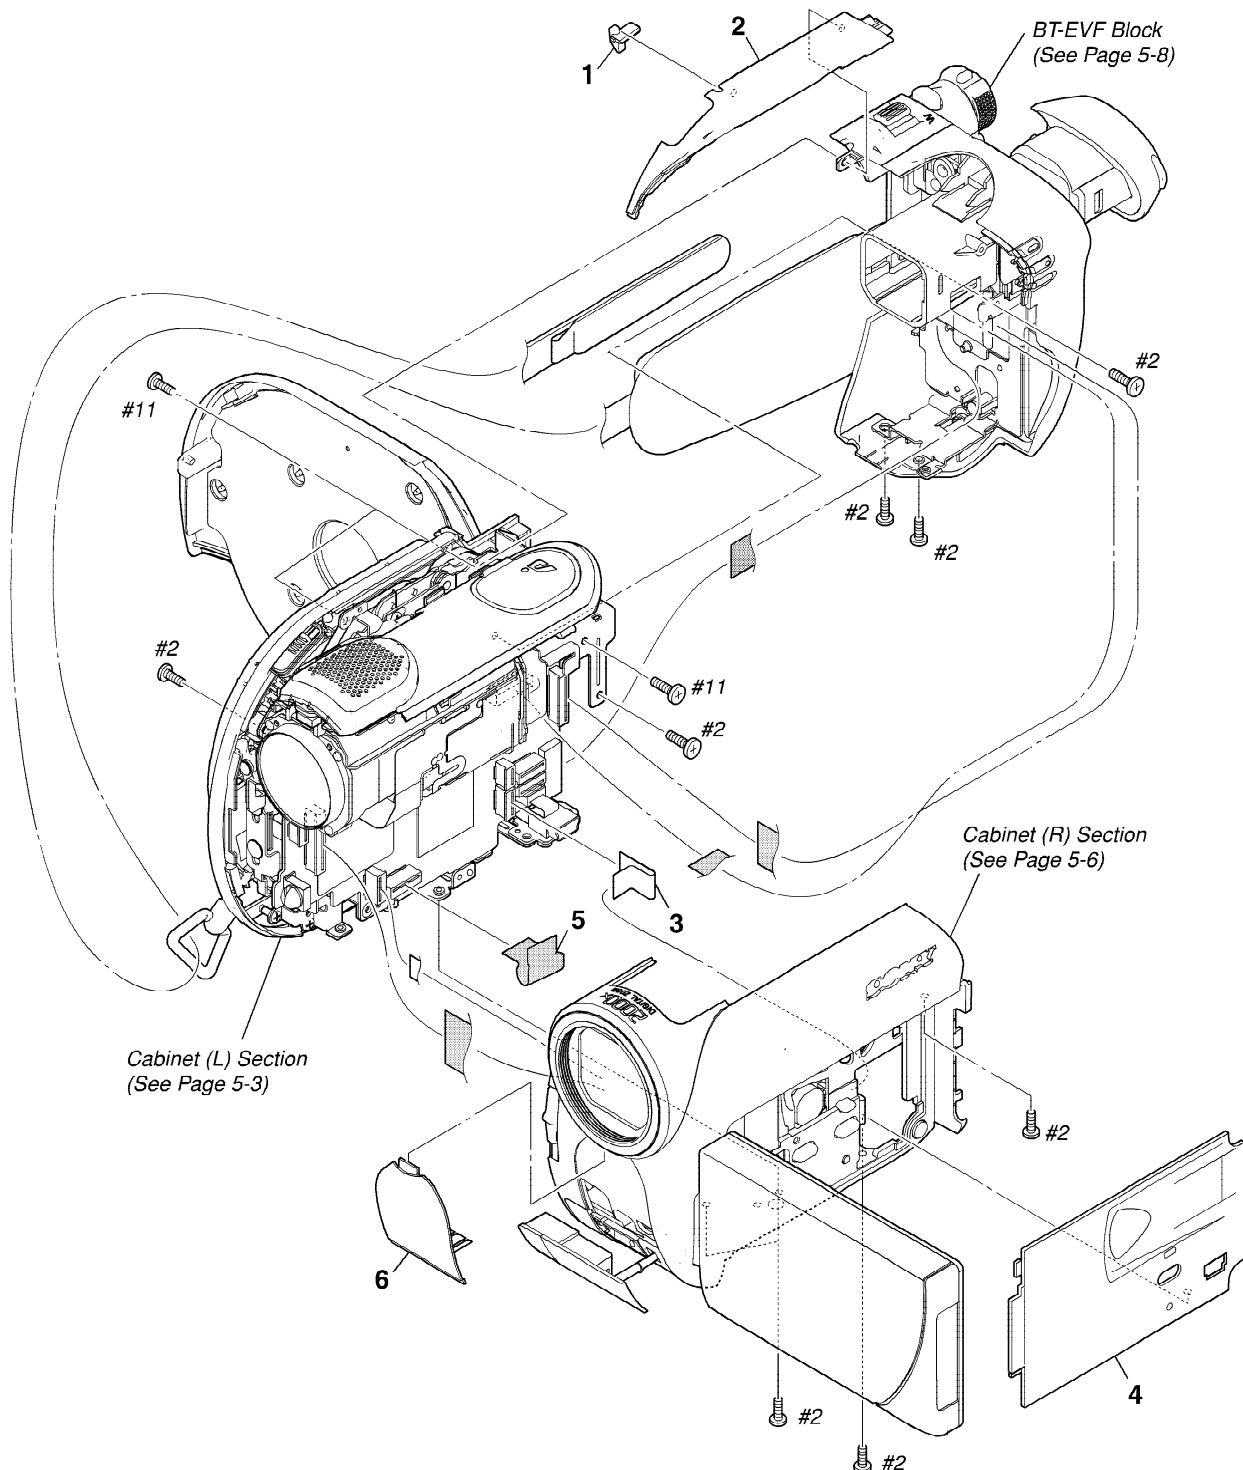

Ref. No.	Part No.	Description
1	2-699-266-01	LIGHT, ACCESS GUIDE
2	2-699-257-01	CABINET (L (UPPER)) (EXCEPT J)
2	2-699-257-11	CABINET (L (UPPER)) (J)
3	1-833-677-11	FLEXIBLE FLAT CABLE (FFC-006)
4	2-699-442-11	COVER, R (EXCEPT J)

Ref. No.	Part No.	Description
4	2-699-442-21	COVER, R (J)
5	1-871-289-11	FP-575 FLEXIBLE BOARD
6	2-699-512-11	WINDOW, REMOTE CONTROL
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. CABINET (L) SECTION

ns: not supplied

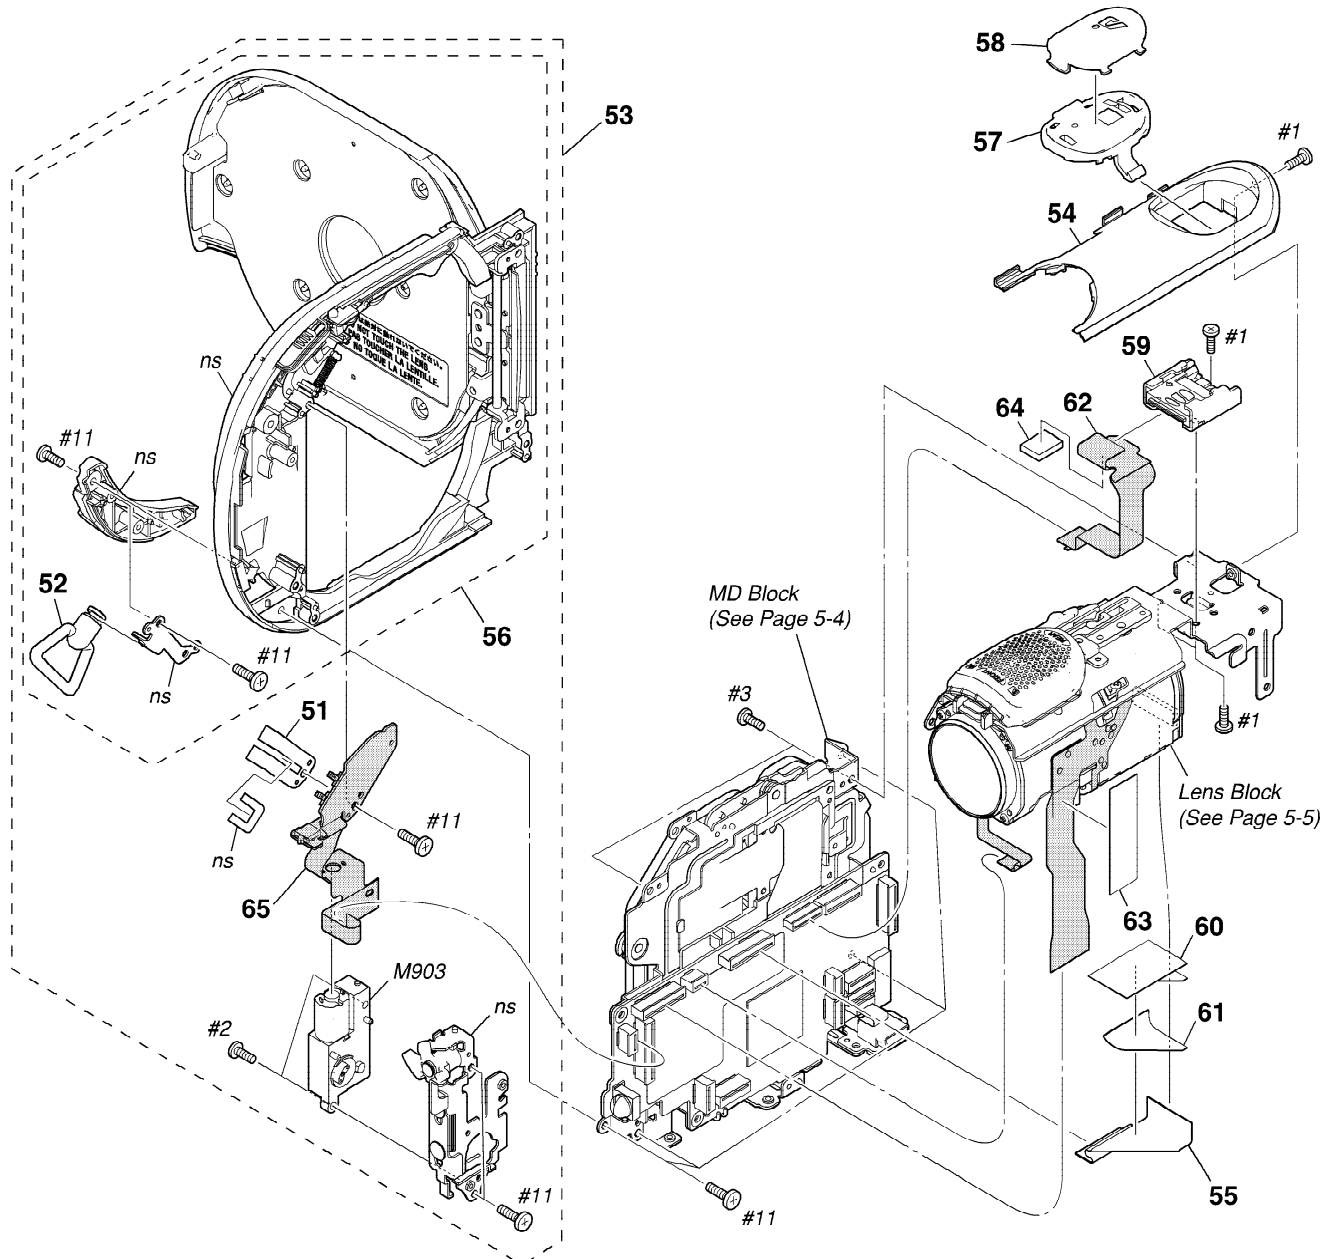

Ref. No.	Part No.	Description
* 51	2-699-262-01	SHEET METAL, LID
52	3-090-616-01	SHAFT (F), STRAP
53	A-1224-314-A	CABINET L ASSY (222) (EXCEPT J)
53	A-1224-315-A	CABINET L ASSY (J)
54	2-699-450-01	CABINET (UPPER (222))
55	1-833-676-11	CABLE, FLEXIBLE FLAT (FFC-004)
56	A-1246-114-A	CABINET(L) ASSY(5.1)(SERVICE) (EXCEPT J)
56	A-1246-115-A	CABINET(L) ASSY(5.1J)(SERVICE) (J)
57	2-699-440-01	HINGE, SHOE COVER
58	2-699-439-01	COVER, SHOE
59	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)


Ref. No.	Part No.	Description
* 60	2-898-035-01	SHEET (CD), RADIATION
* 61	3-094-263-01	SHEET, CD RADIATION INSULATING
62	1-871-286-11	FP-572 FLEXIBLE BOARD
63	3-941-343-01	TAPE (A)
* 64	2-898-042-01	GASKET (MIC)
65	A-1228-528-A	FP-569 FLEXIBLE BOARD, COMPLETE
M903	1-787-237-11	MOTOR UNIT (GEARD MOTOR)
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#11	3-078-890-11	SCREW, TAPPING (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. MD BLOCK

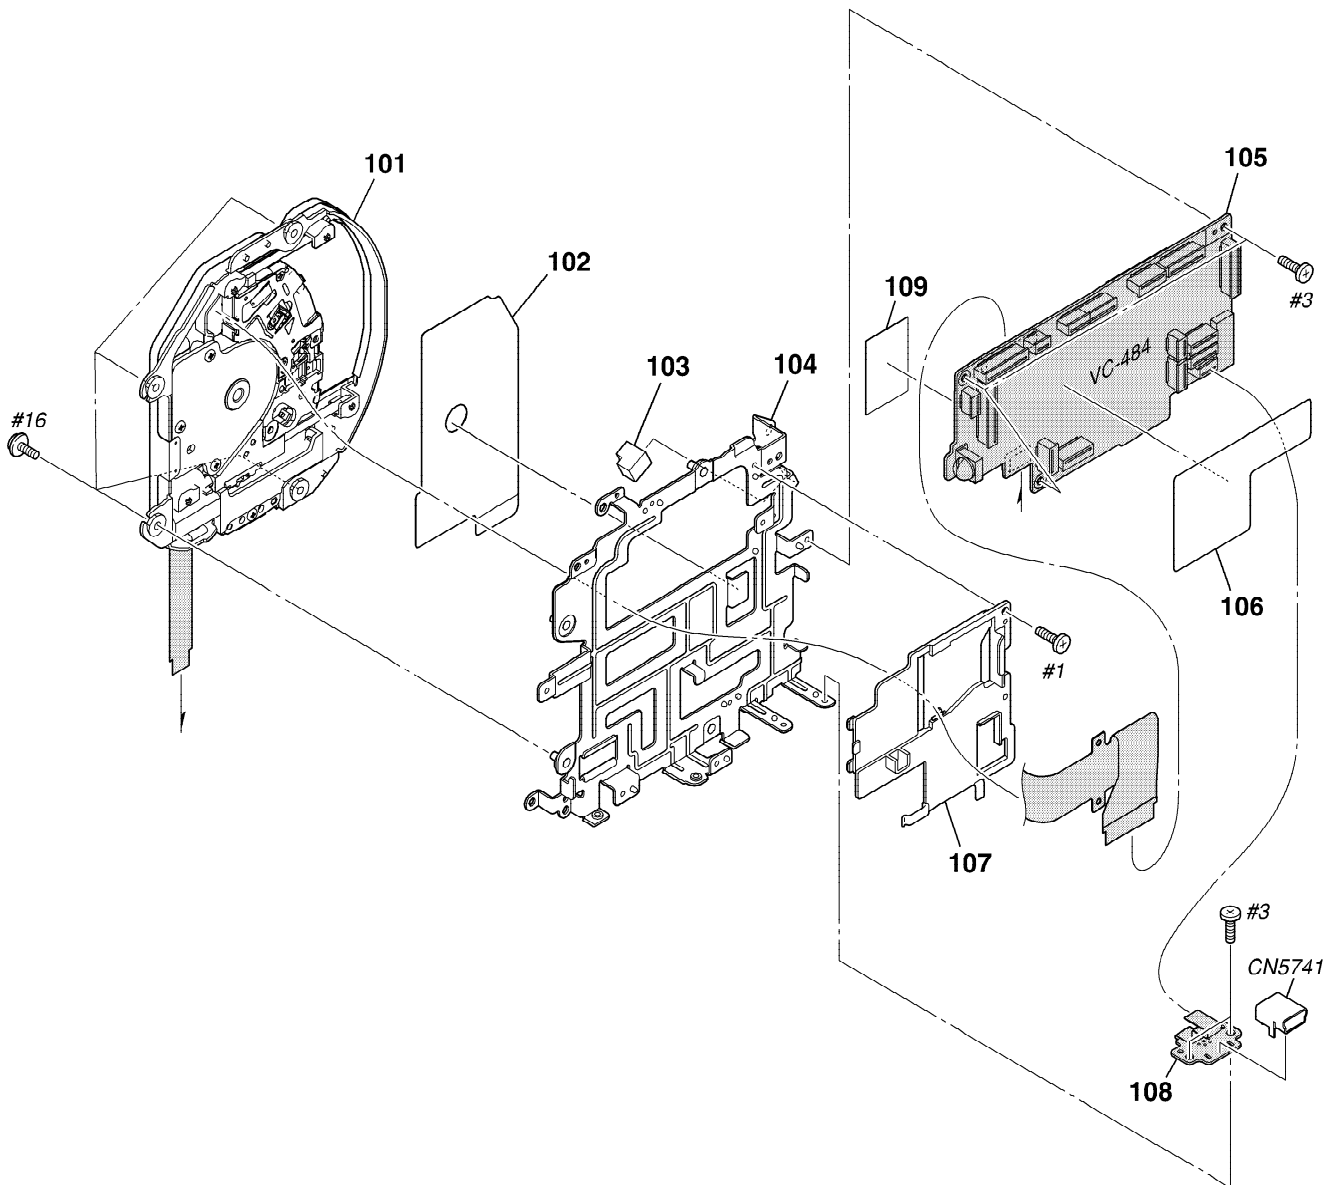

Ref. No.	Part No.	Description
101	A-1212-602-A	SERVICE (DDX-C20000) BLOCK ASSY
* 102	2-699-447-01	SHEET, VC BLIND
103	2-596-924-01	GASKET (MD)
104	X-2149-241-1	FRAME ASSY, MD
105	A-1234-146-A	VC-484 BOARD, COMPLETE (SERVICE) (DVD308/DVD708)
105	A-1234-147-A	VC-484 BOARD, COMPLETE (SERVICE) (DVD306E)
105	A-1236-646-A	VC-484 BOARD, COMPLETE (SERVICE) (DVD308E/DVD708E)


Ref. No.	Part No.	Description
106	2-699-448-01	LABEL, REPLACEMENT CAUTION
* 107	2-699-446-01	GUARD, OP FLEXIBLE
108	1-871-288-11	FP-574 FLEXIBLE BOARD
* 109	3-106-560-01	SHEET, VC PROTECTION
CN5741	1-794-962-11	CONNECTOR, SQUARE TYPE (USB 5P)
#1	2-635-562-11	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#16	2-586-337-01	SCREW, MD (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-4. LENS BLOCK

ns: not supplied

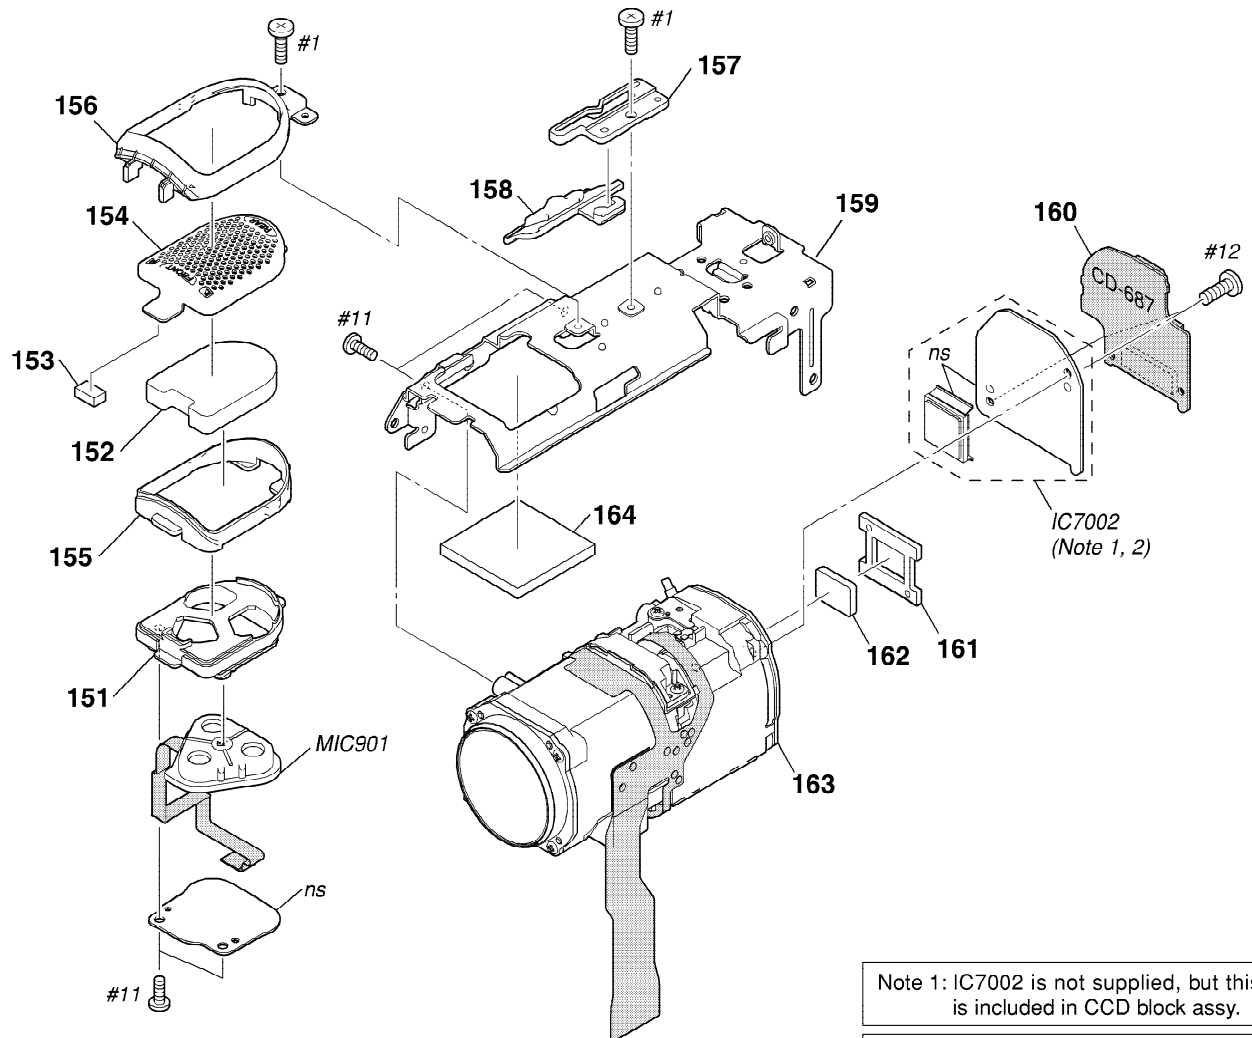

Note 1: IC7002 is not supplied, but this is included in CCD block assy.

Note 1: IC7002 は交換対象ではありませんが、CCD部組に含まれます。

Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

Note 2: イメージャの交換時は4-4ページの「イメージャ交換時の注意」を必ずお読みください。

Ref. No.	Part No.	Description
* 151	2-699-284-01	HOLDER, MICROPHONE
* 152	2-699-283-01	WINDSCREEN
* 153	2-898-042-01	GASKET (MIC)
* 154	2-699-281-01	GRILLE, MICROPHONE
* 155	2-895-149-01	INSULATOR
156	2-699-282-01	CABINET, MICROPHONE
* 157	2-699-280-01	PLATE, NS CLICK
158	2-699-278-01	KNOB (222), NS
* 159	2-699-276-01	FRAME, LENS
160	A-1228-527-A	CD-687 BOARD, COMPLETE

Ref. No.	Part No.	Description
161	3-088-645-01	RUBBER (Z), SEAL
162	1-788-523-11	OPTICAL FILTER BLOCK (OFB-06-11)
163	A-1248-849-A	LENS (BLOCK ASSY 1180 (J1))
* 164	3-097-649-01	CUSHION (MIC) (A)
IC7002	A-1236-643-A	CCD BLOCK ASSY (CCD IMAGER) (Note 1, 2)
MIC901	1-542-711-11	MICROPHONE UNIT
#1	2-635-562-11	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. CABINET (R) SECTION

ns: not supplied

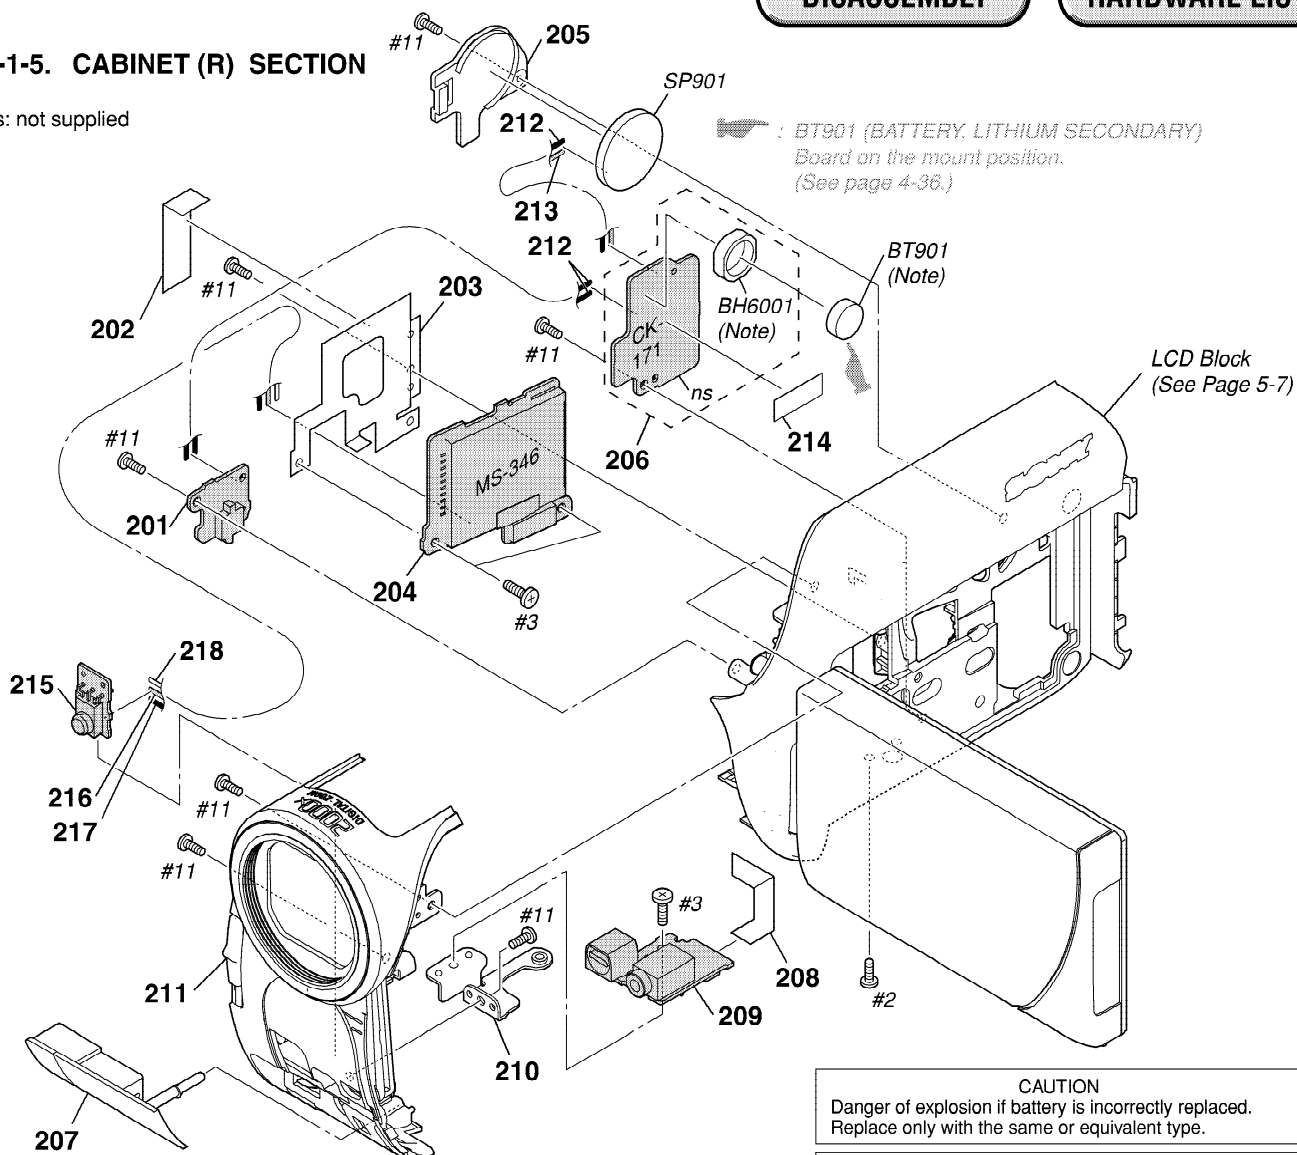

Note: Replace the battery holder (BH6001) together when replacing the lithium battery (BT901) on the CK-171 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: CK-171基板的リチウム電池 (BT901) を交換する場合はバッテリーホルダ (BH6001) も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着して下さい。

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
201	A-1228-517-A	OC-002 BOARD, COMPLETE
202	3-941-343-01	TAPE (A)
* 203	2-699-221-01	PLATE, MS
204	A-1228-523-A	MS-346 BOARD, COMPLETE
* 205	2-699-220-01	RETAINER, SPEAKER
206	A-1228-521-A	CK-171 BOARD, COMPLETE
207	X-2149-256-1	COVER ASSY, JACK
208	1-833-678-11	FLEXIBLE FLAT CABLE (FFC-007)
209	A-1228-512-A	JK-320 BOARD, COMPLETE
* 210	2-886-110-01	FRAME, JACK
211	A-1234-459-A	PANEL ASSY (222), F (EXCEPT J)
211	A-1234-461-A	PANEL ASSY (J), F (J)
212	1-964-964-11	HARNESS (HN-022) (Black)

Ref. No.	Part No.	Description
213	1-964-965-11	HARNESS (HN-023) (Red)
* 214	3-113-687-01	SHEET (CK)
215	A-1228-525-A	FR-262 BOARD, COMPLETE
216	1-964-967-11	HARNESS (HN-025) (Red)
217	1-964-968-11	HARNESS (HN-026) (Black)
218	1-964-969-11	HARNESS (HN-027) (White)
△ BH6001	1-756-615-41	HOLDER, BATTERY (Note)
△ BT901	1-756-134-12	BATTERY, STORAGE, LITHIUM ION (Note)
SP901	1-825-260-41	LOUD SPEAKER (1.6CM)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#11	3-078-890-11	SCREW, TAPPING (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. LCD BLOCK

ns: not supplied

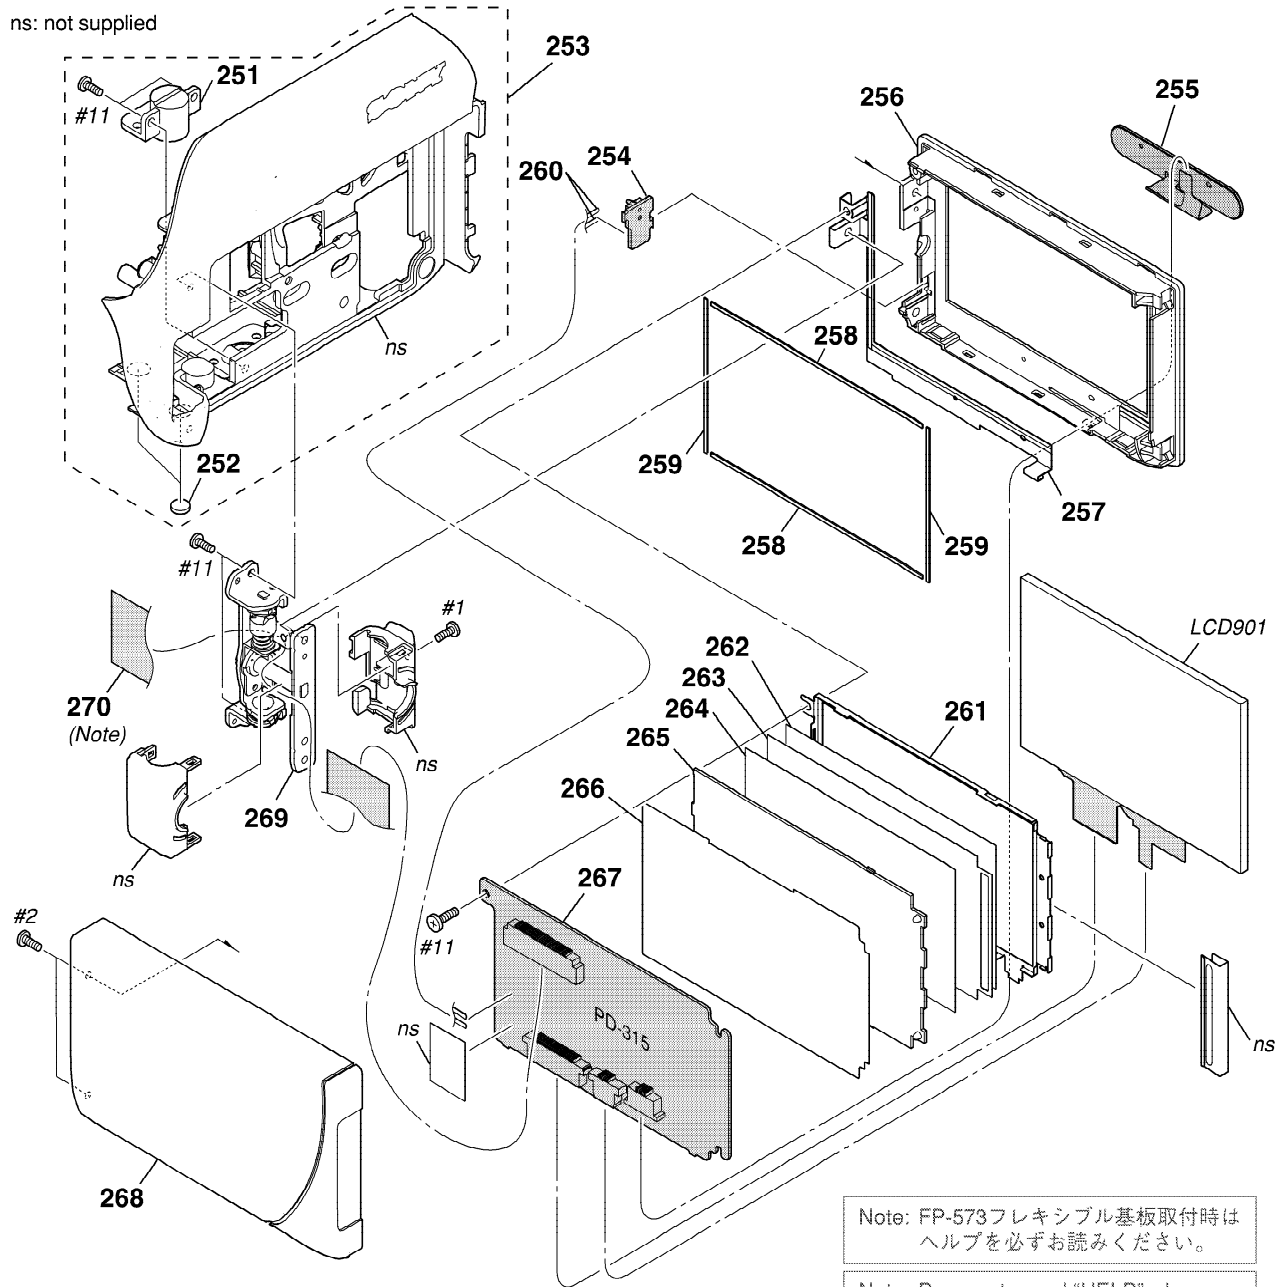

Ref. No.	Part No.	Description
251	2-699-212-01	SCREW, TRIPOD
252	2-589-376-01	FOOT (395), RUBBER
253	A-1246-117-A	CABINET (R) ASSY(222) (SERVICE)
254	A-1228-515-A	RV-002 BOARD, COMPLETE
255	1-479-995-11	KEY BLOCK, CONTROL (SB22200)
256	2-699-201-01	CABINET (M (222)), P (EXCEPT J)
256	2-699-201-11	CABINET (M (222)), P (J)
* 257	2-699-203-01	PLATE (222), GROUND
* 258	2-699-205-01	CUSHION (H (222)), PANEL
* 259	2-699-207-01	CUSHION (V (222)), PANEL
260	1-964-966-11	HARNESS (HN-024)
261	2-694-516-01	FRONT FRAME (2.7)
262	2-694-512-01	PRISM SHEET V (2.7)
263	2-694-513-01	PRISM SHEET H (2.7)


Ref. No.	Part No.	Description
264	2-694-514-01	DIFFUSION SHEET (2.7)
265	2-666-801-11	LIGHT GUIDE (2.7)
266	2-694-515-01	REFLECTION SHEET (2.7)
267	A-1228-513-A	PD-315 BOARD, COMPLETE
268	2-699-199-11	CABINET (C), P (DVD308/DVD308E)
268	2-699-199-51	CABINET (C), P (DVD306E)
268	2-699-199-61	CABINET (C), P (DVD708/DVD708E)
269	X-2149-207-1	HINGE ASSY (M), PANEL
270	1-871-287-11	FP-573 FLEXIBLE BOARD (Note)
LCD901	A-1202-057-A	TP BLOCK ASSY (27TSTN107)
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-7. BT-EVF BLOCK

ns: not supplied

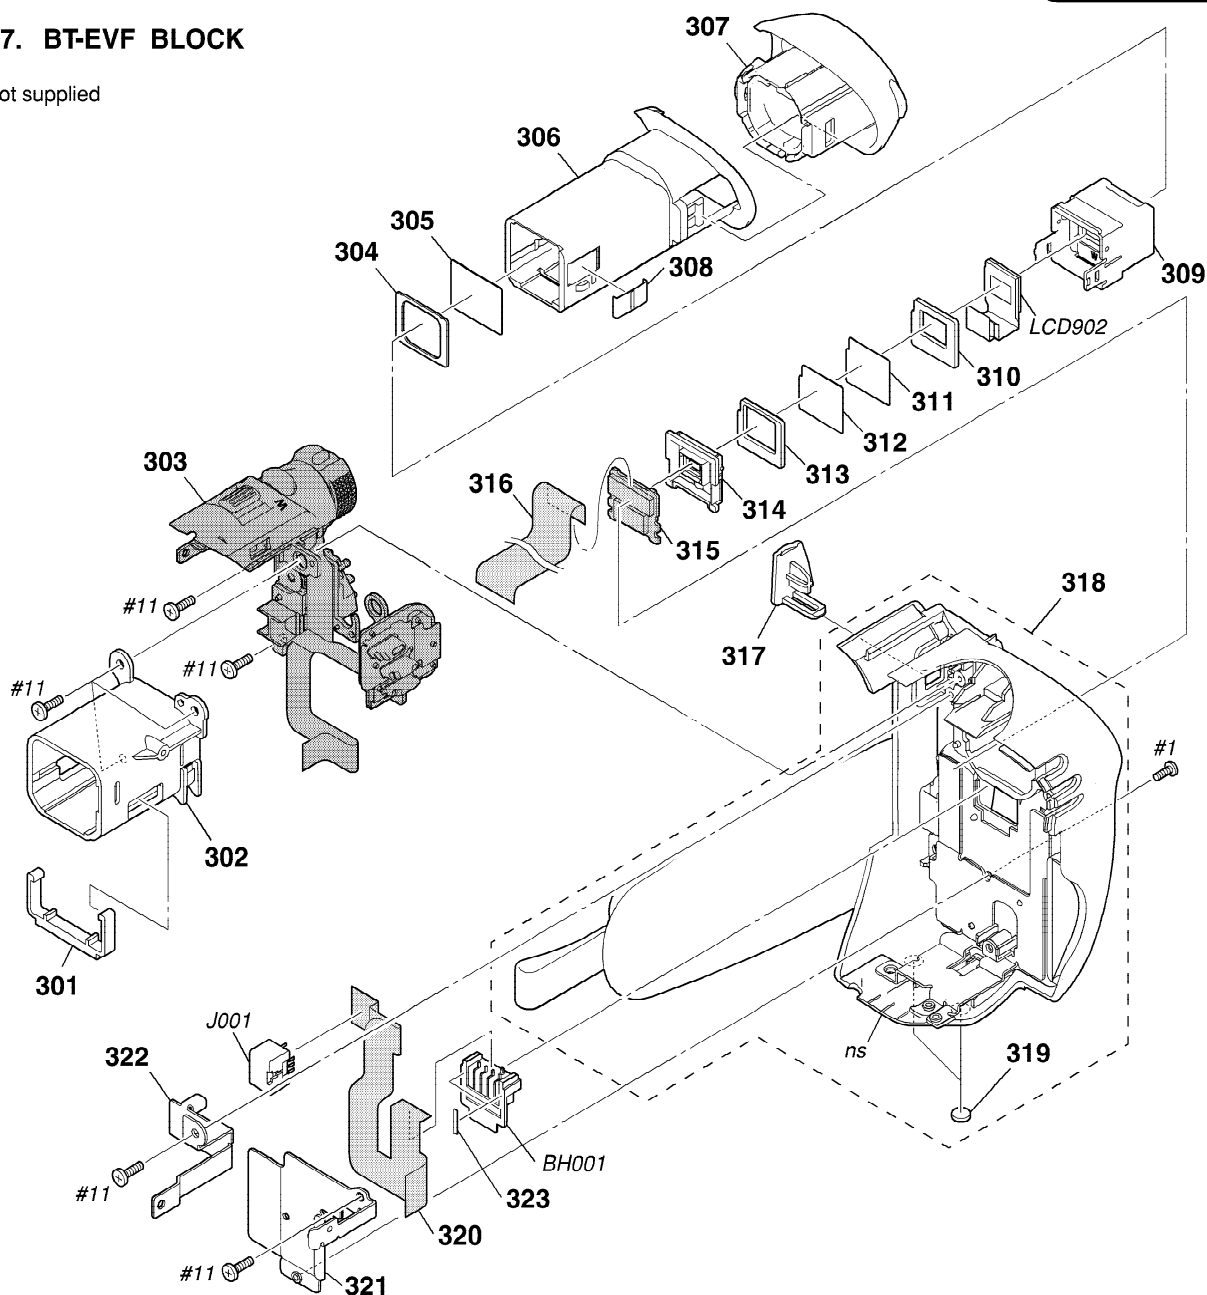

Ref. No.	Part No.	Description
301	2-699-239-01	STOPPER, VF
302	2-699-238-01	CABINET, VF SLIDE
303	1-479-927-11	SWITCH BLOCK, CONTROL (PS22100)
		(EXCEPT J)
303	1-479-927-21	SWITCH BLOCK, CONTROL (PS22100) (J)
* 304	2-654-871-01	CUSHION (CF)
* 305	2-638-813-01	PLATE (CF), DEFLECTION
306	2-699-226-01	CABINET, VF
307	X-2149-209-1	EYE CUP ASSY (222)
308	2-699-240-01	SPRING, VF SLIDE
* 309	2-699-236-01	CABINET (222), INNER
* 310	2-638-815-01	SPACER, LCD
* 311	2-638-816-01	PLATE (TFT), DEFLECTION
* 312	2-638-818-01	ILLUMINATOR
* 313	2-638-819-01	CUSHION, LCD
* 314	2-638-820-01	GUIDE, LAMP
315	A-1228-519-A	BL-007 BOARD, COMPLETE

Ref. No.	Part No.	Description
316	1-871-285-11	FP-571 FLEXIBLE BOARD
317	2-699-246-01	COVER, DC (IN)
318	A-1246-110-A	BT PANEL ASSY (E) (SERVICE) (EXCEPT BR, J)
318	A-1246-111-A	BT PANEL ASSY (J) (SERVICE) (J)
318	A-1246-112-A	BT PANEL ASSY (B) (SERVICE) (BR)
319	2-589-376-01	FOOT (395), RUBBER
320	1-871-284-11	FP-570 FLEXIBLE BOARD
* 321	2-699-244-01	PLATE (UPPER), BT PANEL
* 322	2-699-279-01	SHEET METAL, DC (IN)
323	3-208-237-01	SHEET (BT)
BH001	1-780-064-21	BATTERY TERMINAL BOARD
J001	1-815-792-11	CONNECTOR, DC-IN (7.2V)
LCD902	8-753-241-17	LCX076AKE-J
#1	2-635-562-11	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1228-519-A	BL-007 BOARD, COMPLETE *****
		< CAPACITOR >
C5901	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5902	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
		< CONNECTOR >
CN5901	1-818-046-51	CONNECTOR, FFC/FPC 20P
* CN5902	1-817-560-71	CONNECTOR, FPC (ZIP) 21P
		< DIODE >
* D5901	6-501-591-01	DIODE NESW007AT-T099 (BACKLIGHT)
D5902	6-500-941-01	DIODE MAZS056008S0
	A-1228-527-A	CD-687 BOARD, COMPLETE ***** (IC7002 is not supplied, but this is included in CCD block assy.)
		< CAPACITOR >
C7002	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V
C7003	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V
C7005	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7007	1-127-820-11	CERAMIC CHIP 4.7uF 10% 16V
C7011	1-165-875-11	CERAMIC CHIP 10uF 10% 10V
C7015	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7016	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7017	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7018	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7023	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C7024	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7025	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7026	1-100-251-11	CERAMIC CHIP 0.047uF 10% 10V
C7027	1-100-251-11	CERAMIC CHIP 0.047uF 10% 10V
C7028	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7029	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
		< CONNECTOR >
CN7001	1-820-586-51	CONNECTOR, FFC/FPC 28P
		< FERRITE BEAD >
FB7001	1-400-331-11	FERRITE, EMI (SMD) (1005)
		< IC >
IC7002	A-1236-643-A	CCD BLOCK ASSY (CCD IMAGER) (Note)
IC7003	8-759-489-19	IC uPC6756GR-8JG-E2
		< COIL >
L7001	1-400-588-11	INDUCTOR 10uH
L7002	1-400-588-11	INDUCTOR 10uH
		< TRANSISTOR >
Q7001	6-550-234-01	TRANSISTOR UNR32A300LS0
Q7002	8-729-055-21	TRANSISTOR 2SC5096-O/R (TE85L)

Ref. No.	Part No.	Description
		< RESISTOR >
R7002	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R7004	1-218-965-11	RES-CHIP 10K 5% 1/16W
R7005	1-218-953-11	RES-CHIP 1K 5% 1/16W
R7006	1-218-966-11	RES-CHIP 12K 5% 1/16W
R7013	1-218-965-11	RES-CHIP 10K 5% 1/16W
R7014	1-218-989-11	RES-CHIP 1M 5% 1/16W
R7015	1-218-989-11	RES-CHIP 1M 5% 1/16W
R7016	1-218-965-11	RES-CHIP 10K 5% 1/16W
		< COMPOSITION CIRCUIT BLOCK >
RB7001	1-234-379-21	RES, NETWORK 22K (1005X4)
		< SENSOR >
SE7001	1-479-022-61	SENSOR, ANGULAR VELOCITY (32.2kHz) (YAW)
SE7002	1-479-022-51	SENSOR, ANGULAR VELOCITY (30.8kHz) (PITCH)

Note: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

Note: イメージャの交換時は4-4ページの“イメージャ交換時の注意”を必ずお読みください。

CK-171**FP-569****FP-570****FP-574****FR-262****JK-320**

Ref. No.	Part No.	Description
	A-1228-521-A	CK-171 BOARD, COMPLETE *****
		(BT901 (lithium battery) is not included in CK-171 complete board.)

< BATTERY HOLDER >

△ BH6001	1-756-615-41	HOLDER, BATTERY (Note)
----------	--------------	------------------------

< BATTERY >

△ BT901	1-756-134-12	BATTERY, STORAGE, LITHIUM ION (Note)
---------	--------------	--------------------------------------

< CONNECTOR >

CN6001	1-816-644-51	FFC/CONNECTOR, FPC (LIF) 12P
--------	--------------	------------------------------

< DIODE >

D6004	8-719-064-07	DIODE SML-310LTT86 (MS ACCESS)
-------	--------------	--------------------------------

< SWITCH >

S6001	1-786-157-11	TACTILE SWITCH (RESET)
S6002	1-786-157-11	TACTILE SWITCH (DISP/BATT INFO)
S6003	1-786-157-11	TACTILE SWITCH (WIDE SELECT)

A-1228-528-A	FP-569 FLEXIBLE BOARD, COMPLETE *****
--------------	--

< DIODE >

D5691	8-719-064-07	DIODE SML-310LTT86 (ACCESS)
-------	--------------	-----------------------------

< SWITCH >

S5691	1-786-148-11	SWITCH, PUSH (1 KEY) (OPEN)
S5692	1-786-148-11	SWITCH, PUSH (1 KEY) (LID OPEN)
S5693	1-786-148-11	SWITCH, PUSH (1 KEY) (LID OPEN)
S5694	1-786-179-31	SWITCH, PUSH (1 KEY) (EJECT DET)

1-871-284-11	FP-570 FLEXIBLE BOARD *****
	(BH001 and J001 are not included in FP-570 flexible board.)

< BATTERY TERMINAL >

BH001	1-780-064-21	BATTERY TERMINAL BOARD
-------	--------------	------------------------

< JACK >

J001	1-815-792-11	CONNECTOR, DC-IN (7.2V)
------	--------------	-------------------------

1-871-288-11	FP-574 FLEXIBLE BOARD *****
	(CN5741 is not included in FP-574 flexible board.)

< CONNECTOR >

CN5741	1-794-962-11	CONNECTOR, SQUARE TYPE (USB 5P)
--------	--------------	---------------------------------

• Refer to page 5-1 for mark △.

DCR-DVD306E/DVD308/DVD308E/DVD708/DVD708E_L2

Ref. No.	Part No.	Description
	A-1228-525-A	FR-262 BOARD, COMPLETE *****
		(IC6501 is not supplied, but this is included in FR-262 complete board.)

< IC >

IC6501	(Not supplied)	IC KSM-2001TN12E
--------	----------------	------------------

A-1228-512-A	JK-320 BOARD, COMPLETE *****
--------------	---------------------------------

< CAPACITOR >

C7301	1-164-935-11	CERAMIC CHIP	470PF	10%	50V
C7302	1-164-935-11	CERAMIC CHIP	470PF	10%	50V

< CONNECTOR >

CN7301	1-815-794-13	CONNECTOR (MULTIPLE) (A/V OUT)
CN7302	1-816-644-51	FFC/CONNECTOR, FPC (LIF) 12P

< DIODE >

D7301	6-500-776-01	DIODE MAZW068H0LS0
-------	--------------	--------------------

< FERRITE BEAD >

FB7303	1-400-833-21	SMD EMI FERRITE
FB7305	1-400-927-31	BEAD, FERRITE (1005)
FB7306	1-400-927-31	BEAD, FERRITE (1005)

< JACK >

J7301	1-793-995-21	JACK, SUPER SMALL TYPE (REMOTE)
-------	--------------	---------------------------------

< RESISTOR >

R7301	1-218-949-11	RES-CHIP	470	5%	1/16W
-------	--------------	----------	-----	----	-------

< VARISTOR >

* VD7302	1-802-279-11	VARISTOR (SMD)
* VD7303	1-802-279-11	VARISTOR (SMD)
* VD7305	1-802-279-11	VARISTOR (SMD)

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Note: Replace the battery holder (BH6001) together when replacing the lithium battery (BT901) on the CK-171 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: CK-171基板のリチウム電池 (BT901) を交換する場合はバッテリーホルダ (BH6001) も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着して下さい。

MS-346**OC-002****PD-315****RV-002**

Ref. No.	Part No.	Description
	A-1228-523-A	MS-346 BOARD, COMPLETE *****
		< CONNECTOR >
CN7401	1-819-611-21	MEMORY STICK DUO CONNECTOR 10P
CN7402	1-816-646-51	FFC/CONNECTOR, FPC (LIF) 16P
		< FERRITE BEAD >
FB7401	1-469-580-11	INDUCTOR, FERRITE BEAD (1005)
FB7402	1-469-580-11	INDUCTOR, FERRITE BEAD (1005)
FB7403	1-469-580-11	INDUCTOR, FERRITE BEAD (1005)
FB7404	1-469-580-11	INDUCTOR, FERRITE BEAD (1005)
		< RESISTOR >
R7404	1-218-942-11	RES-CHIP 120 5% 1/16W
R7405	1-218-942-11	RES-CHIP 120 5% 1/16W
R7406	1-218-942-11	RES-CHIP 120 5% 1/16W
R7407	1-218-942-11	RES-CHIP 120 5% 1/16W
	A-1228-517-A	OC-002 BOARD, COMPLETE *****
		< SWITCH >
* S7601	1-786-545-41	SWITCH, PUSH LEVER (S) (PANEL OPEN/CLOSE)
	A-1228-513-A	PD-315 BOARD, COMPLETE *****
		< CAPACITOR >
C6302	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6303	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6304	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6305	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6306	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
		< CONNECTOR >
CN6301	1-818-072-51	CONNECTOR, FFC/FPC (ZIF) 30P
CN6302	1-573-915-51	CONNECTOR, FFC/FPC (ZIF) 6P
* CN6304	1-818-069-51	CONNECTOR, FFC/FPC (ZIF) 6P
CN6305	1-818-071-51	CONNECTOR, FFC/FPC (ZIF) 24P
		< DIODE >
D6302	6-500-941-01	DIODE MAZS056008S0
* D6303	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
* D6304	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
* D6305	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
		< TRANSISTOR >
Q6301	8-729-427-67	TRANSISTOR XP421F-TXE
Q6302	8-729-427-37	TRANSISTOR XP411F-TXE
Q6303	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
		< RESISTOR >
R6301	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R6302	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R6303	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R6307	1-218-978-11	RES-CHIP 120K 5% 1/16W

Ref. No.	Part No.	Description
R6309	1-218-989-11	RES-CHIP 1M 5% 1/16W
		< VARISTOR >
* VD6302	1-802-279-11	VARISTOR (SMD)
	A-1228-515-A	RV-002 BOARD, COMPLETE *****
		< SWITCH >
S7502	1-786-180-31	SWITCH, PUSH (1 KEY) (PANEL REVERSE)


Electrical parts list of the VC-484 board is not shown.
Pages 5-12 to 5-18 are not shown.

• EXCEPT J MODEL

Checking supplied accessories.

to J MODEL


Note: This item is supplied with the unit as an accessory, but is not prepared as a service part.

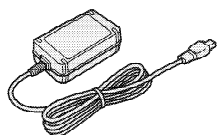

AC Adaptor
(AC-L200)
△ 1-479-285-21



 Power Cord
△ 1-555-074-91 (AUS)
△ 1-782-476-71 (CH)
△ 1-823-947-71 (KR)
△ 1-823-945-41 (US, CND)
△ 1-827-269-31 (UK, HK)
△ 1-827-826-41 (AEP, EE, NE,
E: PAL, E: NTSC (Latin America))
△ 1-830-518-41 (E: NTSC (Except
Latin America))
△ 1-832-106-31 (AR)



USB Cable
1-829-868-31



A/V Connecting Cable
1-831-553-11

 
Other accessories




Conversion (2P) Adaptor
△ 1-569-008-12
(E: NTSC (Latin America))



Conversion (2P) Adaptor
△ 1-569-007-12
(E: NTSC (Except Latin
America))



 
Rechargeable Battery Pack
NP-FH40
(Note)



CD-ROM
"Handycam Application Software"
3-093-590-02



 Wireless Remote Commander
RMT-835
1-479-275-31



DVD-ROM
"ENJOY HANDYCAM"
3-093-691-01 (KR)
ENGLISH / KOREAN / JAPANESE
3-093-691-11 (US, CND, E, AR)
ENGLISH / FRENCH / SPANISH / PORTUGUESE
3-093-691-21 (UK, EE, NE)
ENGLISH / RUSSIAN / GERMAN
3-093-691-31 (AEP)
ENGLISH / SPANISH / PORTUGUESE / ITALIAN
3-093-691-41 (AEP)
ENGLISH / FRENCH / PORTUGUESE / DUTCH
3-093-691-61 (E, HK, AUS, CH)
ENGLISH / FRENCH / SIMPLIFIED CHINESE for CHINA /
TRADITIONAL CHINESE for HONG KONG
3-093-691-71 (E)
ENGLISH / TRADITIONAL CHINESE for TAIWAN / SPANISH / PORTUGUESE

2-319-496-11	MANUAL, INSTRUCTION (ENGLISH) (DVD308: US, CND/DVD708: E)
2-319-496-21	MANUAL, INSTRUCTION (FRENCH) (DVD308: CND)
2-319-496-31	MANUAL, INSTRUCTION (SPANISH) (DVD308: E, AR)
2-319-496-51	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (DVD708: E)
2-319-496-61	MANUAL, INSTRUCTION (KOREAN) (DVD708: KR)
2-319-497-11	MANUAL, INSTRUCTION (ENGLISH) (DVD306E: AEP, UK/DVD708E: E, HK, AUS)
2-319-497-21	MANUAL, INSTRUCTION (FRENCH) (DVD306E: AEP/DVD708E: E)
2-319-497-31	MANUAL, INSTRUCTION (GERMAN, DUTCH) (DVD306E: AEP)
2-319-497-41	MANUAL, INSTRUCTION (TURKISH) (DVD306E: EE)
2-319-497-51	MANUAL, INSTRUCTION (SPANISH, PORTUGUESE) (DVD306E: AEP)
2-319-497-61	MANUAL, INSTRUCTION (ITALIAN, GREEK) (DVD306E: AEP)
2-319-497-71	MANUAL, INSTRUCTION (RUSSIAN, SWEDISH) (DVD306E: NE/DVD308E: NE)
2-319-497-81	MANUAL, INSTRUCTION (DANISH, FINNISH) (DVD306E: NE/DVD308E: NE)
2-319-497-91	MANUAL, INSTRUCTION (POLISH, CZECH) (DVD306E: EE)
2-319-498-11	MANUAL, INSTRUCTION (HUNGARIAN, SLOVAK) (DVD306E: EE)
2-319-498-21	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) (DVD708E: E, CH)
2-319-498-61	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (DVD708E: HK)
2-319-498-71	MANUAL, INSTRUCTION (ARABIC, PERSIAN) (DVD708E: E)

• Refer to page 5-1 for mark △.


● J MODEL

付属品


Note：当商品はアクセサリとして同梱されておりますが
サービス用補修部品としては準備しておりません。

その他の付属品


2-319-496-01 取扱説明書（日本語）

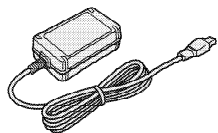


AC アダプター
(AC-L200)
△ 1-479-285-41

 


電源コード
△ 1-828-050-31

 

リチャージブルバッテリー
バック
NP-FH40
(Note)

 

 CD-ROM
「Handycam Application
Software」
3-093-590-02




USB ケーブル
1-829-868-31



A/V 接続ケーブル
1-831-553-11



 ワイヤレスリモコン
RMT-835
1-479-275-31




DVD-ROM
「エンジョイハンディーカム」
3-093-691-01


● △マークについては、5-1ページを参照して下さい。

HARDWARE LIST (1/4)


#1: M1.7 X 2.5
(Black)
2-635-562-11

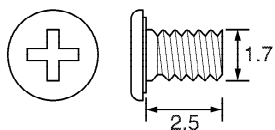


#2: M1.7 X 4.0
(Black)
2-635-562-31

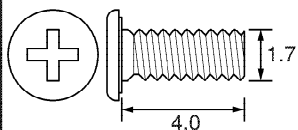


#3: M1.7 X 2.5
(Red)
2-660-401-01

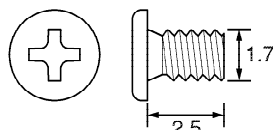


#4: M1.4 X 2.5 (Tapping)
(Dark Silver)
3-348-998-81

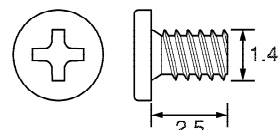


#5: M1.7 X 3.5 (Tapping)
(Black)
3-080-204-01

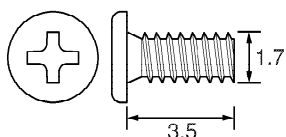


#6: M1.4 X 1.7
(Silver)
2-598-474-01

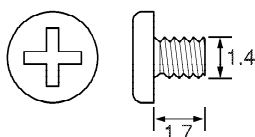


#7: M1.7 X 1.6
(Black)
7-627-552-18

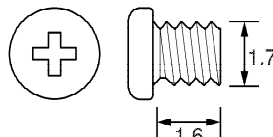


#8: M1.7 X 3.5 (Tapping)
(Silver)
3-078-890-01

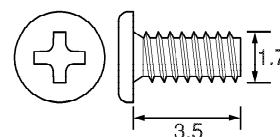


#9: M1.7 X 5.0 (Tapping)
(Silver)
3-078-890-21

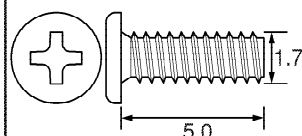


#10: M1.7 X 4.0
(Silver)
2-599-475-31

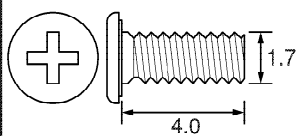


#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

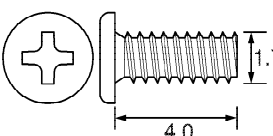


#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21

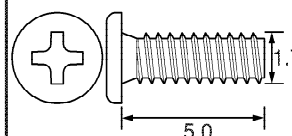


#13: M1.7 X 2.5 (Tapping)
(Silver)
3-085-397-01

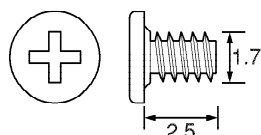


#14: M1.7 X 2.5
(Silver)
2-599-475-11

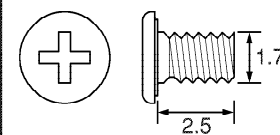


#15: M1.4 X 1.5
(Silver)
3-062-214-01

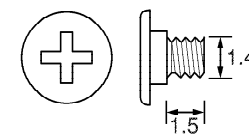


#16: M1.4 X 2.5
(Silver)
2-586-337-01

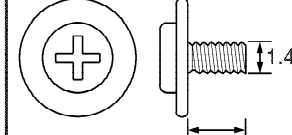


#17: M1.7 X 1.5
(Silver)
2-586-389-01

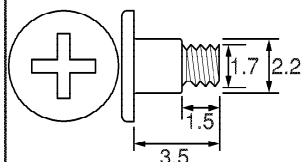


#18: M1.4 X 2.5
(Silver)
2-635-591-21

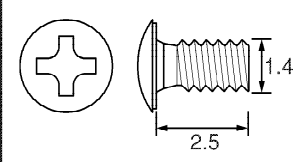





















#19: M1.2 X 4.0 (Tapping)
(Red)
3-086-156-21

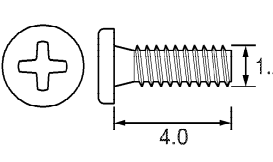





















#20: M1.4 X 3.0
(Silver)
2-635-591-31

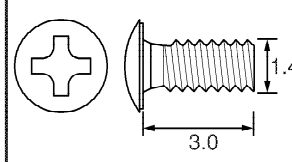

HARDWARE LIST (2/4)

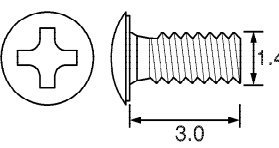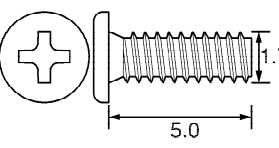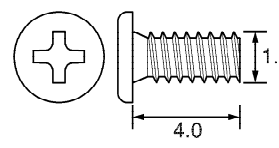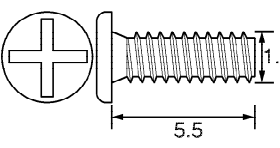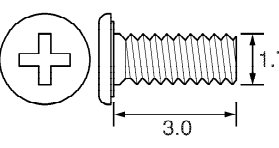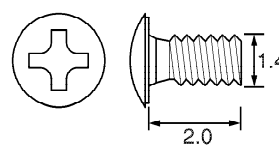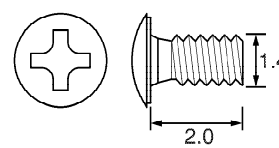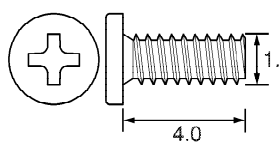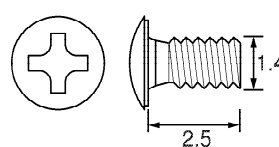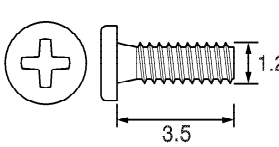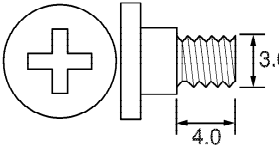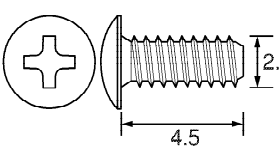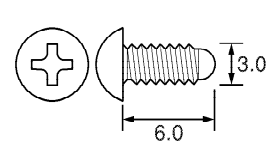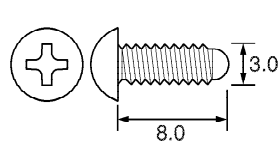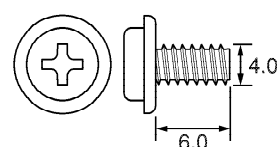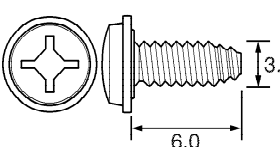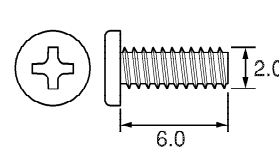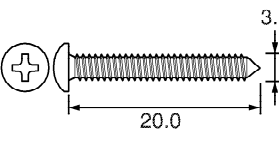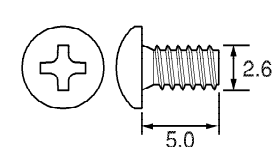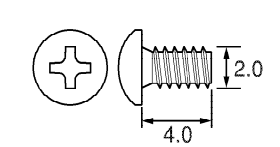
#21: M1.4 X 3.0 (Black) 2-662-396-21 	#22: M1.7 X 5.0 (Tapping) (Silver) 3-083-261-01 	#23: M1.7 X 4.0 (Tapping) (Black) 3-080-204-11 	#24: B1.7 X 5.5 (Tapping) (Black) 4-679-805-11 
#25: M1.7 X 3.0 (Black) 2-635-562-21 	#26: M1.4 X 2.0 (Silver) 2-635-591-11 	#27: M1.4 X 2.0 (Black) 2-662-396-11 	#28: M1.4 X 4.0 (Tapping) (Dark Silver) 3-348-998-61 
#29: M1.4 X 2.5 (Black) 2-662-396-01 	#30: M1.2 X 4.0 (Tapping) (White) 3-086-156-11 	#31: M3.0 X 4.0 (Silver) 2-102-434-01 	#32: M2.0 X 4.5 (Tapping) (Silver) 2-102-498-01 
#33: M3.0 X 6.0 (Silver) 3-077-331-21 	#34: M3.0 X 8.0 (Black) 3-077-331-41 	#35: M4.0 X 6.0 (Tapping) (Silver) 3-975-291-02 	#36: M3.0 X 6.0 (Silver) 4-886-821-11 
#37: M2.0 X 6.0 (Tapping) (Black) 3-080-206-31 	#38: M3.0 X 20.0 (Tapping) (Silver) 7-685-651-79 	#39: M2.6 X 5.0 (Tapping) (Black) 7-685-791-09 	#40: M2.0 X 4.0 (Tapping) (Silver) 7-685-851-04 

HARDWARE LIST (3/4)

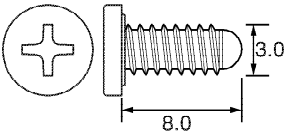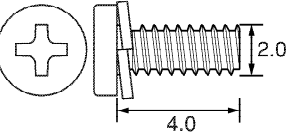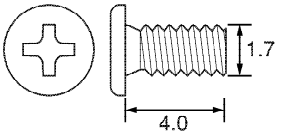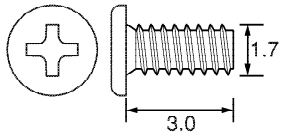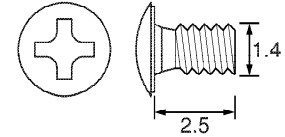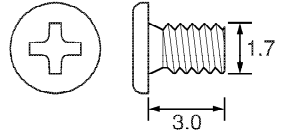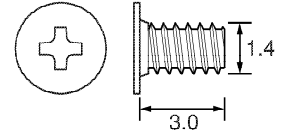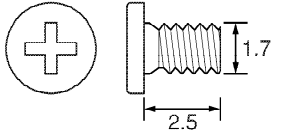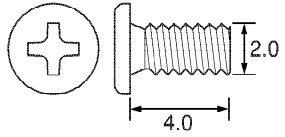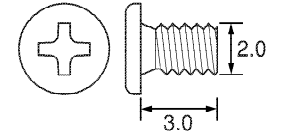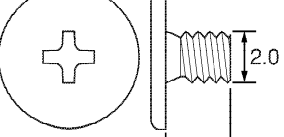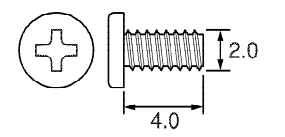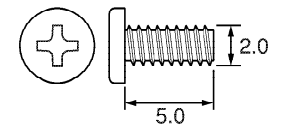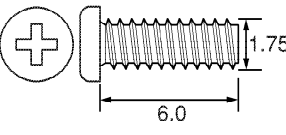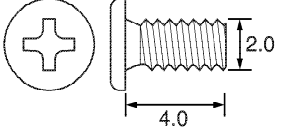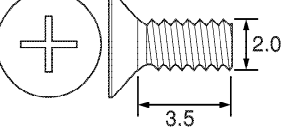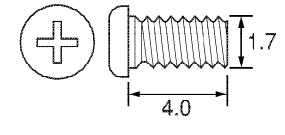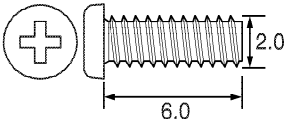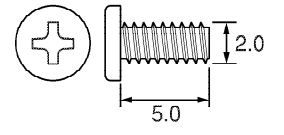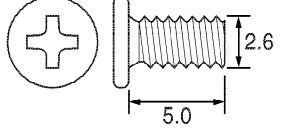
#41: M3.0 X 8.0 (Tapping) (Silver) 3-065-748-01 	#42: M2.0 X 4.0 (Tapping) (Silver) 7-628-253-00 	#43: M1.7 X 4.0 (Red) 2-660-401-31 	#44: M1.7 X 3.0 (Tapping) (Silver) 3-078-890-61 
#45: M1.4 X 2.5 (Silver) 2-587-151-01 	#46: M1.7 X 3.0 (Red) 2-660-401-11 	#47: M1.4 X 3.0 (Tapping) (Silver) 2-665-774-01 	#48: M1.7 X 2.5 (Silver) 3-973-497-91 
#49: M2.0 X 4.0 (Black) 2-630-005-21 	#50: M2.0 X 3.0 (Red) 2-891-494-11 	#51: M2.0 X 2.5 (Silver) 3-073-686-01 	#52: M2.0 X 4.0 (Tapping) (Black) 3-080-206-11 
#53: M2.0 X 5.0 (Tapping) (Black) 3-080-206-21 	#54: M1.75 X 6.0 (Tapping) (Black) 3-318-203-11 	#55: M2.0 X 4.0 (Silver) 2-655-582-11 	#56: M2.0 X 3.5 (Silver) 3-067-187-11 
#57: M1.7 X 4.0 (Black) 7-627-852-18 	#58: M2.0 X 6.0 (Tapping) (Silver) 3-719-408-11 	#59: M2.0 X 5.0 (Tapping) (Silver) 3-080-205-21 	#60: M2.6 X 5.0 (Black) 3-061-062-11 

HARDWARE LIST (4/4)


#61: M3.0 X 10.0
(Black)
7-682-549-09

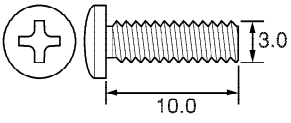


#62: M2.0 X 3.0
(Silver)
3-080-202-21

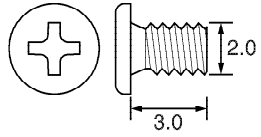


#63: M5.0 X 12.5
(Black)
3-060-811-21

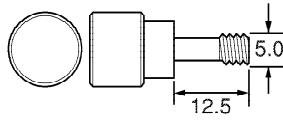


#64: M1.7 X 5.0 (Tapping)
(Silver)
2-666-551-21

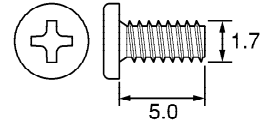

#65: M1.4 X 3.5
(Silver)
2-635-591-01

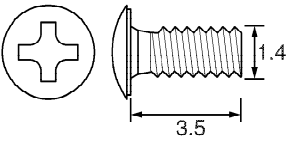

#66: M1.4 X 1.4
(Silver)
2-635-591-41

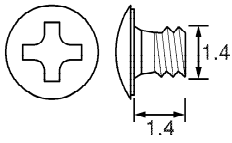

#67: M1.4 X 2.0
(Silver)
3-389-523-16

