


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL ASSEMBLY-1

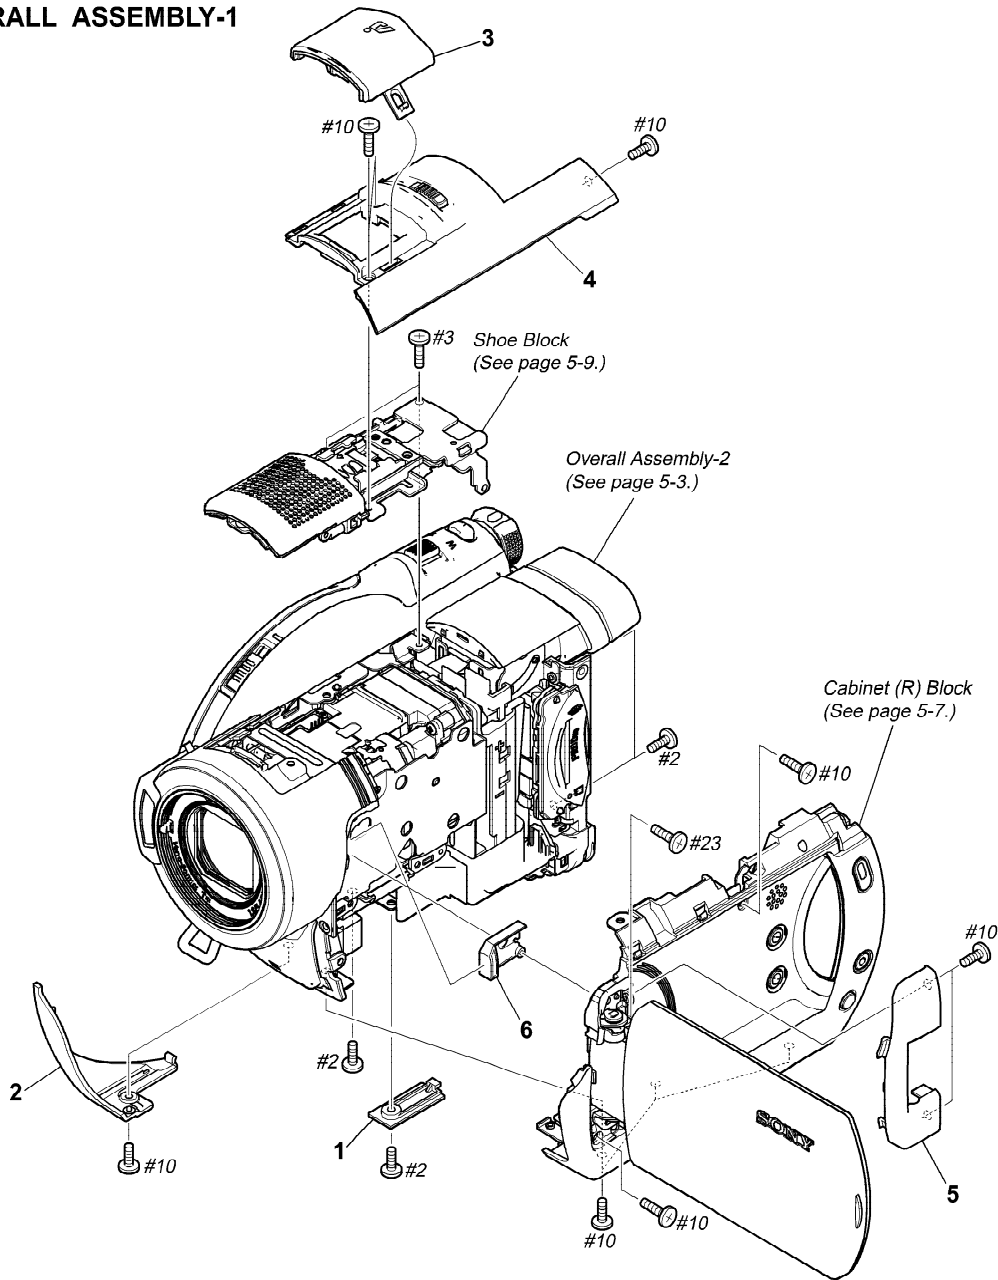

Ref. No.	Part No.	Description
1	3-096-308-11	LID, CPC
2	3-096-513-01	COVER (227), FRONT (506E/508/508E/908/908E)
2	3-096-513-11	COVER (227), FRONT (406E/408/408E/808/808E)
3	X-2176-881-1	COVER ASSY (227), SHOE (506E/508/508E/908/908E)
3	X-2176-882-1	COVER ASSY (226), SHOE (406E/408/408E/808/808E)
4	X-2176-877-1	CABINET ASSY (227), TOP (J)
4	X-2176-878-1	CABINET ASSY (227), TOP (506E/508:US, CND, E33, JE/508E/908/908E)


Ref. No.	Part No.	Description
4	X-2176-879-1	CABINET ASSY (226), TOP (406E/408/408E/808/808E)
5	3-096-549-01	COVER (R (227)), HINGE (506E/508/508E/908/908E)
5	3-096-549-11	COVER (R (227)), HINGE (406E/408/408E/808/808E)
6	3-098-917-01	SPACER, MIRACLE
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. OVERALL ASSEMBLY-2

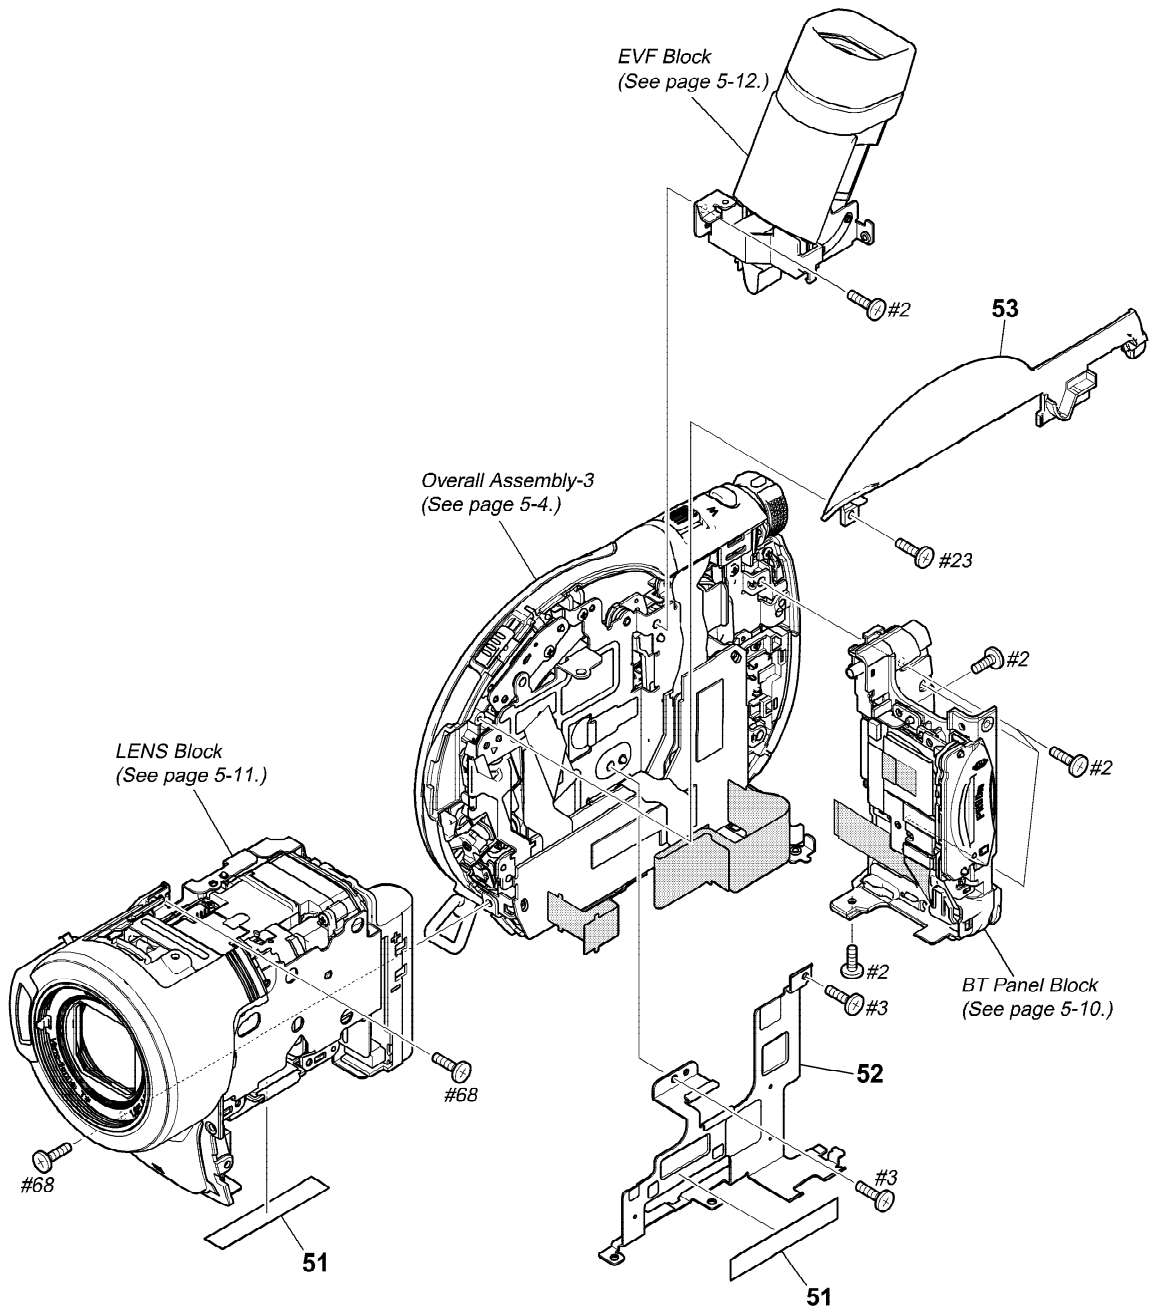

Ref. No.	Part No.	Description
51	3-080-272-01	TAPE (A)
* 52	3-096-512-01	HEAT SINK (VC (227))
53	3-096-514-01	COVER (227), CABINET (L)

Ref. No.	Part No.	Description
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)
#68	2-655-581-01	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. OVERALL ASSEMBLY-3

ns: not supplied

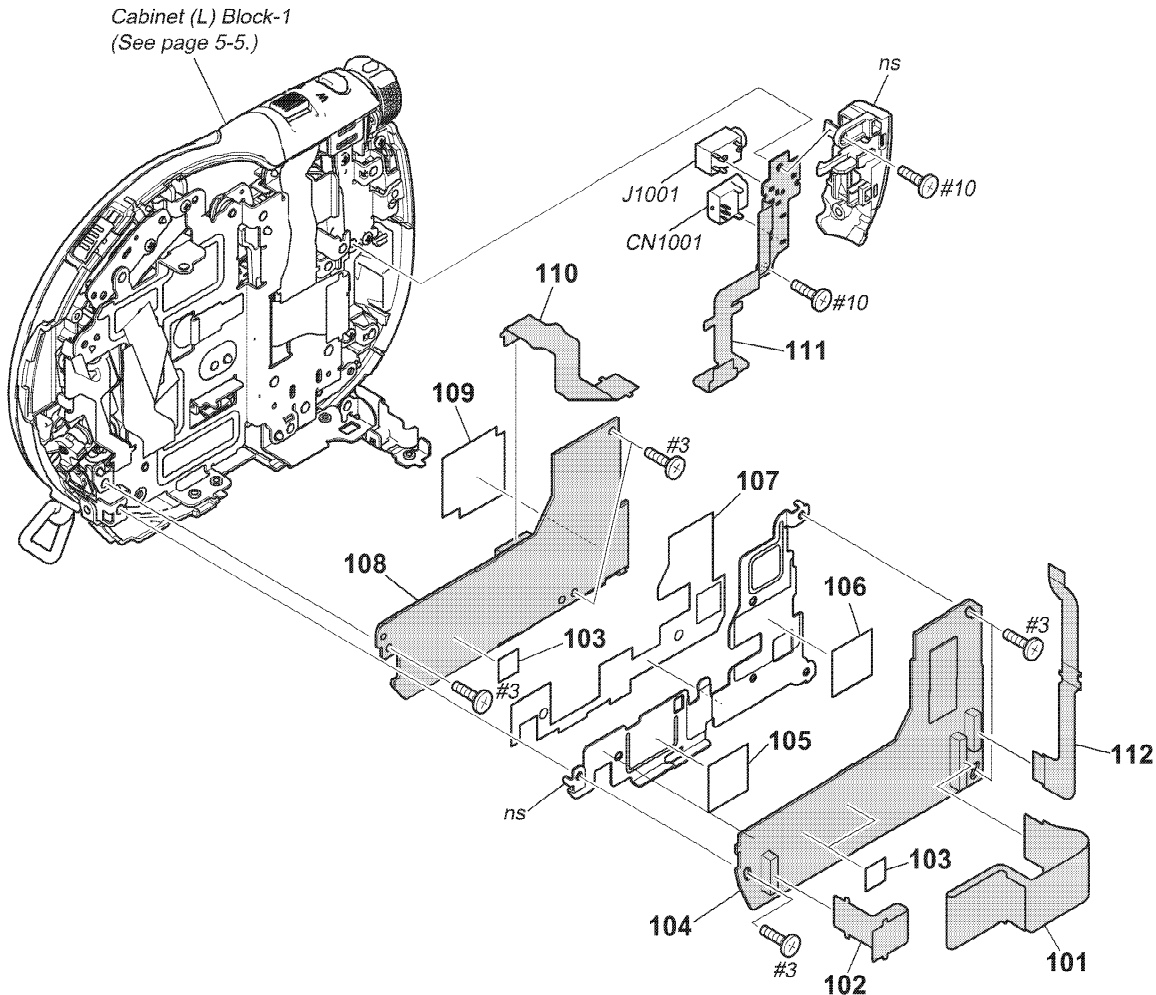

Ref. No.	Part No.	Description
101	1-870-991-11	FP-536 BOARD
102	1-870-994-11	FP-539 BOARD
* 103	3-096-301-01	SHEET (252), AFE RADIATION
104	A-1242-080-A	VC-478 BOARD, COMPLETE (508/908)
104	A-1242-081-A	VC-478 BOARD, COMPLETE (508E/908E)
104	A-1242-082-A	VC-478 BOARD, COMPLETE (506E)
104	A-1242-083-A	VC-478 BOARD, COMPLETE ((408/808)
104	A-1242-084-A	VC-478 BOARD, COMPLETE (408E/808E)
104	A-1242-085-A	VC-478 BOARD, COMPLETE (406E)
* 105	3-096-298-01	SHEET (252), VC RADIATION
* 106	3-096-299-01	SHEET (227), EX RADIATION


Ref. No.	Part No.	Description
* 107	3-096-290-01	SHEET (MD), INSULATING
108	A-1242-086-A	MD-134 BOARD, COMPLETE
* 109	3-099-883-01	SHEET, JP
110	1-870-995-11	FP-540 BOARD
111	1-870-990-11	FP-535 BOARD
112	1-870-997-11	FP-542 BOARD
CN1001	1-794-962-11	CONNECTOR, SQUARE TYPE (USB 5P)
J1001	1-793-995-21	JACK, SUPER SMALL TYPE
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#10	2-599-475-31	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. CABINET (L) BLOCK-1

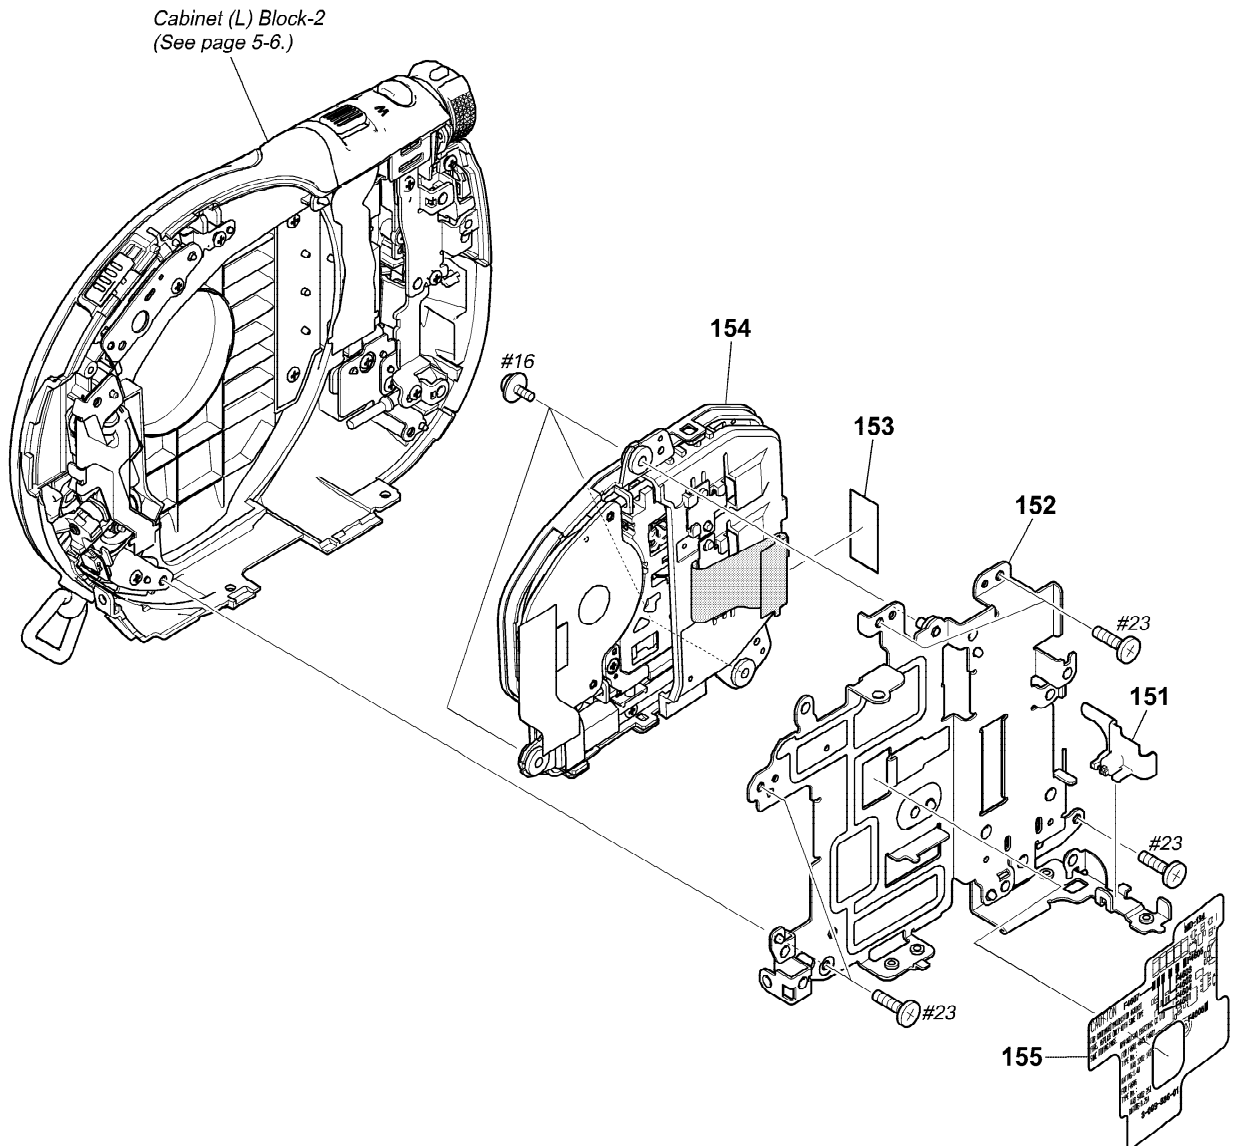

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
* 151	3-096-380-01	GUARD, BT FLEXIBLE
152	X-2176-880-1	FRAME ASSY (227), MD
* 153	3-099-882-01	SHEET (227), OP
△ 154	A-1248-928-A	DDX-U1000 (SERVICE)


Ref. No.	Part No.	Description
155	3-099-886-01	LABEL (252), CAUTION
#16	2-586-337-01	SCREW, MD (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. CABINET (L) BLOCK-2

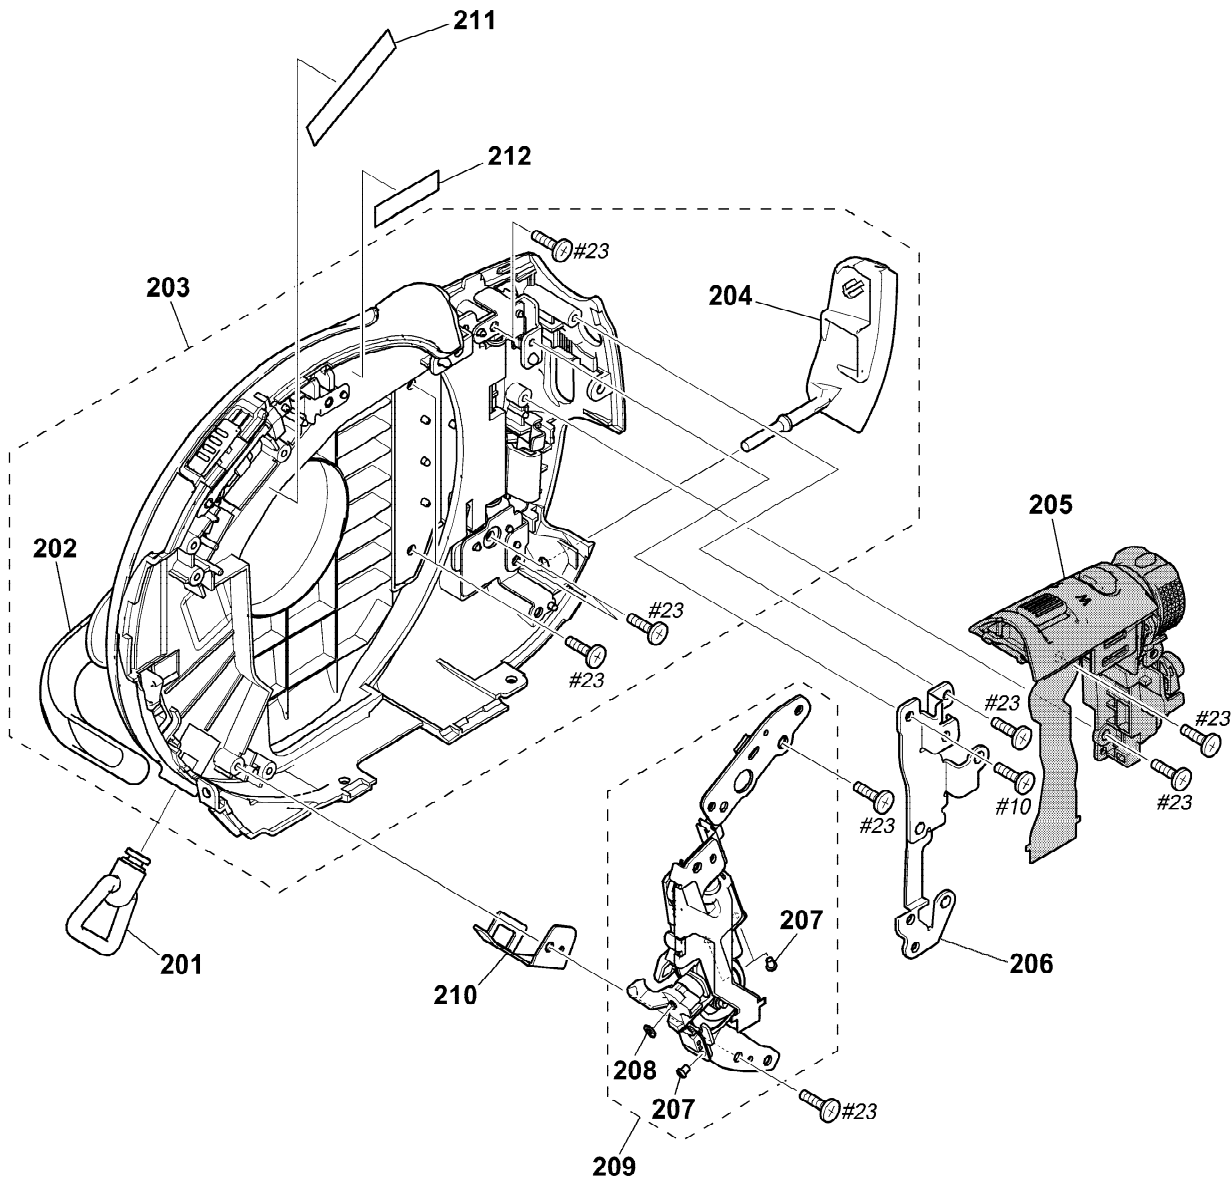

Ref. No.	Part No.	Description
201	3-090-616-01	SHAFT (F), STRAP
202	2-664-928-01	BELT, GRIP
203	X-2176-875-1	CABINET (L) ASSY (227) (J)
203	X-2176-876-1	CABINET (L) ASSY (227) (EXCEPT J)
204	3-096-270-11	COVER (L), JACK
205	1-479-890-31	SWITCH BLOCK, CONTROL (PS25200) (J)
205	1-479-890-41	SWITCH BLOCK, CONTROL (PS25200) (EXCEPT J)
* 206	3-096-292-01	BRACKET (JACK)


Ref. No.	Part No.	Description
207	3-895-822-71	SCREW (M1.2X2), SPECIAL, 0
208	3-315-384-11	WASHER, STOPPER
209	A-1221-272-A	EJECT UNIT
* 210	3-096-291-01	BRACKET (GRIP SHAFT)
* 211	3-198-146-01	SPACER (A), CABINET (L)
* 212	3-198-147-01	SPACER (B), CABINET (L)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. CABINET (R) BLOCK

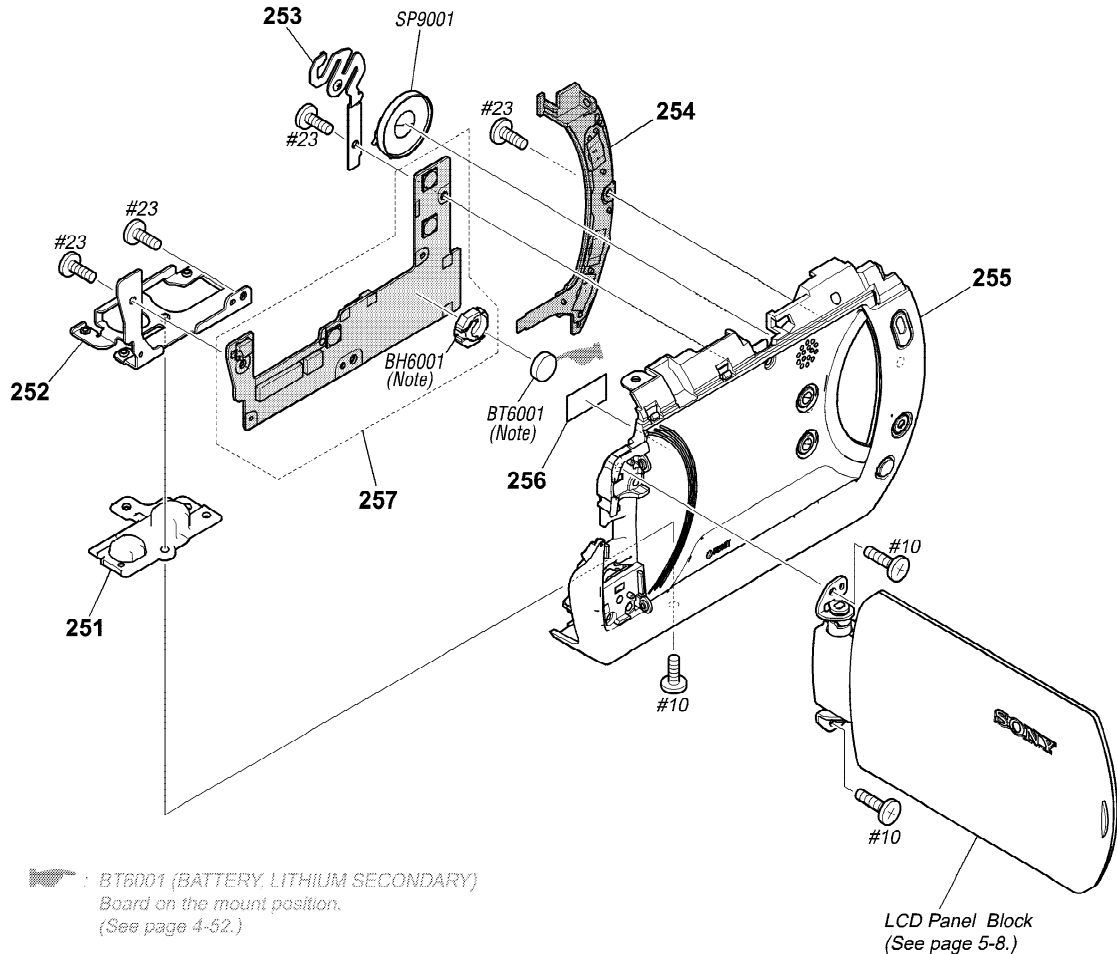

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

Note: Replace the battery holder (BH6001) together when replacing the lithium battery (BT6001) on the CK-164 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

• Refer to page 5-1 for mark ▲.

Ref. No.	Part No.	Description
251	3-096-430-01	SCREW, TRIPOD
252	3-096-550-01	FRAME (227), BOTTOM
* 253	3-096-425-01	RETAINER (251), SP
254	1-479-995-11	KEY BLOCK, CONTROL (SB22200)
255	X-2176-892-1	CABINET (R) ASSY (227) (J)
255	X-2176-893-1	CABINET (R) ASSY (227) (506E/508:US, CND, E33, JE/508E/908/908E)
255	X-2176-894-1	CABINET (R) ASSY (226) (406E/408/408E/808/808E)


Ref. No.	Part No.	Description
256	3-076-631-01	TAPE (W)
257	A-1242-020-A	CK-167 BOARD, COMPLETE
▲ BH6001	1-756-615-41	HOLDER, BATTERY
▲ BT6001	1-756-134-12	BATTERY, STORAGE, LITHIUM ION
SP9001	1-825-260-23	SPEAKER (1.6CM)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. LCD PANEL BLOCK

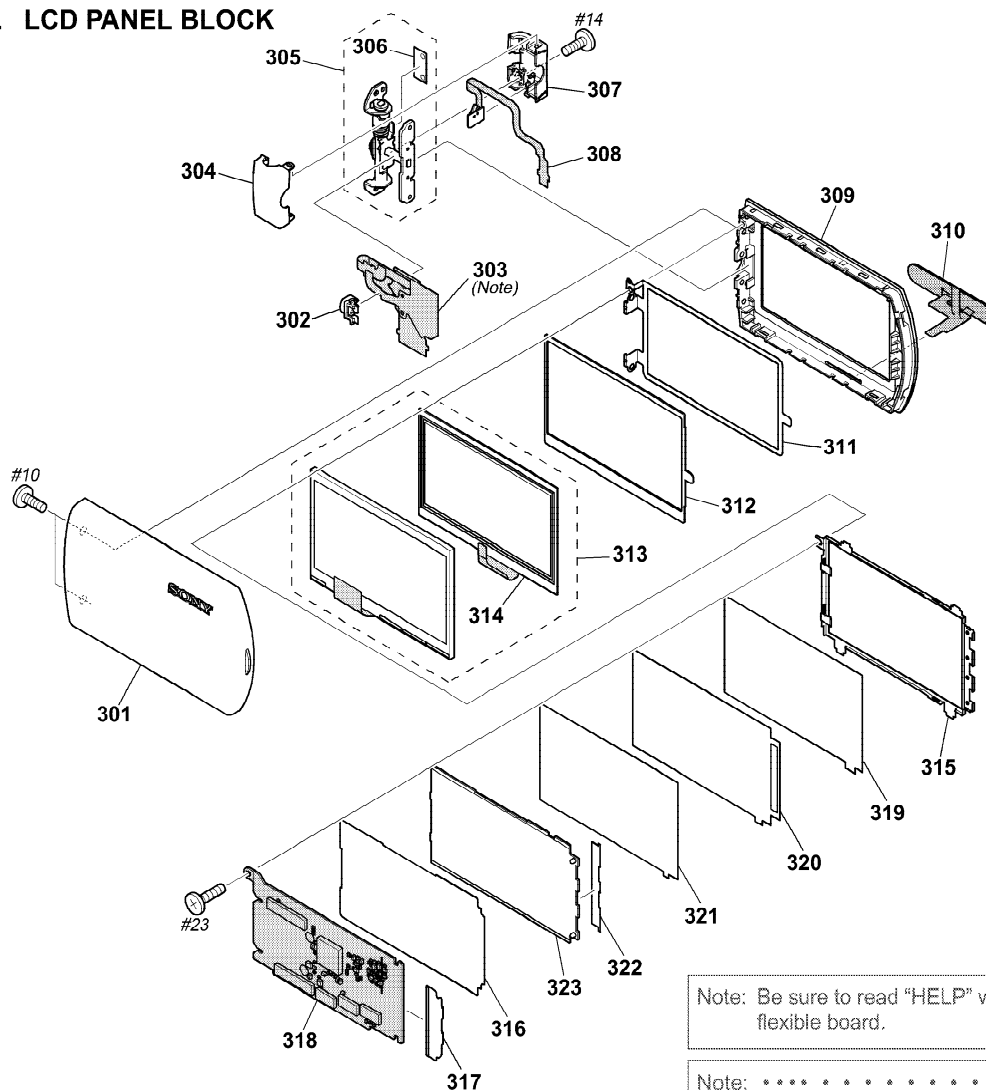

Note: Be sure to read "HELP" when you install the FP-537 flexible board.

Note:

Ref. No.	Part No.	Description
301	X-2176-897-1	CABINET (C) ASSY (227), P (508/508E)
301	X-2176-898-1	CABINET (C) ASSY (226), P (408/408E)
301	X-2177-014-1	CABINET (C) ASSY (227), P (908/908E)
301	X-2177-015-1	CABINET (C) ASSY (227), P (506E)
301	X-2177-016-1	CABINET (C) ASSY (226), P (808/808E)
301	X-2177-017-1	CABINET (C) ASSY (226), P (406E)
* 302	3-096-413-01	CLAMP, FLEXIBLE
303	1-870-992-11	FP-537 BOARD
304	3-096-548-01	COVER (U (227)), HINGE
305	X-2108-475-1	HINGE ASSY
306	2-649-300-01	SHEET, ADHESIVE, HINGE
307	3-096-547-01	COVER (O (227)), HINGE
307	3-096-547-11	COVER (O (227)), HINGE
308	A-1239-340-A	FP-546 BOARD, COMPLETE
309	3-096-543-01	CABINET (M (227)), P (F4)
309	3-096-543-11	CABINET (M (227)), P (EXCEPT F4)


Ref. No.	Part No.	Description
310	1-479-930-11	SWITCH BLOCK, CONTROL (SW22700)
311	3-096-545-01	PLATE (227), P GROUND
* 312	2-672-277-01	CUSHION, TP
313	A-1202-059-A	TP BLOCK ASSY (27ESTMG07)
314	8-753-256-21	ACX547AK-1
315	2-887-999-01	FRONT FRAME (2.7J)
316	2-894-347-01	REFLECTION SHEET (2.7J)
* 317	2-638-780-01	CLIP
318	A-1242-019-A	PD-324 BOARD, COMPLETE
319	2-666-802-01	PRISM SHEET V (2.7)
320	2-666-803-01	PRISM SHEET H (2.7)
321	2-666-804-01	DIFFUSION SHEET (2.7)
322	2-666-807-02	AG SHEET (2.7)
323	2-666-801-01	LIGHT GUIDE (2.7)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-8. SHOE BLOCK

ns: not supplied

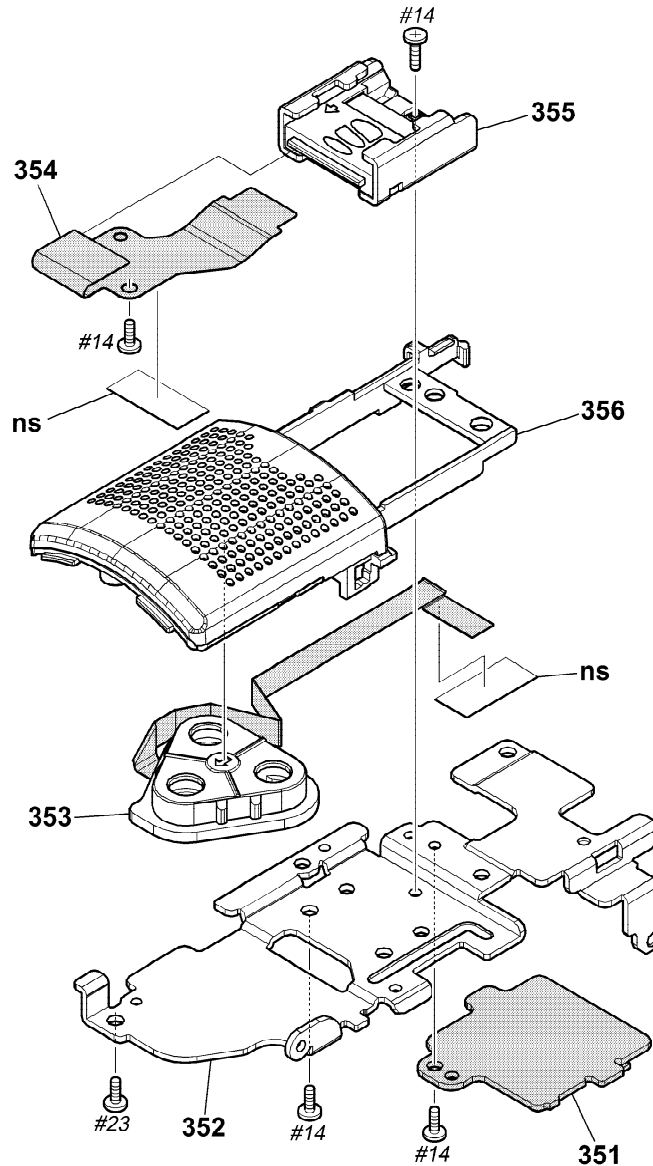


Ref. No.	Part No.	Description
351	A-1242-016-A	MA-446 BOARD, COMPLETE
352	3-096-319-01	FRAME, SHOE
353	1-542-711-11	MICROPHONE UNIT
354	1-870-988-11	FP-533 BOARD
355	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)

Ref. No.	Part No.	Description
356	X-2176-883-1	GRILLE ASSY (227), MICROPHONE
#14	2-599-475-11	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-9. BT PANEL BLOCK

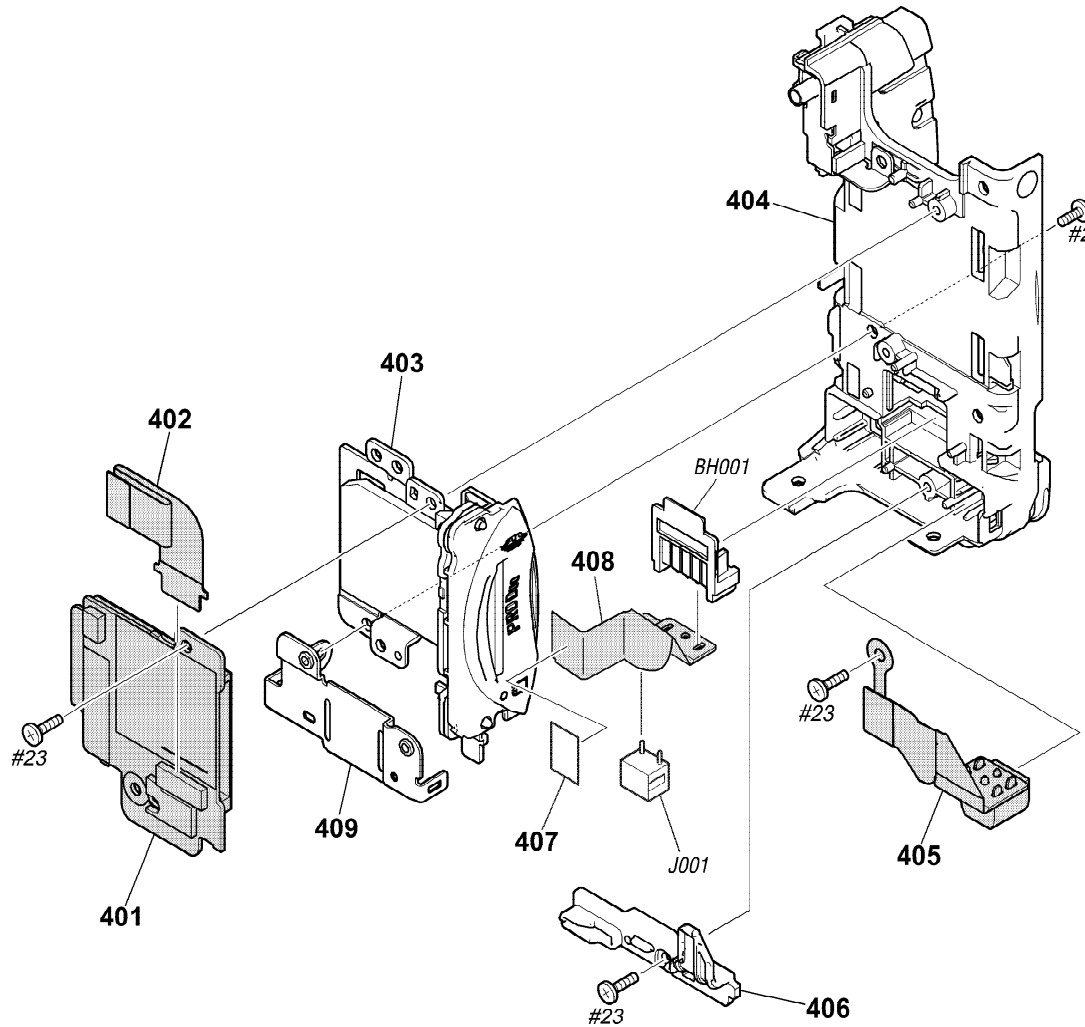

• Refer to page 5-1 for mark Δ.

Ref. No.	Part No.	Description
401	A-1242-015-A	MS-351 BOARD, COMPLETE
402	1-870-998-11	FP-543 BOARD
403	X-2176-886-1	HOLDER ASSY (227), MS
404	X-2176-885-1	PANEL ASSY (227), BT
405	A-1242-023-A	FP-531 BOARD, COMPLETE

* 406	3-096-336-01	RETAINER, BT JACK
* 407	3-096-312-01	SHEET, BT


Ref. No.	Part No.	Description
408	1-870-996-11	FP-541 BOARD
* 409	3-096-335-01	RETAINER, BT TERMINAL
Δ BH001	1-780-064-21	BATTERY TERMINAL BOARD
Δ J001	1-815-792-11	CONNECTOR, DC-IN (7.2V)
#2	2-635-562-31	SCREW (M1.7) (Black)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-10. LENS BLOCK

ns: not supplied

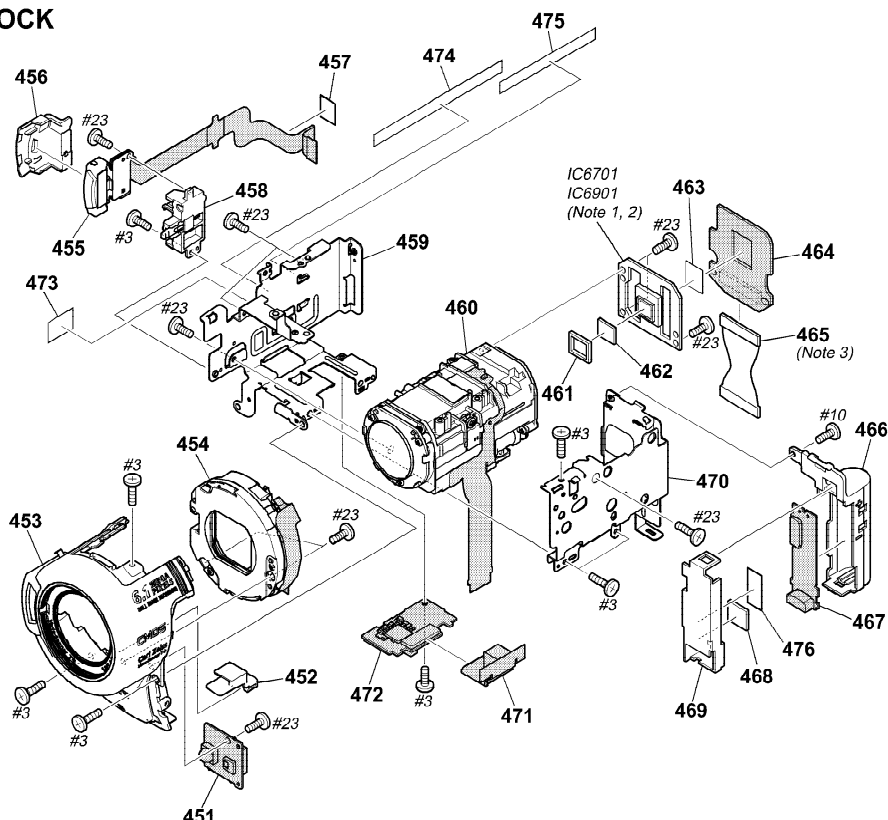

Note 1:

Note 1: IC6701 is not included in CM-077 complete board.
IC6901 is not included in CM-076 complete board.

Note 2:
.....

Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-4 when changing the imager.

Note 3:
.....

Note 3: Refer to page 2-1 "Note for disconnecting the harness" when changing the harness.

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
451	A-1242-018-A	FR-260 BOARD, COMPLETE
* 452	3-096-381-01	CLAMP, LB FLEXIBLE
453	X-2176-890-1	PANEL ASSY (227), F (506E/508/508E/908/908E)
453	X-2176-891-1	PANEL ASSY (226), F (406E/408/408E/808/808E)
454	A-1217-971-A	LENS BARRIER UNIT
△ 455	1-479-888-21	FLASH UNIT (FL25200)
* 456	3-096-382-01	COVER, STROBOSCOPE
457	3-076-631-01	TAPE (W)
458	X-2176-859-1	HOLDER ASSY, ST
* 459	3-096-383-01	FRAME (L (251)), LENS (406E/408/408E/808/808E)
459	3-096-532-01	FRAME (L (227)), LENS (506E/508/508E/908/908E)
460	8-848-825-01	DEVICE, LENS LSV-942C (406E/408/408E/808/808E)
460	A-1227-735-A	DEVICE, LENS LSV-1190A (506E/508/508E/908/908E)
461	2-629-086-01	RUBBER (871), SEAL (406E/408/408E/808/808E)
461	2-698-010-01	RUBBER (1190), SEAL (506E/508/508E/908/908E)
462	1-788-382-11	OPTICAL FILTERBLOCK (OFB-03-26) (406E/408/408E/808/808E)
462	1-788-558-11	FILTER BLOCK, OPTICAL (506E/508/508E/908/908E)
* 463	3-096-389-01	SHEET (252), CD RADIATION
464	A-1231-932-A	CM-076 BOARD, COMPLETE (406E/408/408E/808/808E)
464	A-1237-309-A	CM-077 BOARD, COMPLETE (506E/508/508E/908/908E)


Ref. No.	Part No.	Description
465	1-965-256-61	HARNESS (COAXIAL CABLE) (506E/508/508E/908/908E)
465	1-965-258-61	HARNESS (HN-046) (406E/408/408E/808/808E)
* 466	3-096-303-01	HOLDER (F), CONDENSER
467	A-1242-017-A	ST-154 BOARD, COMPLETE
468	1-481-251-11	CORE, FERRITE
* 469	3-096-305-01	HOLDER (R), CONDENSER
* 470	3-096-384-01	HEAT SINK (252), CM (506E/508/508E/908/908E)
* 470	3-096-385-01	HEAT SINK (251), CM (406E/408/408E/808/808E)
471	1-870-985-11	FP-530 BOARD
472	A-1239-331-A	LD-215 BOARD, COMPLETE (406E/408/408E/808/808E)
472	A-1239-332-A	LD-216 BOARD, COMPLETE (506E/508/508E/908/908E)
* 473	3-198-150-01	SPACER (Y), LENS FRAME (406E/408/408E/808/808E)
* 474	3-198-148-01	CUSHION (R), LENS FRAME (506E/508/508E/908/908E)
* 475	3-198-149-01	CUSHION (Y), LENS FRAME (406E/408/408E/808/808E)
476	3-941-343-01	TAPE (A)
IC6701	A-1209-688-A	CMOS BLOCK ASSY (506E/508/508E/908/908E) (Note 1, 2)
IC6901	A-1172-742-A	CMOS BLOCK ASSY (406E/408/408E/808/808E) (Note 1, 2)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-11. EVF BLOCK

ns: not supplied

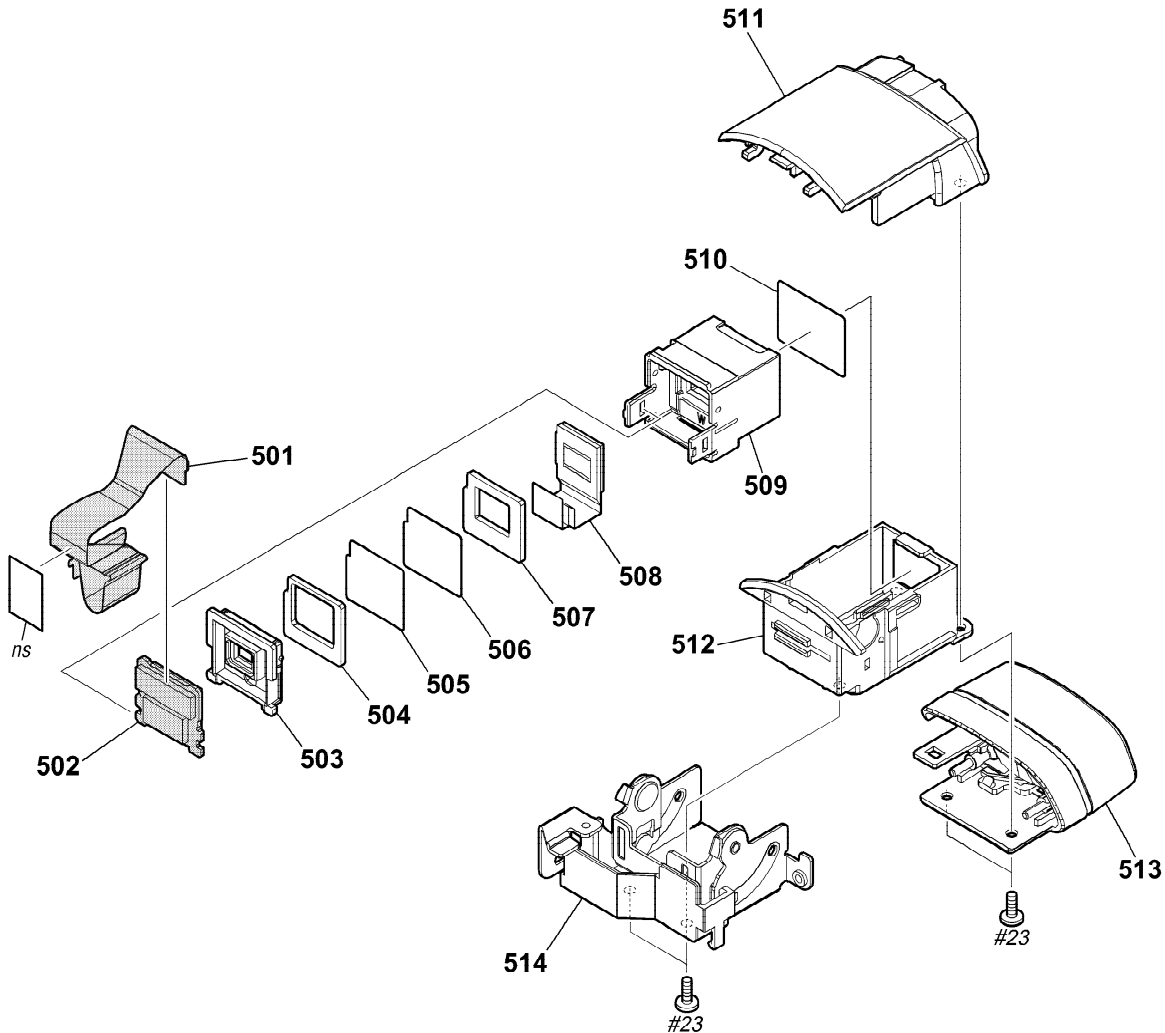

Ref. No.	Part No.	Description
501	1-870-989-11	FP-534 BOARD
502	A-1242-021-A	BL-004 BOARD, COMPLETE
503	2-664-672-01	GUIDE, LAMP
* 504	2-638-819-01	CUSHION, LCD
* 505	2-638-818-01	ILLUMINATOR
* 506	2-638-816-01	PLATE (TFT), DEFLECTION
507	2-664-671-01	SPACER, LCD
508	8-753-241-14	LCX076AKE-1

Ref. No.	Part No.	Description
* 509	2-699-236-01	CABINET (222), INNER
* 510	2-668-134-01	PANEL (CF), POLARIZATION
511	3-096-526-01	CABINET (UPPER (227)), VF
512	3-096-358-11	CABINET (LOWER), VF
513	X-2176-888-1	EYE CUP ASSY (227)
514	X-2176-889-1	FRAME ASSY (227), VF
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1242-021-A	BL-004 BOARD, COMPLETE *****
< CAPACITOR >		
C5901	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5902	1-165-908-11	CERAMIC 1000000PF B 1608
< CONNECTOR >		
* CN5901	1-816-648-51	FFC/FPC CONNECTOR (LIF) 20P
* CN5902	1-817-560-71	CONNECTOR, FPC (ZIP) 21P
< DIODE >		
* D5901	6-501-591-01	DIODE NESW007AT-T099 (EVF BACKLIGHT)
D5902	6-500-941-01	DIODE MAZS056008S0

A-1242-020-A CK-167 BOARD, COMPLETE

< BATTERY HOLDER >

△ BH6001 1-756-615-41 HOLDER, BATTERY

< CONNECTOR >

CN6001 1-778-506-21 PIN, CONNECTOR (PC BOARD) 2P
 * CN6003 1-819-934-51 CONNECTOR, FPC (ZIF) 39P
 * CN6004 1-816-654-51 FFC/FPC CONNECTOR (LIF) 6P
 * CN6005 1-816-654-51 FFC/FPC CONNECTOR (LIF) 6P
 * CN6006 1-816-650-51 FFC/FPC CONNECTOR (LIF) 24P

< DIODE >

D6004 8-719-056-54 DIODE MAZS068008S0

< RESISTOR >

R6001 1-218-958-11 RES-CHIP 2.7K 5% 1/16W
 R6002 1-218-963-11 RES-CHIP 6.8K 5% 1/16W
 R6003 1-218-970-11 RES-CHIP 27K 5% 1/16W

< SWITCH >

S6001 1-771-138-82 SWITCH, KEY BOARD (RESET)
 S6003 1-771-138-82 SWITCH, KEY BOARD (DISP/BATT INFO)
 S6006 1-771-138-82 SWITCH, KEY BOARD (WIDE SELECT)
 S6007 1-786-148-11 SWITCH, PUSH (1 KEY) (PANEL OPEN/CLOSE)

Electrical parts list of the CM-076 and CM-077 board is not shown. Pages 5-14 to 5-15 is not shown.

• Refer to page 5-1 for mark △.

Note: Replace the battery holder (BH6001) together when replacing the lithium battery (BT6001) on the CK-164 board. (The battery holder removed once cannot be used again.)
 When mounting these parts, mount new battery holder first and attach new lithium battery next.

FP-530	FP-531	FP-533	FP-534	FP-535	FP-536	FP-537	FP-539
FP-540	FP-541	FP-542	FP-543	FP-546	FR-260	LD-215	

Ref. No.	Part No.	Description
	1-870-985-11	FP-530 BOARD *****
	A-124-202-01	FP-531 BOARD, COMPLETE *****
		< CONNECTOR >
CN002	1-815-794-13	CONNECTOR (MULTIPLE)
	1-870-988-11	FP-533 BOARD *****
	1-870-989-11	FP-534 BOARD *****
	1-870-990-11	FP-535 BOARD *****
	1-870-991-11	FP-536 BOARD *****
	1-870-992-11	FP-537 BOARD *****
	1-870-994-11	FP-539 BOARD *****
	1-870-995-11	FP-540 BOARD *****
	1-870-996-11	FP-541 BOARD *****
	1-870-997-11	FP-542 BOARD *****
	1-870-998-11	FP-543 BOARD *****
	A-1239-340-A	FP-546 BOARD, COMPLETE *****
	A-1242-018-A	FR-260 BOARD, COMPLETE *****
		< CONNECTOR >
CN6501	1-779-332-51	CONNECTOR, FFC/FPC 16P
* CN6502	1-816-643-51	FFC/FPC CONNECTOR (LIF) 10P
		< DIODE >
D6501	8-719-073-01	DIODE MA111-(K8).S0

Ref. No.	Part No.	Description
D6503	6-500-512-01	DIODE CL-330IRS-X-TU (IR EMITTER/NIGHTSHOT)
D6504	6-500-776-01	DIODE MAZW068H0LS0
		< IC >
IC6501	6-600-163-01	IC RS-770 (R)
		< TRANSISTOR >
Q6501	6-550-384-01	TRANSISTOR DTC123JMT2L
		< RESISTOR >
R6510	1-218-990-81	CONDUCTOR, CHIP (1005)
R6513	1-216-295-91	CONDUCTOR, CHIP (2012)
R6514	1-218-941-11	RES-CHIP 100 5% 1/16W
	A-1239-331-A	LD-215 BOARD, COMPLETE (406E/408/408E/808/808E) *****
		< CAPACITOR >
C5404	1-164-942-11	CERAMIC CHIP 0.0068uF 10% 16V
C5405	1-137-987-81	CERAMIC CHIP 0.068uF 10% 10V
C5406	1-137-987-81	CERAMIC CHIP 0.068uF 10% 10V
C5409	1-164-937-11	CHIPCERAMIC 1000PF B 1005
C5410	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5411	1-164-937-11	CHIPCERAMIC 1000PF B 1005
C5412	1-164-866-11	CERAMIC CHIP 47PF 5% 50V
C5413	1-165-908-11	CERAMIC 1000000PF B 1608
C5414	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5415	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5416	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5417	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5419	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5422	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5423	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5424	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5425	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5426	1-100-415-11	CERAMIC CHIP 0.47MF (1005)
C5427	1-164-930-11	CERAMIC CHIP 330PF 5% 16V
C5428	1-119-750-11	TANTAL. CHIP 22uF 20% 6.3V
C5429	1-165-908-11	CERAMIC 1000000PF B 1608
C5430	1-127-715-91	CERAMIC CHIP 0.22uF 10% 16V
C5431	1-125-777-11	CERAMIC CHIP 0.1MF B 1005
C5432	1-119-750-11	TANTAL. CHIP 22uF 20% 6.3V
C5433	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C5434	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C5437	1-165-897-11	TANTAL. CHIP 22uF 20% 10V
		< CONNECTOR >
* CN5302	1-817-564-71	CONNECTOR, FPC (ZIF) 33P
* CN5304	1-817-544-71	CONNECTOR, FPC (ZIF) 39P
		< FERRITE BEAD >
FB5401	1-414-760-21	BEAD, FERRITE (CHIP) (1608)

Ref. No.	Part No.	Description			
< IC >					
IC5401	8-759-359-49	IC NJM3414AV (TE2)			
IC5402	8-759-359-49	IC NJM3414AV (TE2)			
IC5403	8-759-359-49	IC NJM3414AV (TE2)			
IC5404	6-708-814-01	IC BU2343GLU-E2			
* IC5405	6-708-444-01	IC R1114Q281D-TR-FA			
< COIL >					
L5403	1-400-588-11	INDUCTOR, CHIP 10uH (2012)			
< RESISTOR >					
R5403	1-218-965-11	RES, CHIP 10K			
R5404	1-218-965-11	RES, CHIP 10K			
R5407	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5408	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5409	1-218-965-11	RES, CHIP 10K			
R5410	1-218-965-11	RES, CHIP 10K			
R5411	1-218-965-11	RES, CHIP 10K			
R5412	1-218-965-11	RES, CHIP 10K			
R5413	1-218-965-11	RES, CHIP 10K			
R5414	1-218-965-11	RES, CHIP 10K			
R5415	1-218-965-11	RES, CHIP 10K			
R5416	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5417	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5420	1-218-965-11	RES, CHIP 10K			
R5421	1-218-965-11	RES, CHIP 10K			
R5422	1-218-965-11	RES, CHIP 10K			
R5423	1-218-965-11	RES, CHIP 10K			
R5424	1-218-965-11	RES, CHIP 10K			
R5425	1-218-965-11	RES, CHIP 10K			
R5426	1-218-965-11	RES, CHIP 10K			
R5430	1-218-965-11	RES, CHIP 10K			
R5431	1-218-965-11	RES, CHIP 10K			
R5432	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5433	1-208-909-11	METAL CHIP 8.2K	0.50%	1/16W	
R5434	1-208-721-11	METAL CHIP 39K	0.50%	1/16W	
R5435	1-218-958-11	RES-CHIP 2.7K	5%	1/16W	
R5436	1-218-958-11	RES-CHIP 2.7K	5%	1/16W	
R5437	1-208-909-11	METAL CHIP 8.2K	0.50%	1/16W	
R5438	1-208-721-11	METAL CHIP 39K	0.50%	1/16W	
R5439	1-208-703-11	METAL CHIP 6.8K	0.50%	1/16W	
R5440	1-208-941-11	METAL CHIP 180K	0.50%	1/16W	
R5441	1-208-671-11	METAL CHIP 330	0.50%	1/16W	
R5442	1-218-953-11	RES-CHIP 1K	5%	1/16W	
R5443	1-208-943-11	METAL CHIP 220K	0.50%	1/16W	
R5444	1-208-911-11	METAL CHIP 10K	0.50%	1/16W	
R5445	1-208-909-11	METAL CHIP 8.2K	0.50%	1/16W	
R5446	1-208-909-11	METAL CHIP 8.2K	0.50%	1/16W	
R5449	1-208-911-11	METAL CHIP 10K	0.50%	1/16W	
R5450	1-208-943-11	METAL CHIP 220K	0.50%	1/16W	
R5451	1-218-937-11	RES-CHIP 47	5%	1/16W	
R5452	1-218-965-11	RES, CHIP 10K			
R5453	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5454	1-208-941-11	METAL CHIP 180K	0.50%	1/16W	
R5455	1-208-703-11	METAL CHIP 6.8K	0.50%	1/16W	
R5456	1-208-909-11	METAL CHIP 8.2K	0.50%	1/16W	
R5457	1-208-909-11	METAL CHIP 8.2K	0.50%	1/16W	

Ref. No.	Part No.	Description				
R5458	1-218-953-11	RES-CHIP 1K	5%	1/16W		
R5459	1-208-721-11	METAL CHIP 39K	0.50%	1/16W		
R5460	1-208-721-11	METAL CHIP 39K	0.50%	1/16W		
R5461	1-218-958-11	RES-CHIP 2.7K	5%	1/16W		
R5462	1-218-958-11	RES-CHIP 2.7K	5%	1/16W		

A-1239-332-A LD-216 BOARD, COMPLETE
(506E/508/508E/908/908E)

< CAPACITOR >

C5405	1-137-987-81	CERAMIC CHIP	0.068uF	10%	10V
C5406	1-137-987-81	CERAMIC CHIP	0.068uF	10%	10V
C5409	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V
C5410	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5411	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V
C5412	1-164-866-11	CERAMIC CHIP	47PF	5%	50V
C5413	1-165-908-11	CERAMIC	1000000PF B	1608	
C5414	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5415	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5416	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5417	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5419	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5422	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5423	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5424	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5425	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5426	1-100-415-11	CERAMIC CHIP	0.47MF (1005)		
C5427	1-164-930-11	CERAMIC CHIP	330PF	5%	16V
C5428	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C5429	1-165-908-11	CERAMIC	1000000PF B	1608	
C5430	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V
C5431	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5432	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C5433	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V
C5434	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V
C5437	1-165-897-11	TANTAL. CHIP	22uF	20%	10V
C5705	1-165-897-11	TANTAL. CHIP	22uF	20%	10V
C5706	1-165-908-11	CERAMIC	1000000PF B	1608	
C5707	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
C5708	1-165-908-11	CERAMIC	1000000PF B	1608	
C5712	1-164-937-11	CHIPCERAMIC	1000PF B	1005	
C5713	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V
C5715	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C5716	1-164-937-11	CHIPCERAMIC	1000PF B	1005	
C5717	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C5719	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C5722	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
C5723	1-125-777-11	CERAMIC CHIP	0.1MF B	1005	
< CONNECTOR >					
CN5302	1-817-283-71	CONNECTOR, FPC (ZIF) 51P			
CN5304	1-817-544-71	CONNECTOR, FPC (ZIF) 39P			

< CONNECTOR >

* CN5302	1-817-283-71	CONNECTOR, FPC (ZIF) 51P				
* CN5304	1-817-544-71	CONNECTOR, FPC (ZIF) 39P				

< FERRITE BEAD >

FB5401	1-414-760-21	BEAD, FERRITE (CHIP) (1608)				
--------	--------------	-----------------------------	--	--	--	--

Ref. No.	Part No.	Description			
< IC >					
IC5402	8-759-359-49	IC NJM3414AV (TE2)			
IC5403	8-759-359-49	IC NJM3414AV (TE2)			
IC5404	6-708-814-01	IC BU2343GLU-E2			
* IC5405	6-708-444-01	IC R1114Q281D-TR-FA			
* IC5703	6-709-026-01	IC R2J30500LG			
< COIL >					
L5403	1-400-588-11	INDUCTOR, CHIP 10uH (2012)			
L5701	1-400-588-11	INDUCTOR, CHIP 10uH (2012)			
< RESISTOR >					
R5411	1-218-965-11	RES, CHIP	10K		
R5412	1-218-965-11	RES, CHIP	10K		
R5413	1-218-965-11	RES, CHIP	10K		
R5414	1-218-965-11	RES, CHIP	10K		
R5421	1-218-965-11	RES, CHIP	10K		
R5422	1-218-965-11	RES, CHIP	10K		
R5423	1-218-965-11	RES, CHIP	10K		
R5424	1-218-965-11	RES, CHIP	10K		
R5425	1-218-965-11	RES, CHIP	10K		
R5426	1-218-965-11	RES, CHIP	10K		
R5430	1-218-965-11	RES, CHIP	10K		
R5431	1-218-965-11	RES, CHIP	10K		
R5433	1-208-909-11	METAL CHIP	8.2K	0.50%	1/16W
R5434	1-208-721-11	METAL CHIP	39K	0.50%	1/16W
R5435	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R5436	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R5437	1-208-909-11	METAL CHIP	8.2K	0.50%	1/16W
R5438	1-208-721-11	METAL CHIP	39K	0.50%	1/16W
R5439	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W
R5440	1-208-941-11	METAL CHIP	180K	0.50%	1/16W
R5441	1-208-671-11	METAL CHIP	330	0.50%	1/16W
R5442	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5443	1-208-943-11	METAL CHIP	220K	0.50%	1/16W
R5444	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
R5445	1-208-909-11	METAL CHIP	8.2K	0.50%	1/16W
R5446	1-208-909-11	METAL CHIP	8.2K	0.50%	1/16W
R5447	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5448	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5449	1-208-911-11	METAL CHIP	10K	0.50%	1/16W
R5450	1-208-943-11	METAL CHIP	220K	0.50%	1/16W
R5451	1-218-937-11	RES-CHIP	47	5%	1/16W
R5452	1-218-965-11	RES, CHIP	10K		
R5453	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5454	1-208-941-11	METAL CHIP	180K	0.50%	1/16W
R5455	1-208-703-11	METAL CHIP	6.8K	0.50%	1/16W
R5456	1-208-909-11	METAL CHIP	8.2K	0.50%	1/16W
R5457	1-208-909-11	METAL CHIP	8.2K	0.50%	1/16W
R5458	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5459	1-208-721-11	METAL CHIP	39K	0.50%	1/16W
R5460	1-208-721-11	METAL CHIP	39K	0.50%	1/16W
R5461	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R5462	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R5720	1-208-719-11	METAL CHIP	33K	0.50%	1/16W
R5721	1-208-721-11	METAL CHIP	39K	0.50%	1/16W
R5723	1-218-990-81	CONDUCTOR, CHIP (1005)			

Ref. No.	Part No.	Description			
R5725	1-218-978-11	RES-CHIP	120K	5%	1/16W
R5726	1-208-689-11	METAL CHIP	1.8K	0.50%	1/16W
R5729	1-208-705-11	METAL CHIP	8.2K	0.50%	1/16W
R5733	1-208-707-11	METAL CHIP	10K	0.50%	1/16W
R5736	1-208-721-11	METAL CHIP	39K	0.50%	1/16W
R5737	1-208-721-11	METAL CHIP	39K	0.50%	1/16W
R5739	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5741	1-218-978-11	RES-CHIP	120K	5%	1/16W
R5742	1-208-689-11	METAL CHIP	1.8K	0.50%	1/16W
R5745	1-208-705-11	METAL CHIP	8.2K	0.50%	1/16W
R5749	1-208-707-11	METAL CHIP	10K	0.50%	1/16W
R5770	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5771	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5772	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5773	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5774	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5776	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5787	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5788	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5791	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5792	1-218-990-81	CONDUCTOR, CHIP (1005)			
R5793	1-218-990-81	CONDUCTOR, CHIP (1005)			
A-1242-016-A MA-446 BOARD, COMPLETE					

< CONNECTOR >					
* CN7601	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P			
* CN7602	1-816-645-51	FFC/FPC CONNECTOR (LIF) 14P			
* CN7603	1-819-780-51	CONNECTOR, FPC (ZIF) 27P			
< DIODE >					
D7601	8-719-056-54	DIODE MAZS068008SO			
D7602	8-719-084-17	DIODE EMZ6.8ET2R			
D7603	8-719-084-17	DIODE EMZ6.8ET2R			
D7604	8-719-084-17	DIODE EMZ6.8ET2R			
< RESISTOR >					
R7602	1-218-990-81	CONDUCTOR, CHIP (1005)			
R7603	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R7605	1-218-990-81	CONDUCTOR, CHIP (1005)			
R7606	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R7608	1-218-990-81	CONDUCTOR, CHIP (1005)			
R7609	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R7612	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R7613	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
< SWITCH >					
S7601	1-786-148-11	SWITCH, PUSH (1 KEY) (NIGHTSHOT)			

Electrical parts list of the MD-134 board is not shown.
Pages 5-19 to 5-23 is not shown.

MS-351**PD-324**

Ref. No.	Part No.	Description
	A-1242-015-A	MS-351 BOARD, COMPLETE *****
		< CAPACITOR >
C7403	1-125-777-11	CHIP CERAMIC 0.1MF B 1005
C7404	1-164-935-11	CERAMIC CHIP 470PF 10% 50V
C7405	1-164-935-11	CERAMIC CHIP 470PF 10% 50V
		< CONNECTOR >
* CN7401	1-819-990-21	MEMORY STICK DUO CONNECTOR 10P
* CN7402	1-817-563-71	CONNECTOR, FPC (ZIF) 31P
* CN7403	1-816-645-51	FFC/FPC CONNECTOR (LIF) 14P
		< DIODE >
D7401	6-501-216-01	DIODE CL-271HR-C-TS
		< FERRITE BEAD >
FB7402	1-400-927-31	BEAD, FERRITE (1005)
FB7403	1-400-927-31	BEAD, FERRITE (1005)
FB7408	1-400-833-21	SMD EMI FERRITE
		< RESISTOR >
R7402	1-218-943-11	RES-CHIP 150 5% 1/16W
R7403	1-218-943-11	RES-CHIP 150 5% 1/16W
R7404	1-218-943-11	RES-CHIP 150 5% 1/16W
R7405	1-218-943-11	RES-CHIP 150 5% 1/16W
R7407	1-218-990-81	CONDUCTOR, CHIP (1005)
		< VARISTOR >
VD7402	1-805-774-21	VARISTOR, CHIP
VD7403	1-805-774-21	VARISTOR, CHIP
VD7407	1-805-774-21	VARISTOR, CHIP

A-1242-019-A PD-324 BOARD, COMPLETE

		< CAPACITOR >
C6101	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6102	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6103	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6105	1-127-895-91	TANTAL. CHIP 22uF 20% 4V
C6107	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C6108	1-125-777-11	CAP, CHIP CERAMIC 0.1MF B 1005
C6109	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C6111	1-125-777-11	CAP, CHIP CERAMIC 0.1MF B 1005
C6112	1-100-786-91	TANTAL. CHIP 22uF 20% 6.3V
C6113	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6114	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6115	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6116	1-112-298-91	CERAMIC CHIP 1uF 10% 16V
C6117	1-112-298-91	CERAMIC CHIP 1uF 10% 16V
C6119	1-127-760-11	CAP, CHIP CERAMIC 4.7MF B 2012
C6120	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6121	1-125-777-11	CAP, CHIP CERAMIC 0.1MF B 1005
C6123	1-165-908-11	CAP, CERAMIC 1000000PF B 1608
C6124	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6125	1-165-908-11	CAP, CERAMIC 1000000PF B 1608

Ref. No.	Part No.	Description
C6126	1-125-777-11	CAP, CHIP CERAMIC 0.1MF B 1005
		< CONNECTOR >
CN6101	1-785-905-51	FFC/CONNECTOR, FPC (ZIF) 24P
CN6102	1-794-322-51	FFC/CONNECTOR, FPC (ZIF) 6P
CN6104	1-816-180-71	CONNECTOR, FPC (ZIF) 6P
CN6105	1-785-905-51	FFC/CONNECTOR, FPC (ZIF) 24P
		< DIODE >
D6105	6-500-941-01	DIODE MAZS056008S0
* D6106	6-501-597-01	DIODE NSSW008DT-T108
* D6107	6-501-597-01	DIODE NSSW008DT-T108
* D6108	6-501-597-01	DIODE NSSW008DT-T108
		< FERRITE BEAD >
FB6101	1-400-331-11	FERRITE, EMI (SMD) (1005)
		< IC >
IC6102	8-753-229-98	IC CXM3006CR-T4
		< COIL >
L6101	1-400-588-11	INDUCTOR, CHIP 10uH (2012)
L6102	1-400-588-11	INDUCTOR, CHIP 10uH (2012)
L6103	1-400-588-11	INDUCTOR, CHIP 10uH (2012)
		< TRANSISTOR >
Q6101	8-729-427-37	TRANSISTOR XP411F-TXE
Q6102	8-729-427-67	TRANSISTOR XP421F-TXE
Q6107	6-550-239-01	TRANSISTOR DTA144EMT2L
Q6108	6-550-234-01	TRANSISTOR UNR32A300LS0
Q6109	6-551-184-01	TRANSISTOR MCH6305-TL-E-S
Q6110	8-729-054-48	TRANSISTOR UP04601008S0
Q6111	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q6112	8-729-054-49	TRANSISTOR UP04401008S0
Q6113	8-729-054-48	TRANSISTOR UP04601008S0
		< RESISTOR >
R6101	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R6102	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R6104	1-218-990-81	CONDUCTOR, CHIP (1005)
R6105	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R6109	1-218-975-11	RES-CHIP 68K 5% 1/16W
R6110	1-218-949-11	RES-CHIP 470 5% 1/16W
R6112	1-208-934-11	METAL CHIP 91K 0.50% 1/16W
R6115	1-208-911-11	METAL CHIP 10K 0.50% 1/16W
R6122	1-218-965-11	RES, CHIP 10K
R6130	1-208-898-81	METAL CHIP 3K 0.50% 1/16W
R6132	1-218-969-11	RES-CHIP 22K 5% 1/16W
R6133	1-218-977-11	RES-CHIP 100K 5% 1/16W
R6134	1-208-927-11	METAL CHIP 47K 0.50% 1/16W
R6135	1-218-981-11	RES-CHIP 220K 5% 1/16W
R6136	1-208-927-11	METAL CHIP 47K 0.50% 1/16W
R6137	1-218-978-11	RES-CHIP 120K 5% 1/16W
R6138	1-218-977-11	RES-CHIP 100K 5% 1/16W
R6139	1-208-699-11	METAL CHIP 4.7K 0.50% 1/16W
R6140	1-208-691-11	METAL CHIP 2.2K 0.50% 1/16W
R6141	1-208-683-11	METAL CHIP 1K 0.50% 1/16W

Ref. No.	Part No.	Description
R6142	1-208-691-11	METAL CHIP 2.2K 0.50% 1/16W
R6143	1-218-977-11	RES-CHIP 100K 5% 1/16W
R6144	1-211-969-11	METAL CHIP 10 0.50% 1/10W
R6145	1-218-989-11	RES, CHIP 1M
R6152	1-218-990-81	CONDUCTOR, CHIP (1005)
R6153	1-218-990-81	CONDUCTOR, CHIP (1005)
R6154	1-218-990-81	CONDUCTOR, CHIP (1005)
R6155	1-216-864-11	SHORT CHIP 0

A-1242-017-A ST-154 BOARD, COMPLETE

< CAPACITOR >

C5201	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C5202	1-125-889-91	CAP, CHIP CERAMIC 2.2MF B 2012
C5203	1-165-875-11	CERAMIC CHIP 10uF 10% 10V
C5204	1-163-001-11	CERAMIC CHIP 220PF 10% 50V
* C5206	1-112-730-11	ELECT 70uF 99% 330V

< CONNECTOR >

* CN5201	1-816-647-51	FFC/FPC CONNECTOR (LIF) 18P
CN5202	1-779-331-51	CONNECTOR, FFC/FPC 14P

< DIODE >

D5201	6-501-096-01	DIODE CRF02 (TE85R)
△ D5202	6-501-096-01	DIODE CRF02 (TE85R)
D5204	8-719-083-91	DIODE EDZ TE61 6.8B

< IC >

△ IC5201	6-707-554-01	IC TPS65552DGQR
----------	--------------	-----------------

< COIL >

L5201	1-412-027-11	INDUCTOR 2.2uH
-------	--------------	----------------

< TRANSISTOR >

△ Q5201	6-551-447-01	TRANSISTOR TIG022TS-S-TL-E
---------	--------------	----------------------------

< RESISTOR >

R5201	1-208-947-11	METAL CHIP 330K 0.50% 1/16W
R5202	1-208-935-11	METAL CHIP 100K 0.50% 1/16W
R5203	1-216-864-11	SHORT CHIP 0
R5204	1-216-065-91	RES-CHIP 4.7K 5% 1/10W
R5205	1-216-809-11	METAL CHIP 100 5% 1/10W
R5206	1-218-989-11	RES, CHIP 1M

< TRANSFORMER >

△ T5201	1-443-568-21	TRANSFORMER, D.C.-D.C.CONVERTER
---------	--------------	---------------------------------


Electrical parts list of the VC-478 board is not shown.
Pages 5-26 to 5-30 is not shown.

• EXCEPT J MODEL

Checking supplied accessories.

to J MODEL


Note : This item is supplied with the unit as an accessory, but is not prepared as a service part.

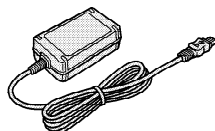

AC Adaptor
(AC-L200/L200B)
△ 1-479-285-21



 Power Cord
△ 1-555-074-91 (AUS)
△ 1-782-476-71 (CH)
△ 1-823-050-31 (JE)
△ 1-823-945-41 (US, CND)
△ 1-823-947-71 (KR)
△ 1-827-269-31 (UK, HK)
△ 1-827-826-41 (AEP, NE, E: PAL)
△ 1-830-518-41 (E: NTSC)




USB cable
1-829-868-31




A/V connecting Cable
1-823-156-51



 Wireless Remote Commander
RMT-835
1-478-496-61



 Rechargeable Battery Pack
NP-FH60
(Note)



CD-ROM
"Handycam Application Software"
3-093-590-02



Conversion (2P) Adaptor
△ 1-569-007-12 (E: NTSC, JE)



DVD-ROM
"ENJOY HANDYCAM"
3-093-691-01 (KR)
3-093-691-11 (US, CND, E)
3-093-691-21 (UK, NE, EE)
3-093-691-31 (AEP)
3-093-691-41 (AEP)
3-093-691-61 (E, AU, HK, CH)
3-093-691-71 (E)



Conversion (2P) Adaptor
△ 1-569-008-12 (E: PAL)


Other accessories

2-319-640-11	MANUAL, INSTRUCTION (ENGLISH) (DVD408/DVD508) (US, CND, JE)
2-319-640-21	MANUAL, INSTRUCTION (FRENCH) (DVD408/DVD508) (CND)
2-319-640-31	MANUAL, INSTRUCTION (SPANISH) (DVD408/DVD508) (E, JE)
2-319-640-51	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (DVD808/DVD908) (E)
2-319-640-61	MANUAL, INSTRUCTION (KOREAN) (DVD408/DVD508/DVD808/DVD908) (KR, JE)
2-319-641-11	MANUAL, INSTRUCTION (ENGLISH) (DVD406E/DVD408E/DVD506E/DVD508E/DVD808E/DVD908E) (AEP, UK, E, HK, AUS, JE)
2-319-641-21	MANUAL, INSTRUCTION (FRENCH) (DVD406E/DVD506E/DVD808E/DVD908E) (AEP, E)
2-319-641-31	MANUAL, INSTRUCTION (GERMAN) (DVD406E/DVD506E) (AEP)
2-319-641-41	MANUAL, INSTRUCTION (DUTCH) (DVD406E/DVD506E) (AEP)
2-319-641-51	MANUAL, INSTRUCTION (SPANISH) (DVD406E/DVD506E) (AEP)
2-319-641-71	MANUAL, INSTRUCTION (RUSSIAN) (ITALIAN) (DVD406E/DVD506E) (AEP)
2-319-641-81	MANUAL, INSTRUCTION (GREEK) (DVD406E/DVD506E) (AEP)
2-319-641-91	MANUAL, INSTRUCTION (DVD408E/DVD508E) (NE, JE)
2-319-642-11	MANUAL, INSTRUCTION (SWEDISH) (DVD408E/DVD508E) (NE)
2-319-642-21	MANUAL, INSTRUCTION (DANISH) (DVD408E/DVD508E) (NE)
2-319-642-31	MANUAL, INSTRUCTION (FINNISH) (DVD408E/DVD508E) (NE)
2-319-642-41	MANUAL, INSTRUCTION (POLISH) (DVD406E/DVD506E) (EE)
2-319-642-51	MANUAL, INSTRUCTION (CZECH) (DVD406E/DVD506E) (EE)
2-319-642-61	MANUAL, INSTRUCTION (HUNGARIAN) (DVD406E/DVD506E) (EE)
2-319-642-71	MANUAL, INSTRUCTION (SLOVAK) (DVD406E/DVD506E) (EE)
2-319-642-91	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) (DVD408E/DVD508E/DVD808E/DVD908E) (E, CH, JE)
3-098-557-41	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (DVD808E/DVD908E) (HK)
3-098-557-51	MANUAL, INSTRUCTION (ARABIC) (DVD808E/DVD908E) (E)
3-098-557-61	MANUAL, INSTRUCTION (PERSIAN) (DVD808E/DVD908E) (E)

• Refer to page 5-1 for mark △.

• J MODEL
• • • • •


.....
.....

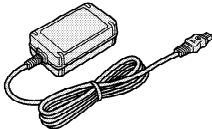

AC • • • • •
(AC-L200/L200B)
△ 1-479-285-21



 
• • • • •
△ 1-792-549-41




USB • • • • •
1-829-868-31



 
A/V • • • • •
1-823-156-51



.....
..... RMT-835
..... 1-478-496-51

 

 CD-ROM
"Handycam Application Software"
3-093-590-01




DVD-ROM
"....."
3-093-691-01


• • △ • • • • •

HARDWARE LIST (1/4)


#1: M1.7 X 2.5
(Black)
2-635-562-11

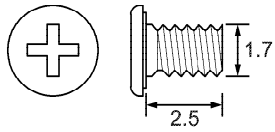


#2: M1.7 X 4.0
(Black)
2-635-562-31

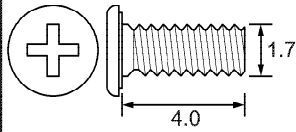


#3: M1.7 X 2.5
(Red)
2-660-401-01

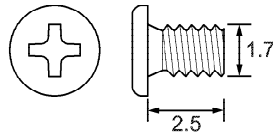


#4: M1.4 X 2.5 (Tapping)
(Dark Silver)
3-348-998-81

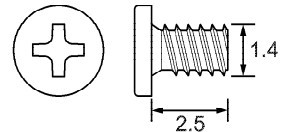


#5: M1.7 X 3.5 (Tapping)
(Black)
3-080-204-01

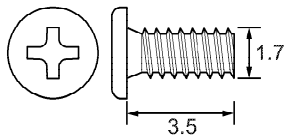


#6: M1.4 X 1.7
(Silver)
2-598-474-01

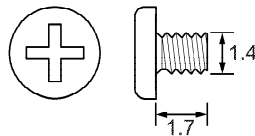


#7: M1.7 X 1.6
(Black)
7-627-552-18

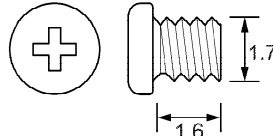


#8: M1.7 X 3.5 (Tapping)
(Silver)
3-078-890-01

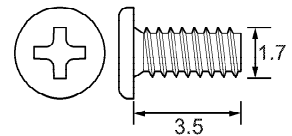


#9: M1.7 X 5.0 (Tapping)
(Silver)
3-078-890-21

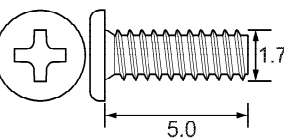


#10: M1.7 X 4.0
(Silver)
2-599-475-31

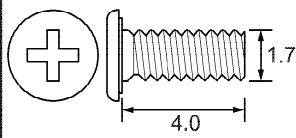


#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

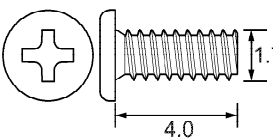


#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21

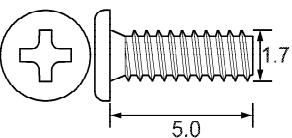


#13: M1.7 X 2.5 (Tapping)
(Silver)
3-085-397-01

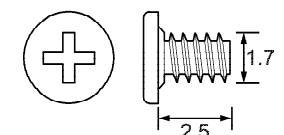


#14: M1.7 X 2.5
(Silver)
2-599-475-11

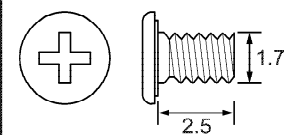


#15: M1.4 X 1.5
(Silver)
3-062-214-01

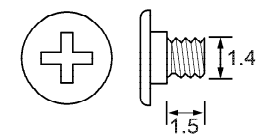


#16: M1.4 X 2.5
(Silver)
2-586-337-01

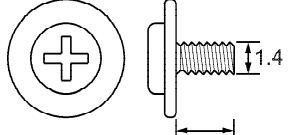


#17: M1.7 X 1.5
(Silver)
2-586-389-01

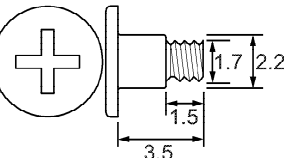


#18: M1.4 X 2.5
(Silver)
2-635-591-21

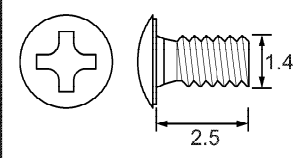

#19: M1.2 X 4.0 (Tapping)
(Red)
3-086-156-21

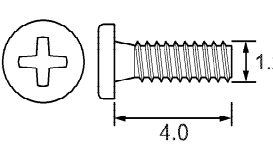


#20: M1.4 X 3.0
(Silver)
2-635-591-31

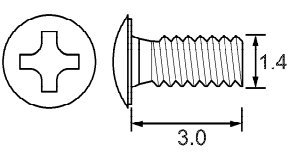


HARDWARE LIST (2/4)


#21: M1.4 X 3.0
(Black)
2-662-396-21

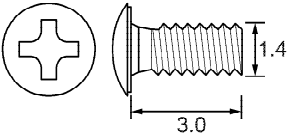


#22: M1.7 X 5.0 (Tapping)
(Silver)
3-083-261-01

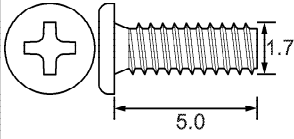


#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11

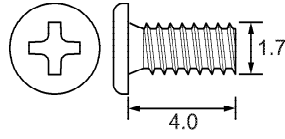


#24: B1.7 X 5.5 (Tapping)
(Black)
4-679-805-11

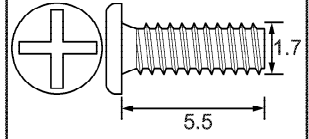


#25: M1.7 X 3.0
(Black)
2-635-562-21

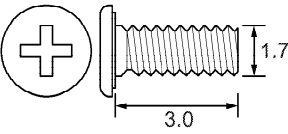


#26: M1.4 X 2.0
(Silver)
2-635-591-11

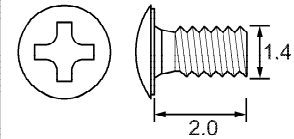


#27: M1.4 X 2.0
(Black)
2-662-396-11

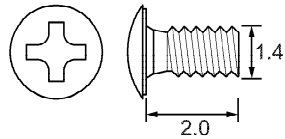


#28: M1.4 X 4.0 (Tapping)
(Dark Silver)
3-348-998-61

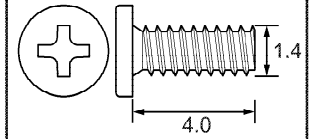


#29: M1.4 X 2.5
(Black)
2-662-396-01

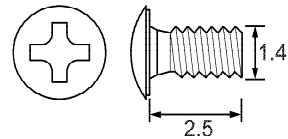


#30: M1.2 X 4.0 (Tapping)
(White)
3-086-156-11

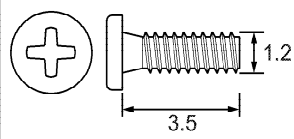


#31: M3.0 X 4.0
(Silver)
2-102-434-01

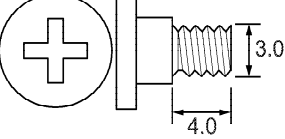


#32: M2.0 X 4.5 (Tapping)
(Silver)
2-102-498-01

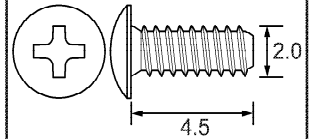


#33: M3.0 X 6.0
(Silver)
3-077-331-21

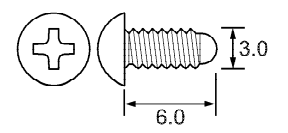


#34: M3.0 X 8.0
(Black)
3-077-331-41

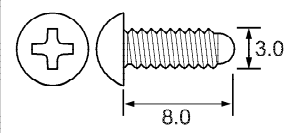


#35: M4.0 X 6.0 (Tapping)
(Silver)
3-975-291-02

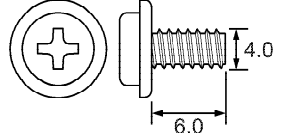


#36: M3.0 X 6.0
(Silver)
4-886-821-11

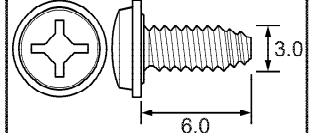


#37: M2.0 X 6.0 (Tapping)
(Black)
3-080-206-31

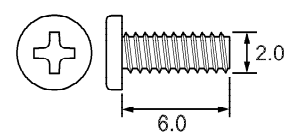


#38: M3.0 X 20.0 (Tapping)
(Silver)
7-685-651-79

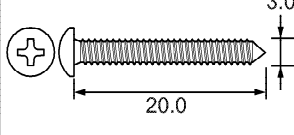





















#39: M2.6 X 5.0 (Tapping)
(Black)
7-685-791-09

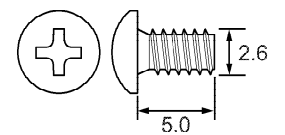

#40: M2.0 X 4.0 (Tapping)
(Silver)
7-685-851-04

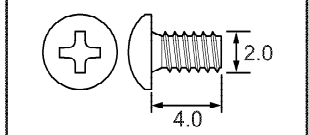


HARDWARE LIST (3/4)

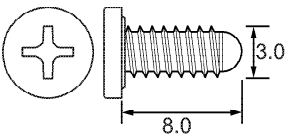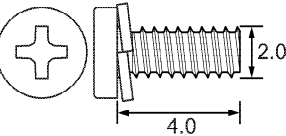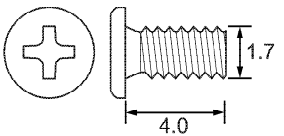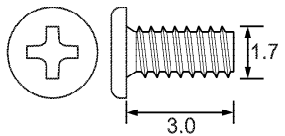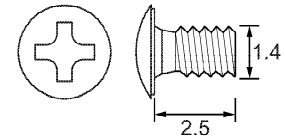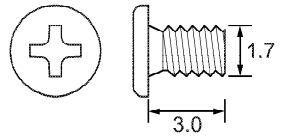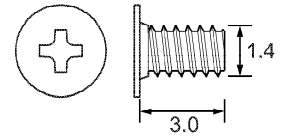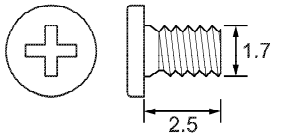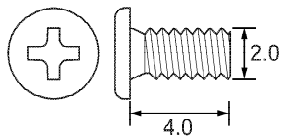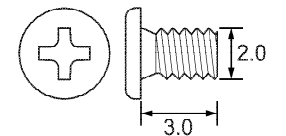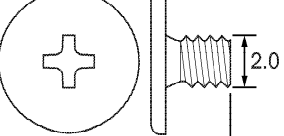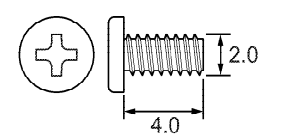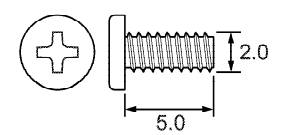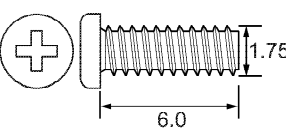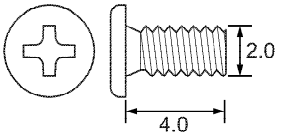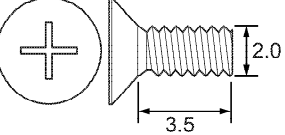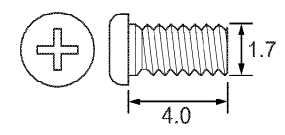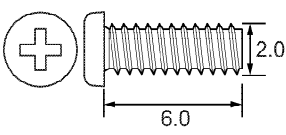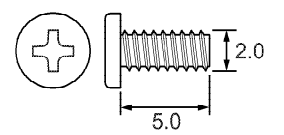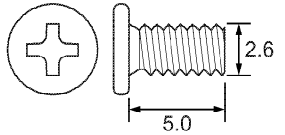
#41: M3.0 X 8.0 (Tapping) (Silver) 3-065-748-01 	#42: M2.0 X 4.0 (Tapping) (Silver) 7-628-253-00 	#43: M1.7 X 4.0 (Red) 2-660-401-31 	#44: M1.7 X 3.0 (Tapping) (Silver) 3-078-890-61 
#45: M1.4 X 2.5 (Silver) 2-587-151-01 	#46: M1.7 X 3.0 (Red) 2-660-401-11 	#47: M1.4 X 3.0 (Tapping) (Silver) 2-665-774-01 	#48: M1.7 X 2.5 (Silver) 3-973-497-91 
#49: M2.0 X 4.0 (Black) 2-630-005-21 	#50: M2.0 X 3.0 (Red) 2-891-494-11 	#51: M2.0 X 2.5 (Silver) 3-073-686-01 	#52: M2.0 X 4.0 (Tapping) (Black) 3-080-206-11 
#53: M2.0 X 5.0 (Tapping) (Black) 3-080-206-21 	#54: M1.75 X 6.0 (Tapping) (Black) 3-318-203-11 	#55: M2.0 X 4.0 (Silver) 2-655-582-11 	#56: M2.0 X 3.5 (Silver) 3-067-187-11 
#57: M1.7 X 4.0 (Black) 7-627-852-18 	#58: M2.0 X 6.0 (Tapping) (Silver) 3-719-408-11 	#59: M2.0 X 5.0 (Tapping) (Silver) 3-080-205-21 	#60: M2.6 X 5.0 (Black) 3-061-062-11 

HARDWARE LIST (4/4)


#61: M3.0 X 10.0
(Black)
7-682-549-09

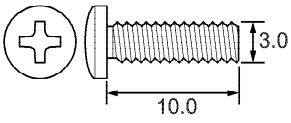


#62: M2.0 X 3.0
(Silver)
3-080-202-21

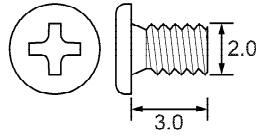


#63: M5.0 X 12.5
(Black)
3-060-811-21

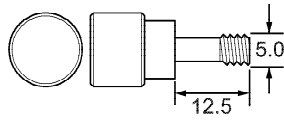


#64: M1.7 X 5.0 (Tapping)
(Silver)
2-666-551-21

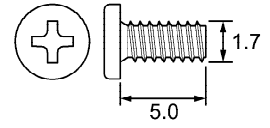


#65: M1.4 X 3.5
(Silver)
2-635-591-01

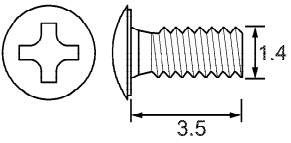

#66: M1.4 X 1.4
(Silver)
2-635-591-41

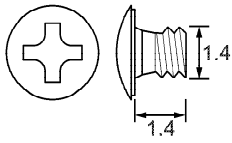

#67: M1.4 X 2.0
(Silver)
3-389-523-16

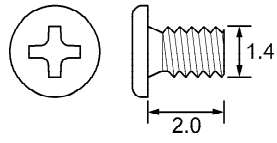

#68: M1.7 X 4.0
(Silver)
2-655-581-01

