


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL ASSEMBLY

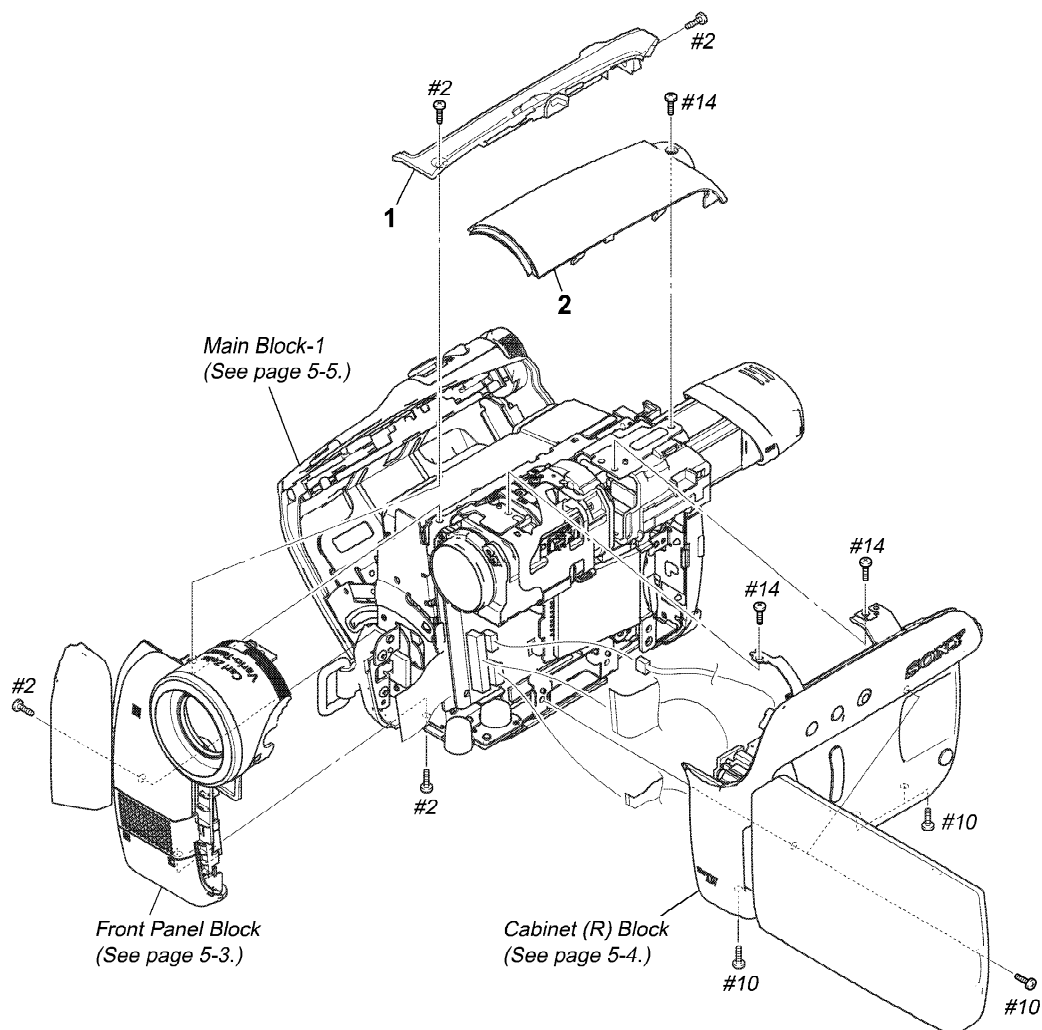

Ref. No.	Part No.	Description
1	X-2108-030-1	CABINET (172) ASSY, NS
2	2-664-983-01	CABINET (UPPER (172))
#2	2-635-562-31	SCREW (M1.7) (Black)


Ref. No.	Part No.	Description
#10	2-599-475-31	SCREW (M1.7) (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-2. FRONT PANEL BLOCK

ns: not supplied

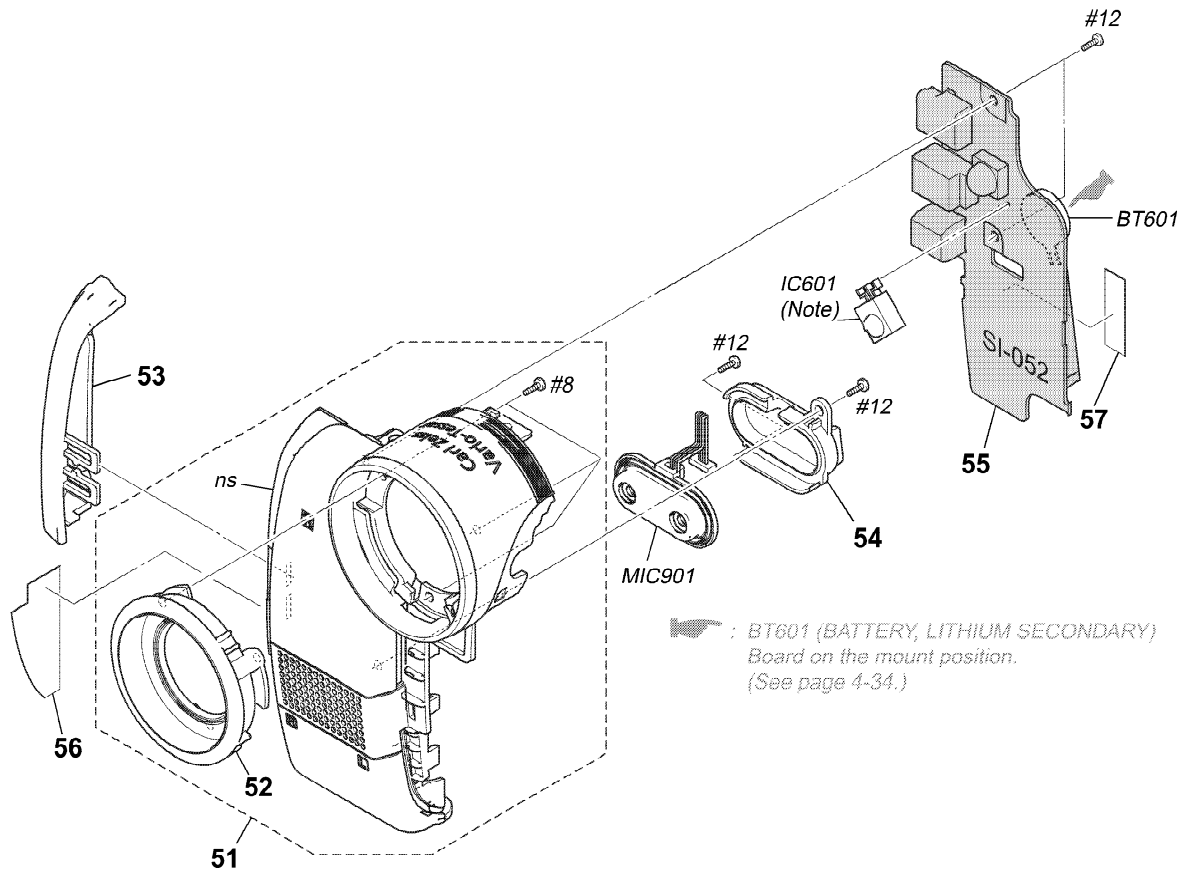

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

Note: IC601 is not included in SI-052 complete board.

- Refer to page 5-1 for mark Δ .

Ref. No.	Part No.	Description
51	X-2108-152-1	PANEL (172) ASSY, F
52	2-664-940-01	SCREW (172), FILTER
53	2-664-986-01	COVER, JACK
* 54	2-664-946-01	RETAINER, MICROPHONE
55	A-1153-875-A	SI-052 BOARD, COMPLETE
* 56	2-672-995-01	SHEET (F)

Ref. No.	Part No.	Description
57	3-941-343-01	TAPE (A)
Δ *BT601	1-756-640-11	BATTERY, LITHIUM SECONDARY
* IC601	6-600-505-01	IC RPM7640-V17 (Note)
MIC901	1-542-513-21	MICROPHONE
#8	3-078-890-01	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. CABINET (R) BLOCK

ns: not supplied

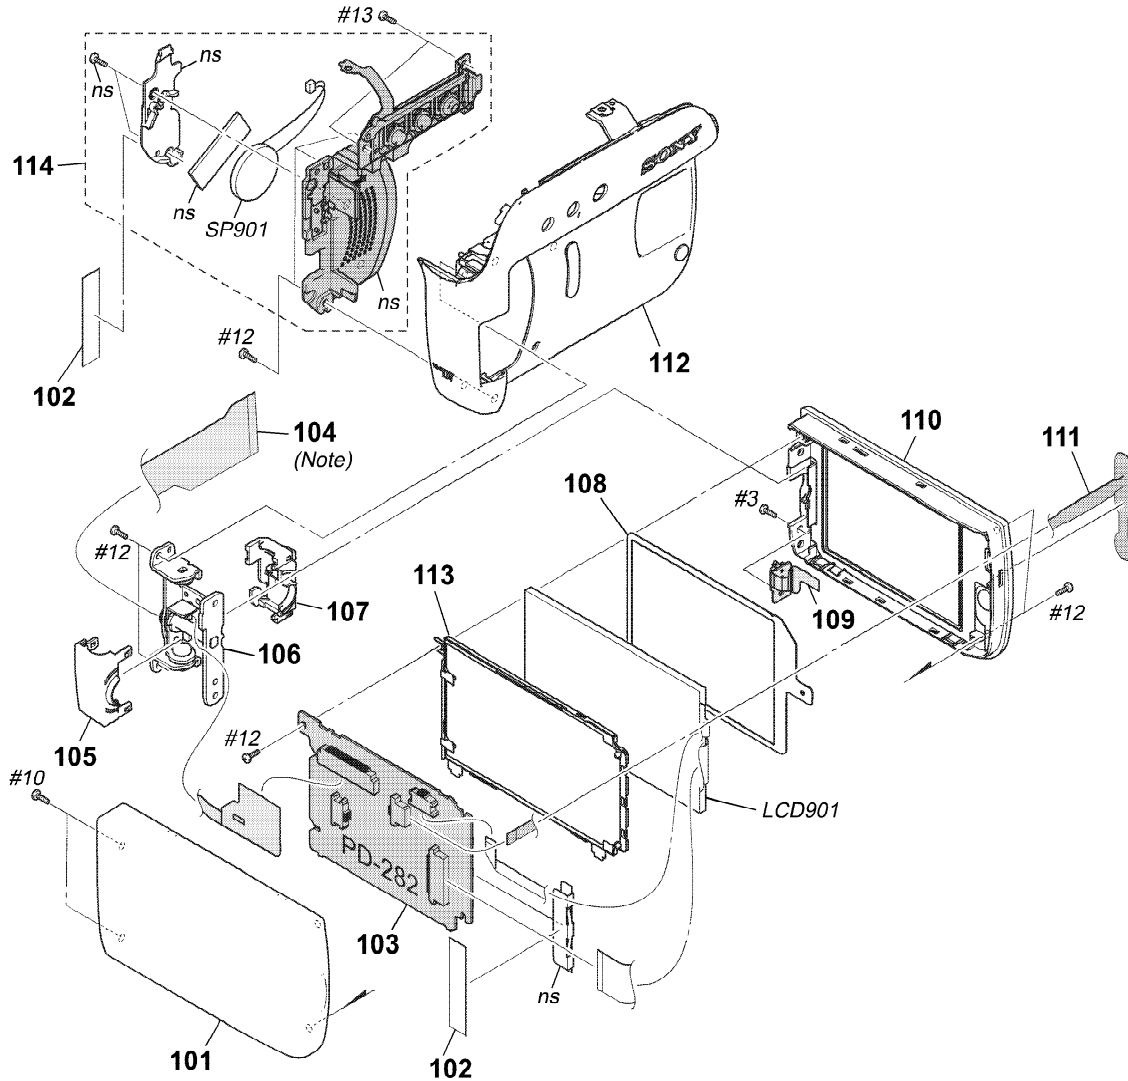

Note: Be sure read "HELP" when you install the FP-380 flexible board.

Ref. No.	Part No.	Description
101	2-664-728-01	CABINET (C), P
102	3-941-343-01	TAPE (A)
103	A-1153-882-A	PD-282 BOARD, COMPLETE
* 104	1-867-778-11	FP-380 FLEXIBLE BOARD (Note)
105	2-664-737-01	COVER (C), HINGE
106	X-2067-431-1	HINGE ASSY
107	2-664-738-01	COVER (M), HINGE
108	2-664-736-01	TP CUSHION (AUO)
109	A-1153-842-A	FP-386 FLEXIBLE BOARD, COMPLETE
110	X-2103-699-1	CABINET (M (172)) ASSY, P

Ref. No.	Part No.	Description
111	1-479-063-21	KEY BLOCK, CONTROL (SB9000)
112	X-2103-697-1	CABINET (R (172)) ASSY
113	A-1153-903-A	LIGHT GUIDE BLOCK (2.5)
114	1-479-506-11	KEY BLOCK, CONTROL (CF17000)
LCD901	A-1159-091-A	TP BLOCK ASSY (25AUNI06)
* SP901	1-825-260-31	K016NA503-12
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#13	3-085-397-01	SCREW (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. MAIN BLOCK-1

ns: not supplied

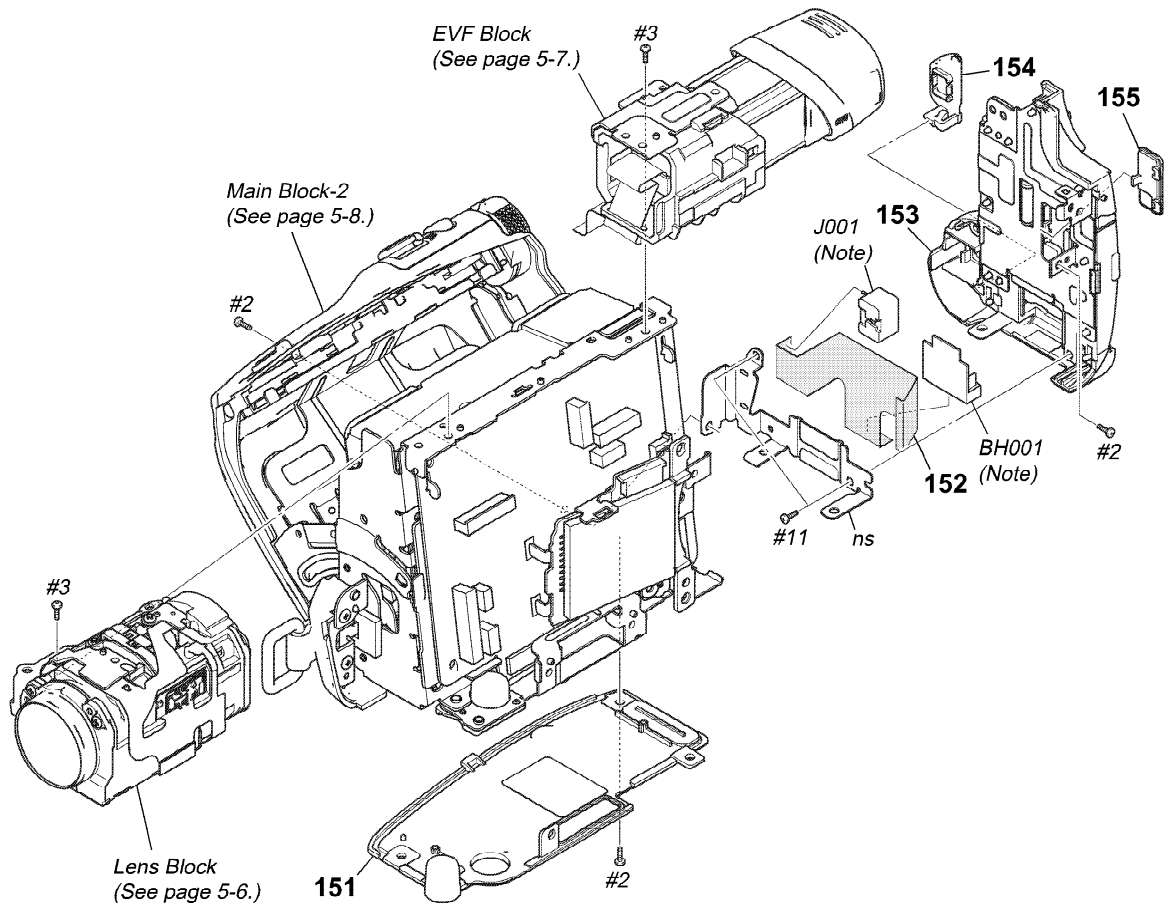

Note: BH001 and J001 are not included in FP-381 flexible board.


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
151	X-2108-032-1	BOTTOM (172) ASSY, CABINET
* 152	1-867-779-11	FP-381 FLEXIBLE BOARD
153	X-2108-652-1	PANEL (172) ASSY, BT
154	2-664-984-01	COVER, DC (IN)
155	2-664-985-01	LID, CPC

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
BH001	1-780-064-21	BATTERY TERMINAL BOARD (Note)
J001	1-815-792-11	CONNECTOR, DC-IN (7.2V) (Note)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#11	3-078-890-11	SCREW, TAPPING (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. LENS BLOCK

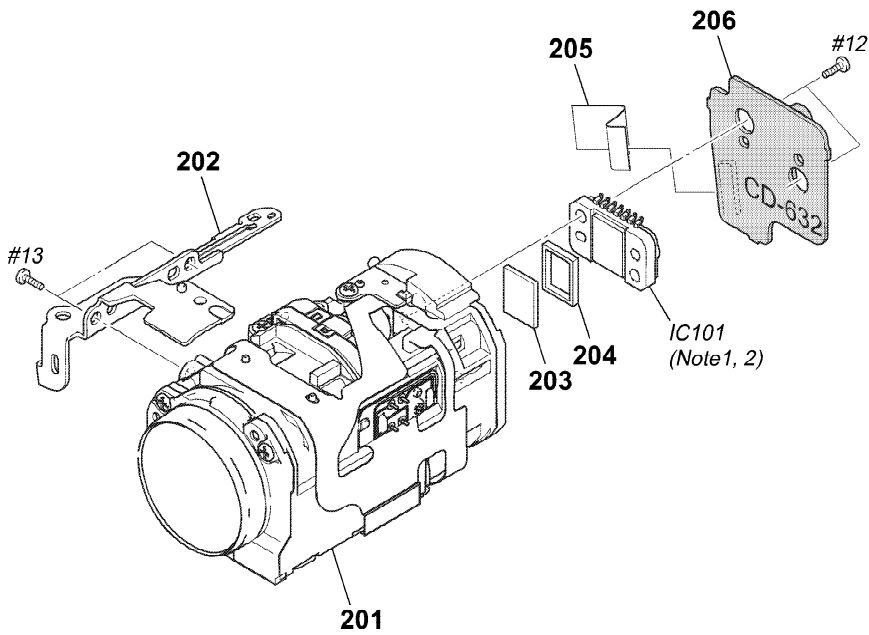

- Note 1: IC101 is not included in CD-632 complete board.
- Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.


Ref. No.	Part No.	Description
201	1-788-332-11	OPTICS UNIT (EG03B)
201	8-848-804-01	LSV-1070B
* 202	2-664-981-01	FRAME (172), LENS
203	1-788-242-11	OPTICAL FILTER BLOCK
204	2-318-138-01	RUBBER, SEAL 1070
* 205	1-830-778-11	CABLE, FLEXIBLE FLAT (FFC-063)

Ref. No.	Part No.	Description
206	A-1153-873-A	CD-632 BOARD, COMPLETE
IC101	8-753-244-70	ICX610NKF-13 (CCD IMAGER) (HC36) (Note 1, 2)
IC101	8-753-244-71	ICX611NKF-13 (CCD IMAGER) (HC36E) (Note 1, 2)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#13	3-085-397-01	SCREW (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-6. EVF BLOCK

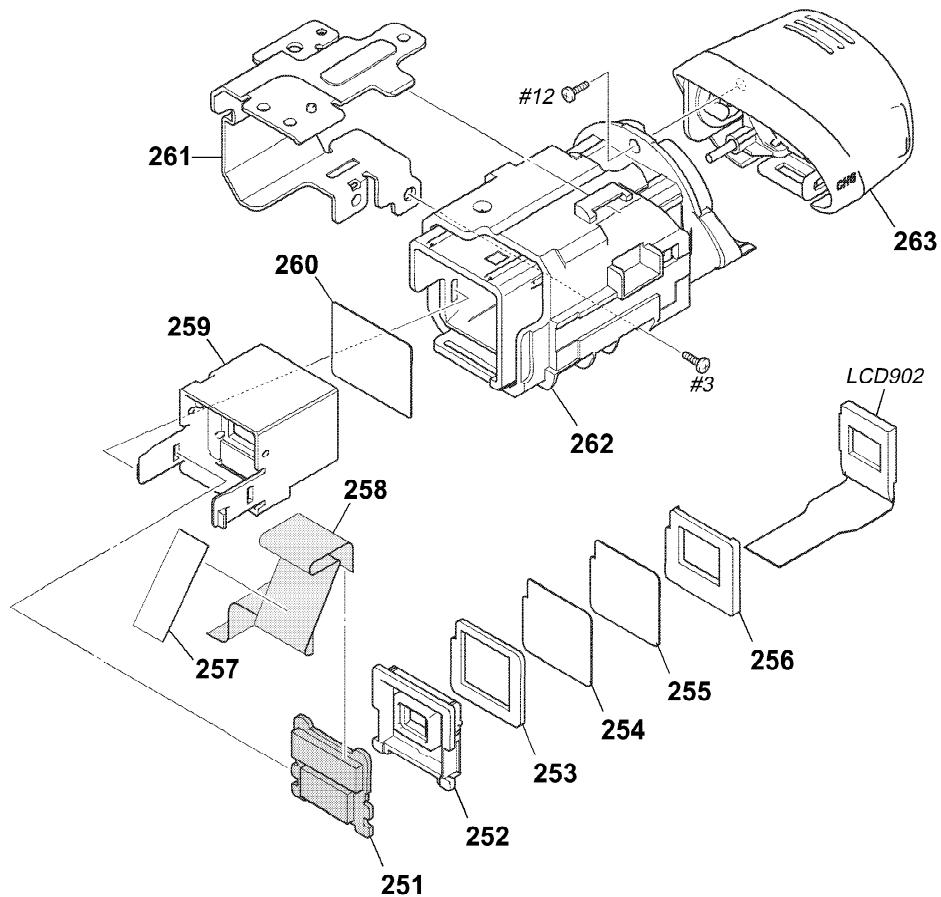

Ref. No.	Part No.	Description
251	A-1153-874-A	LB-122 BOARD, COMPLETE
252	2-664-672-01	GUIDE, LAMP
* 253	2-638-819-01	CUSHION, LCD
* 254	2-638-818-01	ILLUMINATOR
* 255	2-638-816-01	PLATE (TFT), DEFLECTION
256	2-664-671-01	SPACER, LCD
257	3-941-343-01	TAPE (A)
* 258	1-867-777-11	FP-379 FLEXIBLE BOARD

Ref. No.	Part No.	Description
* 259	2-664-670-01	CABINET, INNER
* 260	2-638-813-01	PLATE (CF), DEFLECTION
* 261	2-664-669-01	FRAME (172), FIXED
262	X-2103-696-1	VF (172) ASSY
263	X-2103-695-1	EYE CUP ASSY
LCD902	8-753-245-09	LCX059CKK-1
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. MAIN BLOCK-2

ns: not supplied

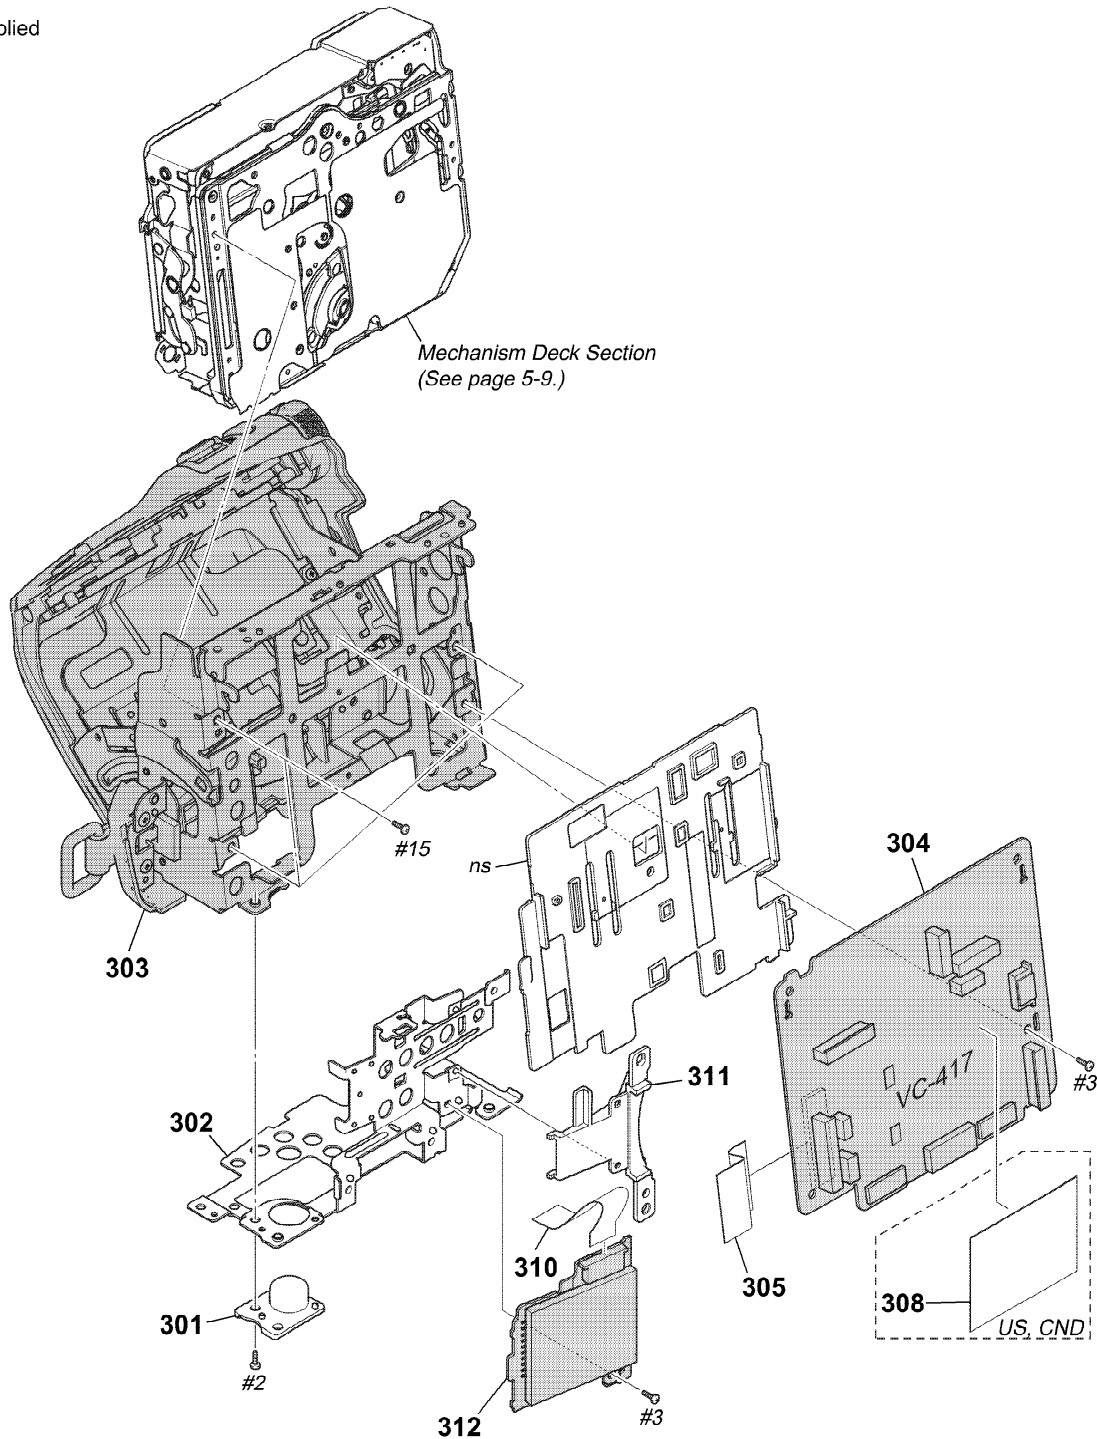


Ref. No.	Part No.	Description
301	2-664-982-01	SCREW, TRIPOD
* 302	2-664-977-01	FRAME (172), BOTTOM
303	1-479-507-21	KEY BLOCK, CONTROL (SS17000)
304	A-1154-406-A	VC-417 BOARD, COMPLETE (SERVICE)
* 305	1-830-775-11	CABLE, FLEXIBLE FLAT (FFC-060)
308	2-659-500-01	LABEL, FUSE REPLACEMENT CAUTION (US, CND)

Ref. No.	Part No.	Description
* 310	1-830-777-11	CABLE, FLEXIBLE FLAT (FFC-062)
* 311	2-664-978-01	CABINET, MS
312	A-1153-809-A	MS-312 BOARD, COMPLETE
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#15	3-062-214-01	SCREW (M1.4X1.5)

5. REPAIR PARTS LIST

5-1-8. MECHANISM DECK SECTION

ns : not supplied

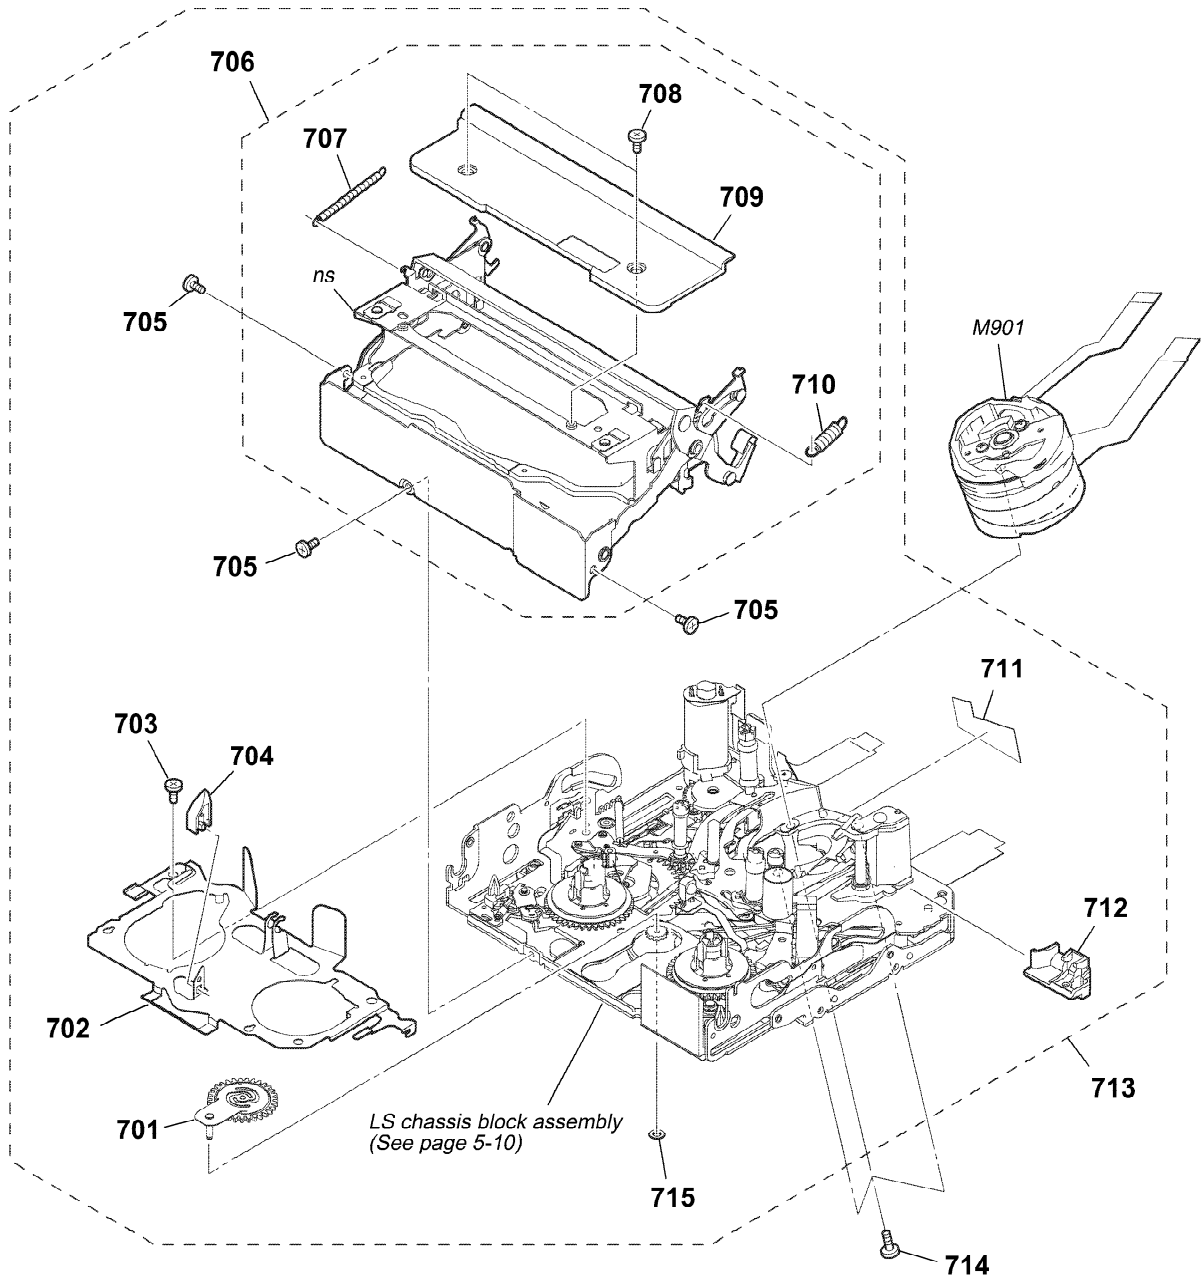


Ref. No.	Part No.	Description
701	X-2024-478-1	PENDULUM ASSY
702	2-342-917-02	LED BASE
703	7-627-850-77	SCREW, PRECISION +P 1.4X1.8
704	3-079-366-11	RELEASE, REEL LOCK
705	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD
706	X-2024-450-1	COMPARTMENT ASSY, CASSETTE
707	2-342-926-01	SPRING (ARM S), TENSION COIL
708	2-546-417-01	SCREW (M1.4)

Ref. No.	Part No.	Description
709	2-342-933-01	PLATE, TOP
710	2-342-927-01	SPRING (ARM T), TENSION COIL
711	2-541-585-01	SHEET, FLEXIBLE ADHESIVE
712	2-342-918-01	TG6 CATCHER
713	A-1080-997-A	MD (N100) SUB ASSY A
714	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
715	3-315-414-31	WASHER
M901	A-1137-055-A	DRUM (DEH-33D-R) (SERVICE)

5. REPAIR PARTS LIST

5-1-9. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-1

ns : not supplied

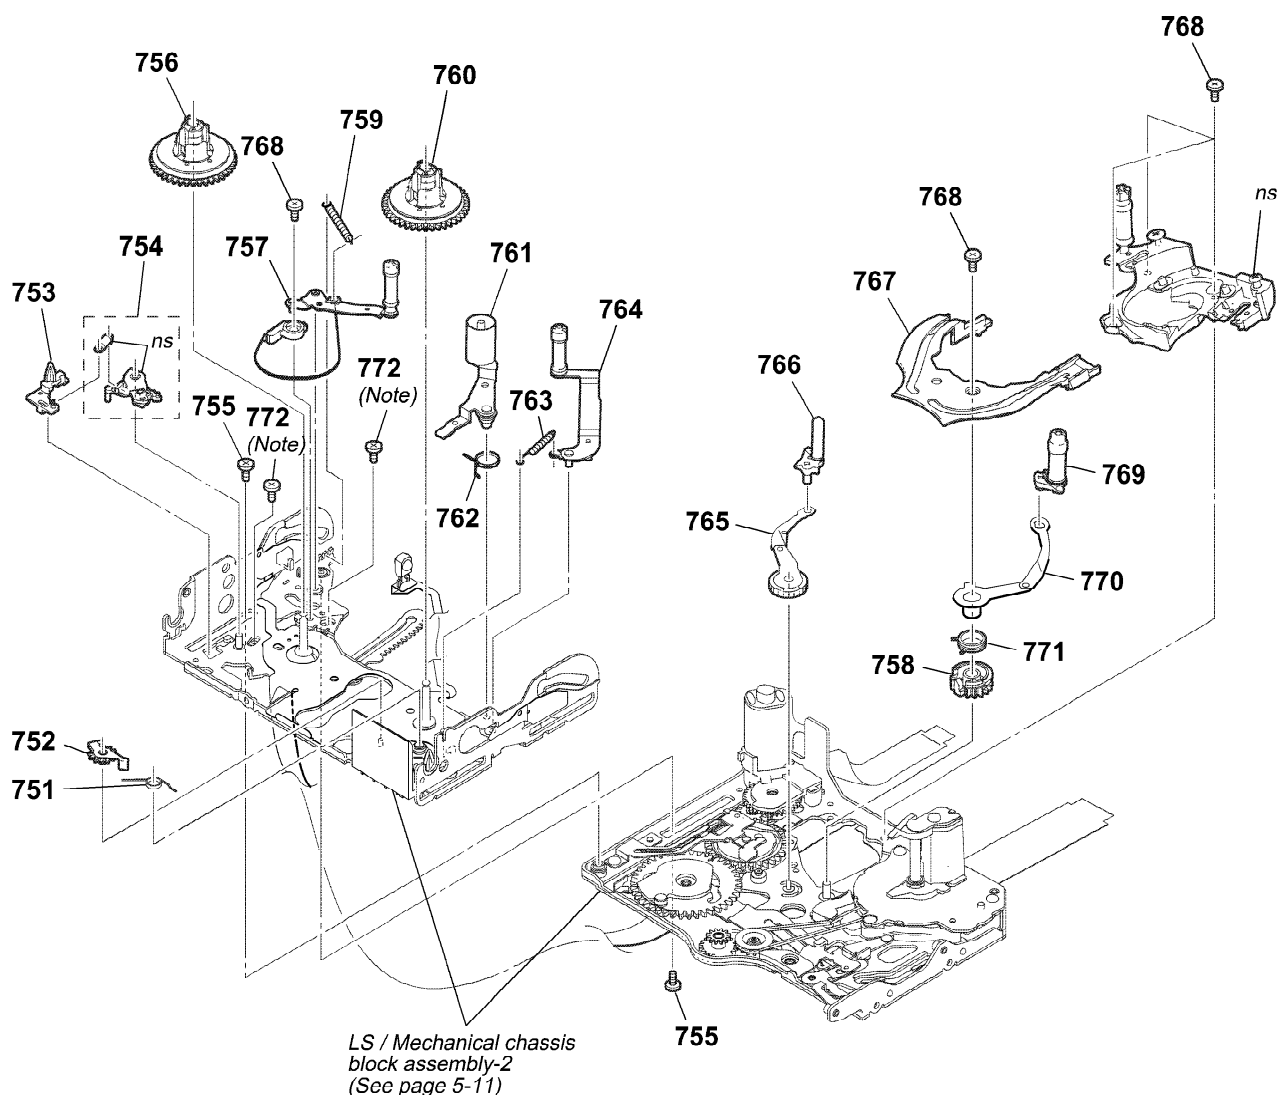


Note: These two screws are the fixing screws of the LS cam plate.
These two fixing screws are used for adjusting the LS cam plate position.
(refer to 4-2. LS cam adjustment of DV mechanical adjustment manual IX)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
751	2-342-759-01	SPRING, RVS BRAKE	762	2-342-906-01	SPRING (PINCH RETURN), TORSION
752	A-1083-005-A	BLOCK ASSY, RVS BRAKE	763	2-342-626-01	SPRING (RETURN TG6), EXTENSION
753	2-342-731-01	POSITIONING, S	764	A-1083-002-A	BLOCK ASSY, TG6
754	A-1083-006-A	BLOCK ASSY, S BRAKE	765	X-2024-468-1	ARM ASSY (S), GL
755	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD	766	X-2024-465-1	COASTER (S) ASSY
756	X-2024-473-1	TABLE ASSY, S REEL	767	2-342-612-01	RAIL
757	A-1083-007-B	BLOCKASSY, TENSION REGULATOR	768	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
758	2-342-705-01	GEAR (T), GL	769	X-2024-466-1	COASTER (T) ASSY
759	2-342-902-01	SPRING, TENSION REGULATOR	770	X-2024-469-1	ARM (T) ASSY, GL
760	X-2024-474-1	TABLE ASSY, T REEL	771	2-342-716-01	SPRING (T), TORSION COIL
761	X-2024-476-1	ARM ASSY, PINCH	772	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD (for adjustment)

5. REPAIR PARTS LIST

5-1-10. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-2

ns : not supplied

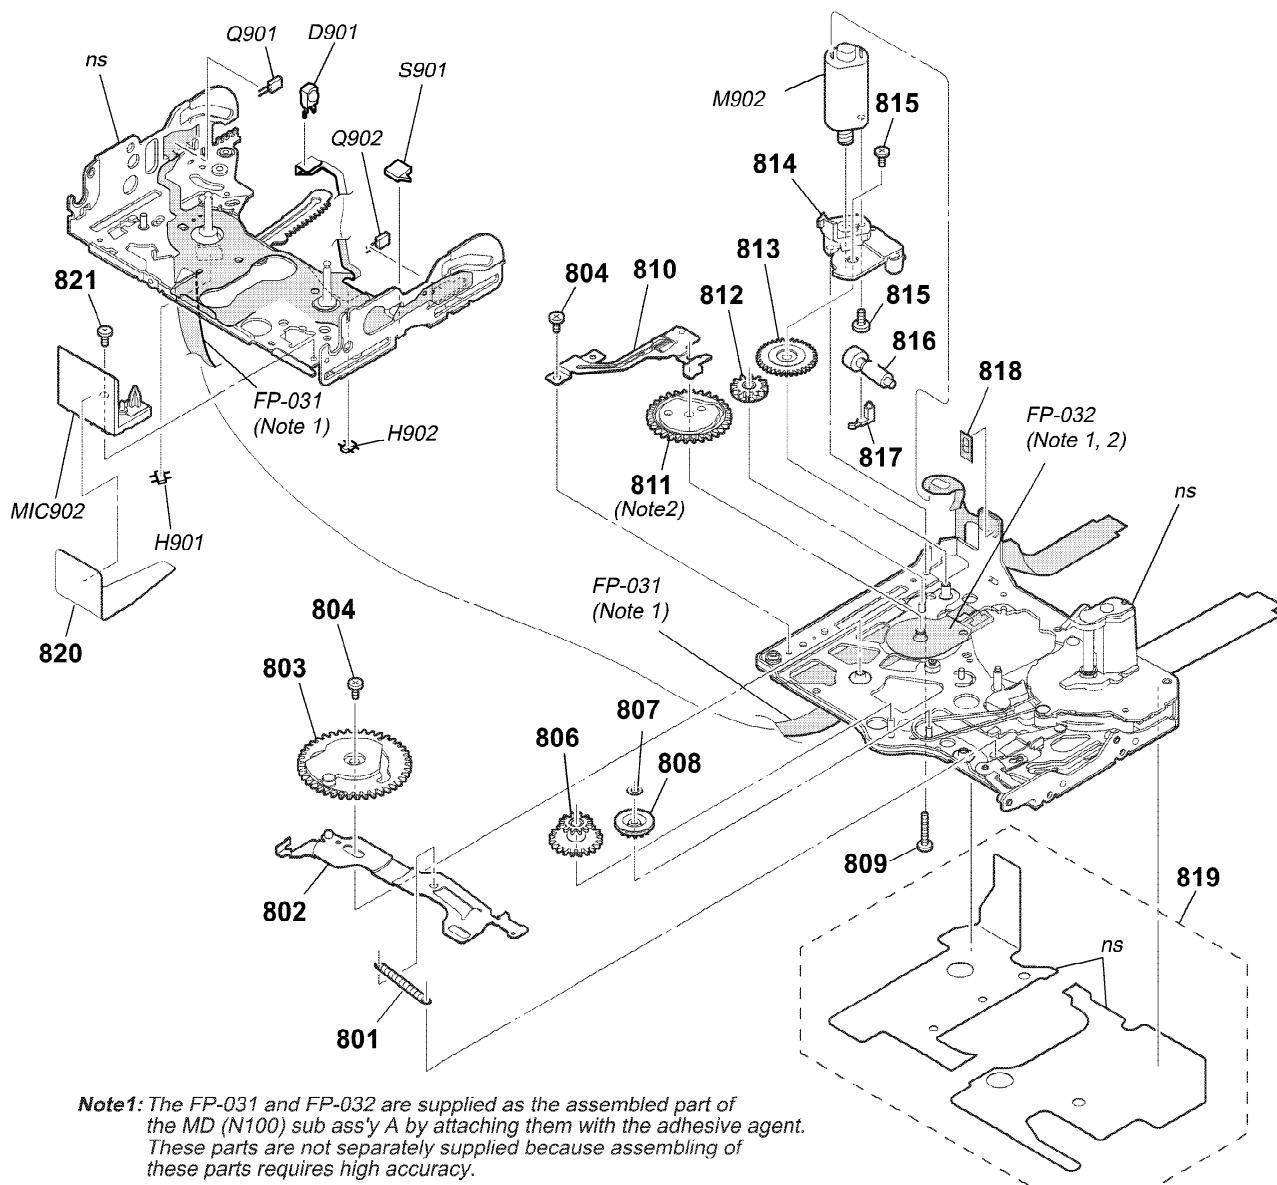

Note1: The FP-031 and FP-032 are supplied as the assembled part of the MD (N100) sub ass'y A by attaching them with the adhesive agent. These parts are not separately supplied because assembling of these parts requires high accuracy.

Note2: The mode switch (S903) function works when the contactor of the FP-032 contacts with the bottom surface of wiper of the mode gear ass'y.

Ref. No.	Part No.	Description
801	2-342-624-01	SPRING (PINCH LIMITTER), EXTENSION
802	X-2024-463-1	SLIDER ASSY, MODE
803	X-2024-462-1	GEAR ASSY, CAM
804	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD
806	2-342-621-01	GEAR, RELAY
807	3-315-414-31	WASHER
808	2-342-620-01	GEAR, CONVERSION
809	3-084-377-01	HEAD (SCREW M1.2)
810	X-2024-460-1	BASE ASSY, CAM
811	X-2024-461-1	GEAR ASSY, MODE
812	2-342-615-01	GEAR, NO.2
813	2-342-691-01	GEAR, NO.1
814	2-342-688-01	MOTOR HOLDER
815	3-895-822-71	SCREW (M1.2X2), SPECIAL, 0
816	2-342-689-01	WORM SHAFT (2J)

Ref. No.	Part No.	Description
817	2-342-690-01	BASE, MOTOR HOLDER
818	1-677-049-11	FP-228 FLEXIBLE BOARD (DEW SENSOR)
819	2-342-686-01	COVER, CAPSTAN
820	2-541-984-01	MIC COVER
821	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
D901	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL)
H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL)
M902	X-2024-464-1	MOTOR ASSY (LOADING)
MIC902	1-818-576-11	PIN, CONNECTOR (WITH DETECTION SWITCH)
Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END)
Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP)
S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)

CD-632

FP-031

FP-032

FP-228

FP-380

FP-381

FP-386

LB-122

MS-312

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1153-873-A	CD-632 BOARD, COMPLETE ***** (IC101 is not included in CD-632 complete board.)
		< CAPACITOR >
C101	1-124-779-00	ELECT CHIP 10uF 20% 16V
C102	1-164-850-11	CERAMIC CHIP 10PF 0.5PF 50V
C104	1-124-779-00	ELECT CHIP 10uF 20% 16V
		< CONNECTOR >
CN101	1-766-344-51	CONNECTOR, FFC/FPC 14P
		< IC >
IC101	8-753-244-70	ICX610NKF-13 (CCD IMAGER) (HC36) (Note)
IC101	8-753-244-71	ICX611NKF-13 (CCD IMAGER) (HC36E) (Note)
		< COIL >
L101	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
		< TRANSISTOR >
Q101	8-729-423-55	TRANSISTOR 2SC3931-D
		< RESISTOR >
R101	1-218-959-11	RES-CHIP 3.3K 5% 1/16W
		(Not supplied) FP-031 FLEXIBLE BOARD ***** (This flexible board is included in MD (N100) SUB ASSY A (A-1080-997-A).)
		< DIODE >
D901	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
		< HOLE ELEMENT >
H001	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL)
H002	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL)
		< CONNECTOR >
MIC902	1-818-576-11	PIN, CONNECTOR (WITH DETECTION SWITCH)
		< TRANSISTOR >
Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END)
Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP)
		< SWITCH >
S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)
		(Not supplied) FP-032 FLEXIBLE BOARD ***** (This flexible board with S903 is included in MD (N100) SUB ASSY A (A-1080-997-A).)
		1-677-049-11 FP-228 FLEXIBLE BOARD (DEW SENSOR) *****

Ref. No.	Part No.	Description
*	1-867-778-11	FP-380 FLEXIBLE BOARD *****
		< CAPACITOR >
*	1-867-779-11	FP-381 FLEXIBLE BOARD ***** (BH001 and J001 are not included in FP-381 flexible board.)
		< BATTERY TERMINAL >
BH001	1-780-064-21	BATTERY TERMINAL BOARD
		< JACK >
J001	1-815-792-11	CONNECTOR, DC-IN (7.2V)
		A-1153-842-A FP-386 FLEXIBLE BOARD, COMPLETE *****
		< SWITCH >
S101	1-786-180-31	SWITCH, PUSH (1KEY) (PANEL REVERSE)
		A-1153-874-A LB-122 BOARD, COMPLETE *****
		< CAPACITOR >
G301	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
G302	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
		< CONNECTOR >
CN301	1-818-046-51	CONNECTOR, FFC/FPC 20P
* CN302	1-817-560-51	CONNECTOR, FPC (ZIP) 21P
		< DIODE >
D301	6-500-941-01	DIODE MAZS056008S0
* D302	6-501-325-01	DIODE NESW007T-T017 (BACKLIGHT)
		< RESISTOR >
R304	1-218-989-11	RES-CHIP 1M 5% 1/16W
		A-1153-809-A MS-312 BOARD, COMPLETE *****
		< CONNECTOR >
CN502	1-817-913-41	MEMORY STICK DUO CONNECTOR 10P
CN503	1-766-340-51	CONNECTOR, FFC/FPC 10P
		< DIODE >
D501	6-500-817-01	DIODE (LED) SML-512UWT86 (MS ACCESS)
		< RESISTOR >
R501	1-218-949-11	RES-CHIP 470 5% 1/16W

Ref. No.	Part No.	Description
	A-1153-882-A	PD-282 BOARD, COMPLETE *****
< CAPACITOR >		
C9601	1-164-941-11	CERAMIC CHIP 0.0047uF 10% 16V
C9602	1-164-941-11	CERAMIC CHIP 0.0047uF 10% 16V
C9603	1-104-847-11	TANTAL. CHIP 22uF 20% 4V
C9605	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C9606	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9607	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9608	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9609	1-125-889-91	CERAMIC CHIP 2.2uF 10% 10V
C9610	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C9614	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C9615	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9616	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C9617	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9618	1-164-942-11	CERAMIC CHIP 0.0068uF 10% 16V
C9619	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9620	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C9622	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C9623	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
< CONNECTOR >		
* CN9601	1-817-513-51	CONNECTOR, FFC/FPC (ZIF) 30P
* CN9602	1-818-069-51	CONNECTOR, FFC/FPC (ZIF) 6P
CN9603	1-573-915-51	CONNECTOR, FFC/FPC (ZIF) 6P
CN9604	1-573-915-51	CONNECTOR, FFC/FPC (ZIF) 6P
CN9605	1-815-031-51	CONNECTOR, FFC/FPC (ZIF) 24P
< DIODE >		
* D9602	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
* D9603	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
* D9604	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
D9605	8-719-074-08	DIODE MA4ZD03001S0
< IC >		
IC9601	6-707-045-01	IC AUO-018Y1-TBM-E
< COIL >		
L9601	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L9602	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
< TRANSISTOR >		
Q9601	8-729-427-67	TRANSISTOR XP421F-TXE
Q9602	8-729-427-37	TRANSISTOR XP411F-TXE
Q9604	8-729-041-23	TRANSISTOR NDS356AP
< RESISTOR >		
R9602	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R9603	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R9604	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R9606	1-218-967-11	RES-CHIP 15K 5% 1/16W
R9608	1-218-965-11	RES-CHIP 10K 5% 1/16W
R9611	1-218-989-11	RES-CHIP 1M 5% 1/16W
R9612	1-218-977-11	RES-CHIP 100K 5% 1/16W

Ref. No.	Part No.	Description
	A-1153-875-A	SI-052 BOARD, COMPLETE ***** (IC601 is not included in SI-052 complete board.)
< BATTERY >		
△* BT601	1-756-640-11	BATTERY, LITHIUM SECONDARY
< CAPACITOR >		
C602	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C604	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C608	1-110-666-11	ELECT CHIP 22uF 20% 6.3V
C610	1-110-666-11	ELECT CHIP 22uF 20% 6.3V
C611	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C612	1-100-251-11	CERAMIC CHIP 0.047uF 10% 10V
C613	1-100-251-11	CERAMIC CHIP 0.047uF 10% 10V
C614	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C615	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C616	1-164-935-11	CERAMIC CHIP 470PF 10% 50V
C617	1-164-935-11	CERAMIC CHIP 470PF 10% 50V
< CONNECTOR >		
CN601	1-815-794-21	CONNECTOR (MULTIPLE) (A/V OUT)
CN602	1-778-507-21	PIN, CONNECTOR (PC BOARD) 4P
CN603	1-794-962-11	CONNECTOR, SQUARE TYPE (USB 5P) (USB)
CN604	1-794-276-11	CONNECTOR, SQUARE TYPE 4P (DV)
CN605	1-818-074-51	CONNECTOR, FFC/FPC (ZIF) 36P
< DIODE >		
D602	6-500-044-01	DIODE DF6A6.8FU (TE85R)
D603	6-500-776-01	DIODE MAZW068H0LS0
D606	6-500-512-01	DIODE CL-330IRS-X-TU (IR EMITTER/NIGHTSHOT)
D608	8-719-078-02	DIODE 1SS357 (T3SONY1)
< FUSE >		
△ F601	1-576-647-11	FUSE (0.2A/50V)
△ F602	1-576-647-11	FUSE (0.2A/50V)
< FERRITE BEAD >		
FB601	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
FB602	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
< IC >		
* IC601	6-600-505-01	IC RPM7640-V17
IC602	8-759-489-19	IC uPC6756GR-8JG-E2
< COIL >		
L601	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
< LINE FILTER >		
LF602	1-400-633-21	COMMON MODE CHOKE COIL
LF603	1-400-633-21	COMMON MODE CHOKE COIL
< RESISTOR >		
R616	1-218-989-11	RES-CHIP 1M 5% 1/16W
R617	1-218-965-11	RES-CHIP 10K 5% 1/16W
R618	1-218-965-11	RES-CHIP 10K 5% 1/16W

• Refer to page 5-1 for mark △.


CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

SI-052


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			
R619	1-218-989-11	RES-CHIP	1M	5%	1/16W
R623	1-216-801-11	METAL CHIP	22	5%	1/10W
R624	1-216-801-11	METAL CHIP	22	5%	1/10W
< COMPOSITION CIRCUIT BLOCK >					
RB601	1-234-379-21	RES, NETWORK	22K (1005X4)		
RB602	1-234-378-21	RES, NETWORK	10K (1005X4)		
< SENSOR >					
SE601	1-476-807-31	SENSOR, ANGULAR VELOCITY (PITCH)			
SE602	1-476-807-41	SENSOR, ANGULAR VELOCITY (YAW)			

Electrical parts list of the VC-417 board is not shown.
Pages 5-15 to 5-20 are not shown.

Checking supplied accessories.

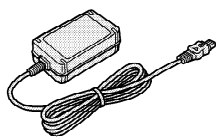

 AC Adaptor
(AC-L25A/L25B)
△ 1-479-288-13



Power Cord
△ 1-555-074-71 (AUS)
△ 1-782-476-41 (CH)
△ 1-783-374-22 (HK)
△ 1-790-107-51 (US, CND)
△ 1-823-150-21 (NE)
△ 1-830-518-31 (E: NTSC)
△ 1-824-910-31 (E: PAL, MX)
△ 1-832-115-11 (KR)

Other accessories


2-659-813-11	MANUAL, INSTRUCTION (ENGLISH)(US, CND, E)
2-659-813-21	MANUAL, INSTRUCTION (FRENCH) (CND)
2-659-813-31	MANUAL, INSTRUCTION (SPANISH) (E, MX)
2-659-813-51	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (E)
2-659-813-61	MANUAL, INSTRUCTION (KOREAN) (KR)
2-659-814-11	MANUAL, INSTRUCTION (ENGLISH) (E, AUS, HK)
2-659-814-61	MANUAL, INSTRUCTION (SWEDISH, RUSSIAN) (NE)
2-659-814-71	MANUAL, INSTRUCTION (DANISH, FINNISH) (NE)
2-665-186-11	MANUAL, INSTRUCTION (ARABIC, PERSIAN) (E)
2-665-186-21	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (HK)
2-665-186-31	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) (E, CH)



Conversion (2P) Adaptor
△ 1-569-007-12 (E: NTSC)



 Conversion (2P) Adaptor
△ 1-569-008-12 (E: PAL, MX, HK)




Lens Cap
X-2108-241-1




A/V Connection Cable
1-823-156-51



 
Rechargeable Battery Pack
NP-FP30
△ A-1082-950-A (US, CND)
△ A-1082-951-A
(EXCEPT US, CND)



 CD-ROM
"Picture Package Ver. 1.5.1"
2-666-755-01



USB Cable
1-829-868-31

 


Wireless Remote Commander
RMT-831
1-478-495-41


• Refer to page 5-1 for mark △.

HARDWARE LIST


#1: M1.7 X 2.5 (Black)
2-635-562-11

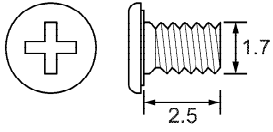


#2: M1.7 X 4.0 (Black)
2-635-562-31

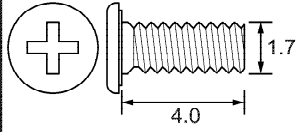


#3: M1.7 X 2.5 (Red)
2-660-401-01

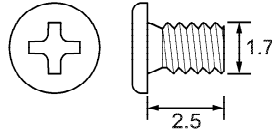


#4: M1.4 X 2.5 (Dark Silver)
3-348-998-81

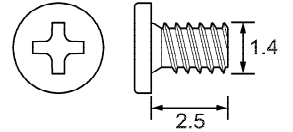


#5: M1.7 X 3.5 (Black)
3-080-204-01

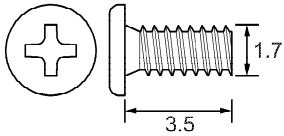


#6: M1.4 X 1.7 (Silver)
2-598-474-01

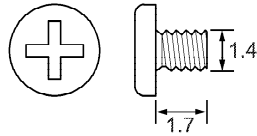


#7: M1.7 X 1.6 (Black)
7-627-552-18

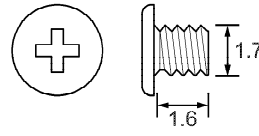


#8: M1.7 X 3.5 (Silver)
3-078-890-01

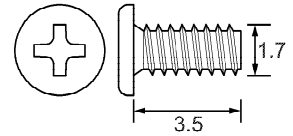


#9: M1.7 X 5.0 (Silver)
3-078-890-21

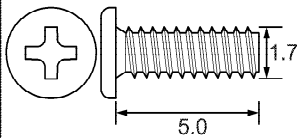


#10: M1.7 X 4.0 (Silver)
2-599-475-31

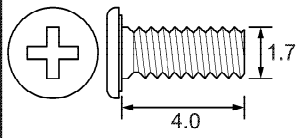


#11: M1.7 X 4.0 (Silver)
3-078-890-11

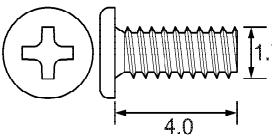


#12: M1.7 X 5.0 (Black)
3-080-204-21

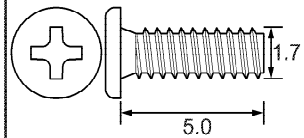

#13: M1.7 X 2.5 (Silver)
3-085-397-01

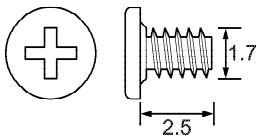

#14: M1.7 X 2.5 (Silver)
2-599-475-11

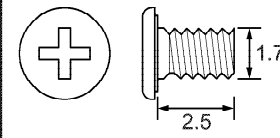

#15: M1.4 X 1.5 (Silver)
3-062-214-01

