


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION

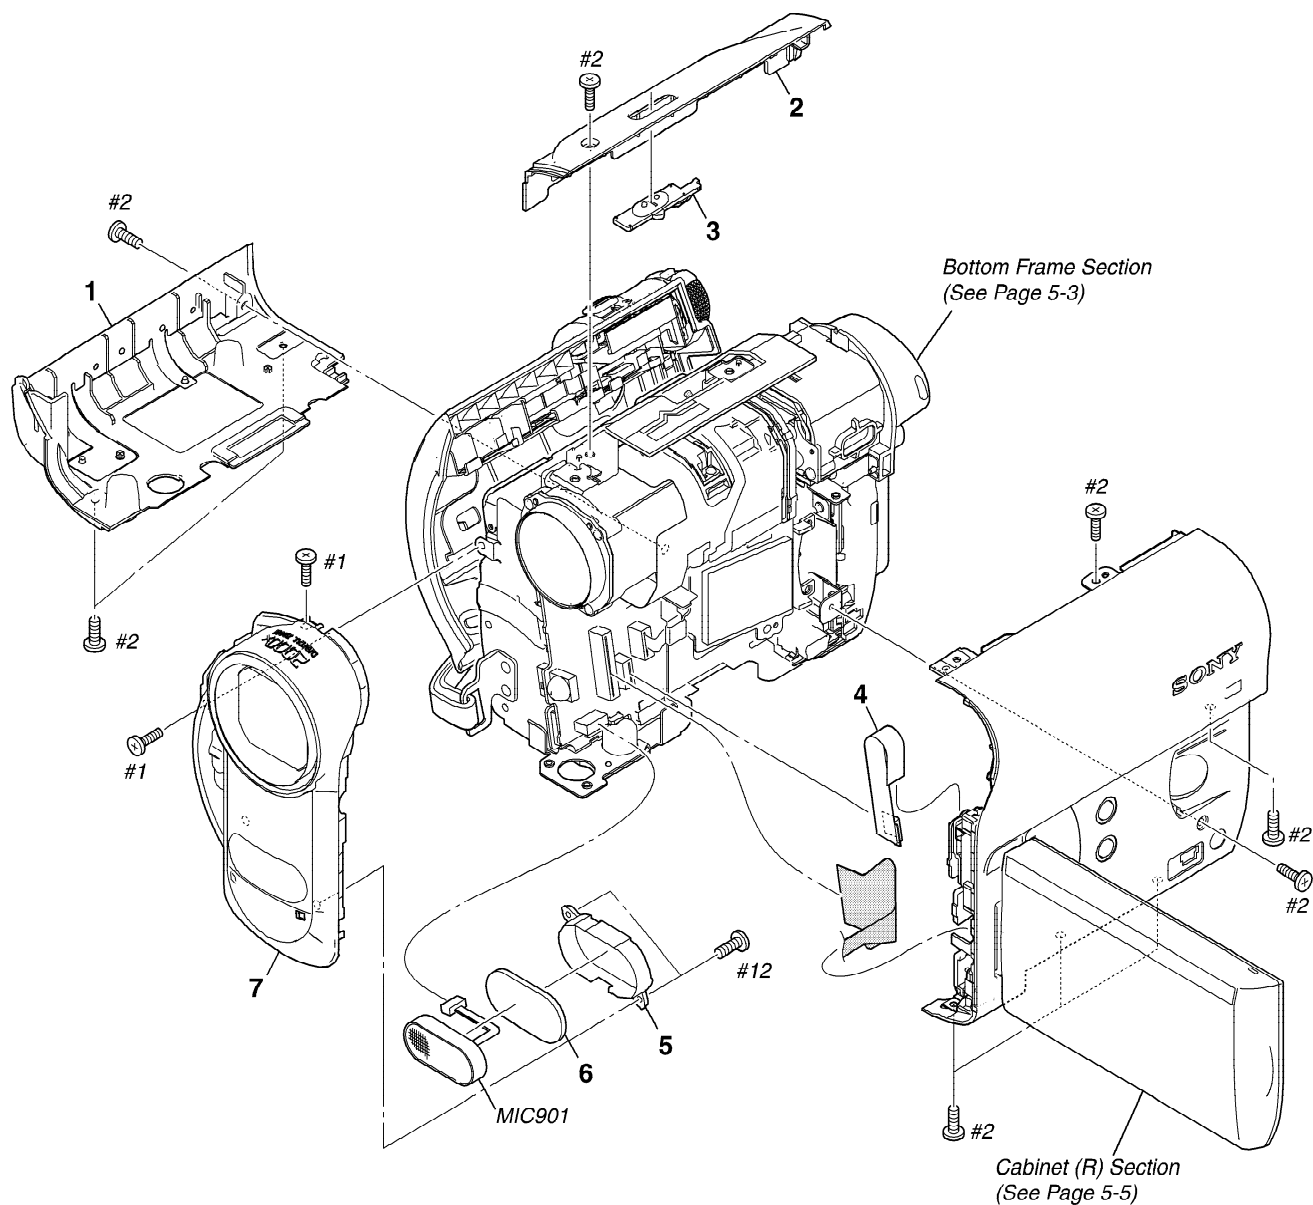

Ref. No.	Part No.	Description
1	2-899-764-21	CABINET (L)
2	3-271-259-01	CABINET (UPPER (2122))
3	2-899-772-11	KNOB (215), NS
4	1-833-206-11	CABLE, FLEXIBLE FLAT (FFC-085)
5	2-899-716-01	RETAINER, MICROPHONE
6	2-899-717-01	CUSHION, MICROPHONE


Ref. No.	Part No.	Description
7	X-2186-672-1	PANEL (2152) ASSY, F
MIC901	1-542-712-11	MICROPHONE UNIT
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. BOTTOM FRAME SECTION

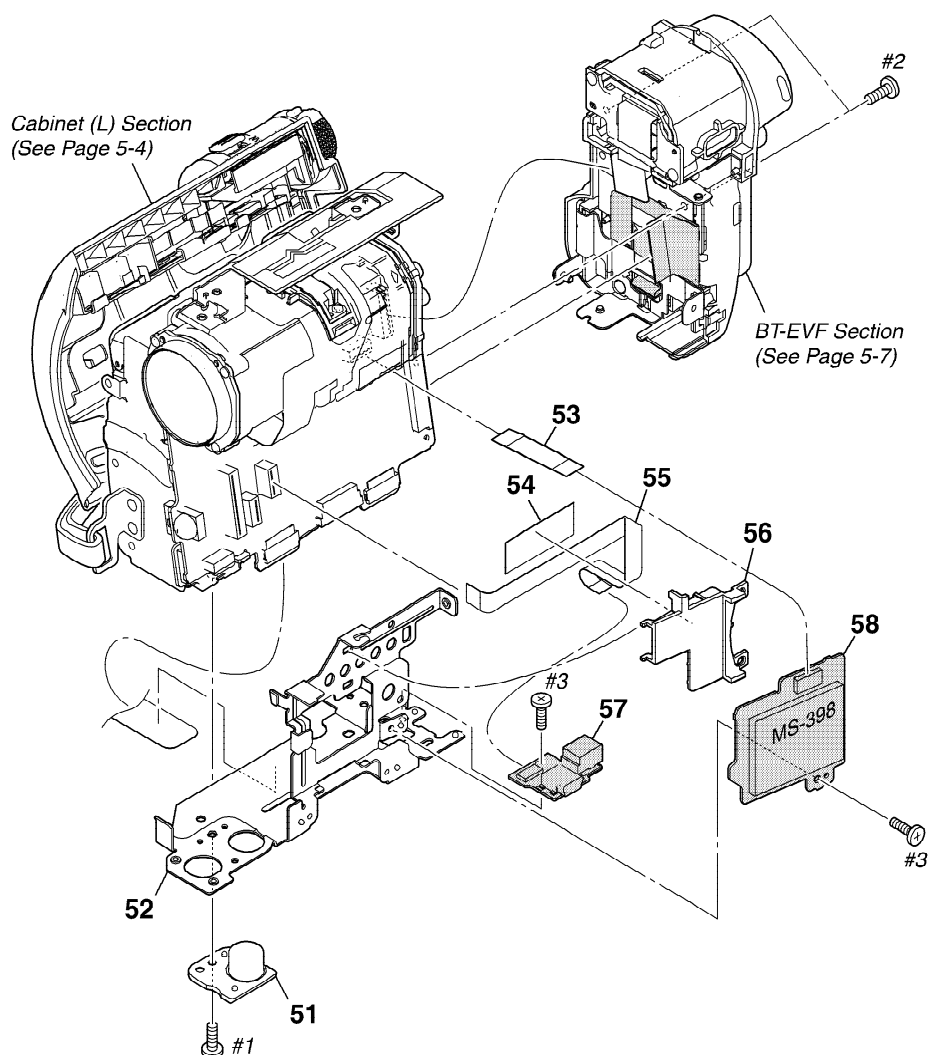

Ref. No.	Part No.	Description
51	2-899-769-01	SCREW, TRIPOD
* 52	2-899-767-01	FRAME, BOTTOM
53	1-833-210-11	CABLE, FLEXIBLE FLAT (FFC-089)
54	3-080-272-01	TAPE (A)
55	1-834-564-11	CABLE, FLEXIBLE FLAT (FFC-154)
56	2-899-768-01	CABINET, MS

Ref. No.	Part No.	Description
57	A-1438-784-A	JK-368 BOARD, COMPLETE
58	A-1438-788-A	MS-398 BOARD, COMPLETE
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1-3. CABINET (L) SECTION

ns: not supplied

Mechanism Deck Section
(See Page 5-8)

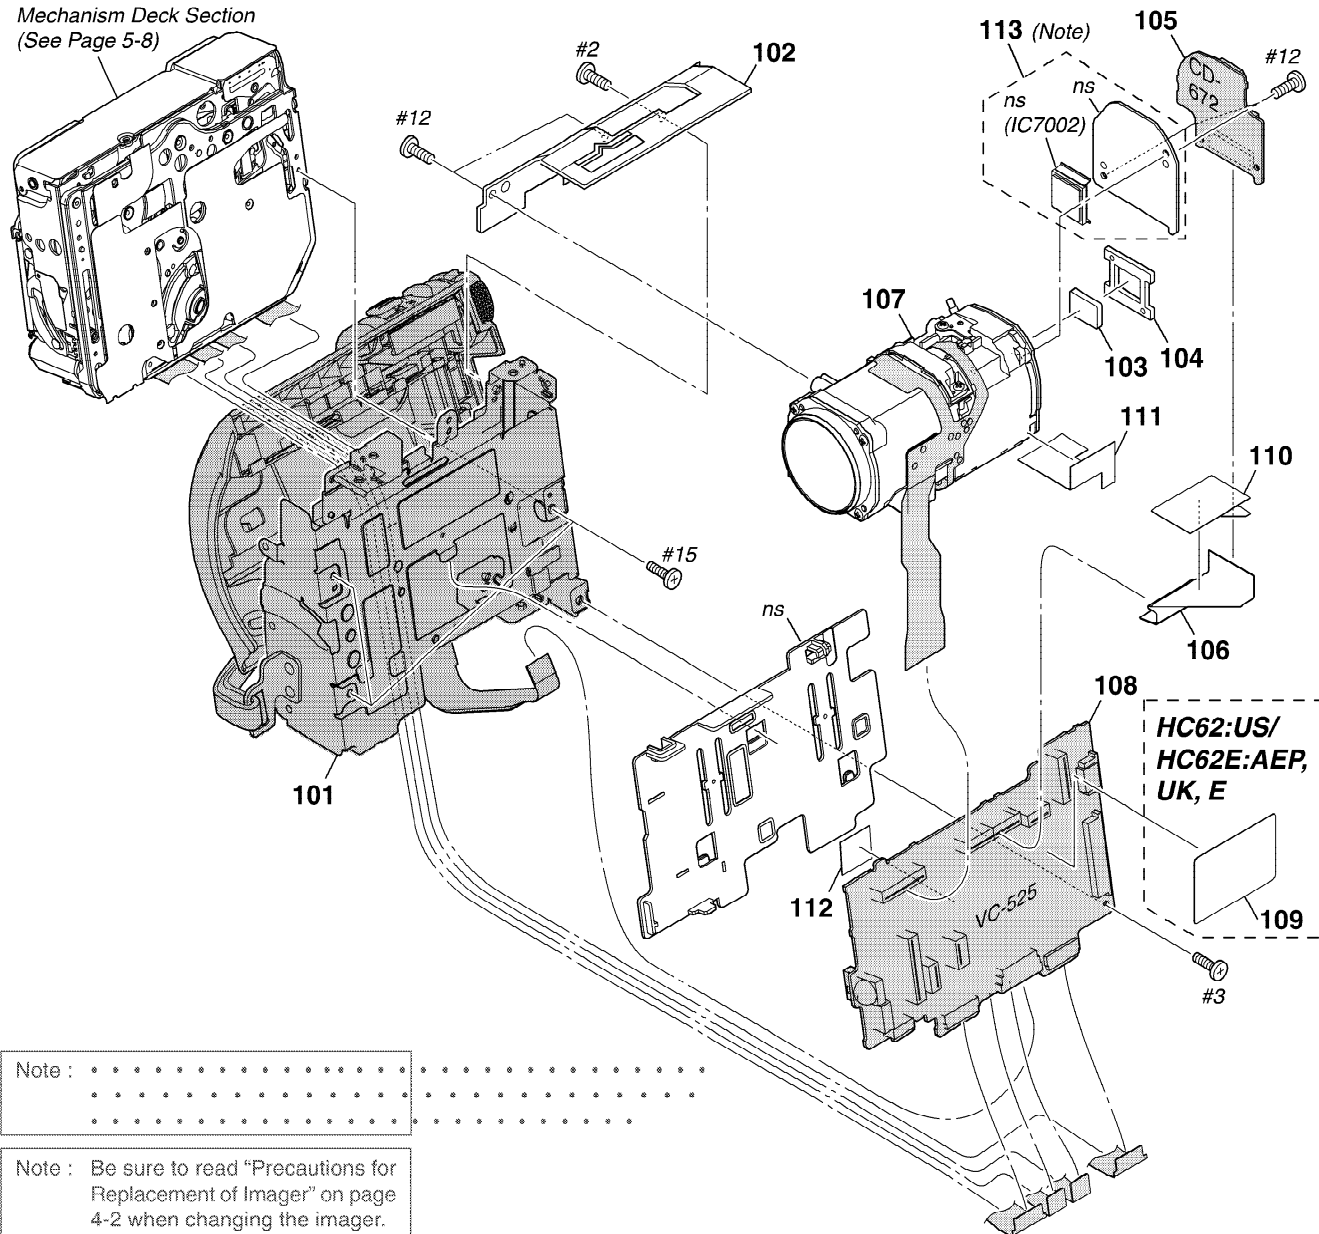

Note :

Note : Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

Ref. No.	Part No.	Description
101	1-479-928-51	KEY BLOCK, CONTROL (SS21200)
102	2-899-770-01	PLATE, NS CLICK
103	1-788-523-11	OPTICALFILTER BLOCK (OFB-06-11)
104	3-088-645-01	RUBBER (Z), SEAL
105	A-1212-400-A	CD-672 BOARD, COMPLETE
106	1-833-676-11	CABLE, FLEXIBLE FLAT (FFC-004)
107	A-1248-849-A	LENS (BLOCK ASSY 1180 (J1))
108	A-1444-215-A	VC-525 BOARD, COMPLETE
		(SERVICE) (HC62)
108	A-1444-216-A	VC-525 BOARD, COMPLETE
		(SERVICE) (HC62E)

Ref. No.	Part No.	Description
109	2-659-500-01	LABEL, FUSE REPLACEMENT CAUTION (HC62:US/HC62E:AEP, UK, E)
* 110	3-095-468-01	SHEET (CD (215)), COPY
* 111	3-095-521-01	SHEET/GUARD
* 112	3-286-828-01	SHEET (2152), VC
113	A-1216-665-A	CCD BLOCK ASSY (1M) (CCD IMAGER) (Note)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#15	3-062-214-01	SCREW (M1.4X1.5) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. CABINET (R) SECTION

ns: not supplied

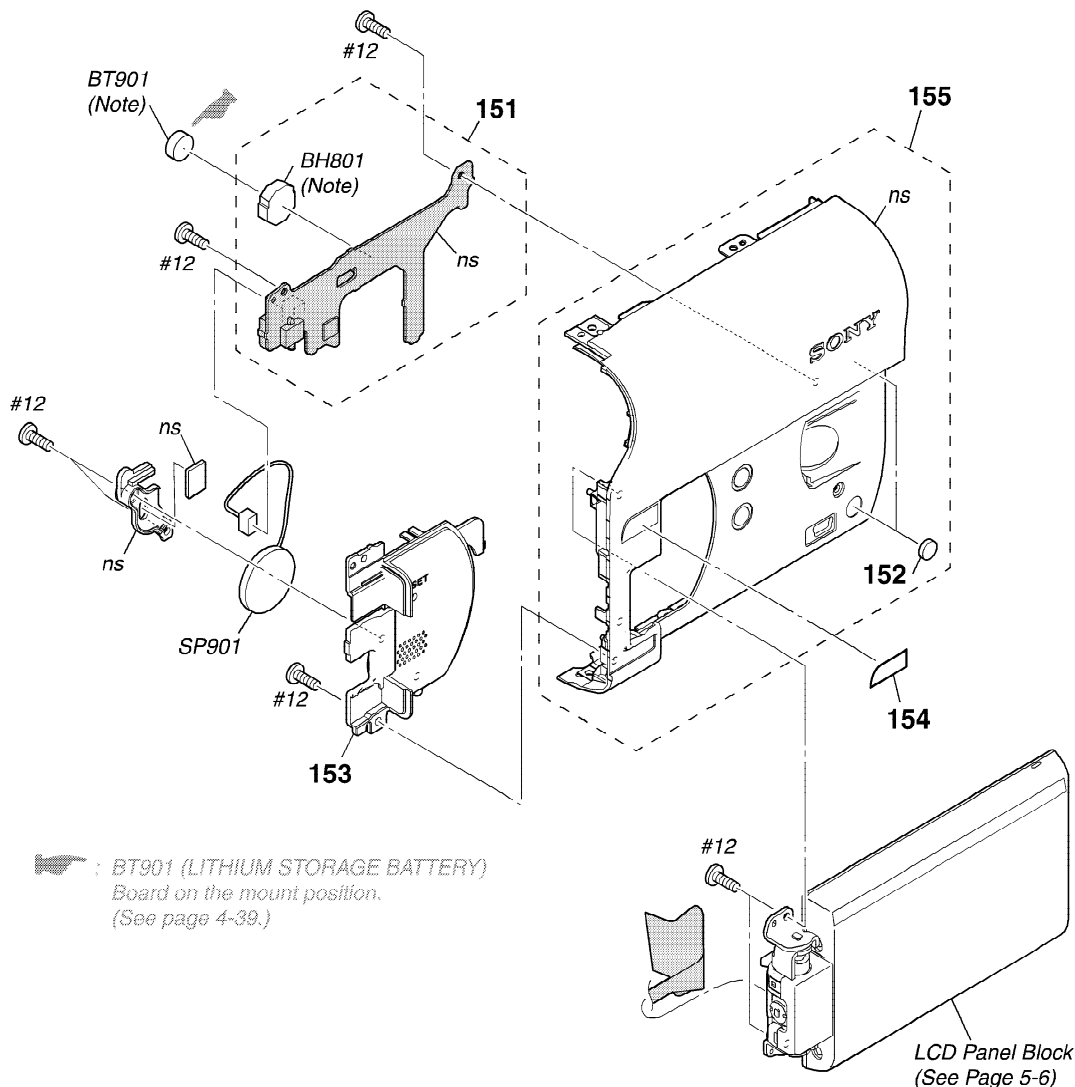

Note: Replace the battery holder (BH801) together when replacing the lithium storage battery (BT901) on the CF-112 board. (The battery holder removed once cannot be used again.) When mounting these parts, mount new battery holder first and attach new lithium storage battery next.

Note: CF-112基板のリチウム蓄電池(BT901)を交換する場合はバッテリーホルダ(BH801)も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム蓄電池を装着して下さい。

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
151	A-1438-787-A	CF-112 BOARD, COMPLETE
152	3-089-565-01	CUSHION (R), PANEL
153	X-2186-695-1	BLIND (2122) ASSY, HINGE
154	3-268-973-01	SHEET (R), MIRROR
155	X-2186-670-1	CABINET (R (2152)) ASSY


Ref. No.	Part No.	Description
△ BH801	1-756-615-41	HOLDER, BATTERY (Note)
△ BT901	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
SP901	1-825-260-51	LOUD SPEAKER (1.6CM)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. LCD PANEL BLOCK

ns: not supplied

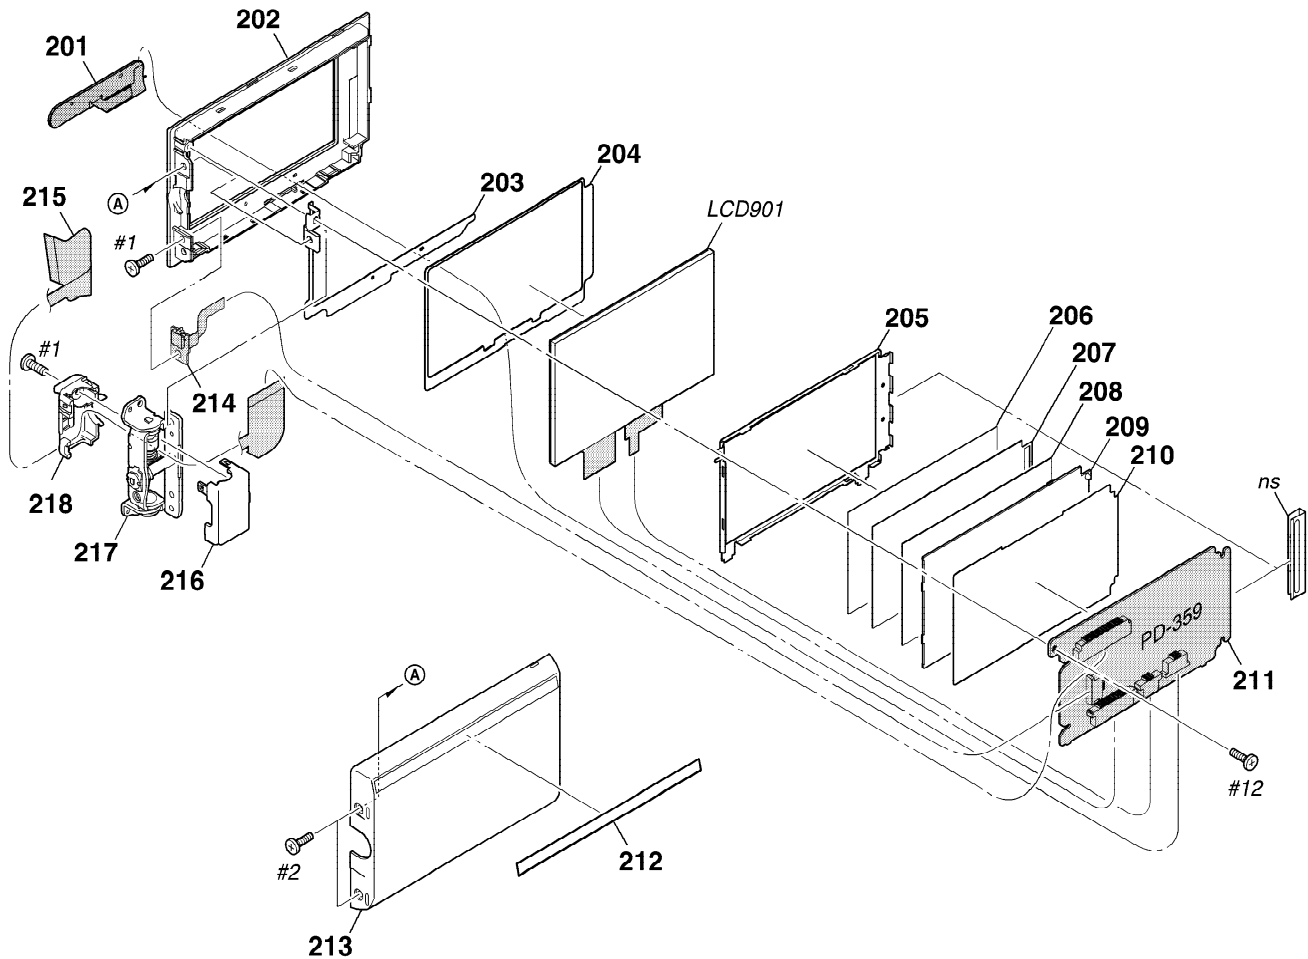


Ref. No.	Part No.	Description
201	1-478-984-11	KEY BLOCK, CONTROL (SB10600)
202	2-899-743-21	CABINET (M (215)), P
* 203	2-899-745-01	PLATE (215), LCD GROUND
* 204	2-899-747-01	CUSHION (2.7), TP
205	2-694-516-01	FRONT FRAME (2.7)
206	2-694-512-01	PRISM SHEET V (2.7)
207	2-694-513-01	PRISM SHEET H (2.7)
208	2-694-514-01	DIFFUSION SHEET (2.7)
209	2-666-801-01	LIGHT GUIDE (2.7)
210	2-694-515-01	REFLECTION SHEET (2.7)
211	A-1438-783-A	PD-359 BOARD, COMPLETE
212	3-268-972-21	SHEET (P), MIRROR

Ref. No.	Part No.	Description
213	3-271-260-11	CABINET (C (2122)), P
214	A-1153-842-A	FP-386 BOARD, COMPLETE
215	1-871-484-21	FP-625 FLEXIBLE BOARD
216	3-271-261-11	COVER (C (2122)), HINGE
217	X-2149-207-1	HINGE ASSY (M), PANEL
218	2-899-737-01	COVER (M), HINGE
LCD901	A-1363-617-A	TP BLOCK ASSY (27STMG08T)
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-6. BT-EVF SECTION

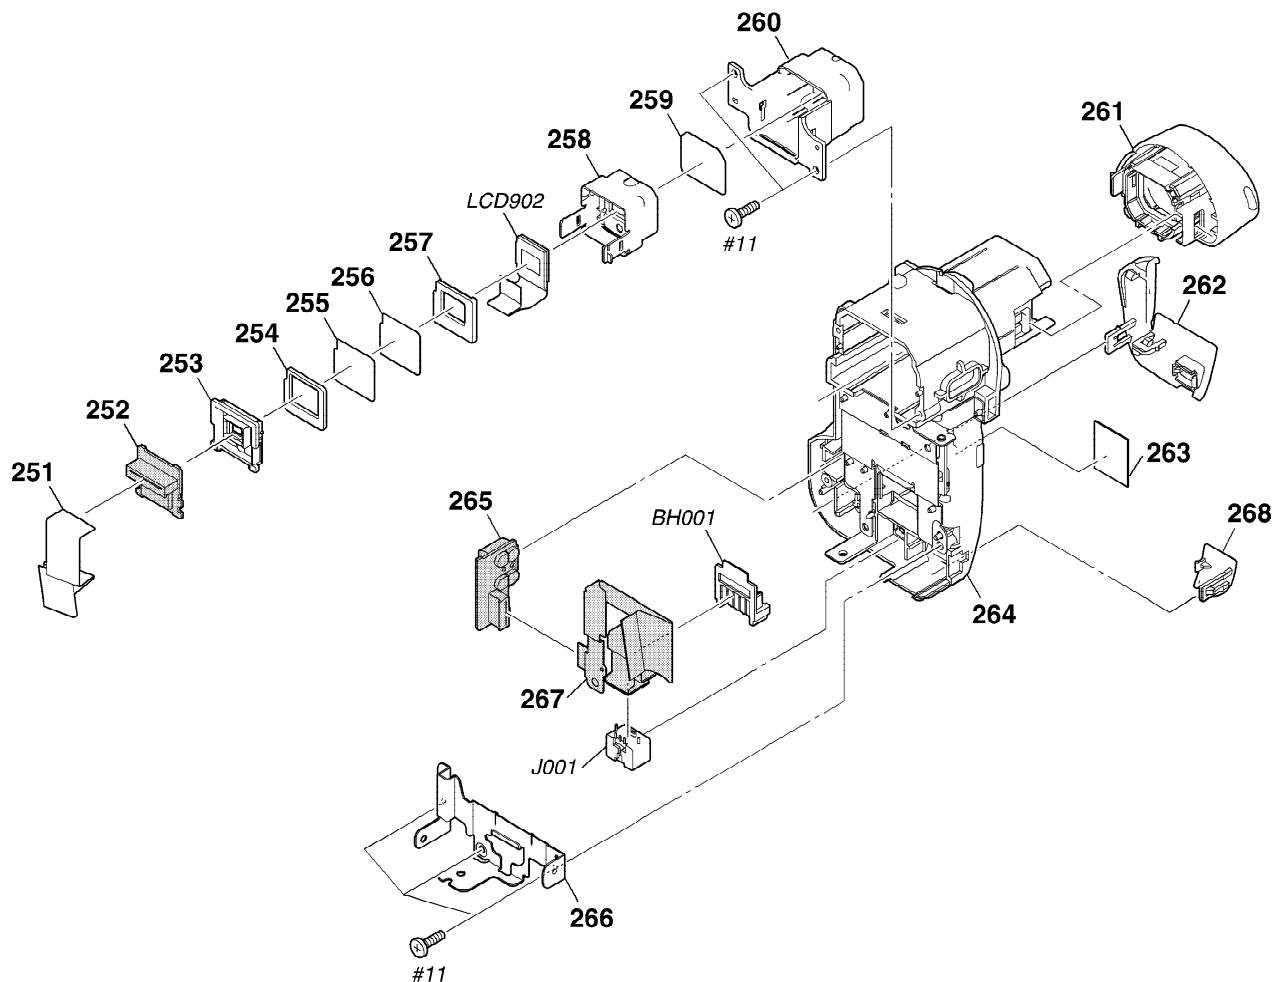


• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
* 251	1-833-205-11	CABLE, FLEXIBLE FLAT (FFC-084)	262	2-899-886-11	COVER, DC-AV
252	A-1438-785-A	LB-138 BOARD, COMPLETE	263	2-899-887-11	LID, CPC
253	2-664-672-01	GUIDE, LAMP	264	X-2188-329-1	BT-VF (2122) ASSY
* 254	2-638-819-01	CUSHION, LCD	265	A-1438-786-A	AV-126 BOARD, COMPLETE
* 255	2-638-818-01	ILLUMINATOR			
* 256	2-638-816-01	PLATE (TFT), DEFLECTION	266	2-899-661-01	FRAME, TERMINAL FIXED
257	2-664-671-01	SPACER, LCD	* 267	1-871-485-11	FP-626 FLEXIBLE BOARD
258	2-899-659-01	CAP (215), INNER	268	2-899-885-11	COVER, DV
259	2-899-660-01	PANEL (CF), POLARIZATION	△ BH001	1-780-064-21	BATTERY TERMINAL BOARD
260	2-899-657-01	CABINET, INNER	△ J001	1-815-792-11	CONNECTOR, DC-IN (7.2V)
			LCD902	8-753-241-14	LCX076AKE-1
261	X-2188-332-1	EYE CUP (2152) ASSY	#11	3-078-890-11	SCREW, TAPPING (Silver)

5. REPAIR PARTS LIST

5-1-7. MECHANISM DECK SECTION

ns: not supplied

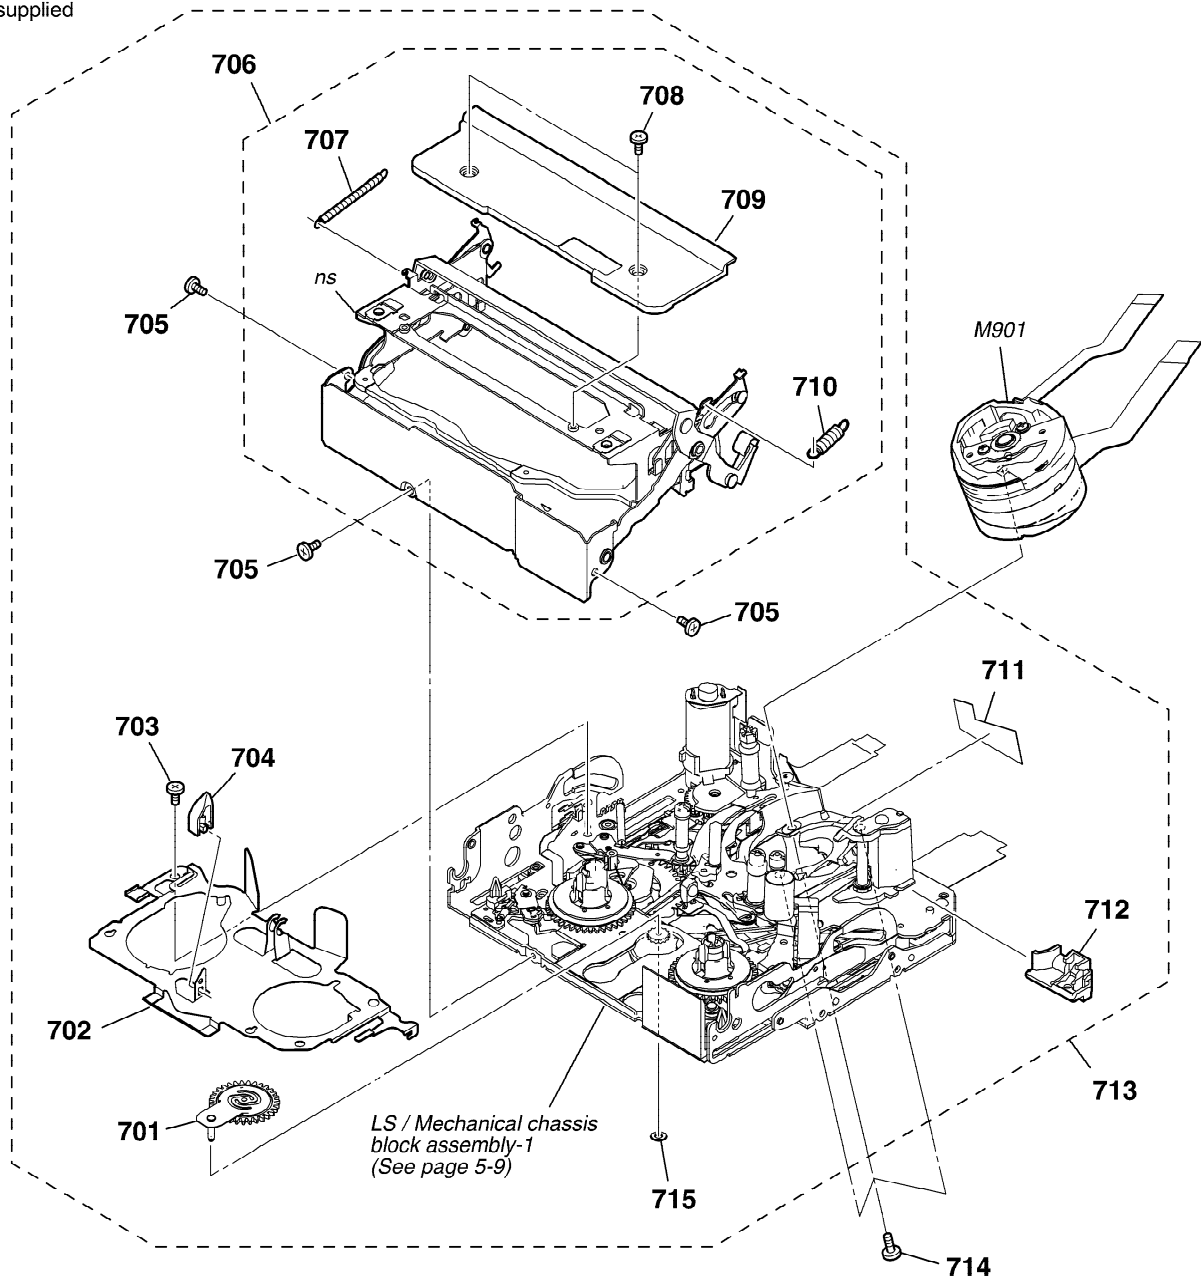


Ref. No.	Part No.	Description
701	X-2024-478-1	PENDULUM ASSY
702	2-342-917-02	BASE, LED
703	7-627-850-77	SCREW, PRECISION +P 1.4X1.8
704	3-079-366-11	RELEASE, REEL LOCK
705	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD
706	X-2024-450-3	CASSETTE COMPARTMENT ASSY
707	2-342-926-01	SPRING (ARM S), TENSION COIL
708	2-546-417-01	SCREW (M1.4X1.0)
709	2-342-933-02	PLATE, TOP

Ref. No.	Part No.	Description
710	2-342-927-01	SPRING (ARM T), TENSION COIL
711	2-541-585-01	SHEET, FLEXIBLE ADHESIVE
712	2-342-918-01	TG6 CATCHER
713	A-1437-006-A	MD (N220) SUB ASSY (S) A
714	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
715	3-315-414-31	WASHER
M901	A-1154-545-A	DRUM (DEH-33E-R)

5. REPAIR PARTS LIST

5-1-8. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-1

ns: not supplied

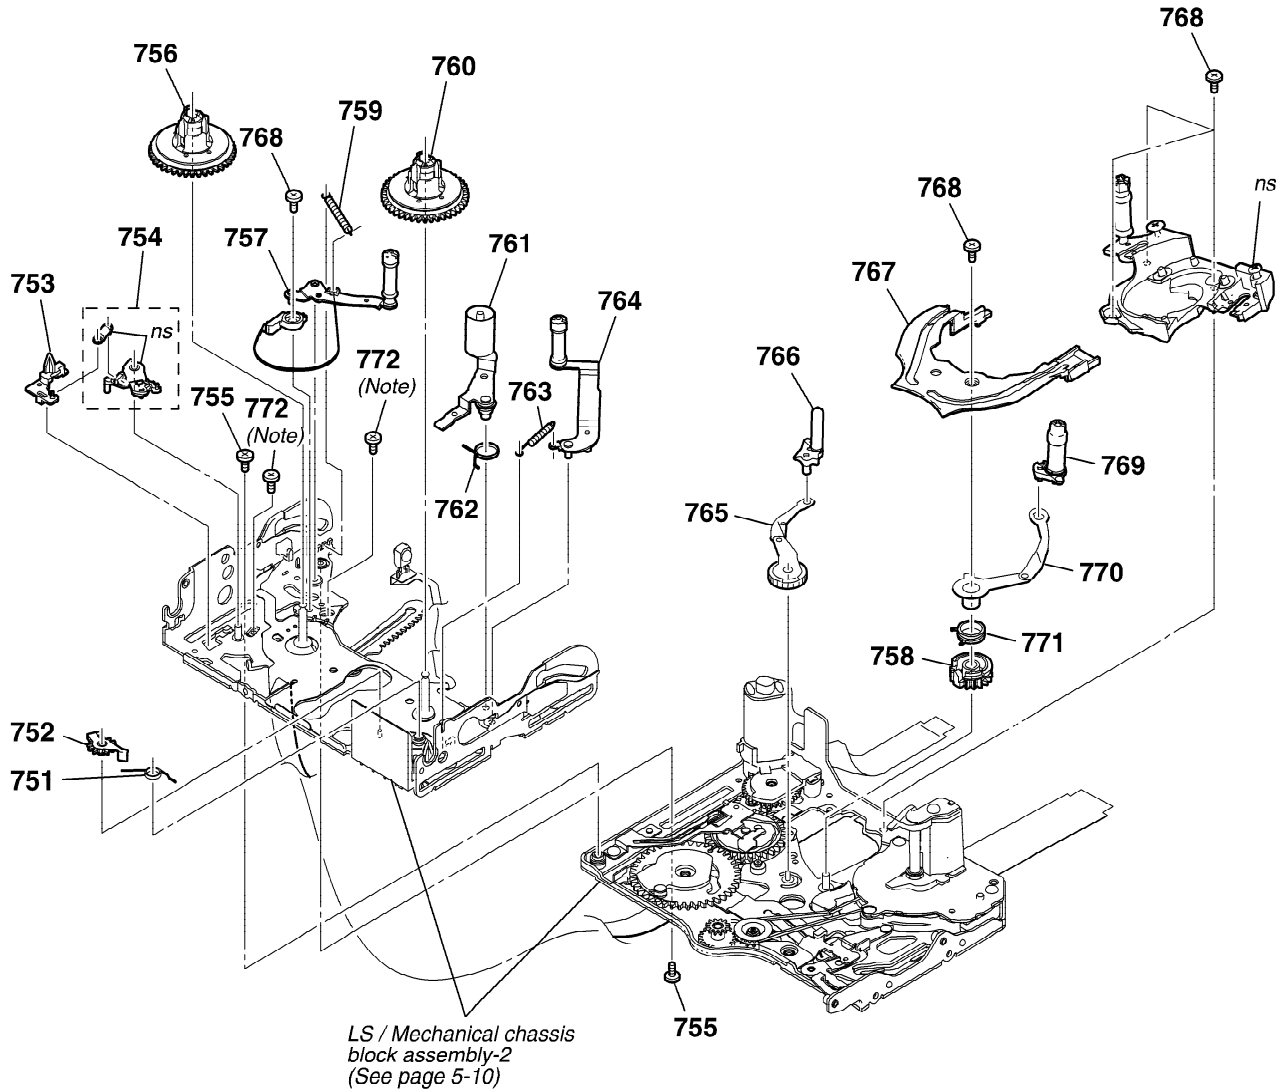


Note: These two screws are the fixing screws of the LS cam plate.
These two fixing screws are used for adjusting the LS cam plate position.
(refer to 4-2. LS cam adjustment of DV mechanical adjustment manual IX)

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
751	2-342-759-01	SPRING, RVS BRAKE	763	2-342-626-01	SPRING (RETURN TG6), EXTENSION
752	A-1083-005-A	BRAKE BLOCK ASSY, RVS	764	A-1083-002-A	BLOCK ASSY, TG6
753	2-342-731-01	POSITIONING, S	765	X-2024-468-1	ARM ASSY (S), GL
754	A-1083-006-A	BLOCK ASSY, S BRAKE			
755	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD	766	X-2024-465-1	COASTER (S) ASSY
			767	2-342-612-01	RAIL
756	X-2067-290-1	TABLE ASSY, S REEL	768	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
757	A-1132-279-A	REGULATOR BLOCK ASSY, TENSION	769	X-2024-466-1	COASTER (T) ASSY
758	2-342-705-01	GEAR (T), GL	770	X-2024-469-1	ARM (T) ASSY, GL
759	2-342-902-01	SPRING, TENSION REGULATOR			
760	X-2067-291-1	TABLE ASSY, T REEL	771	2-342-716-01	SPRING (T), TORSION COIL
			772	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD
761	X-2067-295-4	ARM ASSY, PINCH			(for adjustment) (Note)
762	2-342-906-01	SPRING (PINCH RETURN), TORSION			

5. REPAIR PARTS LIST

5-1-9. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-2

ns: not supplied

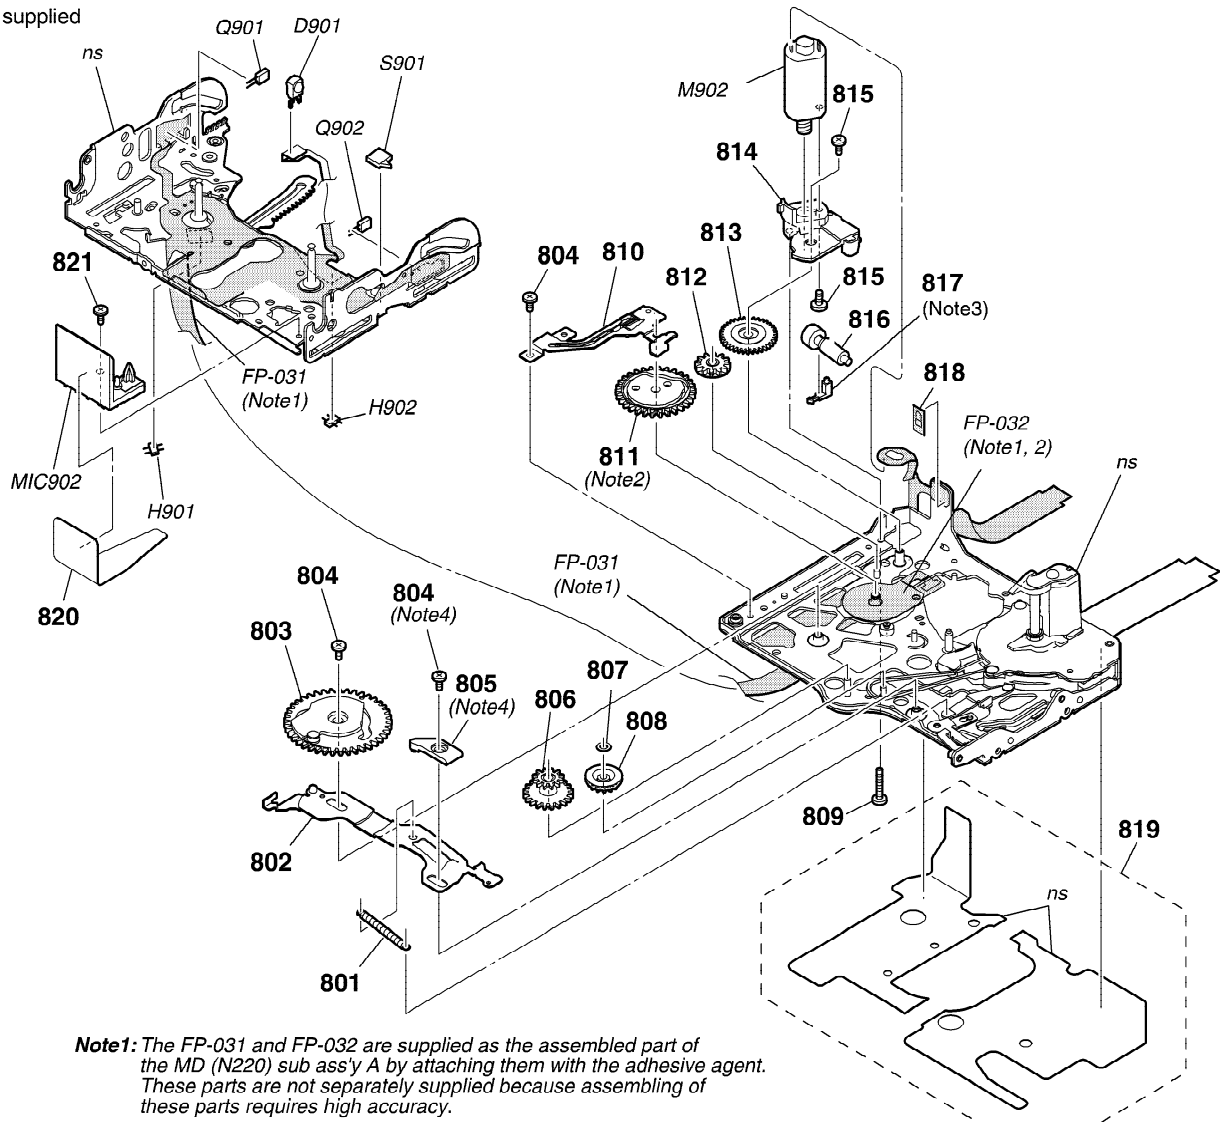

Note1: The FP-031 and FP-032 are supplied as the assembled part of the MD (N220) sub ass'y A by attaching them with the adhesive agent. These parts are not separately supplied because assembling of these parts requires high accuracy.

Note2: The mode switch (S903) function works when the contactor of the FP-032 contacts with the bottom surface of wiper of the mode gear ass'y.

Note3: When replacing the motor holder or the motor holder base, be sure to replace them together as a pair.

Note4: Some sets do not have this screw or the EJ lever retainer.
For the sets that have them, follow the installation procedure
3-30-2. Attachment procedure (page 40) of DV mechanical adjustment manual IX) for installation.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
801	2-342-624-01	SPRING (PINCH LIMITTER), EXTEN	818	1-677-049-11	FP-228 FLEXIBLE BOARD (DEW SENSOR)
802	X-2024-463-2	SLIDER ASSY, MODE	819	2-342-686-01	COVER, CAPSTAN
803	X-2024-462-3	GEAR ASSY, CAM	820	2-541-984-01	MIC COVER
804	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD (Note 4)			
805	2-342-625-01	RETAINER, LEVER EJ (Note 4)	821	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
806	2-342-621-01	GEAR, RELAY	D901	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
807	3-315-414-31	WASHER	H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL SENSOR)
808	2-342-620-01	GEAR, CONVERSION	H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL SENSOR)
809	3-084-377-01	HEAD (SCREW M1.2)	M902	X-2024-464-1	MOTOR ASSY (LOADING MOTOR)
810	X-2024-460-1	BASE ASSY, CAM	MIC902	1-818-576-11	PIN, CONNECTOR (WITH DETECTION) (4 PIN CONNECTOR)
811	X-2024-461-1	GEAR ASSY, MODE (Note 2)			
812	2-342-615-01	GEAR, NO.2	Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END SENSOR)
813	2-342-691-01	GEAR, NO.1	Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP SENSOR)
814	2-637-945-01	HOLDER, MOTOR	S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)
815	3-895-822-71	SCREW (M1.2X2), SPECIAL, 0			
816	2-342-689-01	WORM SHAFT (2J)			
817	2-637-947-01	BASE, MOTOR HOLDER (Note 3)			

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1438-786-A	AV-126 BOARD, COMPLETE *****
< CAPACITOR >		
C401	1-164-935-11	CERAMIC CHIP 470PF 10% 50V
C402	1-164-935-11	CERAMIC CHIP 470PF 10% 50V
< CONNECTOR >		
CN401	1-779-330-51	CONNECTOR, FFC/FPC 12P (A/V R)
CN402	1-815-794-13	CONNECTOR (MULTIPLE)
< FERRITE BEAD >		
FB401	1-500-238-11	BEAD, FERRITE (CHIP) (1608)
FB402	1-500-238-11	BEAD, FERRITE (CHIP) (1608)
A-1212-400-A CD-672 BOARD, COMPLETE *****		
(IC7002 (CCD imager) is not included in CD-672 complete board. Included in CCD block assy.)		
< CAPACITOR >		
C7002	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V
C7003	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V
C7005	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7006	1-100-591-91	CERAMIC CHIP 1uF 10% 25V
C7007	1-127-820-11	CERAMIC CHIP 4.7uF 10% 16V
C7010	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7011	1-165-875-11	CERAMIC CHIP 10uF 10% 10V
C7015	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7016	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7017	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7018	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7023	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C7024	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7025	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7026	1-100-251-11	CERAMIC CHIP 0.047uF 10% 10V
C7027	1-100-251-11	CERAMIC CHIP 0.047uF 10% 10V
C7028	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7029	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
< CONNECTOR >		
CN7001	1-820-586-51	CONNECTOR, FFC/FPC 28P
< FERRITE BEAD >		
FB7001	1-400-331-11	FERRITE, EMI (SMD) (1005)
< IC >		
IC7002	(Not supplied)	IC ICX617AKF-H (CCD IMAGER) (Note 1) (IC7002 is supplied including in CCD block assy.)
IC7003	8-759-489-19	IC uPC6756GR-8JG-E2
< COIL >		
L7001	1-400-588-11	INDUCTOR 10uH
L7002	1-400-588-11	INDUCTOR 10uH

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
< TRANSISTOR >		
* Q7001	6-551-766-01	TRANSISTOR UNR32A3G0LS0
Q7002	8-729-055-21	TRANSISTOR 2SC5096-O/R (TE85L)
< RESISTOR >		
R7002	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R7004	1-218-965-11	RES-CHIP 10K 5% 1/16W
R7005	1-218-953-11	RES-CHIP 1K 5% 1/16W
R7006	1-218-966-11	RES-CHIP 12K 5% 1/16W
R7013	1-218-965-11	RES-CHIP 10K 5% 1/16W
R7014	1-218-989-11	RES-CHIP 1M 5% 1/16W
R7015	1-218-989-11	RES-CHIP 1M 5% 1/16W
R7016	1-218-965-11	RES-CHIP 10K 5% 1/16W

< COMPOSITION CIRCUIT BLOCK >

* RB7001	1-234-379-21	RES, NETWORK 22K (1005X4)
< SENSOR >		
* SE7001	1-479-022-61	SENSOR, ANGULAR VELOCITY (32.2KHz) (YAW)
* SE7002	1-479-022-51	SENSOR, ANGULAR VELOCITY (30.8KHz) (PITCH)

A-1438-787-A CF-112 BOARD, COMPLETE *****

(BT901 (LITHIUM STORAGE BATTERY) and SP901 (SPEAKER) are not included in CF-112 complete board.)

< SPEAKER >

SP901	1-825-260-51	LOUD SPEAKER (1.6CM)
-------	--------------	----------------------

< BATTERY HOLDER >

△ BH801	1-756-615-41	HOLDER, BATTERY (Note 2)
---------	--------------	--------------------------

< BATTERY >

△ BT901	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note 2)
---------	--------------	------------------------------------

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Note 1: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

Note 1: イメージャの交換時は4-3ページの「イメージャ交換時の注意」を必ずお読みください。

Note 2: Replace the battery holder (BH801) together when replacing the lithium storage battery (BT901) on the CF-112 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium storage battery next.

Note 2: CF-112基板のリチウム蓄電池 (BT901) を交換する場合はバッテリーホルダ (BH801) も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム蓄電池を装着して下さい。

CF-112

FP-031

FP-032

FP-228

FP-386

FP-625

FP-626

JK-368

LB-138

Ref. No.	Part No.	Description
< CONNECTOR >		
CN801	1-794-057-11	PIN, CONNECTOR (PC BOARD) 2P
* CN802	1-766-646-51	CONNECTOR, FFC/FPC 10P
< DIODE >		
* D801	6-501-573-01	DIODE CL-271TLY-C-TS (CHG)
< RESISTOR >		
R801	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R802	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
< SWITCH >		
S801	1-786-157-31	TACTILE SWITCH (RESET)
S802	1-786-157-31	TACTILE SWITCH (DISP/BATT INFO)
S803	1-786-157-31	TACTILE SWITCH (EASY)
* S804	1-786-545-41	SWITCH, PUSH LEVER (S) (PANEL OPEN/CLOSE)
S805	1-786-157-31	TACTILE SWITCH (BACKLIGHT)
(Not supplied) FP-031 FLEXIBLE BOARD *****		
(This flexible board is included in MD (N220) sub assy (S) A (A-1437-006-A).)		
< DIODE >		
D901	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
< HOLE ELEMENT >		
H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL SENSOR)
H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL SENSOR)
< CONNECTOR >		
MIC902	1-818-576-11	PIN, CONNECTOR (WITH DETECTION) (4 PIN CONNECTOR)
< TRANSISTOR >		
Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END SENSOR)
Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP SENSOR)
< SWITCH >		
S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)
(Not supplied) FP-032 FLEXIBLE BOARD *****		
(This flexible board with S903 is included in MD (N220) sub assy A (A-1437-006-A).)		
1-677-049-11 FP-228 FLEXIBLE BOARD (DEW SENSOR) *****		
(This flexible board is included in MD (N220) sub assy (S) A (A-1437-006-A).)		
A-1153-842-A FP-386 FLEXIBLE BOARD, COMPLETE *****		

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
< SWITCH >		
S101	1-786-180-31	SWITCH, PUSH (1KEY) (PANEL REVERSE)
1-871-484-21 FP-625 FLEXIBLE BOARD *****		
(There isn't mounted electrical parts in FP-625 flexible board.)		
* 1-871-485-11 FP-626 FLEXIBLE BOARD *****		
(BH001 and J001 are not included in FP-626 flexible board.)		
< BATTERY TERMINAL BOARD >		
△ BH001	1-780-064-21	BATTERY TERMINAL BOARD
< JACK >		
△ J001	1-815-792-11	CONNECTOR, DC-IN (7.2V) (DC IN)
A-1438-784-A JK-368 BOARD, COMPLETE *****		
< CONNECTOR >		
* CN101	1-818-043-51	CONNECTOR, FFC/FPC 10P
* CN103	1-794-276-21	CONNECTOR, SQUARE TYPE 4P (DV)
CN104	1-819-436-11	CONNECTOR (SQUARE TYPE) (USB) 5P (USB)
< DIODE >		
D101	8-719-069-29	DIODE RB520S-30FJTE61
< COMPOSITION CIRCUIT BLOCK >		
RB101	1-234-378-11	RES, NETWORK 10K (1005X4)
A-1438-785-A LB-138 BOARD, COMPLETE *****		
(LCD902 is not included in LB-138 complete board.)		
< LIQUID CRYSTAL DISPLAY >		
LCD902	8-753-241-14	LCX076AKE-1
< CAPACITOR >		
C301	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C302	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C303	1-164-505-11	CERAMIC CHIP 2.2uF 10% 16V
< CONNECTOR >		
* CN301	1-779-334-51	CONNECTOR, FFC/FPC 20P
* CN302	1-817-560-71	CONNECTOR, FPC (ZIP) 21P
< DIODE >		
* D301	6-501-591-01	DIODE NESW007AT-T099 (BACKLIGHT)
* D302	6-501-955-01	DIODE MAZS056G08S0
< RESISTOR >		
R301	1-216-841-11	METAL CHIP 47K 5% 1/10W

Ref. No.	Part No.	Description
	A-1438-788-A	MS-398 BOARD, COMPLETE *****
		< CONNECTOR >
CN601	1-817-913-41	MEMORY STICK DUO CONNECTOR 10P
* CN602	1-816-643-51	FFC/FPC CONNECTOR (LIF) 10P
		< DIODE >
D601	6-501-216-01	DIODE CL-271HR-C-TS (MS ACCESS)
		< RESISTOR >
R601	1-218-941-81	RES-CHIP 100 5% 1/16W

A-1438-783-A PD-359 BOARD, COMPLETE

(LCD901 is not included in PD-359 complete board.)

		< LIQUID CRYSTAL DISPLAY >
LCD901	A-1363-617-A	TP BLOCK ASSY (27STMG08T)
		< CAPACITOR >
C6302	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6303	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6304	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6305	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6306	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
		< CONNECTOR >
* CN6301	1-818-072-51	CONNECTOR, FFC/FPC (ZIF) 30P
* CN6302	1-573-915-51	CONNECTOR, FFC/FPC (ZIF) 6P
* CN6303	1-573-915-51	CONNECTOR, FFC/FPC (ZIF) 6P
* CN6304	1-818-069-51	CONNECTOR, FFC/FPC (ZIF) 6P
CN6305	1-818-071-51	CONNECTOR, FFC/FPC (ZIF) 24P
		< DIODE >
* D6302	6-501-955-01	DIODE MAZS056G08S0
* D6303	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
* D6304	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
* D6305	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
		< TRANSISTOR >
Q6301	8-729-427-67	TRANSISTOR XP421F-TXE
Q6302	8-729-427-37	TRANSISTOR XP411F-TXE
* Q6303	6-551-836-01	TRANSISTOR 2SA2078G0LS0
		< RESISTOR >
R6302	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R6303	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R6304	1-218-959-11	RES-CHIP 3.3K 5% 1/16W
R6305	1-218-961-11	RES-CHIP 4.7K 5% 1/16W
R6307	1-218-978-11	RES-CHIP 120K 5% 1/16W
R6309	1-218-989-11	RES-CHIP 1M 5% 1/16W
		< VARISTOR >
* VD6301	1-802-279-11	VARISTOR (SMD)
* VD6302	1-802-279-11	VARISTOR (SMD)

Ref. No.	Part No.	Description
* VD6303	1-802-279-11	VARISTOR (SMD)
* VD6304	1-802-279-11	VARISTOR (SMD)

Electrical parts list of the VC-525 board is not shown.
Pages 5-14 to 5-20 are not shown.

• EXCEPT J MODEL

 
Checking supplied accessories.

to J MODEL




Power Cord

- △ 1-783-952-61 (AR)
- △ 1-790-107-61 (US, CND)
- △ 1-792-549-41 (JE)
- △ 1-824-910-71 (AEP, NE, EE, E:NTSC (Latin America), E:PAL)
- △ 1-827-269-12 (UK)
- △ 1-833-892-21 (KR)
- △ 1-834-852-11 (E:NTSC (EXCEPT Latin America))



AC Adaptor
(AC-L200/L200B)
* Compatible in L200 and L200B.
△ 1-479-285-21

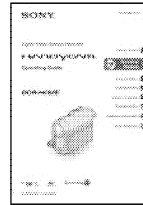

Operating Guide
(DCR-HC62)

 
- 3-278-985-11 (ENGLISH) (US, CND, E:NTSC)
- 3-278-985-21 (FRENCH) (CND)
- 3-278-985-31 (SPANISH) (AR, E:NTSC)
- 3-278-985-51 (TRADITIONAL CHINESE) (E:NTSC)
- 3-278-985-61 (KOREAN) (KR)



Conversion (2P) Adaptor
△ 1-569-008-12 (E:NTSC (Latin America))



Conversion (2P) Adaptor
△ 1-569-007-12 (JE, E: NTSC (Except Latin America))



CD-ROM
"Handycam Application Software"
3-286-479-01



 
Wireless Remote Commander
(RMT-831)
1-478-495-41




A/V Connecting Cable
1-823-156-51



USB Cable
1-829-868-31



DVD-ROM
"ENJOY HANDYCAM"
3-282-264-01 (KR)
ENGLISH/KOREA/JAPANESE
3-282-264-11 (US, CND, AR, E)
ENGLISH/FRENCH/SPANISH/PORTUGUESE
3-282-264-21 (UK, NE, EE)
ENGLISH/RUSSIAN/GERMAN/TURKISH
3-282-264-31 (AEP)
ENGLISH / SPANISH / PORTUGUESE / ITALIAN
3-282-264-41 (AEP)
ENGLISH / FRENCH / GERMAN / DUTCH
3-282-264-61 (E)
ENGLISH / FRENCH / SIMPLIFIED CHINESE / TRADITIONAL CHINESE
3-282-264-71 (E)
ENGLISH / TRADITIONAL CHINESE / SPANISH / PORTUGUESE

 

Rechargeable Battery Pack
(NP-FH40)
△ A-1201-658-A (US, CND)
△ A-1201-659-B (EXCEPT US, CND)

Operating Guide
(DCR-HC62E)

- 3-278-986-11 (ENGLISH) (AEP, UK, JE, E:PAL)
- 3-278-986-21 (FRENCH) (AEP)
- 3-278-986-31 (GERMAN) (AEP)
- 3-278-986-41 (DUTCH) (AEP)
- 3-278-986-51 (SPANISH) (AEP)
- 3-278-986-61 (PORTUGUESE) (AEP)
- 3-278-986-71 (ITALIAN) (AEP)
- 3-278-986-81 (GREEK) (AEP)
- 3-278-986-91 (RUSSIAN) (NE, JE)
- 3-286-463-11 (SWEDISH) (NE)
- 3-286-463-21 (DANISH) (NE)
- 3-286-463-31 (FINNISH) (NE)
- 3-286-463-41 (UKRAINIAN) (NE)
- 3-286-463-51 (POLISH) (EE)
- 3-286-463-61 (CZECH) (EE)
- 3-286-463-71 (HUNGARIAN) (EE)
- 3-286-463-81 (SLOVAK) (EE)
- 3-286-463-91 (TURKISH) (EE)
- 3-286-464-11 (SIMPLIFIED CHINESE) (JE, E:PAL)
- 3-286-464-51 (ARABIC) (E:PAL)
- 3-286-464-61 (PERSIAN) (E:PAL)


• Refer to page 5-1 for mark △.

• J MODEL


付属品




電源コード
△ 1-792-549-41

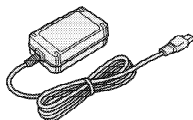

ACアダプター
(AC-L200/L200B)
* L200とL200Bには
互換性があります。
△ 1-479-285-21

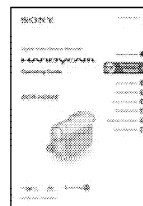


取扱説明書
3-278-985-01 (日本語)

 


リチャージブルバッテリーパック
(NP-FH40)
△ A-1201-657-A



 ワイヤレスリモコン
(RMT-831)
1-478-495-41



 CD-ROM
“Handycam Application Software”
3-286-479-01



USB ケーブル
1-829-868-31



A/V 接続ケーブル
1-823-156-51



DVD-ROM
“エンジョイハンディカム”
3-282-264-01
英語/韓国語/日本語

• △マークについては、5-1ページを参照して下さい。