

5. REPAIR PARTS LIST


5-1. EXPLODED VIEWS

5-1-1. OVERALL ASSEMBLY-1

ns: not supplied

DISASSEMBLY

HARDWARE LIST

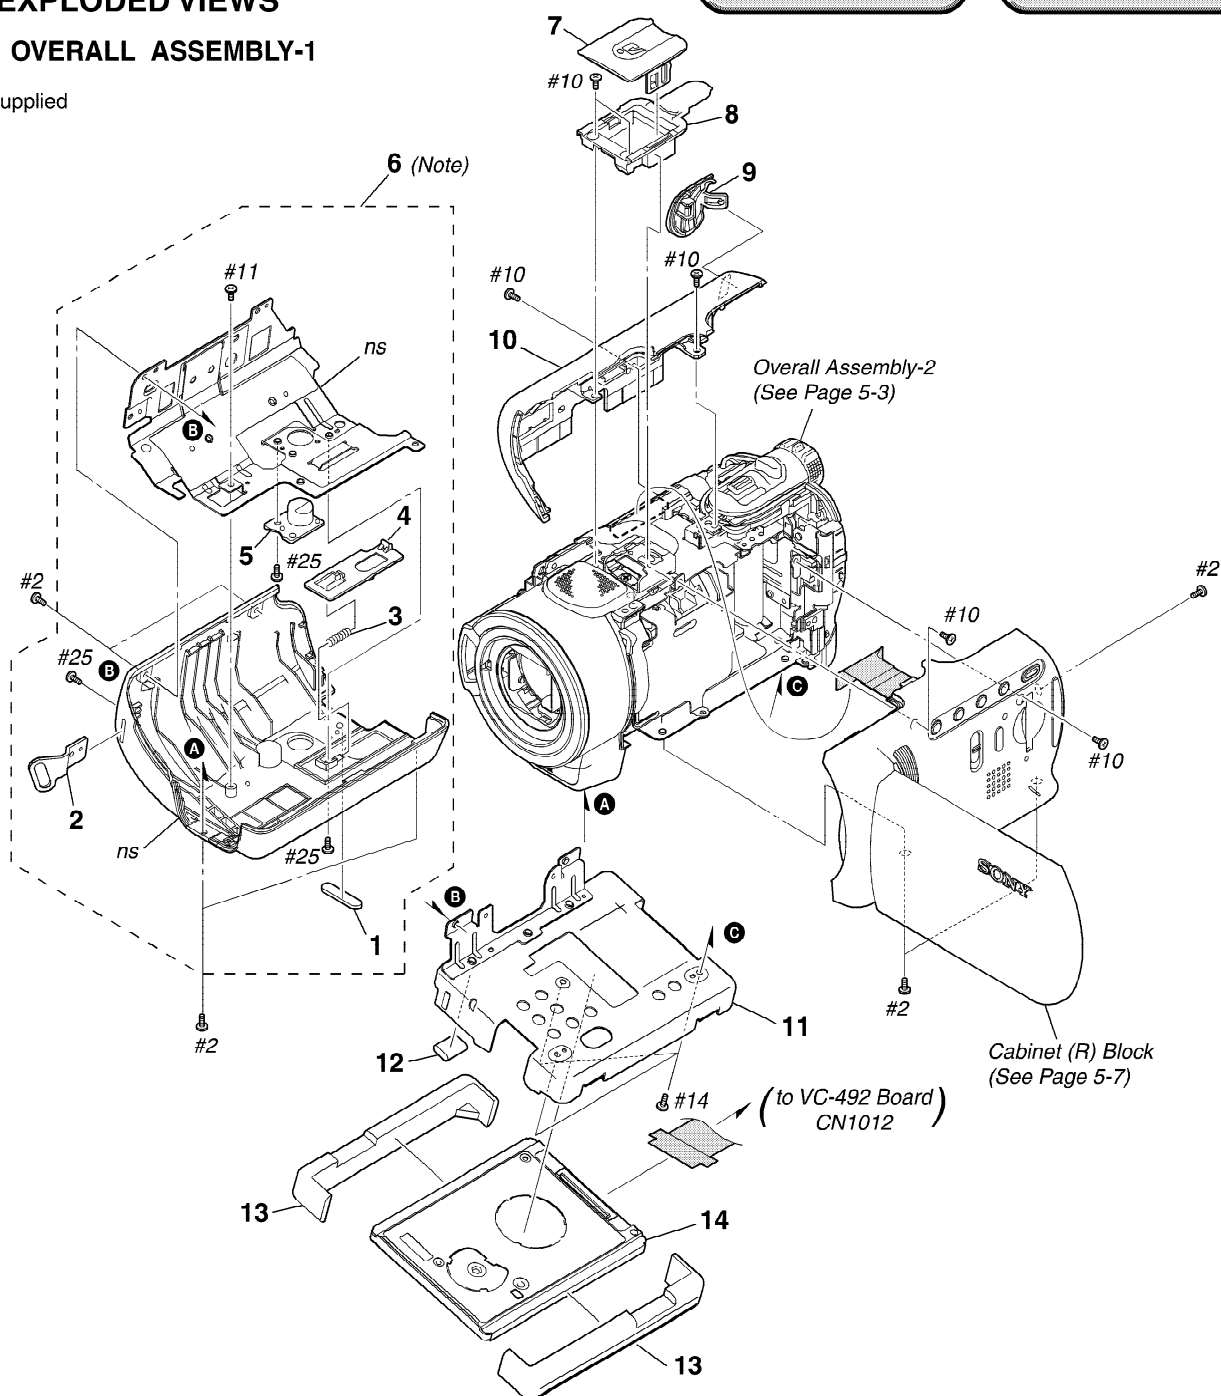

Note : キャビネットボトム交換時は1-7ページの“キャビネットボトム交換時の注意”を参照してください。

Note : Refer to page 1-7 “Precaution on replacing the cabinet bottom” when changing the bottom.

Ref. No.	Part No.	Description
* 1	3-098-251-01	FOOT, RUBBER
* 2	3-098-250-01	SHEET METAL (FRONT), BELT
* 3	3-098-252-01	SPRING, BT LOCK
* 4	3-098-248-01	KNOB, BT RELEASE
5	2-664-982-01	SCREW, TRIPOD
6	(Note)	BOTTOM, CABINET
7	3-098-321-01	COVER (2370), SHOE
8	3-098-616-01	CABINET (2370), SHOE
9	3-098-158-01	COVER, JACK
10	X-2177-094-1	CABINET (L (2370)) ASSY (SR290E/SR300/SR300C/SR300E)


Ref. No.	Part No.	Description
10	X-2177-095-1	CABINET (L (2360)) ASSY (SR190E/SR200/SR200C/SR200E)
11	X-2177-028-1	CASE ASSY, HD
* 12	3-098-173-01	GASKET (A)
13	3-098-175-01	DAMPER (07), DM
14	1-797-808-11	HDD (MK4009GAL-40GB) (EXCEPT SR200C/SR300C)
14	1-797-867-11	HDD (MK1011GAH-100GB) (SR200C/SR300C)
#2	2-635-562-31	SCREW (M1.7) (Black)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)
#25	2-635-562-21	SCREW (M1.7) (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. OVERALL ASSEMBLY-2

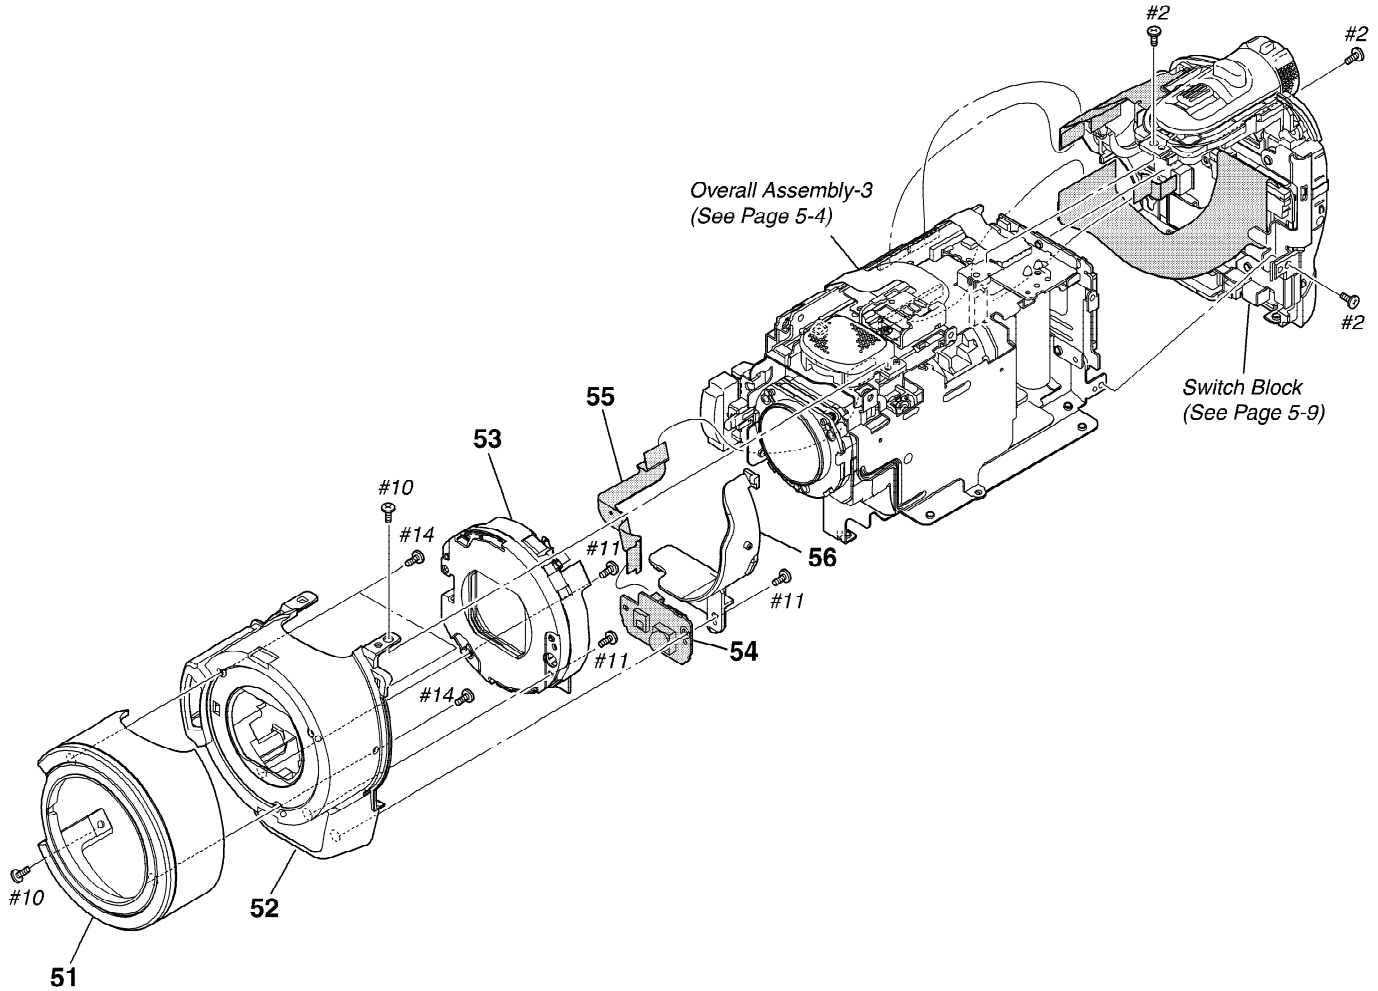

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
51	3-098-630-01	RING (2370), FRONT (SR300: J)	53	A-1217-971-A	LENS BARRIER UNIT
51	3-098-630-11	RING (2370), FRONT (SR290E/SR300: EXCEPT J/SR300C/SR300E)	54	A-1244-513-A	FR-264 BOARD, COMPLETE
51	3-098-630-21	RING (2370), FRONT (SR190E/SR200/SR200C/SR200E)	55	1-871-466-11	FP-619 FLEXIBLE BOARD
52	X-2177-098-1	PANEL (2370) ASSY, F (SR290E/SR300/SR300C/SR300E)	* 56	3-098-629-01	RETAINER, BARRIER FLEXIBLE
52	X-2177-099-1	PANEL (2360) ASSY, F (SR190E/SR200/SR200C/SR200E)	#2	2-635-562-31	SCREW (M1.7) (Black)
			#10	2-599-475-31	SCREW (M1.7) (Silver)
			#11	3-078-890-11	SCREW, TAPPING (Silver)
			#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. OVERALL ASSEMBLY-3

ns: not supplied

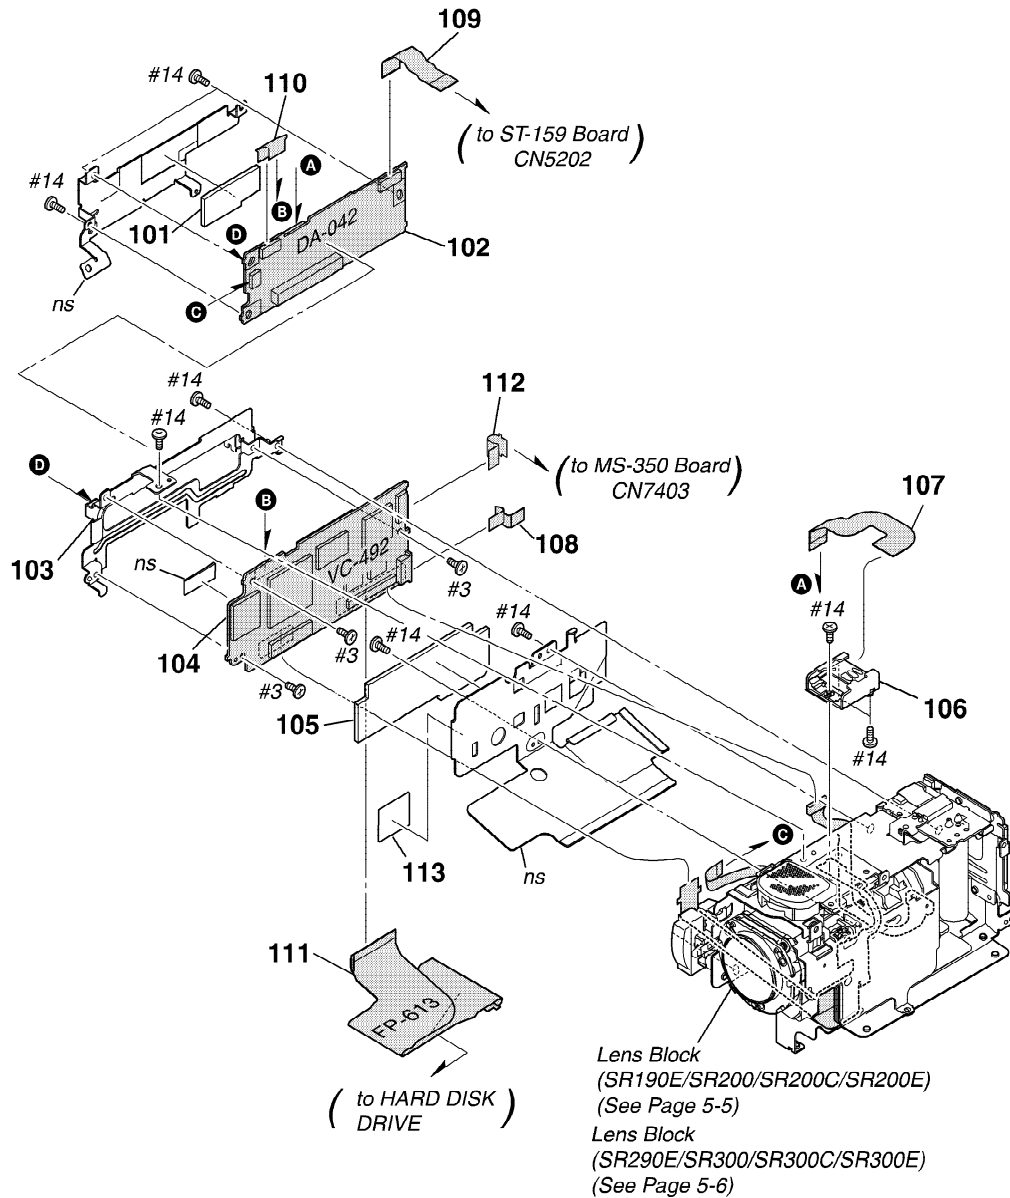

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
* 101	3-098-627-01	SHEET (2370), DA RADIATION	106	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
102	A-1244-916-A	DA-042 BOARD, COMPLETE	107	1-871-454-11	FP-607 FLEXIBLE BOARD
* 103	3-098-610-01	BRACKET (2370), VC	108	1-871-463-11	FP-616 FLEXIBLE BOARD
104	A-1244-943-A	VC-492 BOARD, COMPLETE (SERVICE) (SR300/SR300C)	109	1-871-455-11	FFC-608 FLEXIBLE FLAT CABLE
104	A-1244-944-A	VC-492 BOARD, COMPLETE (SERVICE) (SR300E)	110	1-871-465-11	FP-618 FLEXIBLE BOARD
104	A-1244-945-A	VC-492 BOARD, COMPLETE (SERVICE) (SR290E)	111	1-871-460-11	FP-613 FLEXIBLE BOARD
104	A-1244-946-A	VC-492 BOARD, COMPLETE (SERVICE) (SR200/SR200C)	112	1-871-462-11	FP-615 FLEXIBLE BOARD
104	A-1244-947-A	VC-492 BOARD, COMPLETE (SERVICE) (SR200E)	* 113	3-100-660-01	SHEET (2370), FRAME RADITATION
104	A-1244-948-A	VC-492 BOARD, COMPLETE (SERVICE) (SR190E)	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
* 105	3-098-626-01	SHEET (2370), VC RADIATION	#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. LENS BLOCK (SR190E/SR200/SR200C/SR200E)

ns: not supplied

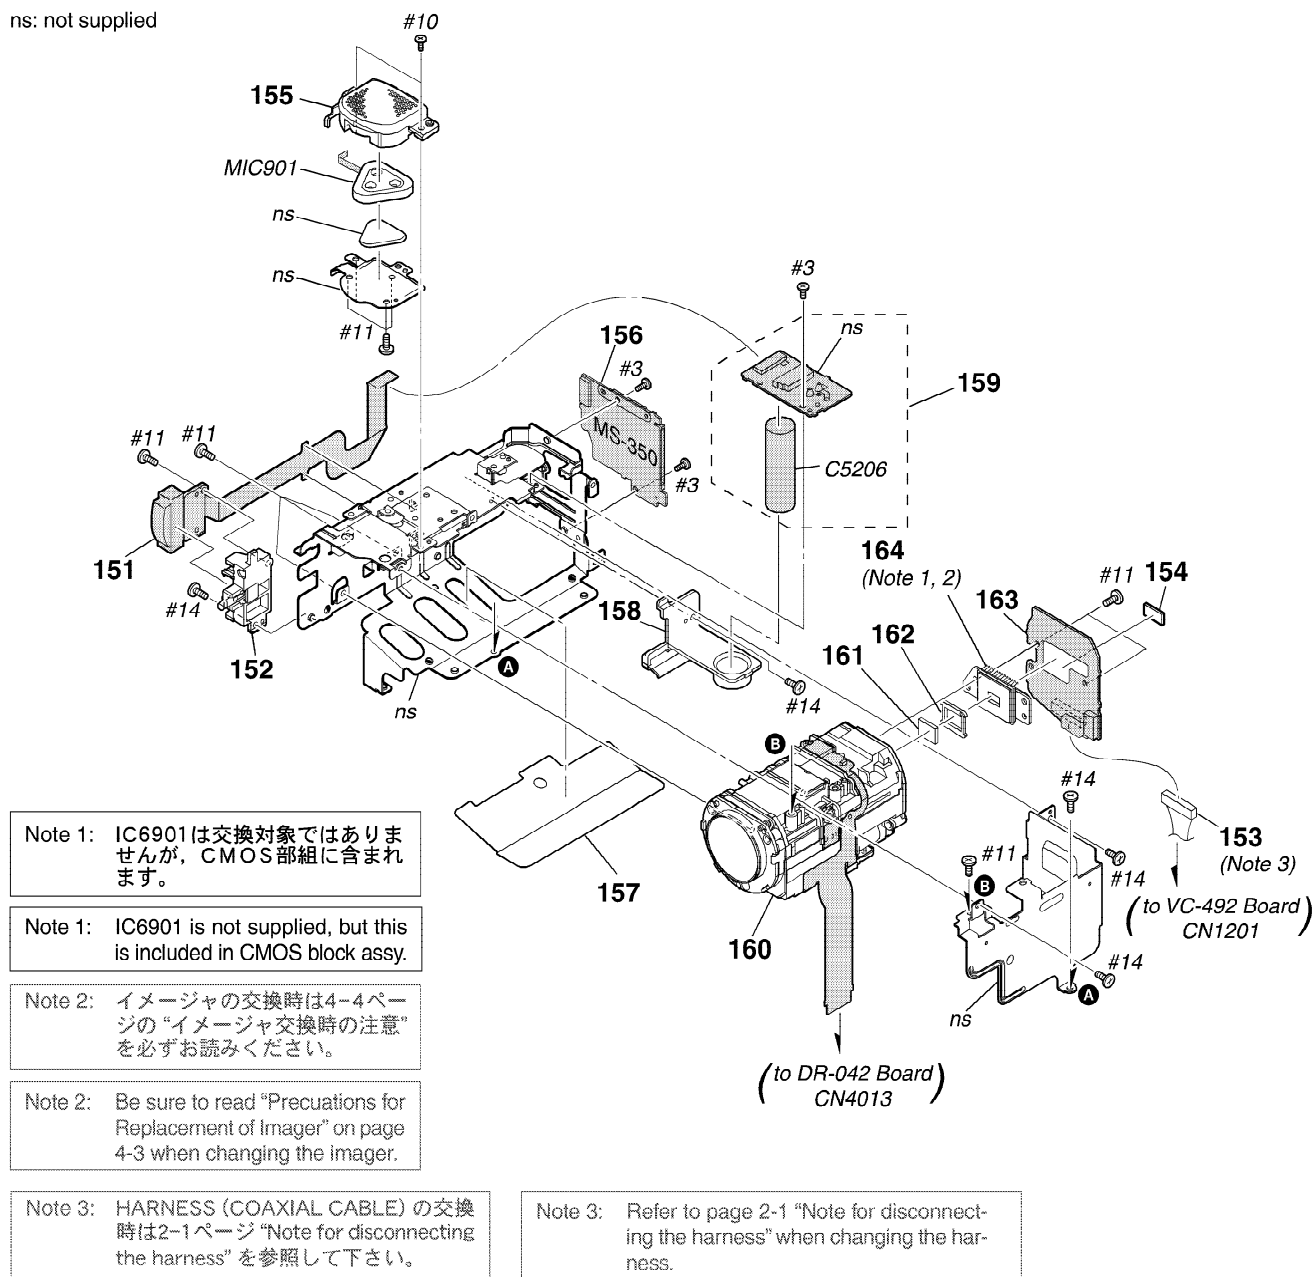

- Refer to page 5-1 for mark $\triangle$.

Ref. No.	Part No.	Description
▲ 151	1-479-888-21	FLASH UNIT
152	X-2176-859-1	HOLDER ASSY, ST
153	1-965-258-21	HARNES (COAXIAL CABLE) (Note 3)
* 154	3-098-625-01	SHEET (2370), CM RADIATION
155	X-2177-092-1	GRILLE (2370) ASSY, MICROPHONE
156	A-1244-913-A	MS-350 BOARD, COMPLETE
* 157	3-098-631-01	SHEET, LENS FLEXIBLE PROTECTION
* 158	3-098-609-01	HOLDER, CAPACITOR
159	A-1244-921-A	ST-159 BOARD, COMPLETE
160	8-848-825-01	DEVICE, LENS LSV-942C

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
161	1-788-382-11	OPTICAL FILTERBLOCK (OFB-03-26)
162	2-629-086-01	RUBBER (871), SEAL
163	A-1231-932-A	CM-076 BOARD, COMPLETE
164	A-1172-742-A	CMOS BLOCK ASSY (CMOS IMAGER) (Note 1,2)
<u>△</u> C5206	1-112-766-11	ELECT 70uF 99% 330V
MIC901	1-542-711-31	MICROPHONE UNIT
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. LENS BLOCK (SR290E/SR300/SR300C/SR300E)

ns: not supplied

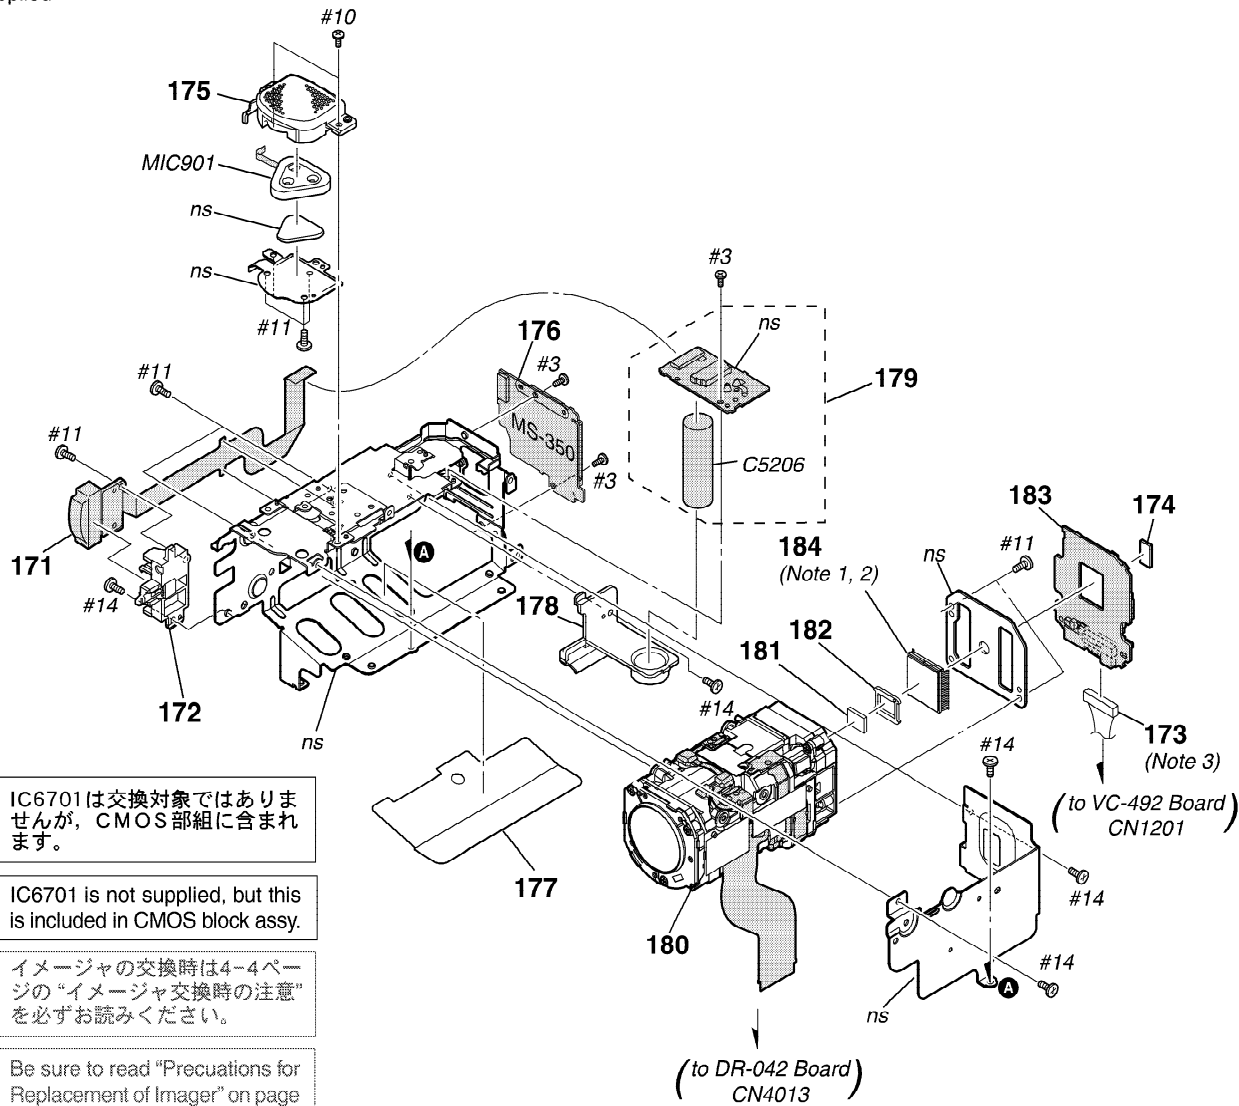

Note 1: IC6701は交換対象ではありませんが、CMOS部組に含まれます。

Note 1: IC6701 is not supplied, but this is included in CMOS block assy.

Note 2: イメージャの交換時は4-4ページの“イメージャ交換時の注意”を必ずお読みください。

Note 2: Be sure to read “Precuations for Replacement of Imager” on page 4-3 when changing the imager.

Note 3: HARNESS (COAXIAL CABLE) の交換時は2-1ページ “Note for disconnecting the harness” を参照して下さい。

Note 3: Refer to page 2-1 “Note for disconnecting the harness” when changing the harness.

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
△ 171	1-479-888-21	FLASH UNIT
172	X-2176-859-1	HOLDER ASSY, ST
173	1-965-256-11	HARNESS (COAXIAL CABLE) (Note 3)
* 174	3-098-625-01	SHEET (2370), CM RADIATION
175	X-2177-092-1	GRILLE (2370) ASSY, MICROPHONE
176	A-1244-913-A	MS-350 BOARD, COMPLETE
* 177	3-098-631-01	SHEET, LENS FLEXIBLE PROTECTION
* 178	3-098-609-01	HOLDER, CAPACITOR
179	A-1244-921-A	ST-159 BOARD, COMPLETE
180	A-1227-735-A	LSV-1190A (SERVICE)

Ref. No.	Part No.	Description
181	1-788-558-11	FILTER BLOCK, OPTICAL
182	2-698-010-01	RUBBER (1190), SEAL
183	A-1237-309-A	CM-077 BOARD, COMPLETE (SERVICE)
184	A-1209-688-A	CMOS BLOCK ASSY (CMOS IMAGER) (Note 1,2)
△ C5206	1-112-766-11	ELECT 70uF 99% 330V
MIC901	1-542-711-31	MICROPHONE UNIT
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. CABINET (R) BLOCK

ns: not supplied

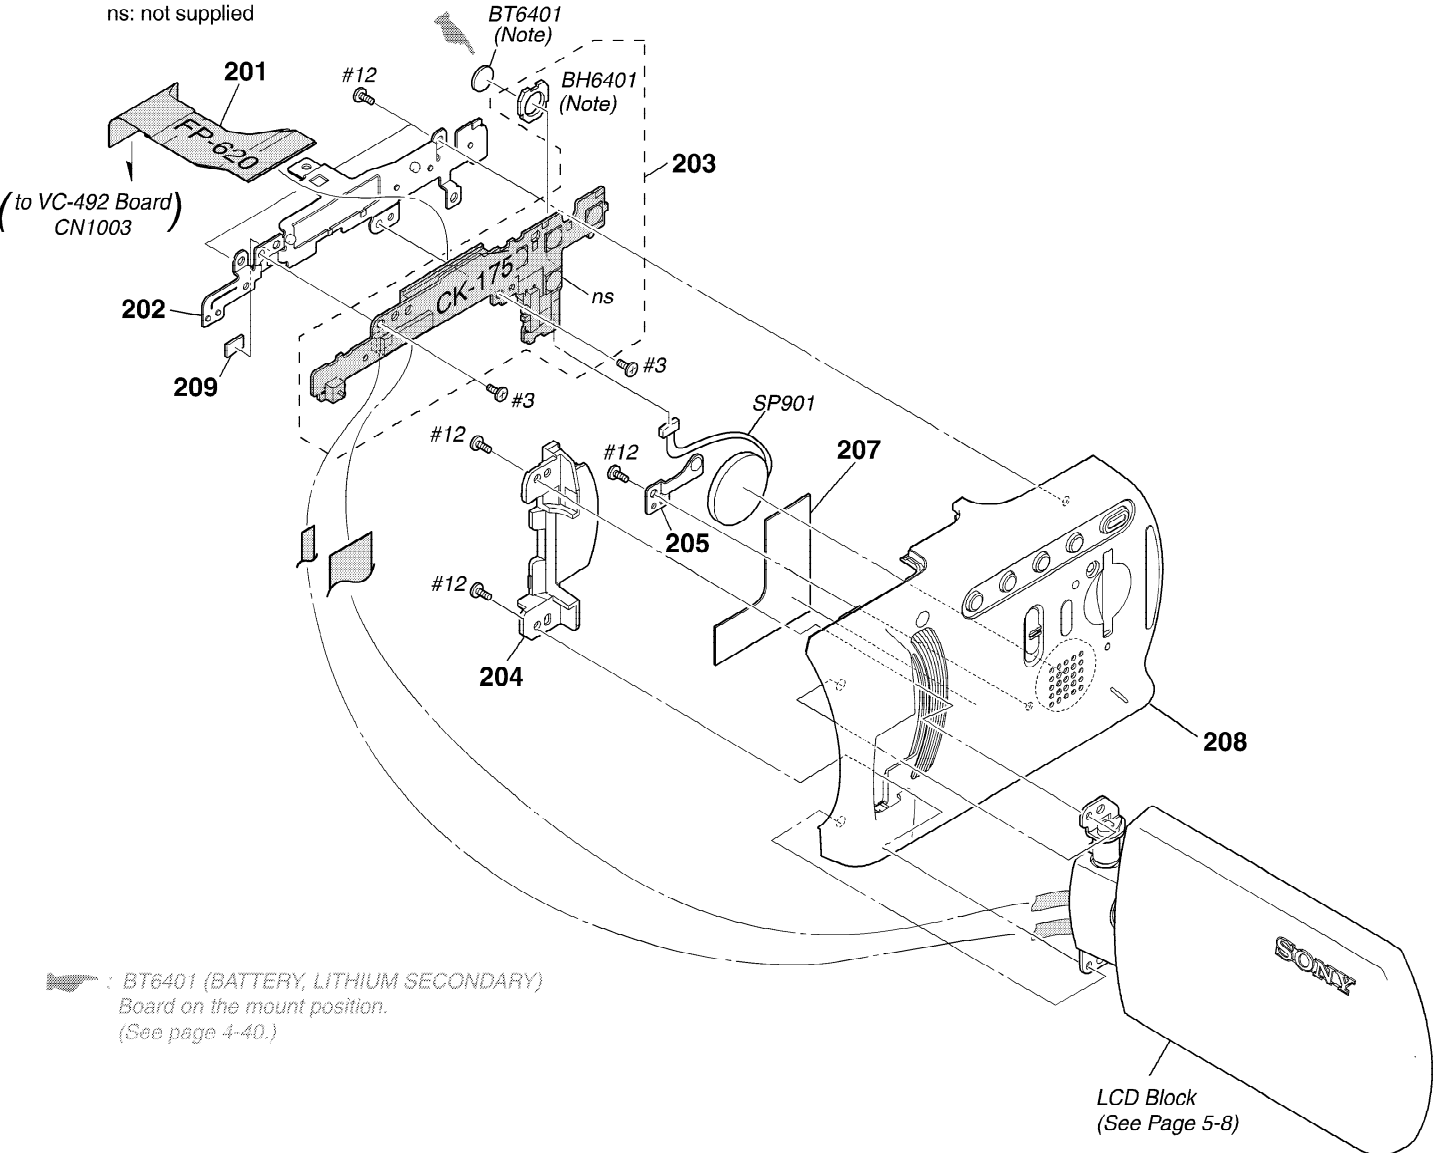

BT6401 (BATTERY, LITHIUM SECONDARY)
Board on the mount position.
(See page 4-40.)

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意
電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

• Refer to page 5-1 for mark △.

Note: Replace the battery holder (BH6401) together when replacing the lithium battery (BT6401) on CK-175 board.
(The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: CK-175基板のリチウム電池(BT6401)を交換する場合はバッテリーホルダ(BH6401)も同時に新品に交換して下さい。
(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着してください。

Ref. No.	Part No.	Description
201	1-871-467-11	FP-620 FLEXIBLE BOARD
* 202	3-098-266-01	SHEET METAL, CK RETAINER
203	A-1244-669-A	CK-175 BOARD, COMPLETE
204	3-098-265-01	BLIND, HINGE
* 205	3-098-267-01	SHEET METAL, SP RETAINER
* 207	3-098-636-01	SHEET (2370), (R) RADIATION
208	X-2177-100-1	CABINET (R (2360)) ASSY (SR190E/SR200/SR200C/SR200E)
208	X-2177-096-1	CABINET (R (2370)) ASSY (SR300: J)


Ref. No.	Part No.	Description
208	X-2177-097-1	CABINET (R (2370)) ASSY (SR290E/SR300: EXCEPT J/SR300C/SR300E)
* 209	3-209-620-01	SHEET, CK INSULATING
△ BH6401	1-756-615-31	HOLDER, BATTERY (Note)
△ BT6401	1-528-900-31	BATTERY, LITHIUM SECONDARY (Note)
SP901	1-825-262-81	LOUD SPEAKER (1.6CM)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. LCD BLOCK (to CK-175 Board)

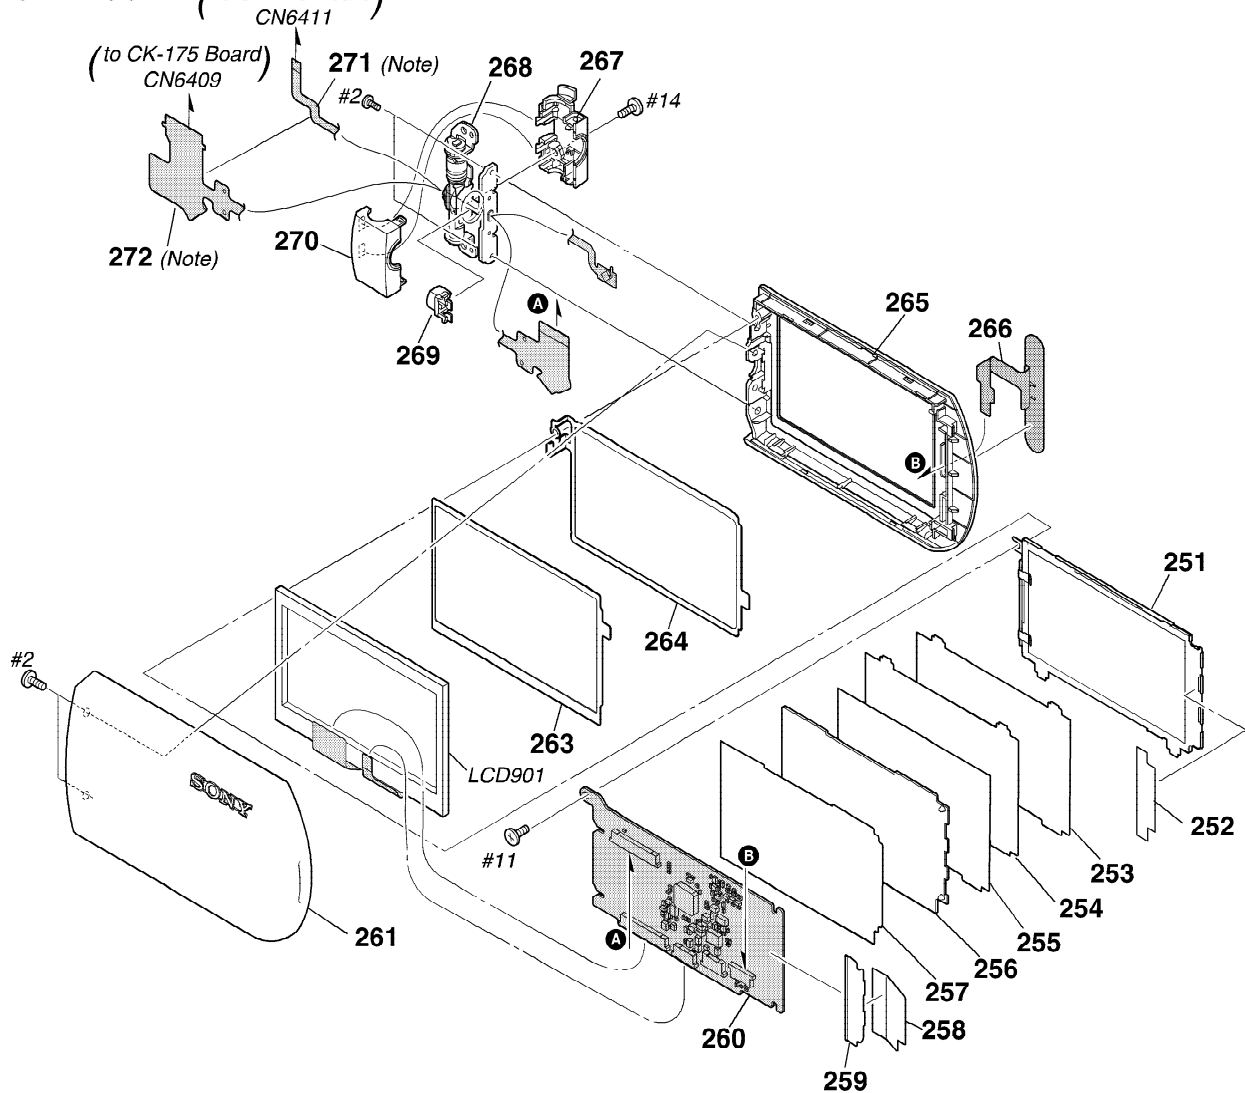

Note : FP-610フレキシブル基板, FP-621フレキシブル基板取付時はヘルプを必ずお読み下さい。

Note : Be sure to read "HELP" when you install the FP-610 flexible board and FP-621 flexible board.

Ref. No.	Part No.	Description
251	2-887-999-01	FRONT FRAME (2.7J)
252	2-666-807-02	AG SHEET (2.7)
253	2-666-802-01	PRISM SHEET V (2.7)
254	2-666-803-01	PRISM SHEET H (2.7)
255	2-666-804-01	DIFFUSION SHEET (2.7)
256	2-666-801-01	LIGHT GUIDE (2.7)
257	2-894-347-01	REFLECTION SHEET (2.7J)
* 258	3-106-126-01	SHEET (2370), P
* 259	2-638-780-01	CLIP
260	A-1244-660-A	PD-324 BOARD, COMPLETE
261	A-1246-461-A	CABINET (C (SR-190)), (P) (SR190E)
261	A-1246-460-A	CABINET (C (SR-200)), (P) (SR200/SR200C/SR200E)
261	A-1246-459-A	CABINET (C (SR-290)), (P) (SR290E)
261	A-1246-458-A	CABINET (C (SR-300)), (P) (SR300/SR300C/SR300E)
263	3-098-648-01	CUSHION (2.7 (211)), TP


Ref. No.	Part No.	Description
* 264	3-098-244-01	PLATE (2370), LCD GROUND
265	3-098-633-01	CABINET (M (2370)), P (SR300: J)
265	3-098-633-11	CABINET (M (2370)), P (EXCEPT SR300: J)
266	1-479-926-11	SWITCH BLOCK, CONTROL (SB22100)
267	3-098-256-01	COVER (M), HINGE
268	X-2108-475-1	HINGE ASSY
269	2-668-087-01	CLAMP, FLEXIBLE
270	3-098-263-01	COVER (C), HINGE (SR290E/SR300/SR300C/SR300E)
270	3-098-263-11	COVER (C), HINGE (SR190E/SR200/SR200C/SR200E)
271	A-1244-634-A	FP-621 FLEXIBLE BOARD, COMPLETE (Note)
272	1-871-457-11	FP-610 FLEXIBLE BOARD (Note)
* LCD901	A-1202-066-A	TP BLOCK ASSY (27ESTMG07)
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-8. SWITCH BLOCK

ns: not supplied

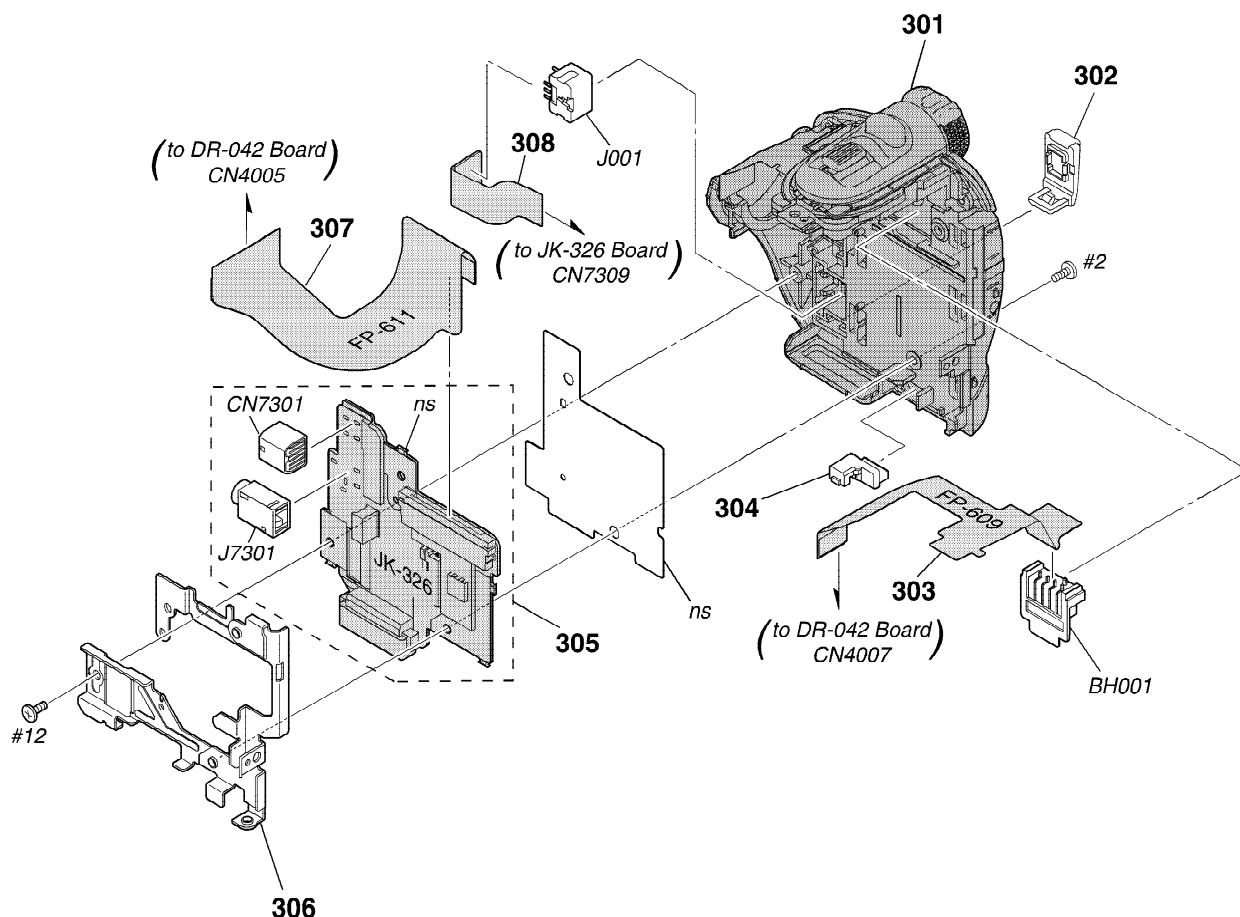

Ref. No.	Part No.	Description
301	1-480-010-11	SWITCH BLOCK, CONTROL (PS23700) (SR300: J)
301	1-480-010-21	SWITCH BLOCK, CONTROL (PS23700) (SR290E/SR300: EXCEPT J/SR300C/SR300E)
301	1-480-010-31	SWITCH BLOCK, CONTROL (PS23700) (SR190E/SR200/SR200C/SR200E)
302	3-098-172-01	COVER, DC-IN
303	1-871-456-11	FP-609 FLEXIBLE BOARD
* 304	3-098-246-01	CLAW, LOCK
305	A-1244-884-A	JK-326 BOARD, COMPLETE
306	X-2178-023-1	PLATE ASSY, BT BASE

Ref. No.	Part No.	Description
307	1-871-458-11	FP-611 FLEXIBLE BOARD
308	1-871-459-11	FP-612 FLEXIBLE BOARD
△ BH001	1-780-064-21	BATTERY TERMINAL BOARD
CN7301	1-815-794-13	CONNECTOR (MULTIPLE) (AV OUT)
△ J001	1-815-792-11	CONNECTOR, DC-IN (7.2V)
J7301	1-793-995-21	JACK, SUPER SMALL TYPE (REMOTE)
#2	2-635-562-31	SCREW (M1.7) (Black)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
----------	----------	-------------

A-1244-669-A	CK-175 BOARD, COMPLETE
--------------	------------------------

(BT6401 (BATTERY, LITHIUM SECONDARY) is not included in CK-175 complete board.)

< BATTERY, HOLDER >

△ BH6401	1-756-615-31	HOLDER, BATTERY (Note)
----------	--------------	------------------------

< BATTERY >

△ BT6401	1-528-900-31	BATTERY, LITHIUM SECONDARY (Note)
----------	--------------	-----------------------------------

< CONNECTOR >

CN6405	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
* CN6409	1-816-650-51	FFC/CONNECTOR, FPC (LIF) 24P
* CN6411	1-817-554-51	CONNECTOR, FFC/FPC 6P
CN6412	1-818-074-51	CONNECTOR, FFC/FPC (ZIF) 36P

< RESISTOR >

R6408	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R6409	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R6410	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R6411	1-218-958-11	RES-CHIP	2.7K	5%	1/16W

< SWITCH >

S6406	1-771-138-21	SWITCH, KEY BOARD (RESET)
S6407	1-771-138-21	SWITCH, KEY BOARD (BACK LIGHT)
S6408	1-771-138-21	SWITCH, KEY BOARD (EASY)
S6411	1-771-731-11	SWITCH, SLIDE (NIGHTSHOT)
S6412	1-771-138-21	SWITCH, KEY BOARD (WIDE SELECT)
S6414	1-771-138-21	SWITCH, KEY BOARD (DISP/BATT INFO)
S6415	1-762-970-21	SWITCH, PUSH (1 KEY) (PANEL OPEN/CLOSE)
S6416	1-771-138-21	SWITCH, KEY BOARD (PLAY)

Electrical parts list of the CM-076, CM-077 and DA-042 boards are not shown.
Page 5-11 to 5-15 are not shown.

Note : CK-175基板のリチウム電池(BT6401)を交換する場合はバッテリーホルダ(BH6401)も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着してください。

Note : Replace the battery holder (BH6401) together when replacing the lithium battery (BT6401) on CK-175 board.
(The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

• Refer to page 5-1 for mark △.

FP-621

FR-264

JK-326

MS-350

PD-324

Ref. No.	Part No.	Description
	A-1244-634-A	FP-621 FLEXIBLE BOARD, COMPLETE *****
		< SWITCH >
S001	1-786-680-21	SWITCH, DETECTION (SMD) (PANEL REVERSE)
	A-1244-513-A	FR-264 BOARD, COMPLETE *****
		< CAPACITOR >
C5901	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C5902	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
		< CONNECTOR >
CN5901	1-779-331-51	CONNECTOR, FFC/FPC 14P
CN5902	1-779-329-51	CONNECTOR, FFC/FPC 10P
		< DIODE >
D5903	6-500-512-01	DIODE CL-330IRS-X-TU (NIGHTSHOT)
D5904	6-500-776-01	DIODE MAZW068H0LS0
D5905	6-500-776-01	DIODE MAZW068H0LS0
D5906	6-500-776-01	DIODE MAZW068H0LS0
		< IC >
IC5901	6-600-163-01	IC RS-770 (REMOTE SENSOR)
		< TRANSISTOR >
Q5901	6-550-384-01	TRANSISTOR DTC123JMT2L
		< RESISTOR >
R5912	1-218-990-81	SHORT CHIP 0
R5916	1-218-941-81	RES-CHIP 100 5% 1/16W
	A-1244-884-A	JK-326 BOARD, COMPLETE *****
		(CN7308 is not supplied, but this is included in JK-326 complete board.)
		< CAPACITOR >
C7301	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V
C7302	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V
		< CONNECTOR >
CN7301	1-815-794-13	CONNECTOR (MULTIPLE) (A/V OUT)
CN7303	1-779-328-51	CONNECTOR, FFC/FPC 8P
CN7304	1-766-613-51	CONNECTOR, FFC/FPC 36P
CN7308	(Not supplied)	CONNECTOR, MULTIPLE (SOCKET)
* CN7309	1-817-459-71	CONNECTOR, FPC (ZIF) 14P
		< DIODE >
D7312	6-500-776-01	DIODE MAZW068H0LS0
D7315	8-719-056-59	DIODE MAZS120008SO
D7316	8-719-056-59	DIODE MAZS120008SO
		< FERRITE BEAD >
FB7316	1-400-619-11	BEAD, FERRITE (CHIP) (1608)

Ref. No.	Part No.	Description
FB7321	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
FB7323	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
		< JACK >
J7301	1-793-995-21	JACK, SUPER SMALL TYPE (REMOTE)
		< RESISTOR >
R7304	1-218-990-11	SHORT CHIP 0
R7305	1-218-990-11	SHORT CHIP 0
R7306	1-218-990-11	SHORT CHIP 0
R7308	1-218-953-11	RES-CHIP 1K 5% 1/16W
R7309	1-218-953-11	RES-CHIP 1K 5% 1/16W
		< VARISTOR >
VDR731	1-803-974-11	VARISTOR, CHIP (1608)
VDR738	1-803-974-11	VARISTOR, CHIP (1608)
VDR739	1-803-974-11	VARISTOR, CHIP (1608)
	A-1244-913-A	MS-350 BOARD, COMPLETE *****
		< CONNECTOR >
* CN7401	1-819-990-21	MEMORY STICK DUO CONNECTOR 10P
* CN7403	1-818-045-51	CONNECTOR, FFC/FPC 14P
		< DIODE >
D7401	6-500-817-01	DIODE (LED) SML-512UWT86 (MEMORY STICK ACCESS)
		< FERRITE BEAD >
FB7401	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7402	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7403	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7404	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
		< RESISTOR >
R7402	1-218-990-11	SHORT CHIP 0
R7405	1-218-939-11	RES-CHIP 68 5% 1/16W
R7407	1-218-939-11	RES-CHIP 68 5% 1/16W
R7409	1-218-939-11	RES-CHIP 68 5% 1/16W
R7411	1-218-939-11	RES-CHIP 68 5% 1/16W
R7413	1-218-949-11	RES-CHIP 470 5% 1/16W
	A-1244-660-A	PD-324 BOARD, COMPLETE *****
		< CAPACITOR >
C6101	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6102	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6103	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6105	1-127-895-11	TANTAL. CHIP 22uF 20% 4V
C6107	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C6108	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6109	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C6111	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6112	1-100-786-91	TANTAL. CHIP 22uF 20% 6.3V
C6113	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V

Ref. No.	Part No.	Description			
C6114	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C6115	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
* C6116	1-112-298-91	CERAMIC CHIP	1uF	10%	16V
* C6117	1-112-298-91	CERAMIC CHIP	1uF	10%	16V
C6119	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C6120	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V
C6121	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6123	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C6124	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
C6125	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C6126	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
< CONNECTOR >					
* CN6101	1-785-905-51	FFC/CONNECTOR, FPC (ZIF) 24P			
* CN6102	1-794-322-51	FFC/CONNECTOR, FPC (ZIF) 6P			
CN6103	1-816-180-71	CONNECTOR, FPC (ZIF) 6P			
* CN6105	1-785-905-51	FFC/CONNECTOR, FPC (ZIF) 24P			
< DIODE >					
D6105	6-500-941-01	DIODE MAZS056008S0			
* D6106	6-501-597-01	DIODE NSSW008DT-T108			
* D6107	6-501-597-01	DIODE NSSW008DT-T108			
* D6108	6-501-597-01	DIODE NSSW008DT-T108			
< FERRITE BEAD >					
FB6101	1-400-331-11	FERRITE, EMI (SMD) (1005)			
< IC >					
IC6102	8-753-229-98	IC CXM3006CR-T4			
< COIL >					
L6101	1-400-588-11	INDUCTOR	10uH		
L6102	1-400-588-11	INDUCTOR	10uH		
L6103	1-400-588-11	INDUCTOR	10uH		
< TRANSISTOR >					
Q6101	8-729-427-37	TRANSISTOR	XP411F-TXE		
Q6102	8-729-427-67	TRANSISTOR	XP421F-TXE		
Q6107	6-550-239-01	TRANSISTOR	DTA144EMT2L		
Q6108	6-550-234-01	TRANSISTOR	UNR32A300LS0		
Q6109	6-551-184-01	TRANSISTOR	MCH6305-TL-E-S		
Q6110	8-729-054-48	TRANSISTOR	UP04601008S0		
Q6111	6-550-232-01	TRANSISTOR	2SA2029T2LQ/R		
Q6112	8-729-054-49	TRANSISTOR	UP04401008S0		
Q6113	8-729-054-48	TRANSISTOR	UP04601008S0		
< RESISTOR >					
R6101	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R6102	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R6104	1-218-990-11	SHORT CHIP	0		
R6105	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R6109	1-218-975-11	RES-CHIP	68K	5%	1/16W
R6110	1-218-949-11	RES-CHIP	470	5%	1/16W
R6112	1-208-934-11	METAL CHIP	91K	0.5%	1/16W
R6115	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R6122	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6130	1-208-898-81	METAL CHIP	3K	0.5%	1/16W

Ref. No.	Part No.	Description			
R6132	1-218-969-11	RES-CHIP	22K	5%	1/16W
R6133	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6134	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R6135	1-218-981-81	RES-CHIP	220K	5%	1/16W
R6136	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R6137	1-218-978-11	RES-CHIP	120K	5%	1/16W
R6138	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6139	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R6140	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R6141	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R6142	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R6143	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6144	1-211-969-11	METAL CHIP	10	0.5%	1/10W
R6145	1-218-989-11	RES-CHIP	1M	5%	1/16W
R6152	1-218-990-11	SHORT CHIP	0		
R6153	1-218-990-11	SHORT CHIP	0		
R6154	1-218-990-11	SHORT CHIP	0		
R6155	1-216-864-11	SHORT CHIP	0		

A-1244-921-A ST-159 BOARD, COMPLETE

< CAPACITOR >

C5201	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5202	1-125-889-11	CERAMIC CHIP	2.2uF	10%	10V
C5203	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C5204	1-163-001-11	CERAMIC CHIP	220PF	10%	50V
△ C5206	1-112-766-11	ELECT	70uF	99%	330V

< CONNECTOR >

* CN5201	1-816-647-51	FFC/FPC CONNECTOR (LIF) 18P			
* CN5202	1-819-257-51	CONNECTOR, FFC/FPC (ZIF) 14P			

< DIODE >

D5201	6-501-096-01	DIODE CRF02 (TE85R)			
△ D5202	6-501-096-01	DIODE CRF02 (TE85R)			
D5204	8-719-083-91	DIODE EDZ TE61 6.8B			

< IC >

△ IC5201	6-707-554-01	IC TPS65552DGQR			
----------	--------------	-----------------	--	--	--

< COIL >

L5201	1-412-027-11	INDUCTOR	2.2uH		
-------	--------------	----------	-------	--	--

< TRANSISTOR >

△* Q5201	6-551-447-01	TRANSISTOR	TIG022TS-S-TL-E		
----------	--------------	------------	-----------------	--	--

< RESISTOR >

R5201	1-208-947-11	METAL CHIP	330K	0.5%	1/16W
R5202	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R5203	1-216-864-11	SHORT CHIP	0		
R5204	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R5205	1-216-809-11	METAL CHIP	100	5%	1/10W
R5206	1-218-989-11	RES-CHIP	1M	5%	1/16W

• Refer to page 5-1 for mark △.

ST-159

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
		< TRANSFORMER >

△ T5201	1-443-568-21	TRANSFORMER, D.C.-D.C.CONVERTER
---------	--------------	---------------------------------

Electrical parts list of the VC-492 boards is not shown.
Page 5-19 to 5-24 is not shown.

• Refer to page 5-1 for mark △.

• EXCEPT J MODEL


Checking supplied accessories.

to J MODEL




Power cord

- △ 1-823-945-41 (US, CND)
- △ 1-823-947-71 (KR)
- △ 1-827-826-41 (AEP, E: PAL)
- △ 1-827-945-61 (AUS)
- △ 1-828-050-31 (JE)
- △ 1-830-518-41 (E: NTSC)
- △ 1-832-121-31 (CH)
- △ 1-832-169-31 (UK, HK)

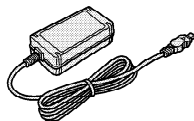


AC Adaptor
(AC-L200/L200B)
△ 1-479-285-21

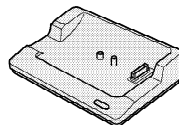

Handycam Station
(DCRA-C171)
1-820-945-21



 
A/V connecting cable
1-831-553-11



USB cable
1-829-579-41



Wireless Remote Commander
(RMT-835)
1-479-275-41

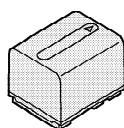

Rechargeable battery pack
(NP-FH60)
△ A-1201-666-A (US, CND)
△ A-1201-667-A (EXCEPT US, CND, CH)
△ A-1201-668-A (CH)



Conversion (2P) Adaptor
△ 1-569-007-12 (E: NTSC, JE)



Conversion (2P) Adaptor
△ 1-569-008-12 (HK)

 


21-Pin Adaptor
1-770-783-21 (AEP, UK)



Operating Guide

- 3-098-548-11 (ENGLISH) (US, CND, E: NTSC, JE)
- 3-098-548-21 (FRENCH) (CND)
- 3-098-548-31 (SPANISH) (US, E: NTSC, JE)
- 3-098-548-41 (PORTUGUESE) (JE)
- 3-098-548-51 (TRADITIONAL CHINESE) (E: NTSC)
- 3-098-548-61 (KOREAN) (KR, JE)
- 3-098-549-12 (ENGLISH) (AEP, UK, HK, AUS, E: PAL, JE)
- 3-098-549-21 (FRENCH, DUTCH) (AEP)
- 3-098-549-31 (GERMAN, ITALIAN, TURKISH) (AEP)
- 3-098-549-41 (SPANISH, PORTUGUESE, GREEK) (AEP)
- 3-098-549-51 (RUSSIAN, SWEDISH) (AEP, JE)
- 3-098-549-61 (DANISH, FINNISH, POLISH) (AEP)
- 3-098-549-71 (CZECH, HUNGARIAN, SLOVAK) (AEP)
- 3-098-549-81 (SIMPLIFIED CHINESE) (CH, E: PAL, JE)
- 3-098-550-31 (TRADITIONAL CHINESE) (HK)
- 3-098-550-41 (ARABIC, PERSIAN) (E: PAL)



DVD-ROM
(ENJOY HANDYCAM)

 
- 3-093-691-01 (ENGLISH, KOREAN, JAPANESE) (KR)
- 3-093-691-11 (ENGLISH, FRENCH, SPANISH, PORTUGUESE) (US, CND)
- 3-093-691-21 (ENGLISH, RUSSIAN, GERMAN) (UK)
- 3-093-691-51 (ENGLISH, FRENCH, GERMAN, DUTCH, PORTUGUESE, ITALIAN, RUSSIAN) (AEP)
- 3-093-691-61 (ENGLISH, FRENCH, SIMPLIFIED CHINESE, TRADITIONAL CHINESE) (HK, AUS, CH, E: PAL)
- 3-093-691-71 (ENGLISH, TRADITIONAL CHINESE, SPANISH, PORTUGUESE) (E: NTSC)

• Refer to page 5-1 for mark △.

• EXCEPT J MODEL

Checking supplied accessories.

to J MODEL



CD-ROM
"Handycam Application Software"
3-098-198-01



Handycam Handbook (PDF)


The CD-ROM supplied contains all of language version of the Instruction Manual in pdf (Handycam Handbook.pdf) for printing.

Note: The printed matter is not supplied. If required, please order it with the part number below.

- 3-093-315-01 (JAPANESE) (SR200/SR200C/SR300/SR300C)
- 3-093-315-11 (ENGLISH) (SR200/SR200C/SR300/SR300C)
- 3-093-315-21 (FRENCH) (SR200/SR200C/SR300/SR300C)
- 3-093-315-31 (SPANISH) (SR200/SR200C/SR300/SR300C)
- 3-093-315-41 (PORTUGUESE) (SR200/SR200C/SR300/SR300C)
- 3-093-315-51 (TRADITIONAL CHINESE) (SR200/SR200C/SR300/SR300C)
- 3-093-315-61 (KOREAN) (SR200/SR200C/SR300/SR300C)
- 3-093-316-11 (ENGLISH) (SR190E/SR200E/SR290E/SR300E)
- 3-093-316-21 (FRENCH) (SR190E/SR200E/SR290E/SR300E)
- 3-093-316-31 (GERMAN) (SR190E/SR200E/SR290E/SR300E)
- 3-093-316-41 (DUTCH) (SR190E/SR200E/SR290E/SR300E)
- 3-093-316-51 (TURKISH) (SR190E/SR200E/SR290E/SR300E)
- 3-093-316-61 (SPANISH) (SR190E/SR200E/SR290E/SR300E)
- 3-093-316-71 (PORTUGUESE) (SR190E/SR200E/SR290E/SR300E)
- 3-093-316-81 (ITALIAN) (SR190E/SR200E/SR290E/SR300E)
- 3-093-316-91 (GREEK) (SR190E/SR200E/SR290E/SR300E)
- 3-093-317-11 (RUSSIAN) (SR190E/SR200E/SR290E/SR300E)
- 3-093-317-21 (SWEDISH) (SR190E/SR200E/SR290E/SR300E)
- 3-093-317-31 (DANISH) (SR190E/SR200E/SR290E/SR300E)
- 3-093-317-41 (FINNISH) (SR190E/SR200E/SR290E/SR300E)
- 3-093-317-51 (POLISH) (SR190E/SR200E/SR290E/SR300E)
- 3-093-317-61 (CZECH) (SR190E/SR200E/SR290E/SR300E)
- 3-093-317-71 (HUNGARIAN) (SR190E/SR200E/SR290E/SR300E)
- 3-093-317-81 (SLOVAK) (SR190E/SR200E/SR290E/SR300E)
- 3-093-317-91 (SIMPLIFIED CHINESE) (SR190E/SR200E/SR290E/SR300E)
- 3-093-318-11 (THAI) (SR190E/SR200E/SR290E/SR300E)
- 3-093-318-21 (INDONESIAN) (SR190E/SR200E/SR290E/SR300E)
- 3-093-318-31 (MALAY) (SR190E/SR200E/SR290E/SR300E)
- 3-093-318-41 (TRADITIONAL CHINESE) (SR190E/SR200E/SR290E/SR300E)
- 3-093-318-51 (ARABIC) (SR190E/SR200E/SR290E/SR300E)
- 3-093-318-61 (PERSIAN) (SR190E/SR200E/SR290E/SR300E)

• J MODEL

付属品

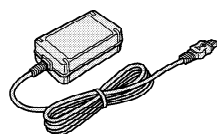


AC アダプター
(AC-L200/L200B)
△ 1-479-285-21




電源コード
△ 1-828-050-31

図面
番号

 部品コード 部品名
3-098-548-01 取扱説明書




USB ケーブル
1-829-579-41

 

A/V 接続ケーブル
1-831-553-11



 
リチャージャブル
バッテリーパック
(NP-FH60)
△ A-1201-665-A



DVD-ROM
(ENJOY HANDY CAM)
3-093-691-01 (日本語, 英語, 韓国語)



ワイヤレスリモコン
(RMT-835)
1-479-275-31

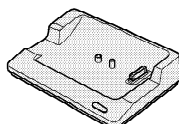


ハンディカムステーション
(DCRA-C170)
1-820-945-11

• △マークについては、5-1ページを参照して下さい。

• J MODEL

 付属品



CD-ROM
"Handycam Application Software"
3-098-198-01



ハンディカム ハンドブック (PDF)


印刷用の取扱説明書.pdf (ハンディカム ハンドブック.pdf)は
全ての言語が付属品のCD-ROMに含まれています。

注: 印刷物は付属されておりません。
必要な場合は下記部品番号にて注文となります。


3-093-315-01 (日本語)

HARDWARE LIST (1/4)


#1: M1.7 X 2.5
(Black)
2-635-562-11

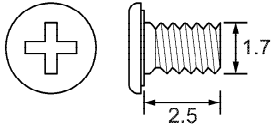


#2: M1.7 X 4.0
(Black)
2-635-562-31

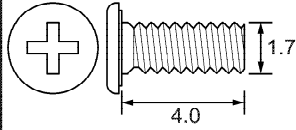


#3: M1.7 X 2.5
(Red)
2-660-401-01

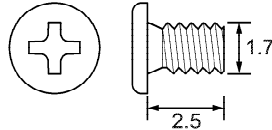


#4: M1.4 X 2.5 (Tapping)
(Dark Silver)
3-348-998-81

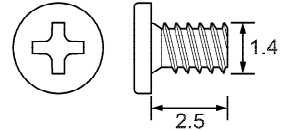


#5: M1.7 X 3.5 (Tapping)
(Black)
3-080-204-01

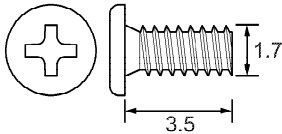


#6: M1.4 X 1.7
(Silver)
2-598-474-01

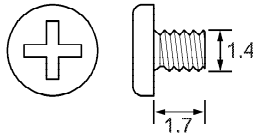


#7: M1.7 X 1.6
(Black)
7-627-552-18

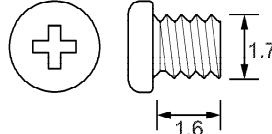


#8: M1.7 X 3.5 (Tapping)
(Silver)
3-078-890-01

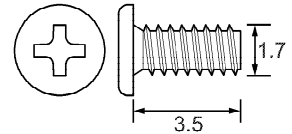


#9: M1.7 X 5.0 (Tapping)
(Silver)
3-078-890-21

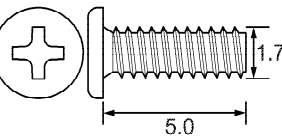


#10: M1.7 X 4.0
(Silver)
2-599-475-31

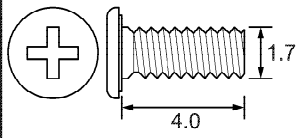


#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

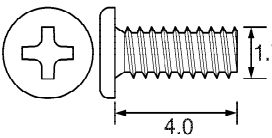


#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21

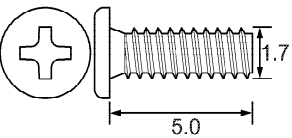


#13: M1.7 X 2.5 (Tapping)
(Silver)
3-085-397-01

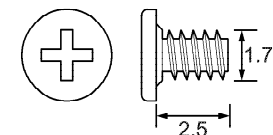


#14: M1.7 X 2.5
(Silver)
2-599-475-11

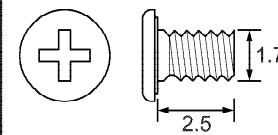


#15: M1.4 X 1.5
(Silver)
3-062-214-01

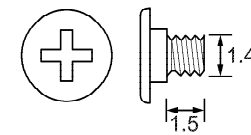


#16: M1.4 X 2.5
(Silver)
2-586-337-01

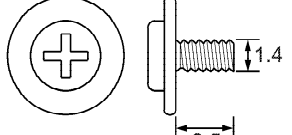


#17: M1.7 X 1.5
(Silver)
2-586-389-01

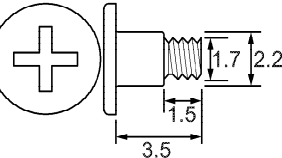


#18: M1.4 X 2.5
(Silver)
2-635-591-21

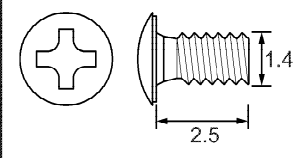

#19: M1.2 X 4.0 (Tapping)
(Red)
3-086-156-21

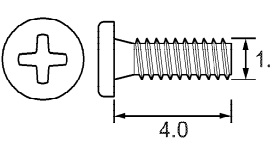


#20: M1.4 X 3.0
(Silver)
2-635-591-31

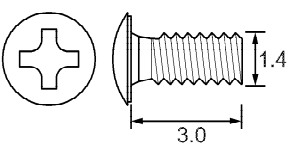


HARDWARE LIST (2/4)


#21: M1.4 X 3.0
(Black)
2-662-396-21

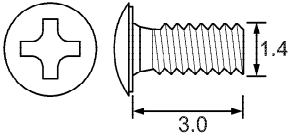


#22: M1.7 X 5.0 (Tapping)
(Silver)
3-083-261-01

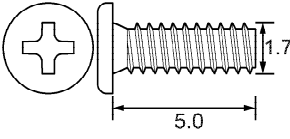


#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11

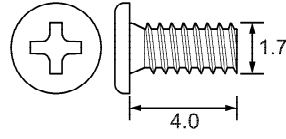


#24: B1.7 X 5.5 (Tapping)
(Black)
4-679-805-11

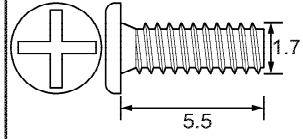


#25: M1.7 X 3.0
(Black)
2-635-562-21

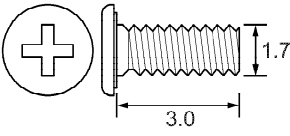


#26: M1.4 X 2.0
(Silver)
2-635-591-11

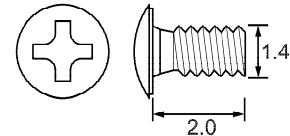


#27: M1.4 X 2.0
(Black)
2-662-396-11

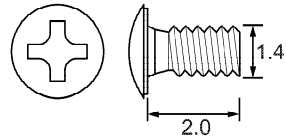


#28: M1.4 X 4.0 (Tapping)
(Dark Silver)
3-348-998-61

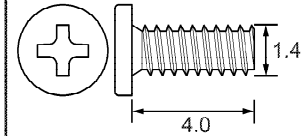


#29: M1.4 X 2.5
(Black)
2-662-396-01

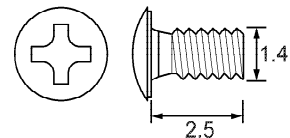


#30: M1.2 X 4.0 (Tapping)
(White)
3-086-156-11

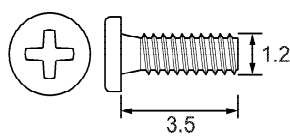


#31: M3.0 X 4.0
(Silver)
2-102-434-01

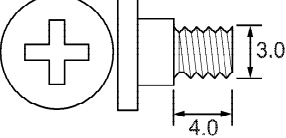


#32: M2.0 X 4.5 (Tapping)
(Silver)
2-102-498-01

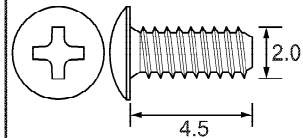


#33: M3.0 X 6.0
(Silver)
3-077-331-21

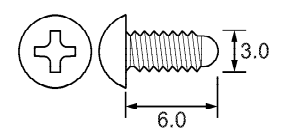


#34: M3.0 X 8.0
(Black)
3-077-331-41

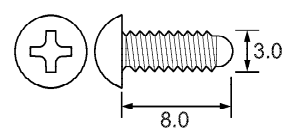


#35: M4.0 X 6.0 (Tapping)
(Silver)
3-975-291-02

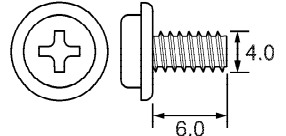


#36: M3.0 X 6.0
(Silver)
4-886-821-11

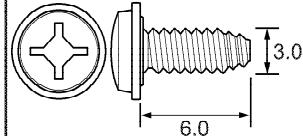


#37: M2.0 X 6.0 (Tapping)
(Black)
3-080-206-31

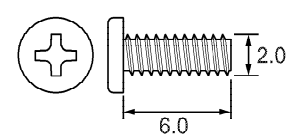


#38: M3.0 X 20.0 (Tapping)
(Silver)
7-685-651-79

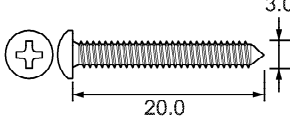





















#39: M2.6 X 5.0 (Tapping)
(Black)
7-685-791-09

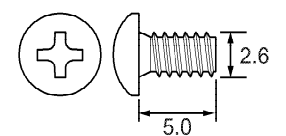

#40: M2.0 X 4.0 (Tapping)
(Silver)
7-685-851-04

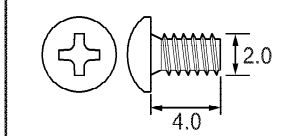


HARDWARE LIST (3/4)

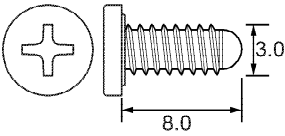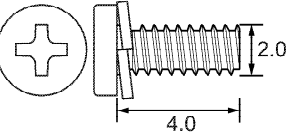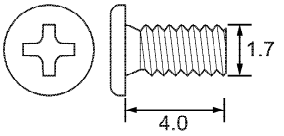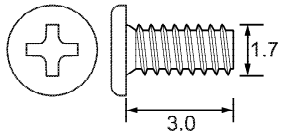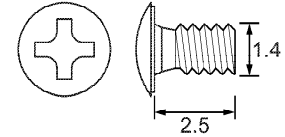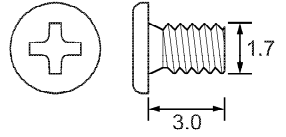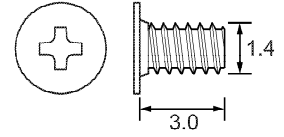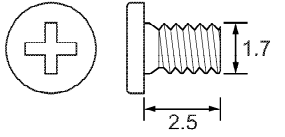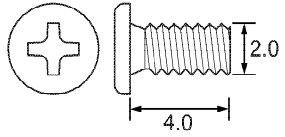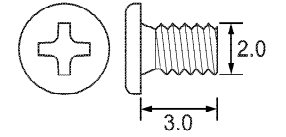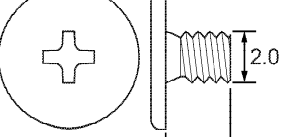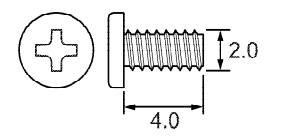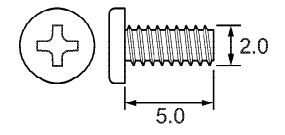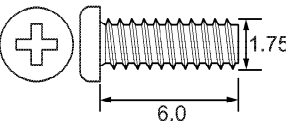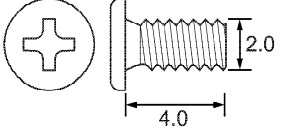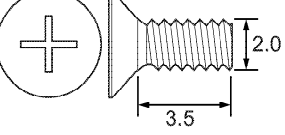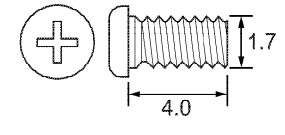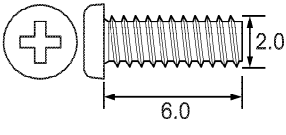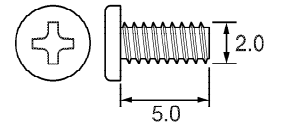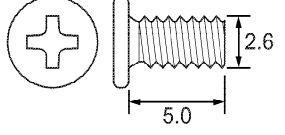
#41: M3.0 X 8.0 (Tapping) (Silver) 3-065-748-01 	#42: M2.0 X 4.0 (Tapping) (Silver) 7-628-253-00 	#43: M1.7 X 4.0 (Red) 2-660-401-31 	#44: M1.7 X 3.0 (Tapping) (Silver) 3-078-890-61 
#45: M1.4 X 2.5 (Silver) 2-587-151-01 	#46: M1.7 X 3.0 (Red) 2-660-401-11 	#47: M1.4 X 3.0 (Tapping) (Silver) 2-665-774-01 	#48: M1.7 X 2.5 (Silver) 3-973-497-91 
#49: M2.0 X 4.0 (Black) 2-630-005-31 	#50: M2.0 X 3.0 (Red) 2-891-494-11 	#51: M2.0 X 2.5 (Silver) 3-073-686-01 	#52: M2.0 X 4.0 (Tapping) (Black) 3-080-206-11 
#53: M2.0 X 5.0 (Tapping) (Black) 3-080-206-21 	#54: M1.75 X 6.0 (Tapping) (Black) 3-318-203-11 	#55: M2.0 X 4.0 (Silver) 2-655-582-11 	#56: M2.0 X 3.5 (Silver) 3-067-187-11 
#57: M1.7 X 4.0 (Black) 7-627-852-18 	#58: M2.0 X 6.0 (Tapping) (Silver) 3-719-408-11 	#59: M2.0 X 5.0 (Tapping) (Silver) 3-080-205-21 	#60: M2.6 X 5.0 (Black) 3-061-062-11 

HARDWARE LIST (4/4)


#61: M3.0 X 10.0
(Black)
7-682-549-09

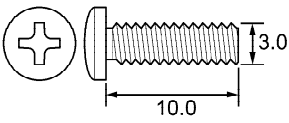


#62: M2.0 X 3.0
(Silver)
3-080-202-21

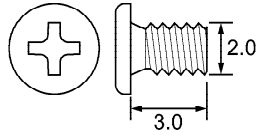


#63: M5.0 X 12.5
(Black)
3-060-811-21

 


#64: M1.7 X 5.0 (Tapping)
(Silver)
2-666-551-21

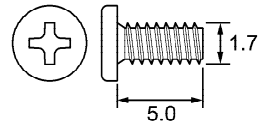


#65: M1.4 X 3.5
(Silver)
2-635-591-01

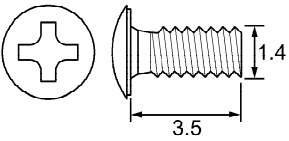


#66: M1.4 X 1.4
(Silver)
2-635-591-41

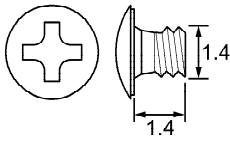


#67: M1.4 X 2.0
(Silver)
3-389-523-16

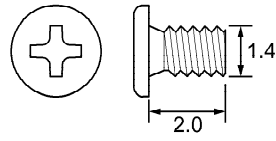


#68: M1.7 X 4.0
(Silver)
2-655-581-01

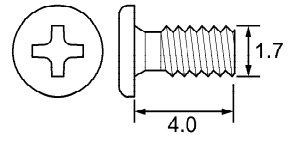


#69: M1.7 X 3.0
(Silver)
2-599-475-21

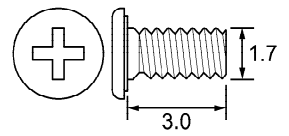

#70: M1.7 X 5.0
(Silver)
2-599-475-41

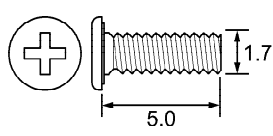

[Description of main button functions on toolbar of the Adobe Acrobat Reader Ver5.0 (for Windows)]

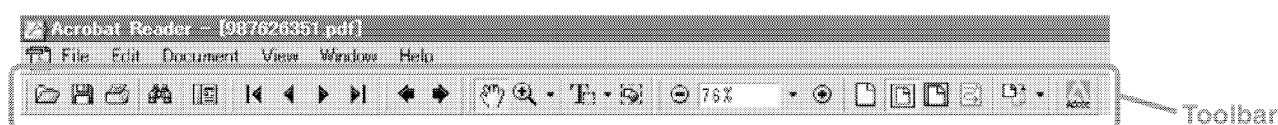

Printing a text

1. Click the Print button .
2. Specify a printer, print range, number of copies, and other options, and then click [OK].

Application of printing:


To set a range to be printed within a page, select the graphic selection tool  and drag on the page to enclose a range to be printed, and then click the Print button.

Finding a text

1. Click the Find button .
2. Enter a character string to be found into a text box, and click the [Find]. (Specify the find options as necessary)

Application to the Service Manual:

To execute "find" from current page toward the previous pages, select the check box "Find Backwards" and then click the "Find".

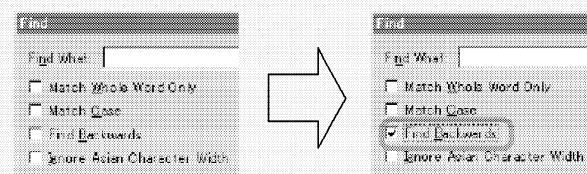

3. Open the find dialog box again, and click the [Find Again] and you can find the matched character strings displayed next. (Character strings entered previously are displayed as they are in the text box.)

Application to the Service Manual:

The parts on the drawing pages (block diagrams, circuit diagrams, printed circuit boards) and parts list pages in a text can be found using this find function. For example, find a Ref. No. of IC on the block diagram, and click the [Find Again] continuously, so that you can move to the Ref. No. of IC on the circuit diagram or printed circuit board diagram successively.

Note: The find function may not be applied to the Service Manual depending on the date of issue.

Switching a page

- To move to the first page, click the .
- To move to the last page, click the .
- To move to the previous page, click the .
- To move to the next page, click the .

Reversing the screens displayed once

- To reverse the previous screens (operation) one by one, click the .
- To advance the reversed screens (operation) one by one, click the .

Application to the Service Manual:

This function allows you to go and back between circuit diagram and printed circuit board diagram, and accordingly it will be convenient for the voltage check.


Moving with link

1. Select either palm tool , zoom tool , text selection tool , or graphic selection tool .
2. Place the pointer in the position in a text where the link exists (such as a button on cover and the table of contents page, or blue characters on the removal flowchart page or drawing page), and the pointer will change to the forefinger form .
3. Then, click the link. (You will go to the link destination.)

Moving with bookmark:


Click an item (text) on the bookmark pallet. and you can move to the link destination. Also, clicking  can display the hidden items.

(To go back to original state, click )

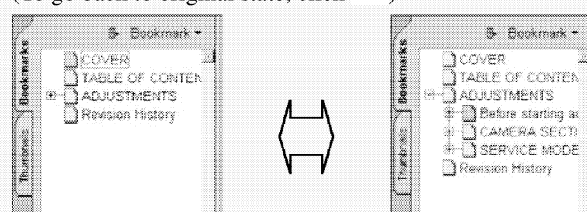

Zooming or rotating the screen display "Zoom in/out"

 - Click the triangle button in the zoom control box to select the display magnification. Or, you may click  or  for zooming in or out.




"Rotate"

- Click rotate tool , and the page then rotates 90 degrees each.

Application to the Service Manual:

The printed circuit board diagram you see now can be changed to the same direction as the set.

【Adobe Acrobat Reader Ver 5.0(for Windows) ツールバー内にある主なボタンの機能説明】

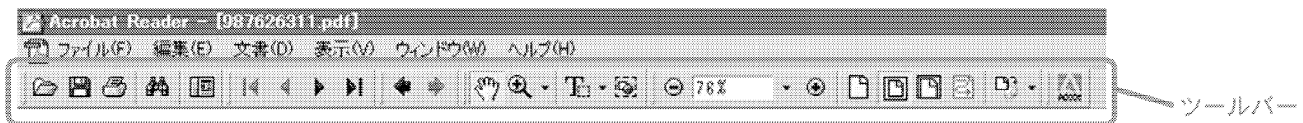

文章を印刷する

1. 印刷ボタンをクリックする。
2. プリンター、印刷範囲、印刷部数、および他のオプションを指定して「OK」をクリックする。

印刷の応用：

ページ内で印刷したい範囲を設定するには、グラフィック選択ツールを選択し、ページ上をドラッグして印刷したい範囲を囲ってから印刷ボタンをクリックする。

一度表示した画面へ逆戻りする

- ・ 前の画面(操作)へ1つずつ逆戻りする場合、をクリックする。
- ・ 戻した画面(操作)を1つずつ前に進める場合、をクリックする。

サービスマニュアルへの応用：


回路図とプリント図を行き来できるので電圧チェックに便利です。

文章内を検索する

1. 検索ボタンをクリックする。
2. 検索したい文字列をテキストボックスに入力して「検索」をクリックする。(必要に応じて検索オプションを指定する)

サービスマニュアルへの応用：

現在のページから前ページに向かって検索する場合は「先頭に向かって検索」のチェックボックスを選択してから「検索」をクリックする。

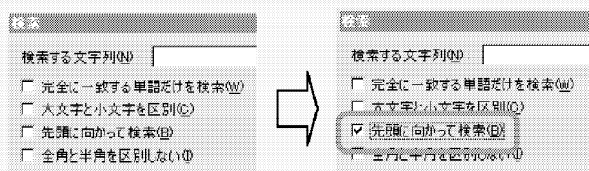

3. 検索ダイアログボックスをもう一度開き、「次を検索」をクリックすると次に出てくる一致文字列を検索することができる。(前回入力した文字列が、テキストボックスにそのまま表示されている)

サービスマニュアルへの応用：

文章内にある図面ページ(ブロックダイアグラム、回路図、プリント図)および部品表ページなどは、この検索機能を使って部品検索することができる。例えば、ブロックダイアグラム上でICのRef. No.を検索し、「次を検索」を続けることによって回路図、プリント図上にあるICのRef. No.へ次々と移動する。


注意:発行年月日によって検索できない場合もあります。

リンクを使用して移動する

1. 手のひらツール、ズームツール、テキスト選択ツール、グラフィック選択ツールのいずれかを選択する。
2. 文章内のリンクのある場所(表紙および章目次ページのボタン、外し方のフローページ、図面ページでは文字が青色になっているところなど)にポインタを置くと、ポインタが人差し指の形に変わる。
3. そのままリンクをクリックする。(リンク先へ移動する)

しおりを利用して移動する：

しおりパレット上の項目(テキスト)をクリックするとリンク先へ移動することができる。また、「」をクリックすると隠れている項目を表示することができる。
(「」をクリックすると元に戻る)

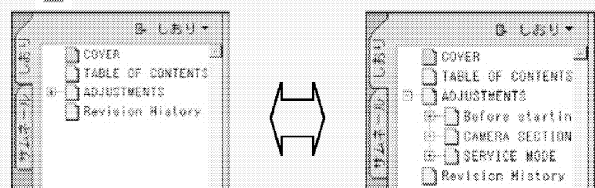

画面の表示を拡大、縮小または回転させる

「拡大/縮小」

- ・ 倍率ボックスの三角矢印ボタンをクリックし、表示倍率を選択する。または、をクリックしても使えます。



「回転」

- ・ 回転ツールをクリックすると、ページが90度ずつ回転する。

サービスマニュアルへの応用：

見ているプリント図をセットと同じ向きに変えられます。

ページを切り換える

- ・ 最初のページに移動する場合、をクリックする。
- ・ 最後のページに移動する場合、をクリックする。
- ・ 前のページに移動する場合、をクリックする。
- ・ 次のページに移動する場合、をクリックする。

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2007.02	Official Release	—	—
1.1	2007.03	Revised-1	• DCR-SR200C/SR300C are added. • Locally procured Operating Guides are deleted. S.M. correction : Page 5-25	Yes
1.2	2007.06	Correction-1	• Change of “1-6. PROCESS AFTER FIX-ING FLASH ERROR” • Correction of Schematic Diagrams • Correction of Exploded Views • Correction of Electrical Parts List S.M. correction : Page 1-6, 1-20, 4-31, 5-2, 5-5, 5-6, 5-7, 5-9, 5-10	Yes