

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION

ns: not supplied

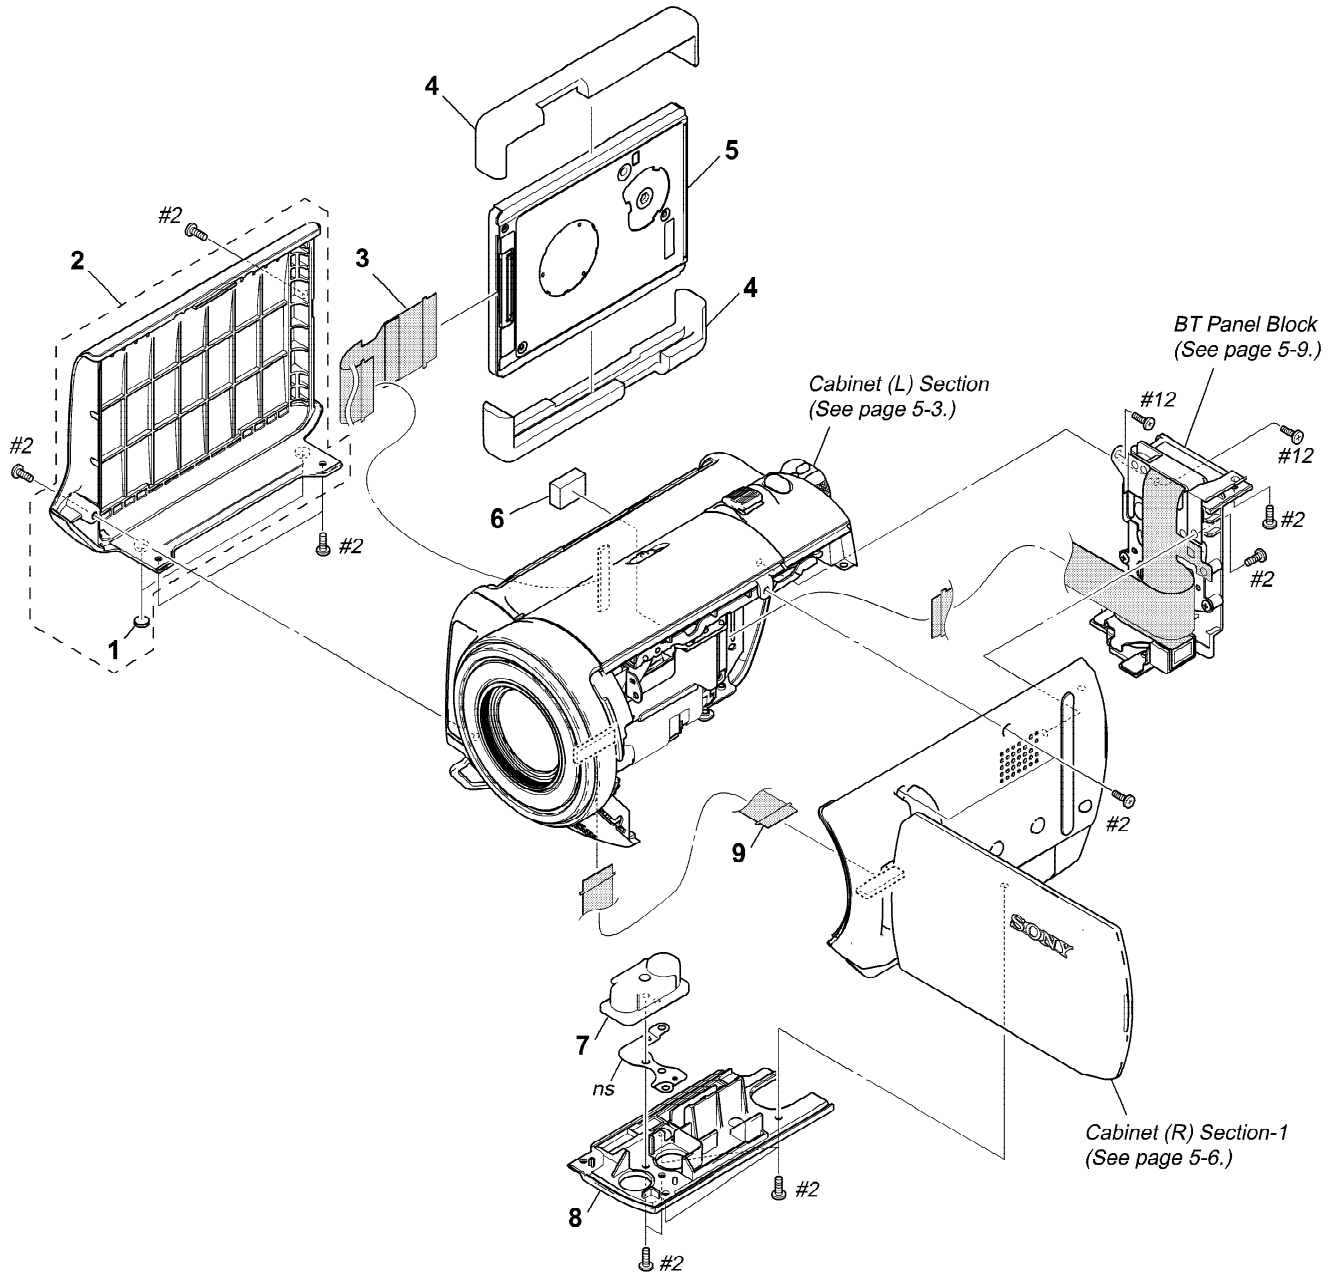

Ref. No.	Part No.	Description
1	2-589-376-01	FOOT (395), RUBBER
2	X-2148-962-1	CABINET (G) (730) ASSY
3	A-1202-561-A	FP-515 FLEXIBLE BOARD, COMPLETE
4	2-697-545-01	DAMPER, DM
5	A-1184-016-A	HDD (MK3008GAL-30GB) (S)
* 6	2-673-770-01	GASKET (D)


Ref. No.	Part No.	Description
7	2-673-751-01	SCREW, TRIPOD
8	2-697-540-01	CABINET (BOTTOM)
* 9	1-870-457-11	FP-510 FLEXIBLE BOARD
#2	2-635-562-31	SCREW (M1.7) (Black)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. CABINET (L) SECTION

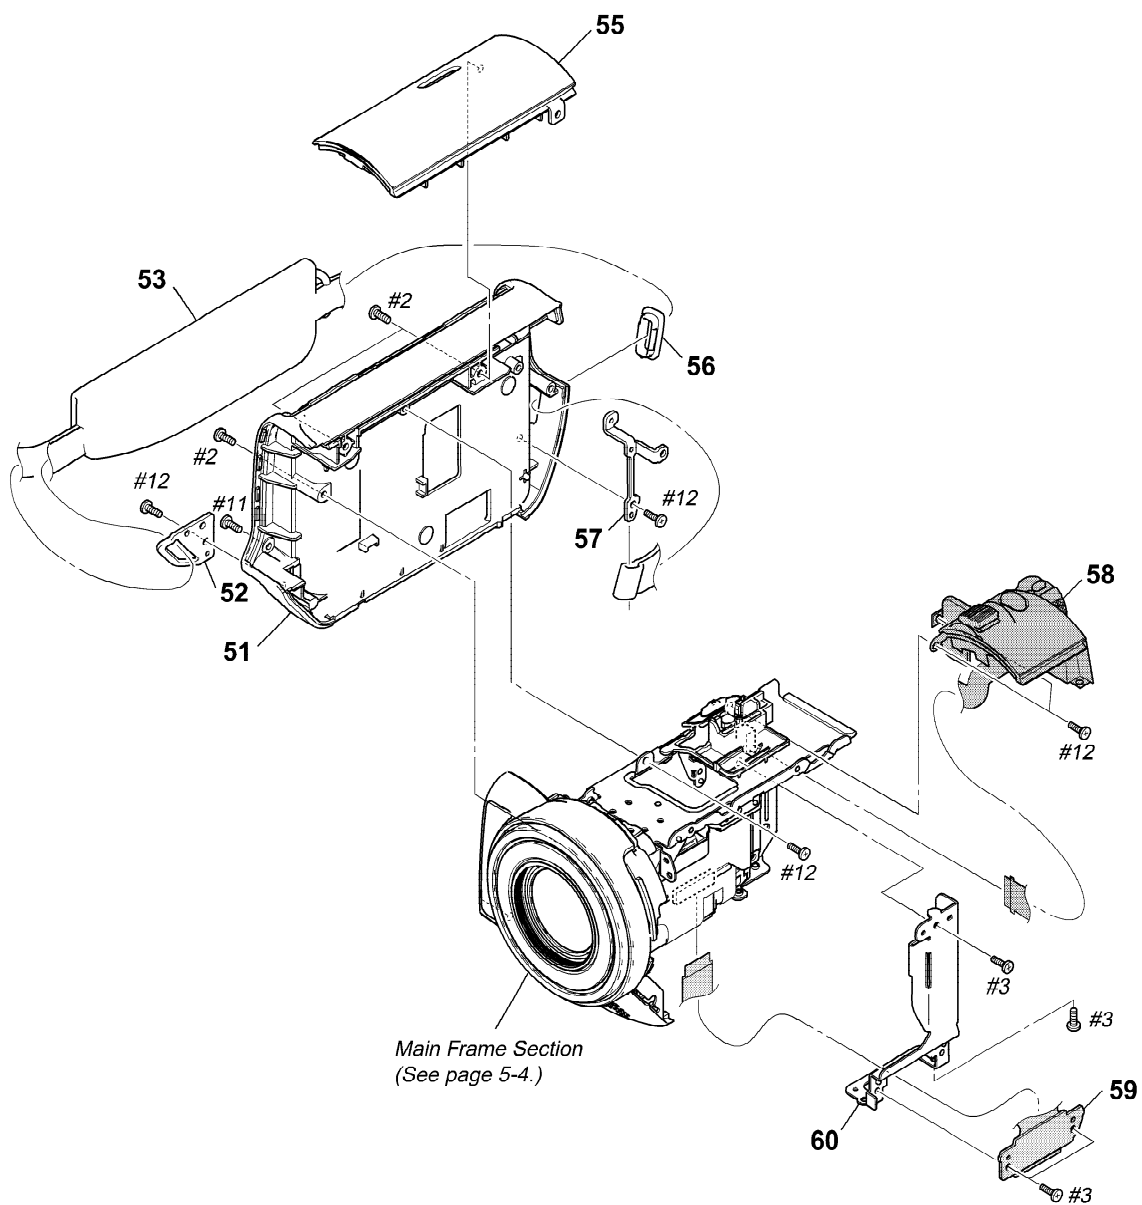

Ref. No.	Part No.	Description
51	2-697-534-21	CABINET (L)
* 52	2-697-536-01	PLATE (F), GRIP
53	2-664-928-21	BELT, GRIP
55	2-697-539-01	CABINET (UPPER) 730
56	2-697-535-01	GUARD, BELT
* 57	2-697-537-01	PLATE (R), GRIP
58	1-479-805-21	SWITCH BLOCK, CONTROL (PS80800)

Ref. No.	Part No.	Description
59	A-1202-560-A	FP-518 FLEXIBLE BOARD, COMPLETE
* 60	2-697-543-01	FRAME, CENTER
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. MAIN FRAME SECTION

ns: not supplied

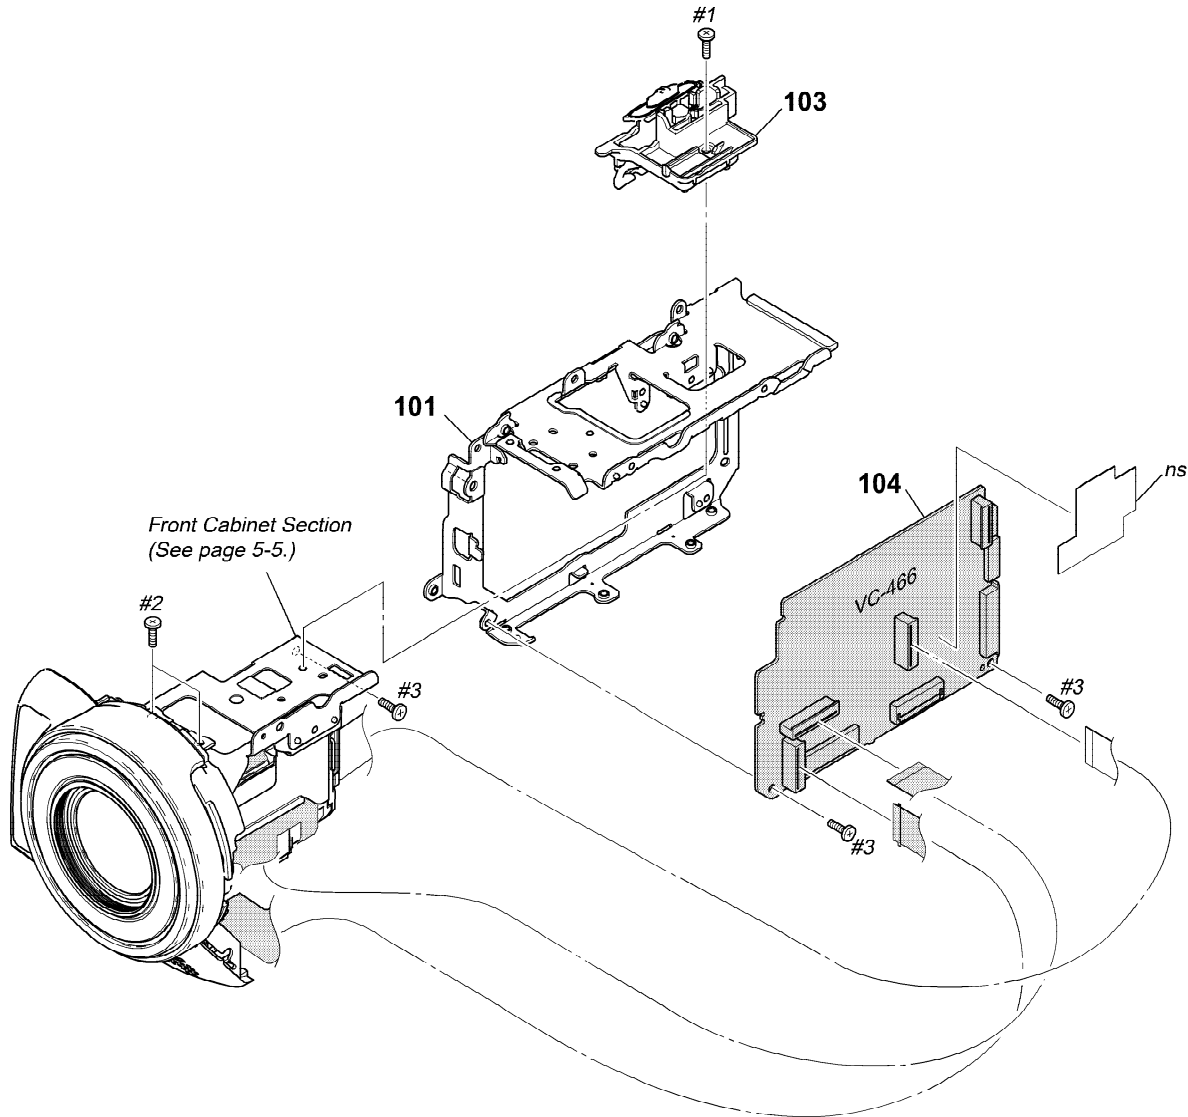

Ref. No.	Part No.	Description
101	2-697-542-01	FRAME, MAIN
103	X-2148-959-1	KNOB (730) ASSY, NS
104	A-1203-060-A	VC-466 BOARD, COMPLETE (SERVICE) (SR40/SR40E)
104	A-1203-062-A	VC-466 BOARD, COMPLETE (SERVICE) (SR30E)


Ref. No.	Part No.	Description
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-4. FRONT CABINET SECTION

ns: not supplied

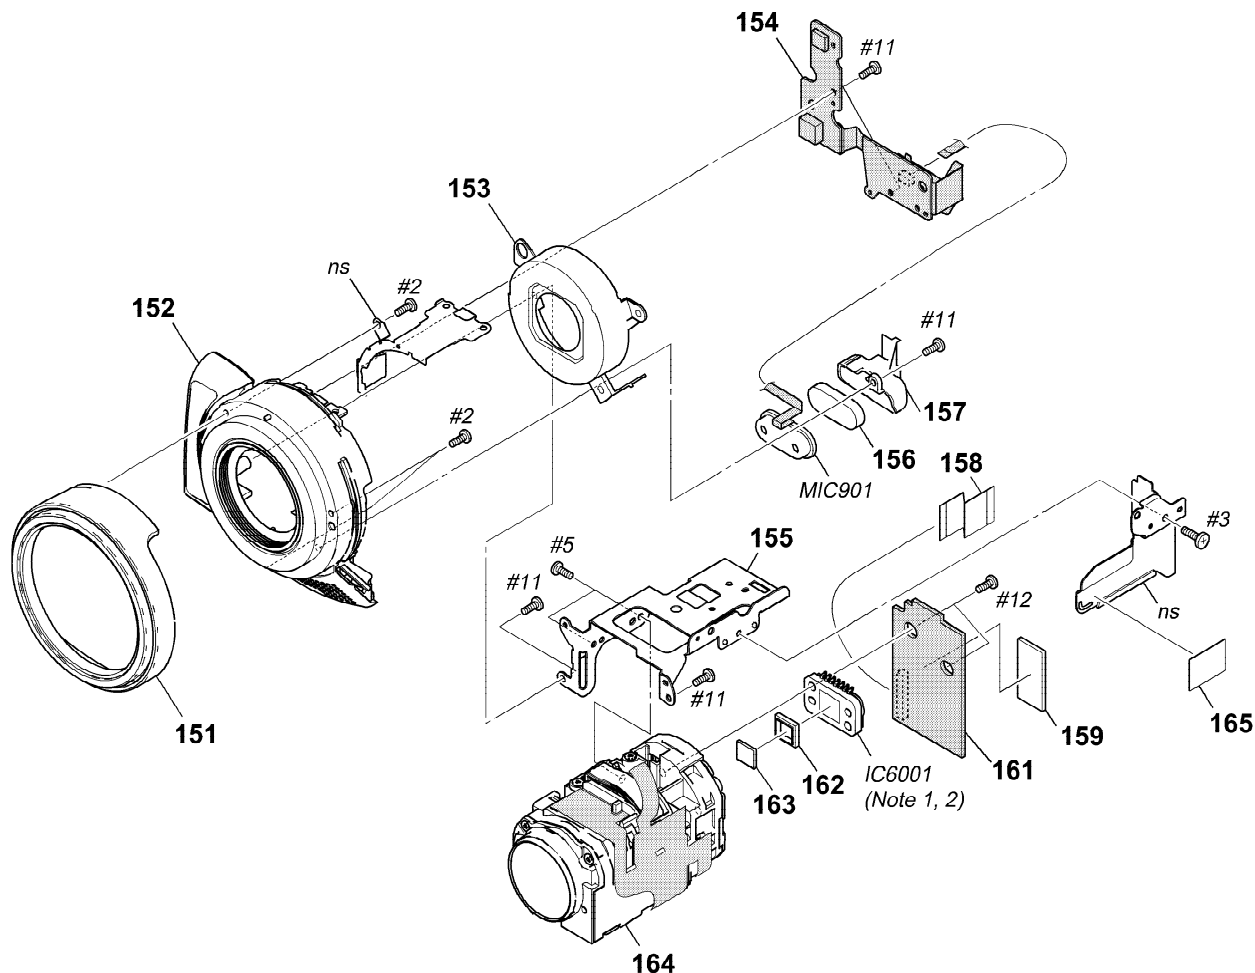

Note 1: IC6001 is not included in CD-658 complete board.

Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

Ref. No.	Part No.	Description
151	2-697-074-01	RING, LENS (730)
152	X-2148-956-1	CABINET (F) 730 ASSY
153	2-697-340-01	COVER (730), LENS
154	A-1202-636-A	FP-514 FLEXIBLE BOARD, COMPLETE
* 155	2-697-388-01	FRAME, LENS
* 156	2-667-297-01	CUSHION, MUFFLE
* 157	2-697-338-01	HOLDER, MICROPHONE
* 158	1-833-221-11	CABLE, FLEXIBLE FLAT (FFC-082)
* 159	2-697-393-01	SHEET (730), CD RADIATION
161	A-1202-564-A	CD-658 BOARD, COMPLETE
162	2-318-138-01	RUBBER, SEAL 1070
163	1-788-242-11	OPTICAL FILTER BLOCK

Ref. No.	Part No.	Description
164	1-788-332-11	OPTICS UNIT (EG03B)
165	2-590-635-01	TAPE AS 1/2
IC6001	8-753-244-70	ICX610NKF-13 (CCD IMAGER) (SR40) (Note 1, 2)
IC6001	8-753-244-71	ICX611NKF-13 (CCD IMAGER) (SR30E/SR40E) (Note 1, 2)
MIC901	1-542-660-11	MIC UNIT
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. CABINET (R) SECTION-1

ns: not supplied

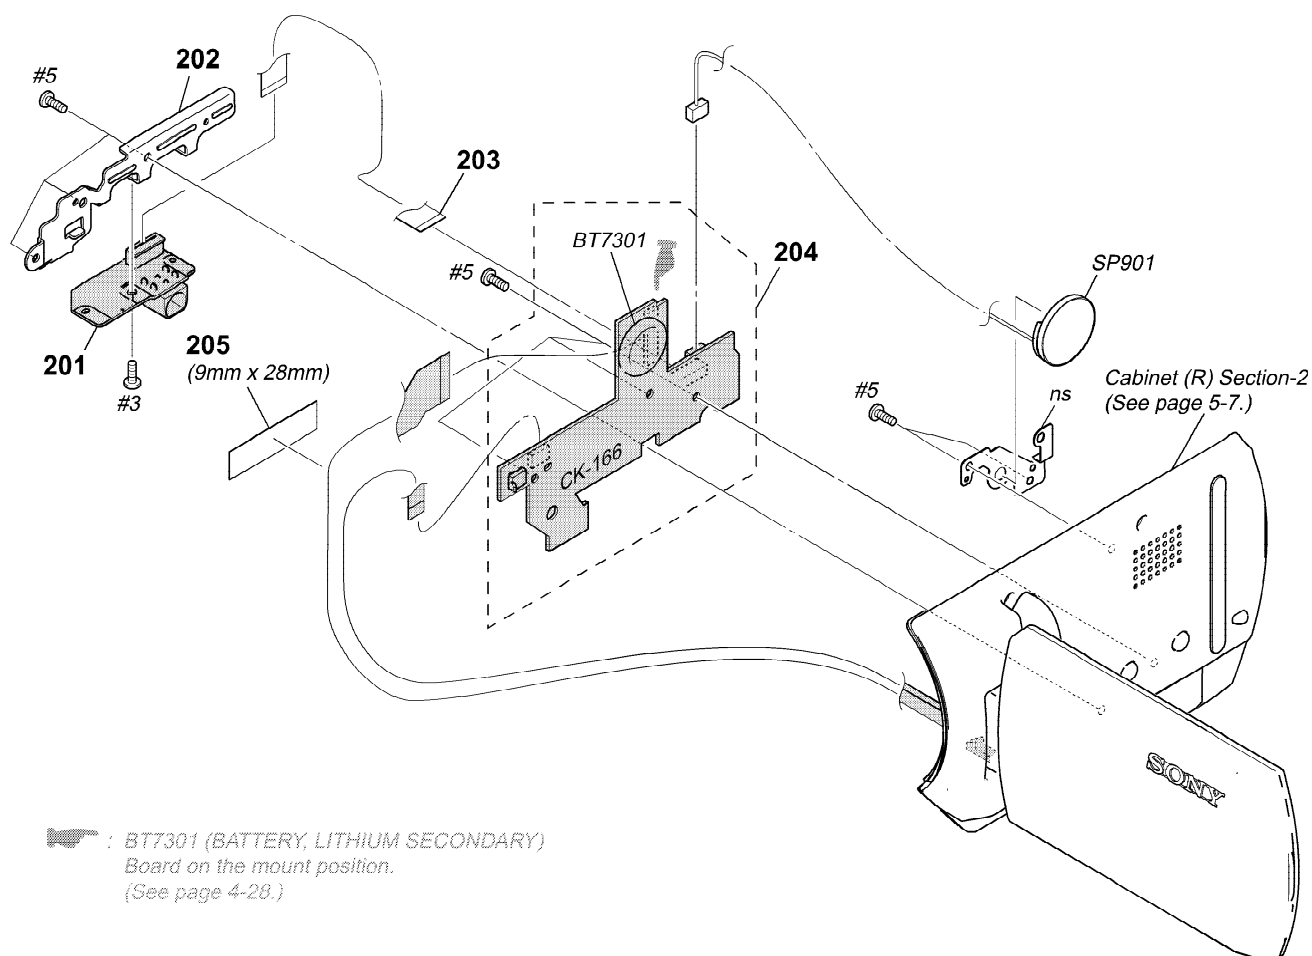

 : BT7301 (BATTERY, LITHIUM SECONDARY)
Board on the mount position.
(See page 4-28.)

CAUTION 1

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

CAUTION 2:

For the part of 205: TAPE AS (3-079-115-01), cut SHEET,
LENS FLEXIBLE (3-052-196-01) into the desired length and
use it.

• Refer to page 5-1 for mark Δ .

Ref. No.	Part No.	Description
201	A-1202-644-A	JK-317 BOARD, COMPLETE
* 202	2-697-374-01	FRAME, JK
* 203	1-833-220-11	CABLE, FLEXIBLE FLAT (FFC-079)
204	A-1202-632-A	CK-166 BOARD, COMPLETE
205	CAUTION 2	TAPE AS


Ref. No.	Part No.	Description
Δ BT7301	1-756-128-11	BATTERY, LITHIUM (SECONDARY)
SP901	1-825-262-81	LOUD SPEAKER (1.6CM)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. CABINET (R) SECTION-2

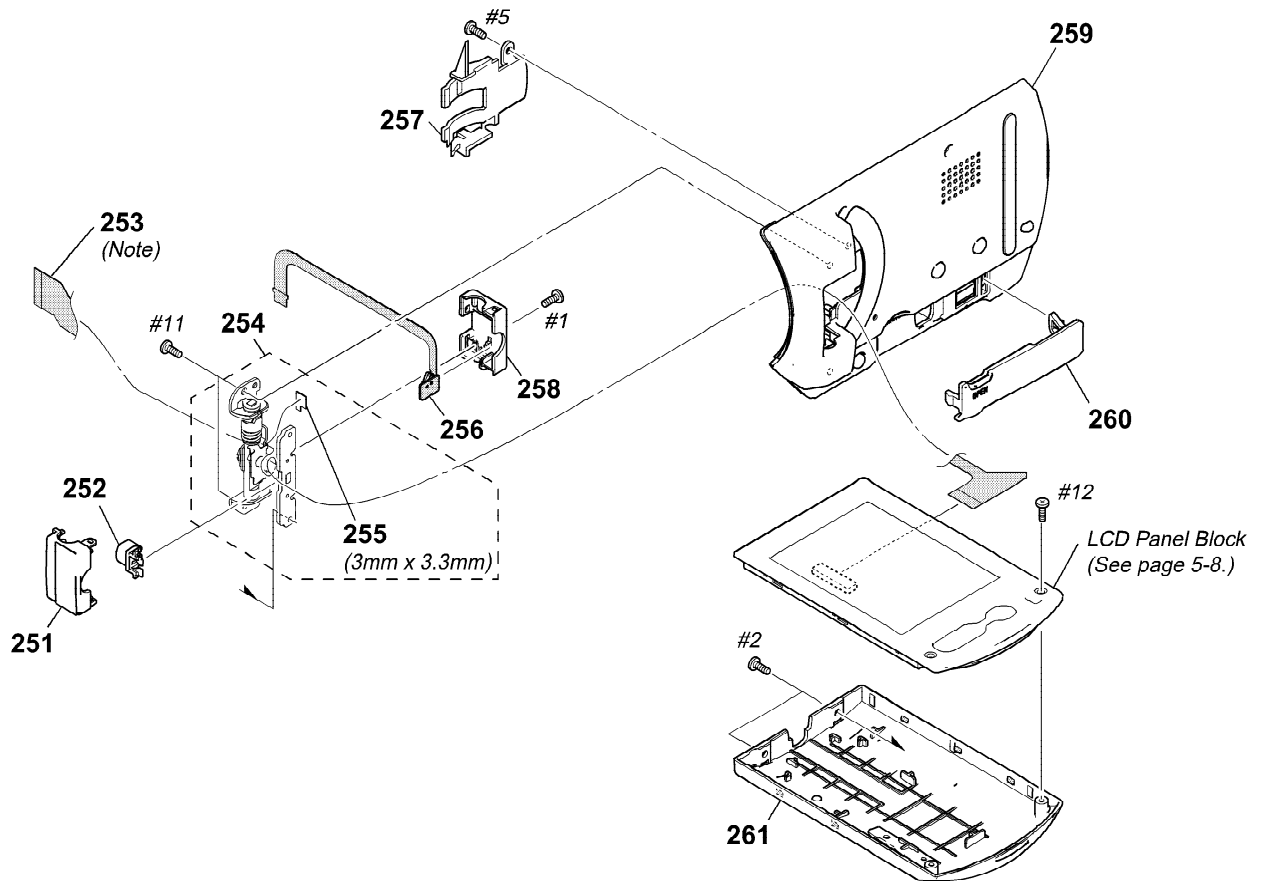

CAUTION:

For the part of 255: SHEET, ADHESIVE, HINGE (3-089-465-01), cut SHEET, ADHESIVE (2-649-300-01).

Note: Be sure to read "HELP" when you install the FP-365 flexible board.


Ref. No.	Part No.	Description
251	2-697-370-21	COVER (O), HINGE
252	2-668-087-01	CLAMP, FLEXIBLE
* 253	1-869-646-11	FP-365 FLEXIBLE BOARD (Note)
254	X-2108-475-1	HINGE ASSY
255	CAUTION	SHEET, ADHESIVE, HINGE
256	A-1168-382-A	FP-372 FLEXIBLE BOARD, COMPLETE
257	2-697-375-01	BLIND, HINGE
258	2-697-371-01	COVER (U), HINGE
259	X-2148-950-1	CABINET (R) 730 (E) ASSY

Ref. No.	Part No.	Description
260	X-2148-963-1	COVER (R) ASSY, JACK
261	X-2148-941-1	CABINET (C) (711) ASSY, P (SR30E)
261	X-2148-940-1	CABINET (C) (730) ASSY, P (SR40/SR40E)
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-7. LCD PANEL BLOCK

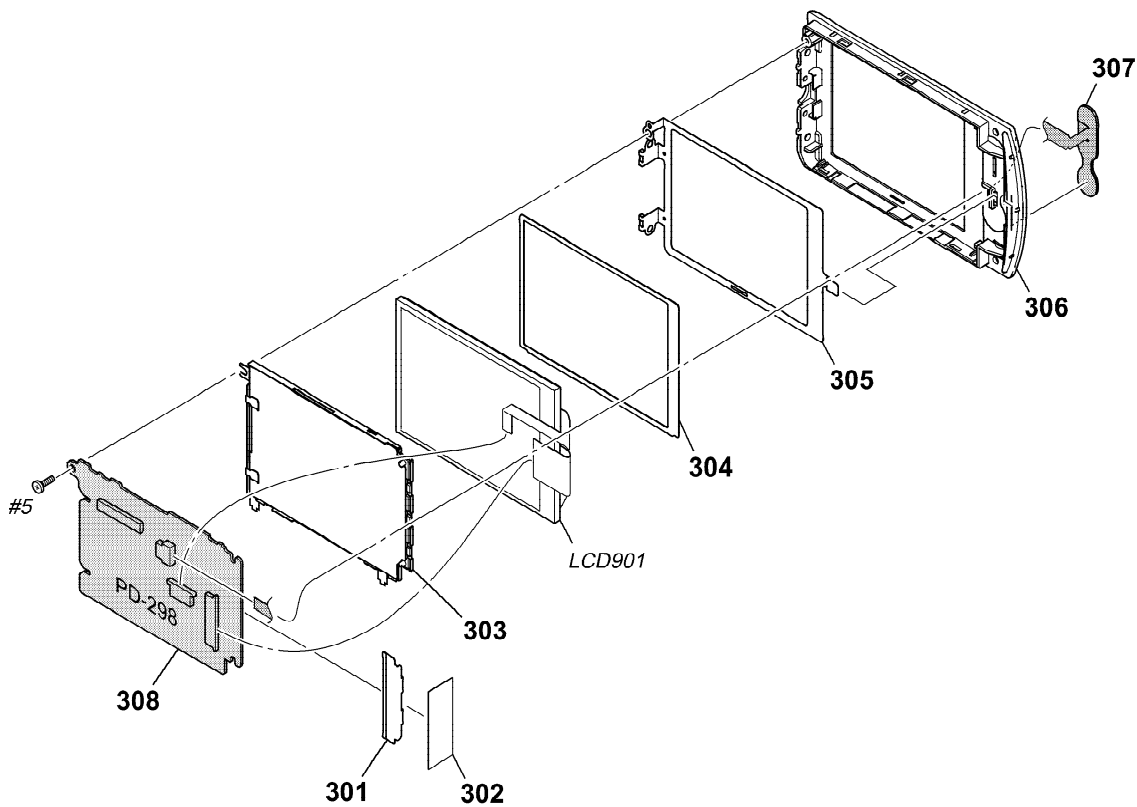


Ref. No.	Part No.	Description
* 301	2-638-780-01	CLIP
* 302	2-668-085-01	SHEET, P
303	A-1153-903-A	LIGHT GUIDE BLOCK (2.5)
* 304	2-697-369-01	CUSHION (730), PANEL
* 305	2-697-366-01	PLATE (730), P GROUND

Ref. No.	Part No.	Description
306	2-697-365-01	CABINET (M) (730), P
307	1-479-063-21	KEY BLOCK, CONTROL (SB9000)
308	A-1202-680-A	PD-298 BOARD, COMPLETE
LCD901	A-1202-054-A	TP BLOCK ASSY (25ESTGU06)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-8. BT PANEL BLOCK

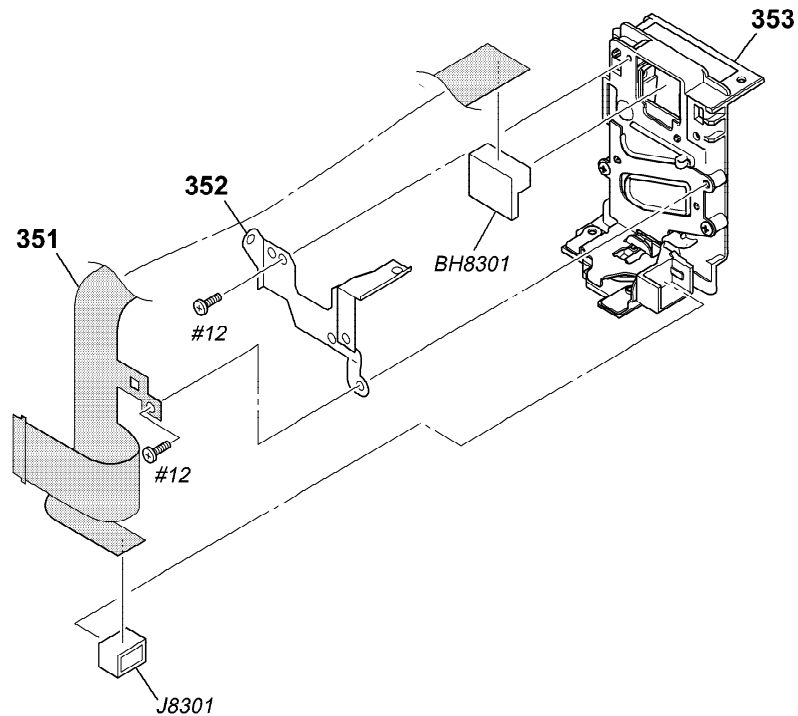

Ref. No.	Part No.	Description
* 351	1-870-463-11	FP-516 FLEXIBLE BOARD
* 352	2-697-544-01	RETAINER, TERMINAL BOARD
353	X-2148-989-1	PANEL ASSY, BT
BH8301	1-780-064-21	BATTERY TERMINAL BOARD

Ref. No.	Part No.	Description
J8301	1-815-792-11	CONNECTOR, DC-IN (7.2V) (DC IN)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
A-1202-564-A	CD-658 BOARD, COMPLETE	***** (IC6001 is not included in CD-658 complete board.)
< CAPACITOR >		
C6001	1-104-851-11	TANTAL. CHIP 10uF 20% 10V
C6002	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6003	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6004	1-113-987-11	TANTAL. CHIP 4.7uF 20% 25V
C6005	1-164-850-11	CERAMIC CHIP 10PF 0.5PF 50V
C6006	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6101	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6102	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6103	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6104	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6105	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C6106	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C6107	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C6108	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C6109	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C6110	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C6111	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C6112	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C6113	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
< CONNECTOR >		
* CN6001	1-766-350-51	CONNECTOR, FFC/FPC 20P
< FERRITE BEAD >		
FB6101	1-469-116-21	FERRITE, EMI (SMD) (1608)
FB6102	1-469-116-21	FERRITE, EMI (SMD) (1608)
FB6103	1-469-116-21	FERRITE, EMI (SMD) (1608)
FB6104	1-469-116-21	FERRITE, EMI (SMD) (1608)
< IC >		
IC6001	8-753-244-70	ICX610NKF-13 (CCD IMAGER) (SR40) (Note)
IC6001	8-753-244-71	ICX611NKF-13 (CCD IMAGER) (SR30E/SR40E) (Note)
IC6101	8-759-489-19	IC uPC6756GR-8JG-E2
< COIL >		
L6002	1-469-528-91	INDUCTOR 100uH
L6003	1-469-525-91	INDUCTOR 10uH
L6101	1-400-588-11	INDUCTOR 10uH
< TRANSISTOR >		
Q6001	8-729-117-73	TRANSISTOR 2SC4178-F14
< RESISTOR >		
R6001	1-218-959-11	RES-CHIP 3.3K 5% 1/16W
R6101	1-218-965-11	RES-CHIP 10K 5% 1/16W
R6102	1-218-989-11	RES-CHIP 1M 5% 1/16W
R6103	1-218-989-11	RES-CHIP 1M 5% 1/16W
R6104	1-218-965-11	RES-CHIP 10K 5% 1/16W

Ref. No.	Part No.	Description
< COMPOSITION CIRCUIT BLOCK >		
RB6101	1-234-379-21	RES, NETWORK 22K (1005X4)
< SENSOR >		
SE6101	1-479-022-51	SENSOR, ANGULAR VELOCITY (30.8 kHz) (PITCH)
SE6102	1-479-022-61	SENSOR, ANGULAR VELOCITY (32.2 kHz) (YAW)
A-1202-632-A CK-166 BOARD, COMPLETE *****		
< BATTERY >		
△BT7301	1-756-128-11	BATTERY, LITHIUM (SECONDARY)
< CAPACITOR >		
C7304	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
< CONNECTOR >		
CN7301	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
CN7302	1-779-331-51	CONNECTOR, FFC/FPC 14P
CN7303	1-691-388-51	CONNECTOR, FFC/FPC 24P
* CN7304	1-817-554-51	CONNECTOR, FFC/FPC 6P
* CN7305	1-819-781-51	CONNECTOR, FPC (ZIF) 45P
< RESISTOR >		
R7302	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R7303	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R7304	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R7305	1-218-960-11	RES-CHIP 3.9K 5% 1/16W
< SWITCH >		
S7302	1-771-138-82	SWITCH, KEY BOARD (BACK LIGHT)
S7303	1-771-138-82	SWITCH, KEY BOARD (DISP/BATT INFO)
S7304	1-786-148-11	SWITCH, PUSH (1 KEY) (PANEL OPEN/CLOSE)
S7305	1-771-138-82	SWITCH, KEY BOARD (EASY)
S7306	1-771-138-82	SWITCH, KEY BOARD (RESET)
A-1168-382-A FP-372 FLEXIBLE BOARD, COMPLETE *****		
< SWITCH >		
S301	1-786-680-21	SWITCH, DETECTION (SMD) (PANEL REVERSE)

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

Note: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

• Refer to page 5-1 for mark △.

FP-514

FP-515

FP-516

FP-518

JK-317

PD-298

Ref. No.	Part No.	Description
	A-1202-636-A	FP-514 FLEXIBLE BOARD, COMPLETE *****
		< CONNECTOR >
CN8101	1-779-327-51	CONNECTOR, FFC/FPC 6P
		< DIODE >
D8101	6-500-512-01	DIODE CL-330IRS-X-TU (NIGHTSHOT)
	A-1202-561-A	FP-515 FLEXIBLE BOARD, COMPLETE *****
		< RESISTOR >
R8401	1-218-929-11	RES-CHIP 10 5% 1/16W
R8402	1-218-929-11	RES-CHIP 10 5% 1/16W
R8403	1-218-929-11	RES-CHIP 10 5% 1/16W
R8404	1-218-929-11	RES-CHIP 10 5% 1/16W
R8405	1-218-929-11	RES-CHIP 10 5% 1/16W
R8406	1-218-929-11	RES-CHIP 10 5% 1/16W
R8407	1-218-929-11	RES-CHIP 10 5% 1/16W
R8408	1-218-929-11	RES-CHIP 10 5% 1/16W
R8409	1-218-929-11	RES-CHIP 10 5% 1/16W
R8410	1-218-929-11	RES-CHIP 10 5% 1/16W
R8411	1-218-929-11	RES-CHIP 10 5% 1/16W
R8412	1-218-929-11	RES-CHIP 10 5% 1/16W
R8413	1-218-929-11	RES-CHIP 10 5% 1/16W
R8414	1-218-929-11	RES-CHIP 10 5% 1/16W
R8415	1-218-929-11	RES-CHIP 10 5% 1/16W
R8416	1-218-929-11	RES-CHIP 10 5% 1/16W
*	1-870-463-11	FP-516 FLEXIBLE BOARD ***** (BH8301 and J8301 are not included in FP-516 flexible board.)
		< BATTERY TERMINAL >
BH8301	1-780-064-21	BATTERY TERMINAL BOARD
		< JACK >
J8301	1-815-792-11	CONNECTOR, DC-IN (7.2V) (DC IN)
	A-1202-560-A	FP-518 FLEXIBLE BOARD, COMPLETE ***** (CN8201 is not supplied, but this is included in FP-518 flexible complete board.)
		< CONNECTOR >
CN8201	(Not supplied)	CONNECTOR, MULTIPLE (SOCKET) (INTERFACE CONNECTOR)
		< RESISTOR >
R8201	1-216-864-11	SHORT CHIP 0

Ref. No.	Part No.	Description
	A-1202-644-A	JK-317 BOARD, COMPLETE *****
		< CONNECTOR >
CN8001	1-779-331-51	CONNECTOR, FFC/FPC 14P
CN8002	1-815-794-13	CONNECTOR (MULTIPLE) (A/V)
		< FERRITE BEAD >
FB8001	1-500-444-11	FERRITE, EMI (SMD) (1608)
FB8002	1-500-444-11	FERRITE, EMI (SMD) (1608)
FB8003	1-500-444-11	FERRITE, EMI (SMD) (1608)
FB8004	1-500-444-11	FERRITE, EMI (SMD) (1608)
FB8005	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
FB8006	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
FB8007	1-500-444-11	FERRITE, EMI (SMD) (1608)
		< VARISTOR >
VD8001	1-803-974-21	VARISTOR, CHIP (1608)
VD8002	1-803-974-21	VARISTOR, CHIP (1608)
VD8003	1-803-974-21	VARISTOR, CHIP (1608)
VD8004	1-801-923-11	VARISTOR, CHIP (1608)
VD8005	1-801-923-11	VARISTOR, CHIP (1608)
VD8006	1-801-923-11	VARISTOR, CHIP (1608)
	A-1202-680-A	PD-298 BOARD, COMPLETE *****
		< CAPACITOR >
C6501	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C6503	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V
C6504	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C6505	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6506	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6507	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6508	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C6510	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C6511	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6512	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C6516	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C6517	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C6518	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6519	1-125-889-91	CERAMIC CHIP 2.2uF 10% 10V
C6521	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6524	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6525	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6526	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
		< CONNECTOR >
* CN6502	1-818-069-51	CONNECTOR, FFC/FPC (ZIF) 6P
* CN6503	1-691-370-51	CONNECTOR, FFC/FPC 6P
* CN6504	1-785-905-51	CONNECTOR, FFC/FPC (ZIF) 24P
* CN6505	1-785-905-51	CONNECTOR, FFC/FPC (ZIF) 24P
		< DIODE >
D6503	8-719-074-67	DIODE EDZ-TE61-5.6B
* D6505	6-501-476-01	DIODE NSSW008CT-T071 (LCD BACKLIGHT)
* D6506	6-501-476-01	DIODE NSSW008CT-T071 (LCD BACKLIGHT)

PD-298

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
* D6507	6-501-476-01	DIODE NSSW008CT-T071 (LCD BACKLIGHT)

< FERRITE BEAD >

FB6501	1-400-619-11	BEAD, FERRITE (CHIP) (1608)
--------	--------------	-----------------------------

< IC >

* IC6501	8-753-242-24	IC CXM3018R-T4
----------	--------------	----------------

< COIL >

L6501	1-400-588-11	INDUCTOR	10uH
L6502	1-400-588-11	INDUCTOR	10uH
L6504	1-400-588-11	INDUCTOR	10uH

< TRANSISTOR >

Q6501	8-729-427-37	TRANSISTOR	XP411F-TXE
Q6502	8-729-427-67	TRANSISTOR	XP421F-TXE
Q6503	6-550-232-01	TRANSISTOR	2SA2029T2LQ/R
Q6504	6-550-234-01	TRANSISTOR	UNR32A300LS0
Q6505	8-729-041-23	TRANSISTOR	NDS356AP


< RESISTOR >

R6502	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R6503	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R6504	1-218-975-11	RES-CHIP	68K	5%	1/16W
R6508	1-218-949-11	RES-CHIP	470	5%	1/16W
R6509	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6510	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R6515	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6516	1-218-978-11	RES-CHIP	120K	5%	1/16W
R6517	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6518	1-218-989-11	RES-CHIP	1M	5%	1/16W


Electrical parts list of the VC-466 board is not shown.
Pages 5-13 to 5-18 are not shown.

Checking supplied accessories.


Note: This item is supplied with the unit as an accessory, but is not prepared as a service part.

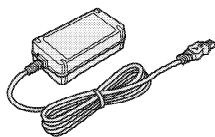

 
AC Adaptor
(AC-L25A/L25B)
△ 1-479-288-13




Power Cord
△ 1-555-074-71 (AUS)
△ 1-782-476-41 (CH)
△ 1-783-374-22 (HK)
△ 1-790-107-51 (US, CND)
△ 1-824-910-31 (AEP, E: PAL)
△ 1-827-269-22 (UK)
△ 1-830-518-31 (E: NTSC)

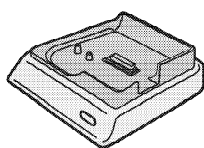

 
Handycam Station
(DCRA-C162)
△ 1-820-475-21



A/V Connecting Cable
1-831-553-11

 

USB Cable
1-829-579-41

 


Rechargeable Battery Pack
(NP-FP50)
(Note)



Conversion (2P) Adaptor
△ 1-569-008-12
(HK)



 
Conversion (2P) Adaptor
△ 1-569-007-12
(E: NTSC)



Lens Cap
X-3954-400-1



 21-Pin Adaptor
1-770-783-21
(UK, NE)



CD-ROM
"ImageMixer for HDD Camcorder" (Software)
"Handycam Handbook" (PDF)
2-698-873-01

• Refer to page 5-1 for mark △.

Checking supplied accessories.


Other accessories

2-887-134-11	MANUAL, INSTRUCTION (ENGLISH) (SR40)	2-698-880-01	HANDBOOK (PDF) (JAPANESE) (Note)
2-887-134-21	MANUAL, INSTRUCTION (FRENCH) (SR40: GND)	2-698-880-11	HANDBOOK (PDF) (ENGLISH) (Note)
2-887-134-31	MANUAL, INSTRUCTION (SPANISH) (SR40: E)	2-698-880-21	HANDBOOK (PDF) (FRENCH) (Note)
2-887-135-11	MANUAL, INSTRUCTION (ENGLISH) (SR30E: UK, AEP/SR40E: AEP, E, HK, AUS)	2-698-880-31	HANDBOOK (PDF) (ITALIAN) (Note)
2-887-135-21	MANUAL, INSTRUCTION (FRENCH) (SR30E: AEP/SR40E: AEP)	2-698-880-41	HANDBOOK (PDF) (PORTUGUESE) (Note)
2-887-135-31	MANUAL, INSTRUCTION (GERMAN, DUTCH) (SR30E: AEP/SR40E: AEP)	2-698-880-51	HANDBOOK (PDF) (TRADITIONAL CHINESE) (Note)
2-887-135-51	MANUAL, INSTRUCTION (SPANISH, PORTUGUESE) (SR30E: AEP/SR40E: AEP)	2-698-880-61	HANDBOOK (PDF) (KOREAN) (Note)
2-887-135-61	MANUAL, INSTRUCTION (ITALIAN, GREEK) (SR30E: AEP/SR40E: AEP)	2-698-884-11	HANDBOOK (PDF) (ENGLISH) (Note)
2-887-135-71	MANUAL, INSTRUCTION (RUSSIAN, SWEDISH) (SR30E: AEP/SR40E: AEP)	2-698-884-21	HANDBOOK (PDF) (FRENCH) (Note)
2-887-135-81	MANUAL, INSTRUCTION (DANNISH, FINNISH) (SR30E: AEP/SR40E: AEP)	2-698-884-31	HANDBOOK (PDF) (GERMAN) (Note)
2-887-135-91	MANUAL, INSTRUCTION (POLISH, CZECH) (SR30E: AEP/SR40E: AEP)	2-698-884-41	HANDBOOK (PDF) (DUTCH) (Note)
2-887-136-11	MANUAL, INSTRUCTION (HUNGARIAN, SLOVAK) (SR30E: AEP/SR40E: AEP)	2-698-884-51	HANDBOOK (PDF) (TURKISH) (Note)
2-887-136-21	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) (SR40E: E, CH)	2-698-884-61	HANDBOOK (PDF) (SPANISH) (Note)
2-887-136-61	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (SR40E: HK)	2-698-884-71	HANDBOOK (PDF) (PORTUGUESE) (Note)
2-887-136-71	MANUAL, INSTRUCTION (ARABIC, PERUSIAN) (SR40E: E)	2-698-884-81	HANDBOOK (PDF) (ITALIAN) (Note)
		2-698-884-91	HANDBOOK (PDF) (GREEK) (Note)
		2-698-885-11	HANDBOOK (PDF) (RUSSIAN) (Note)
		2-698-885-21	HANDBOOK (PDF) (SWEDISH) (Note)
		2-698-885-31	HANDBOOK (PDF) (DANNISH) (Note)
		2-698-885-41	HANDBOOK (PDF) (FINNISH) (Note)
		2-698-885-51	HANDBOOK (PDF) (POLISH) (Note)
		2-698-885-61	HANDBOOK (PDF) (CZECH) (Note)
		2-698-885-71	HANDBOOK (PDF) (HUNGARIAN) (Note)
		2-698-885-81	HANDBOOK (PDF) (SLOVAK) (Note)
		2-698-885-91	HANDBOOK (PDF) (SIMPLIFIED CHINESE) (Note)
		2-698-886-11	HANDBOOK (PDF) (THAI) (Note)
		2-698-886-21	HANDBOOK (PDF) (INDONESIAN) (Note)
		2-698-886-31	HANDBOOK (PDF) (MALAYAN) (Note)
		2-698-886-41	HANDBOOK (PDF) (TRADITIONAL CHINESE) (Note)
		2-698-886-51	HANDBOOK (PDF) (ARABIC) (Note)
		2-698-886-61	HANDBOOK (PDF) (PERUSIAN) (Note)


Note: Handbooks (PDF) of each language are included in CD-ROM "ImageMixer for HDD Camcorder" (Software)/ "Handycam Handbook" (PDF).

HARDWARE LIST (1/3)


#1: M1.7 X 2.5
(Black)
2-635-562-11

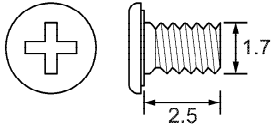


#2: M1.7 X 4.0
(Black)
2-635-562-31

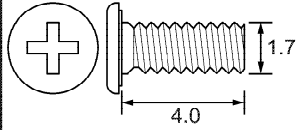


#3: M1.7 X 2.5
(Red)
2-660-401-01

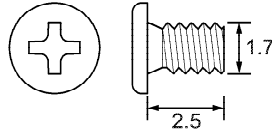


#4: M1.4 X 2.5 (Tapping)
(Dark Silver)
3-348-998-81

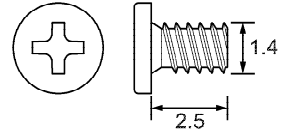


#5: M1.7 X 3.5 (Tapping)
(Black)
3-080-204-01

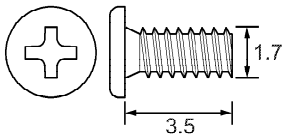


#6: M1.4 X 1.7
(Silver)
2-598-474-01

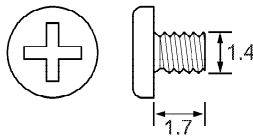


#7: M1.7 X 1.6
(Black)
7-627-552-18

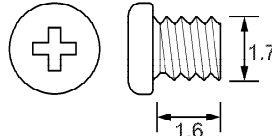


#8: M1.7 X 3.5 (Tapping)
(Silver)
3-078-890-01

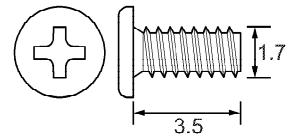


#9: M1.7 X 5.0 (Tapping)
(Silver)
3-078-890-21

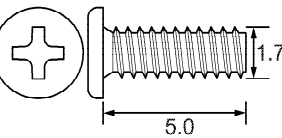


#10: M1.7 X 4.0
(Silver)
2-599-475-31

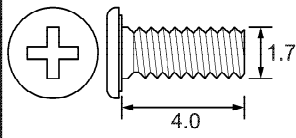


#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

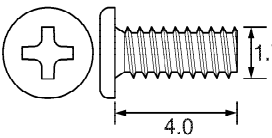


#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21

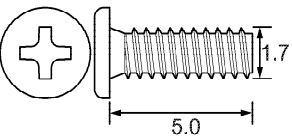


#13: M1.7 X 2.5 (Tapping)
(Silver)
3-085-397-01

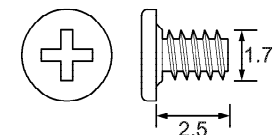


#14: M1.7 X 2.5
(Silver)
2-599-475-11

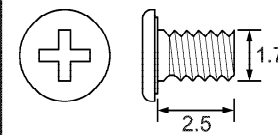


#15: M1.4 X 1.5
(Silver)
3-062-214-01

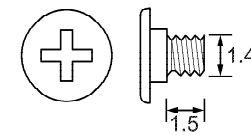


#16: M1.4 X 2.5
(Silver)
2-586-337-01

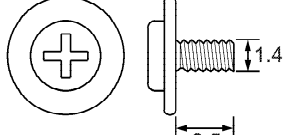


#17: M1.7 X 1.5
(Silver)
2-586-389-01

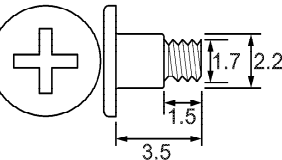


#18: M1.4 X 2.5
(Silver)
2-635-591-21

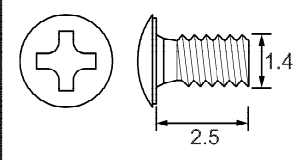

#19: M1.2 X 4.0 (Tapping)
(Red)
3-086-156-21

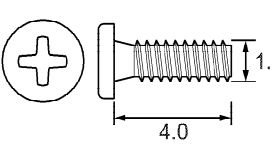


#20: M1.4 X 3.0
(Silver)
2-635-591-31

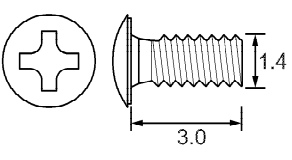


HARDWARE LIST (2/3)


#21: M1.4 X 3.0
(Black)
2-662-396-21

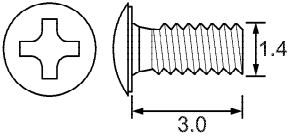


#22: M1.7 X 5.0 (Tapping)
(Silver)
3-083-261-01

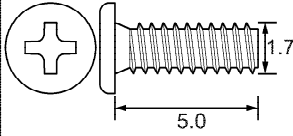


#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11

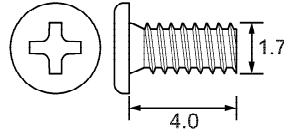


#24: B1.7 X 5.5 (Tapping)
(Black)
4-679-805-11

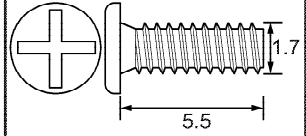


#25: M1.7 X 3.0
(Black)
2-635-562-21

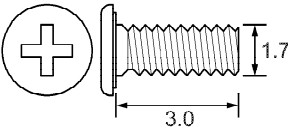


#26: M1.4 X 2.0
(Silver)
2-635-591-11

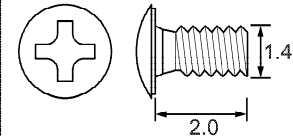


#27: M1.4 X 2.0
(Black)
2-662-396-11

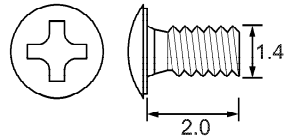


#28: M1.4 X 4.0 (Tapping)
(Dark Silver)
3-348-998-61

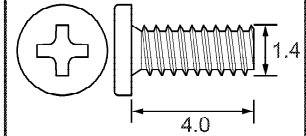


#29: M1.4 X 2.5
(Black)
2-662-396-01

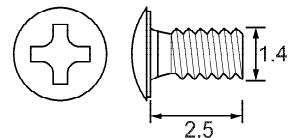


#30: M1.2 X 4.0 (Tapping)
(White)
3-086-156-11

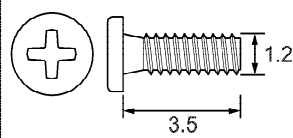


#31: M3.0 X 4.0
(Silver)
2-102-434-01

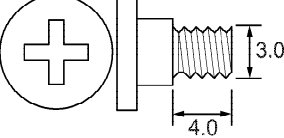


#32: M2.0 X 4.5 (Tapping)
(Silver)
2-102-498-01

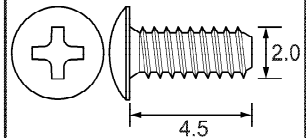


#33: M3.0 X 6.0
(Silver)
3-077-331-21

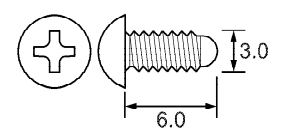


#34: M3.0 X 8.0
(Black)
3-077-331-41

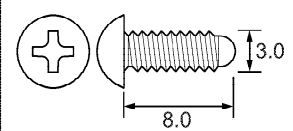


#35: M4.0 X 6.0 (Tapping)
(Silver)
3-975-291-02

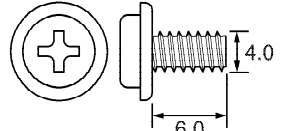


#36: M3.0 X 6.0
(Silver)
4-886-821-11

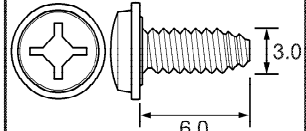


#37: M2.0 X 6.0 (Tapping)
(Black)
3-080-206-31

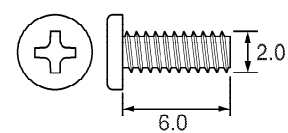


#38: M3.0 X 20.0 (Tapping)
(Silver)
7-685-651-79

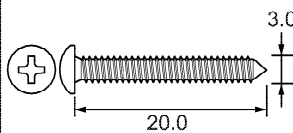

#39: M2.6 X 5.0 (Tapping)
(Black)
7-685-791-09

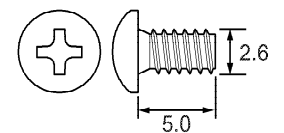


#40: M2.0 X 4.0 (Tapping)
(Silver)
7-685-851-04

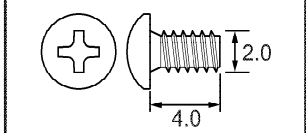

HARDWARE LIST (3/3)

#41: M3.0 X 8.0 (Tapping)
(Silver)
3-065-748-01

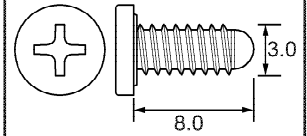

#42: M2.0 X 4.0 (Tapping)
(Silver)
7-628-253-00

