


5. REPAIR PARTS LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL ASSEMBLY-1

ns: not supplied

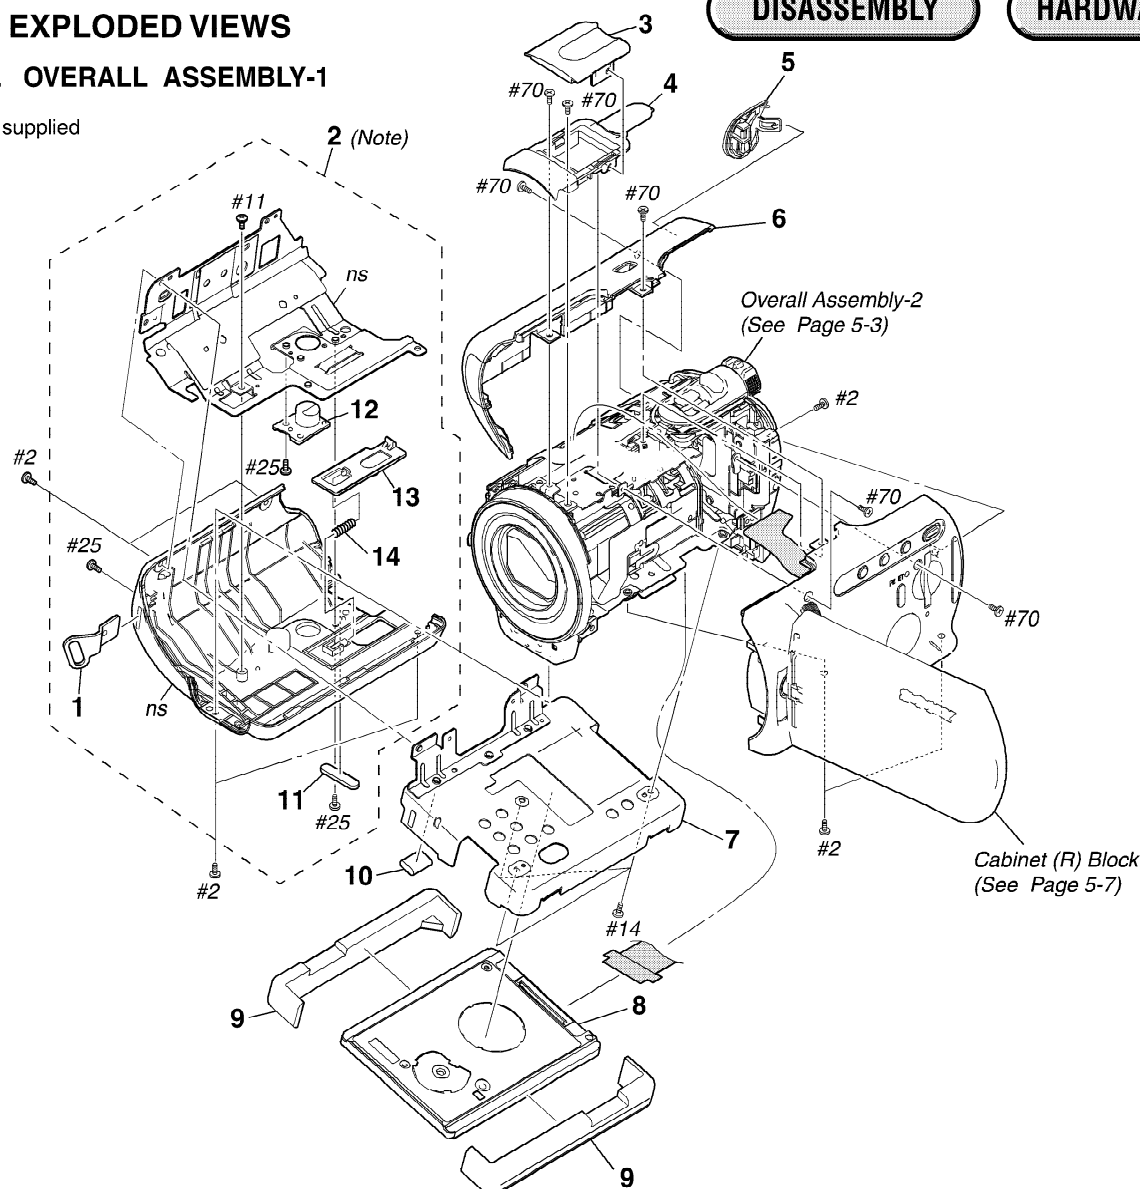

Note : キャビネットボトムの変換時は1-4ページの "Note for replacing the cabinet bottom" を参照してください。

Note : Refer to page 1-4 "Note for replacing the cabinet bottom" when changing the bottom.

Ref. No.	Part No.	Description
* 1	3-098-250-01	SHEET METAL (FRONT), BELT
2	(Note)	BOTTOM, CABINET
3	3-098-171-01	COVER (2310), SHOE
3	3-098-321-11	COVER (2370), SHOE (SR32E/SR33E/SR42/SR42A/SR42E/SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
4	3-098-174-01	CABINET (2310), SHOE
4	3-098-174-11	CABINET (2310), SHOE (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
5	3-098-158-11	COVER, JACK (SR32E/SR33E/SR42/SR42A/SR42E/SR52E/SR62/SR62E)
5	3-098-158-21	COVER, JACK (SR72E/SR82/SR82C/SR82E)
6	X-2177-029-1	CABINET (L (2310)) ASSY
6	X-2177-030-1	CABINET (L (2320)) ASSY (SR62: J)
6	X-2177-031-1	CABINET (L (2330)) ASSY
6	X-2177-032-1	CABINET (L (2320)) ASSY
		(SR52E/SR62: EXCEPT J/SR62E)


Ref. No.	Part No.	Description
7	X-2177-028-1	CASE ASSY, HD
8	1-797-512-11	HDD (MK3008GAL-30GB) (S)
8	1-797-659-11	HDD (MK6008GAH-60GB)
		(SR42A/SR72E/SR82/SR82E)
8	1-797-808-11	HDD (MK4009GAL-40GB) (SR33E)
8	1-797-867-11	HDD (MK1011GAH-100GB) (SR82C)
9	3-098-175-01	DAMPER (07), DM
* 10	3-098-173-01	GASKET (A)
* 11	3-098-251-01	FOOT, RUBBER
12	2-664-982-01	SCREW, TRIPOD
* 13	3-098-248-01	KNOB, BT RELEASE
* 14	3-098-252-01	SPRING, BT LOCK
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)
#25	2-635-562-21	SCREW (M1.7) (Black)
#70	2-599-475-41	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. OVERALL ASSEMBLY-2

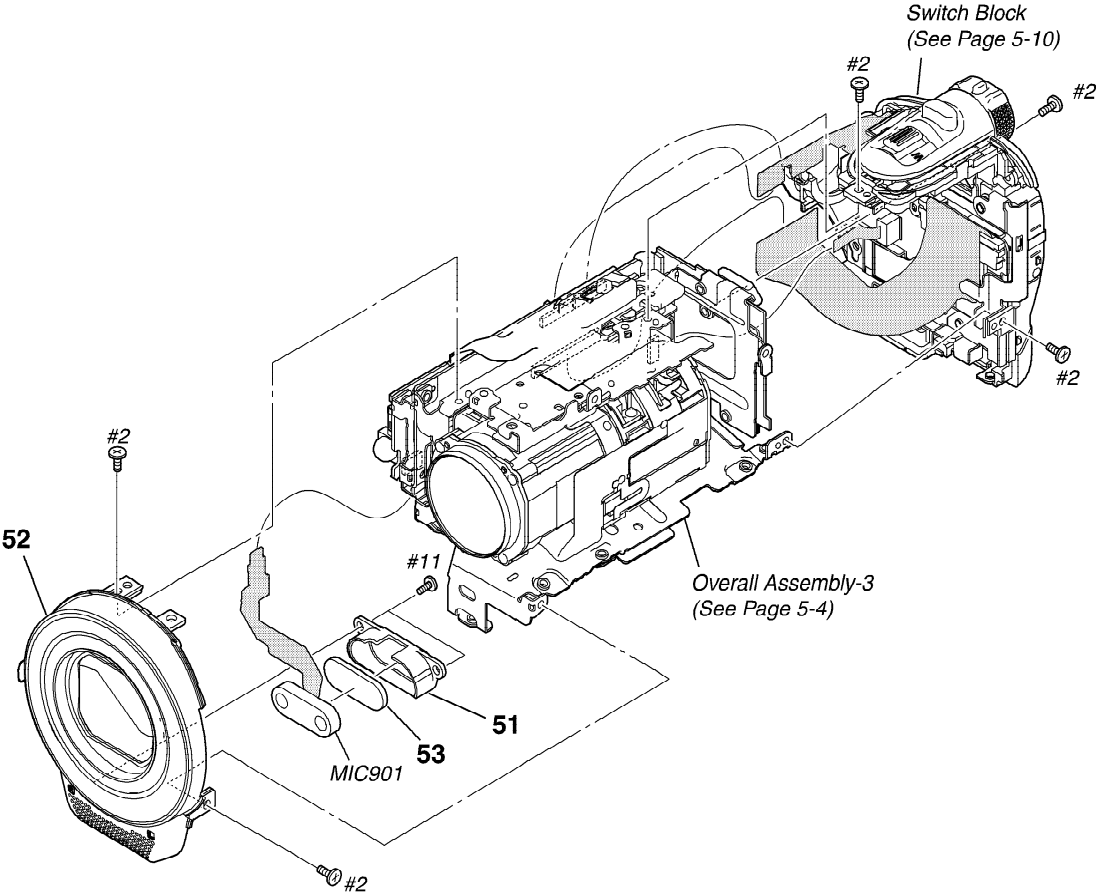

Ref. No.	Part No.	Description
51	3-098-317-01	RETAINER, MICROPHONE
52	X-2177-045-1	PANEL (2310) ASSY, F (SR32E/SR33E/SR42/SR42A/SR42E)
52	X-2177-046-1	PANEL (2320) ASSY, F (SR52E/SR62/SR62E/ SR72E/SR82/SR82C/SR82E)
* 53	2-667-297-01	CUSHION, MUFFLE

Ref. No.	Part No.	Description
MIC901	1-542-660-21	MIC UNIT
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. OVERALL ASSEMBLY-3

ns: not supplied

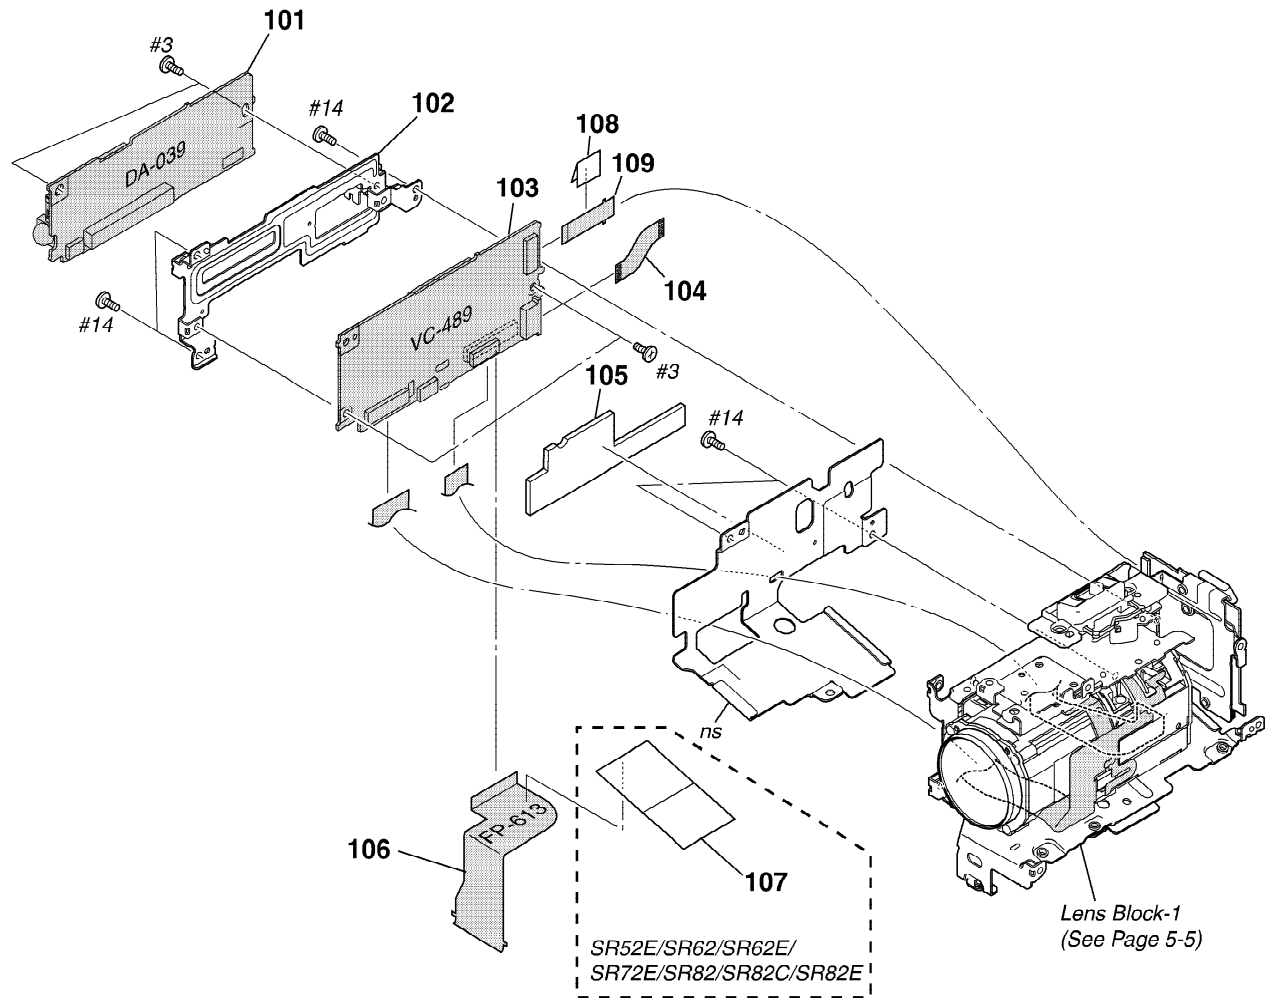

Ref. No.	Part No.	Description
101	A-1244-917-A	DA-039 BOARD, COMPLETE (SR52E/SR62/ SR62E/SR72E/SR82/SR82C/SR82E)
101	A-1244-918-A	DA-039 BOARD, COMPLETE (SR32E/SR33E/SR42/SR42A/SR42E)
* 102	3-098-169-01	PLATE (2310), VC
103	A-1244-949-A	VC-489 BOARD, COMPLETE (SERVICE) (SR62/SR82/SR82C)
103	A-1244-950-A	VC-489 BOARD, COMPLETE (SERVICE) (SR62E/SR82E)
103	A-1244-951-A	VC-489 BOARD, COMPLETE (SERVICE) (SR52E/SR72E)
103	A-1244-952-A	VC-489 BOARD, COMPLETE (SERVICE) (SR42/SR42A/SR42E)

Ref. No.	Part No.	Description
103	A-1244-953-A	VC-489 BOARD, COMPLETE (SERVICE) (SR32E/SR33E)
104	1-871-463-11	FP-616 FLEXIBLE BOARD
* 105	3-098-166-01	SHEET (2310), VC RADIATION
106	1-871-460-11	FP-613 FLEXIBLE BOARD
* 107	3-197-159-01	SHEET (2320)(SR52E/SR62/SR62E/SR72E/ SR82/SR82C/SR82E)
* 108	3-196-625-01	SHEET (MS (2310)), COPY
109	1-871-462-11	FP-615 FLEXIBLE BOARD
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. LENS BLOCK-1

ns: not supplied

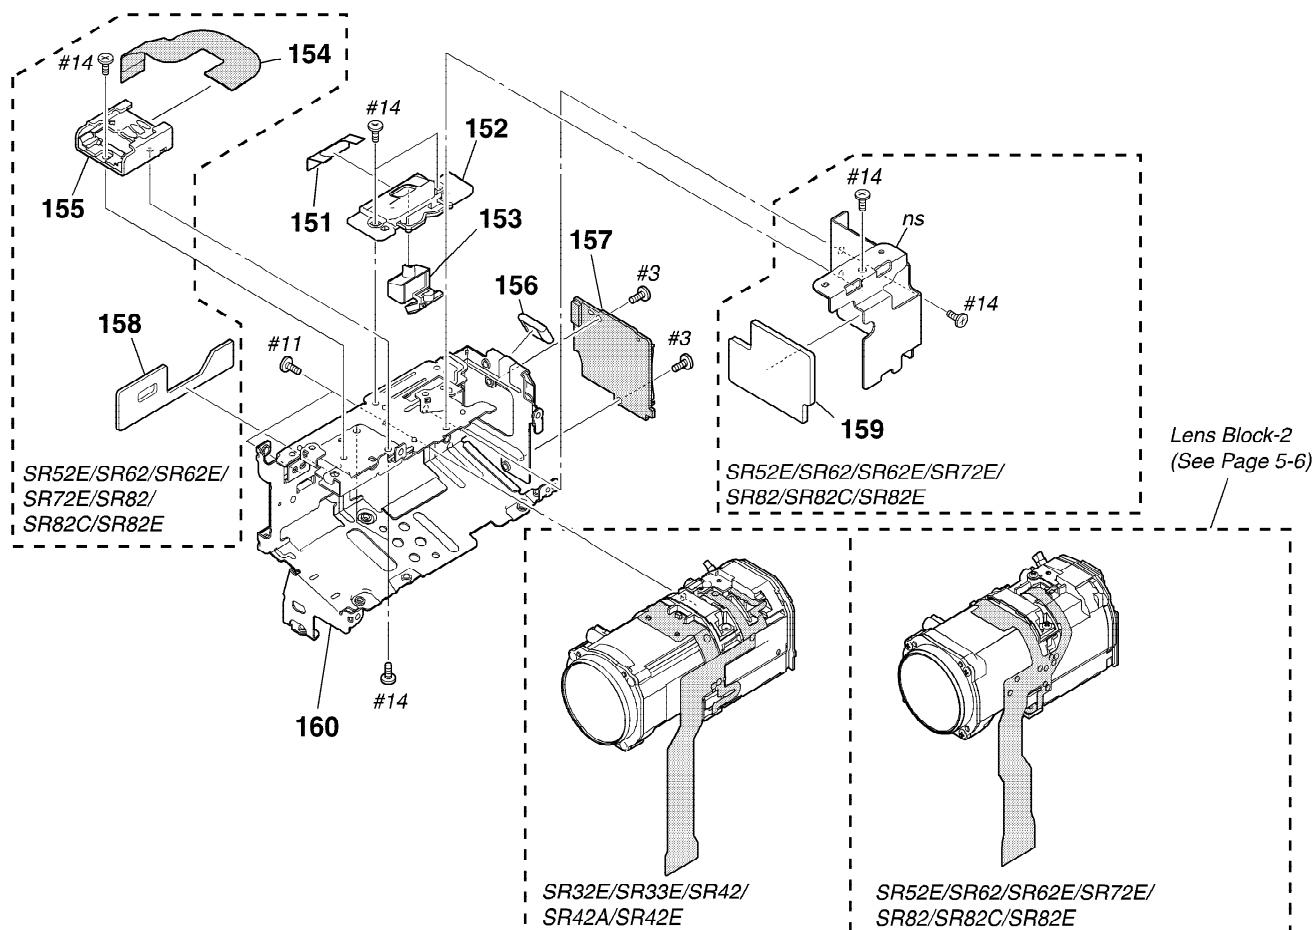

Ref. No.	Part No.	Description
* 151	3-100-560-01	SHEET, NS
* 152	3-098-160-01	RETAINER (2310), NS
* 153	3-098-161-01	Knob (2310), NS
		(SR32E/SR33E/SR42/SR42A/SR42E)
* 153	3-098-319-01	Knob (2320), NS (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
154	1-871-454-11	FP-607 FLEXIBLE BOARD (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
155	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
		(SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
* 156	3-100-001-01	GASKET (B)
157	A-1244-914-A	MS-349 BOARD, COMPLETE
		(SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)

Ref. No.	Part No.	Description
157	A-1244-915-A	MS-348 BOARD, COMPLETE
		(SR32E/SR33E/SR42/SR42A/SR42E)
* 158	3-197-394-01	SHEET (2320), FRAME RADIATION
		(SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
* 159	3-098-165-01	SHEET (2320), CD RADIATION
		(SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
* 160	3-098-159-01	FRAME (2310), LENS
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. LENS BLOCK-2

ns: not supplied

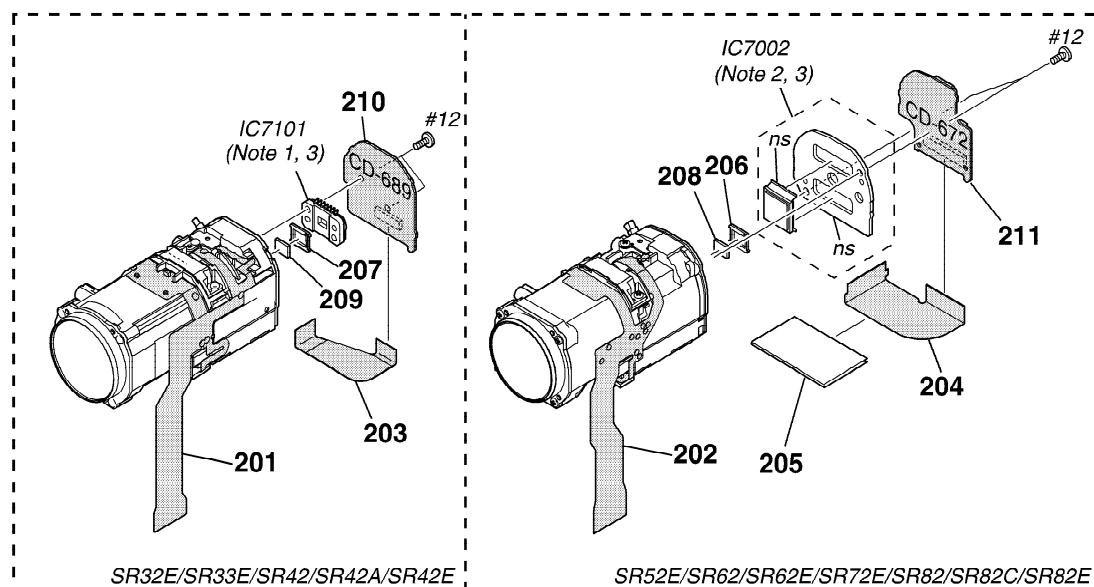

Note 1: IC7101はマウント済CD-689基板には含まれません。

Note 1: IC7101 is not included in CD-689 complete board.

Note 2: IC7002は交換対象ではありませんが、CCD部に含まれます。

Note 2: IC7002 is not supplied, but this is included in CCD block assy.

Note 3: イメージャの交換時は4-4ページの「イメージャ交換時の注意」を必ずお読みください。

Note 3: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

Ref. No.	Part No.	Description
201	1-788-514-11	OPTICS UNIT (EG05A) (SR32E/SR33E/SR42/SR42A/SR42E)
202	A-1248-849-A	LENS (BLOCK ASSY 1180 (J1)) (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
203	1-871-464-11	FP-617 FLEXIBLE BOARD (SR32E/SR33E/SR42/SR42A/SR42E)
204	1-871-461-11	FP-614 FLEXIBLE BOARD (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
* 205	3-098-170-01	SHEET (CD(2320)), RADIATION (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
206	3-088-645-01	RUBBER (Z), SEAL (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
207	2-318-138-01	RUBBER, SEAL 1070 (SR32E/SR33E/SR42/SR42A/SR42E)

Ref. No.	Part No.	Description
208	1-788-523-11	OPTICAL FILTER BLOCK (OFB-06-11) (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
209	1-788-242-11	OPTICAL FILTER BLOCK (SR32E/SR33E/SR42/SR42A/SR42E)
210	A-1244-920-A	CD-689 BOARD, COMPLETE (SR32E/SR33E/SR42/SR42A/SR42E)
211	A-1244-919-A	CD-672 BOARD, COMPLETE (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
IC7002	A-1249-720-A	CCD BLOCK ASSY (GLG (E)) (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E) (Note 2, 3)
IC7101	8-753-244-70	ICX610NKF-13 (SR42/SR42A) (Note 1, 3)
IC7101	8-753-244-71	ICX611NKF-13 (SR32E/SR33E/SR42E) (Note 1, 3)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. CABINET (R) BLOCK

ns: not supplied

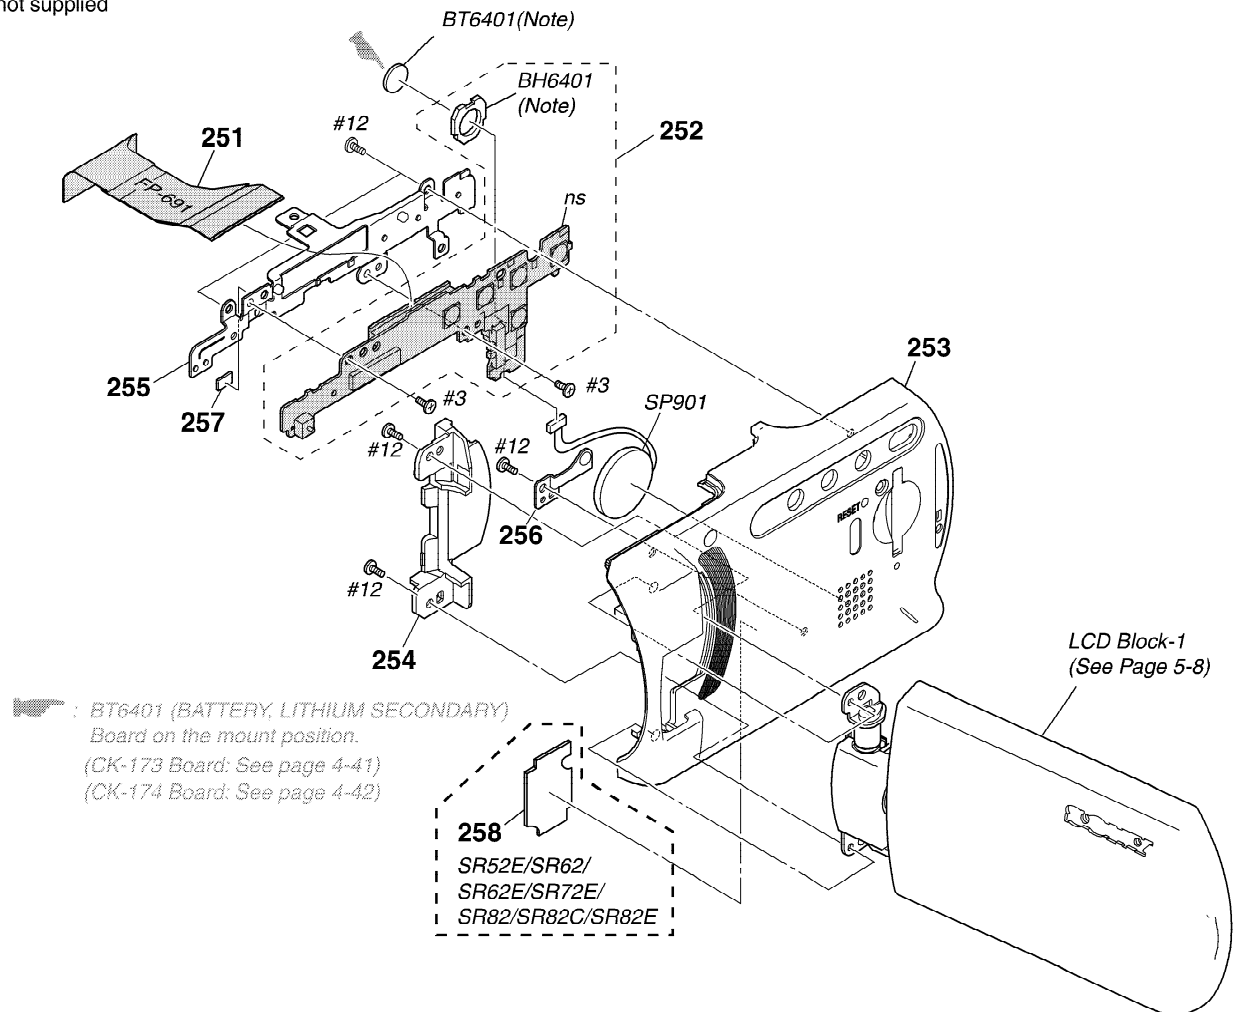

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Note: Replace the battery holder (BH6401) together when replacing the lithium battery (BT6401) on CK-173 board and CK-174 board. (The battery holder removed once cannot be used again.) When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: CK-173基板、CK-174基板のリチウム電池(BT6401)を交換する場合はバッテリーホルダ(BH6401)も同時に新品に交換して下さい。
(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着して下さい。

- Refer to page 5-1 for mark $\triangle$.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
251	1-872-430-11	FP-691 FLEXIBLE BOARD	254	3-098-265-01	BLIND, HINGE
252	A-1244-879-A	CK-174 BOARD, COMPLETE (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)	* 255	3-098-266-01	SHEET METAL, CK RETAINER
252	A-1244-880-A	CK-173 BOARD, COMPLETE (SR32E/SR33E/SR42/SR42A/SR42E)	* 256	3-098-267-01	SHEET METAL, SP RETAINER
253	X-2177-042-1	CABINET (R (2310)) ASSY (SR32E/SR33E/SR42/SR42A/SR42E)	* 257	3-209-620-01	SHEET, CK INSULATING
253	X-2177-043-1	CABINET (R (2320)) ASSY (SR62: J)	* 258	3-197-393-01	SHEET (2320), (R) RADIATION (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
253	X-2177-044-1	CABINET (R (2330)) ASSY (SR72E/SR82/SR82C/SR82E)	△ BH6401	1-756-615-31	HOLDER, BATTERY (Note)
253	X-2177-047-1	CABINET (R (2320)) ASSY (SR52E/SR62: EXCEPT J/SR62E)	△ BT6401	1-528-900-31	BATTERY, LITHIUM SECONDARY (Note)
			SP901	1-825-262-81	LOUD SPEAKER (1.6CM)
			#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
			#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. LCD BLOCK-1

ns: not supplied

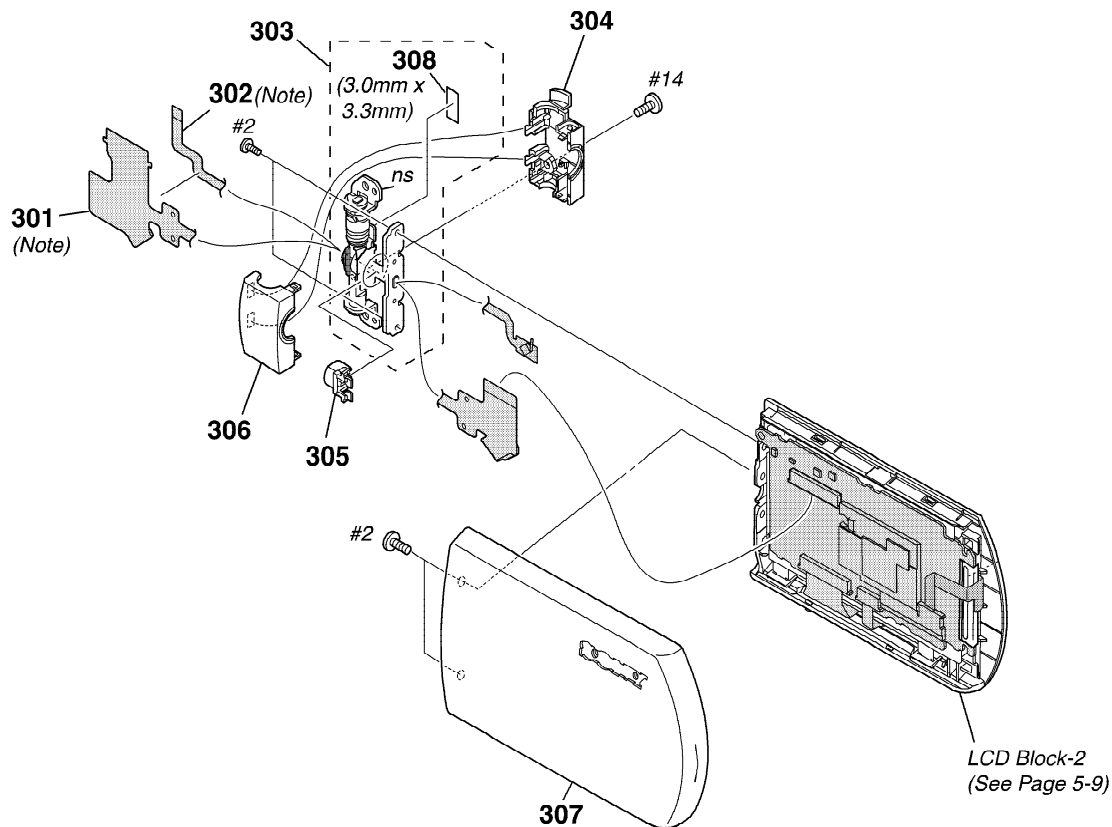

CAUTION : 308番は、接着紙(2-649-300-01)を切って使用して下さい。

CAUTION : For the part of 308, cut SHEET, ADHESIVE (2-649-300-01) into the desired length and use it.

Note : FP-610フレキシブル基板、FP-621フレキシブル基板取付時はヘルプを必ずお読み下さい。

Note : Be sure to read "HELP" when you install the FP-610 flexible board and FP-621 flexible board.

Ref. No.	Part No.	Description
301	1-871-457-11	FP-610 FLEXIBLE BOARD (Note)
302	A-1244-634-A	FP-621 FLEXIBLE BOARD, COMPLETE (Note)
303	X-2108-475-1	HINGE ASSY
304	3-098-256-01	COVER (M), HINGE
305	2-668-087-01	CLAMP, FLEXIBLE
306	3-098-263-11	COVER (C), HINGE (SR32E/SR33E/SR42/SR42A/SR42E)
306	3-098-263-21	COVER (C), HINGE (SR52E/SR62/SR62E)
306	3-098-263-31	COVER (C), HINGE (SR72E/SR82/SR82C/SR82E)

Ref. No.	Part No.	Description
307	A-1246-462-A	CABINET (C (2310)) ASSY, P (SR32E/SR33E/SR42/SR42A/SR42E)
307	X-2177-037-1	CABINET (C (2320)) ASSY, P (SR62/SR62E)
307	X-2177-038-1	CABINET (C (2320)) ASSY, P (SR52E)
307	X-2177-040-1	CABINET (C (2330)) ASSY, P (SR82/SR82C/SR82E)
307	X-2177-041-1	CABINET (C (2330)) ASSY, P (SR72E)
308	CAUTION	SHEET, HINGE ADHESIVE
#2	2-635-562-31	SCREW (M1.7) (Black)
#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-8. LCD BLOCK-2

ns: not supplied

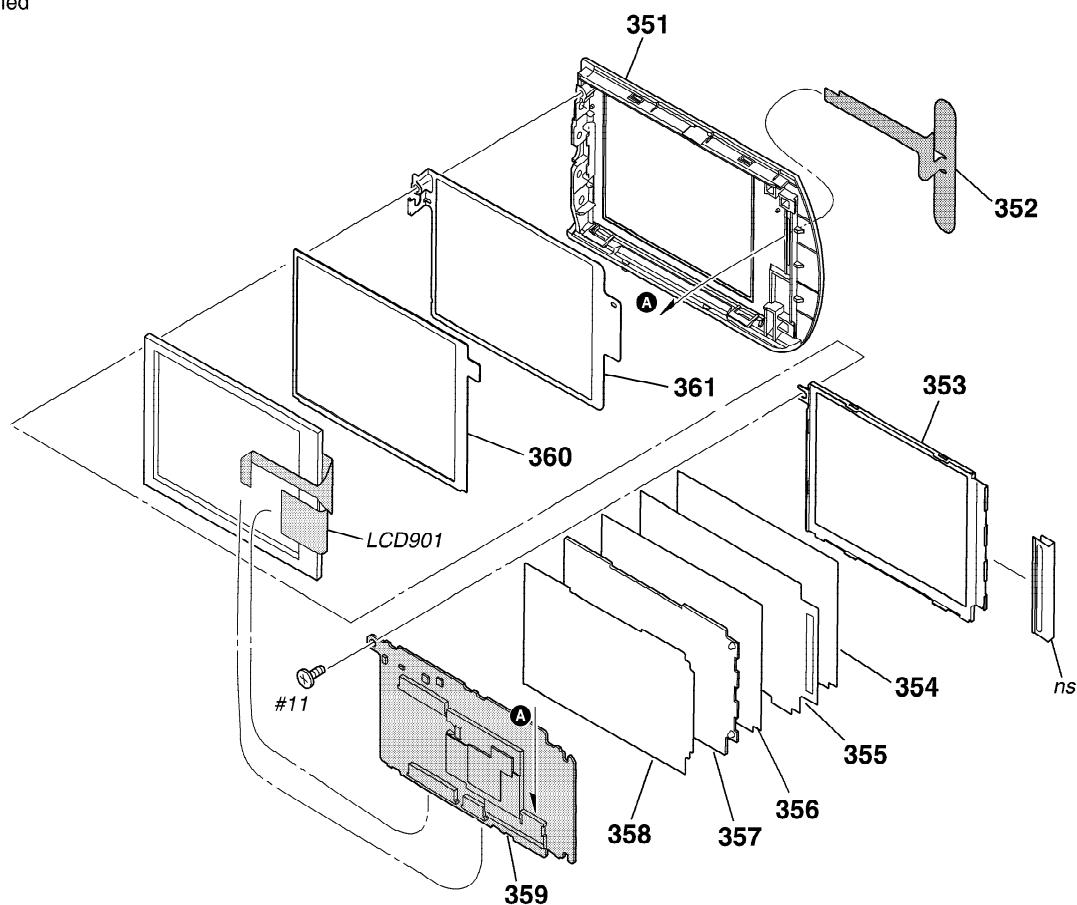


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
351	3-098-241-01	CABINET (M (2310)), P (SR32E/SR33E/SR42/SR42A/SR42E)	358	2-694-510-01	REFLECTION SHEET (2.5) (SR32E/SR33E/SR42/SR42A/SR42E)
351	3-098-242-01	CABINET (M (2320)), P (SR62: J)	358	2-694-515-01	REFLECTION SHEET (2.7) (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
351	3-098-242-11	CABINET (M (2320)), P (SR52E/SR62: EXCEPT J/SR62E/SR72E/SR82/SR82C/SR82E)	359	A-1244-659-A	PD-317 BOARD, COMPLETE (SR32E/SR33E/SR42/SR42A/SR42E)
352	1-479-926-11	SWITCH BLOCK, CONTROL (SB22100)	359	A-1244-662-A	PD-318 BOARD, COMPLETE (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
353	2-694-511-01	FRONT FRAME (2.5) (SR32E/SR33E/SR42/SR42A/SR42E)	* 360	2-899-746-01	CUSHION (2.5), TP (SR32E/SR33E/SR42/SR42A/SR42E)
353	2-694-516-01	FRONT FRAME (2.7) (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)	* 360	2-899-747-01	CUSHION (2.7), TP (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
354	2-694-507-01	PRISM SHEET V (2.5) (SR32E/SR33E/SR42/SR42A/SR42E)	* 361	3-098-243-01	PLATE (2310), LCD GROUND (SR32E/SR33E/SR42/SR42A/SR42E)
354	2-694-512-01	PRISM SHEET V (2.7) (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)	* 361	3-098-244-01	PLATE (2370), LCD GROUND (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
355	2-694-508-01	PRISM SHEET H (2.5) (SR32E/SR33E/SR42/SR42A/SR42E)	LCD901	A-1202-054-A	TP BLOCK ASSY (25ESTGU06) (SR32E/SR33E/SR42/SR42A/SR42E)
355	2-694-513-01	PRISM SHEET H (2.7) (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)	LCD901	A-1228-393-A	TP BLOCK ASSY (27TSHMG07) (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)
356	2-694-509-01	DIFFUSION SHEET (2.5) (SR32E/SR33E/SR42/SR42A/SR42E)	#11	3-078-890-11	SCREW, TAPPING (Silver)
356	2-694-514-01	DIFFUSION SHEET (2.7) (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)			
357	2-666-791-01	LIGHT GUIDE (2.5) (SR32E/SR33E/SR42/SR42A/SR42E)			
357	2-666-801-11	LIGHT GUIDE (2.7) (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)			

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-9. SWITCH BLOCK

ns: not supplied

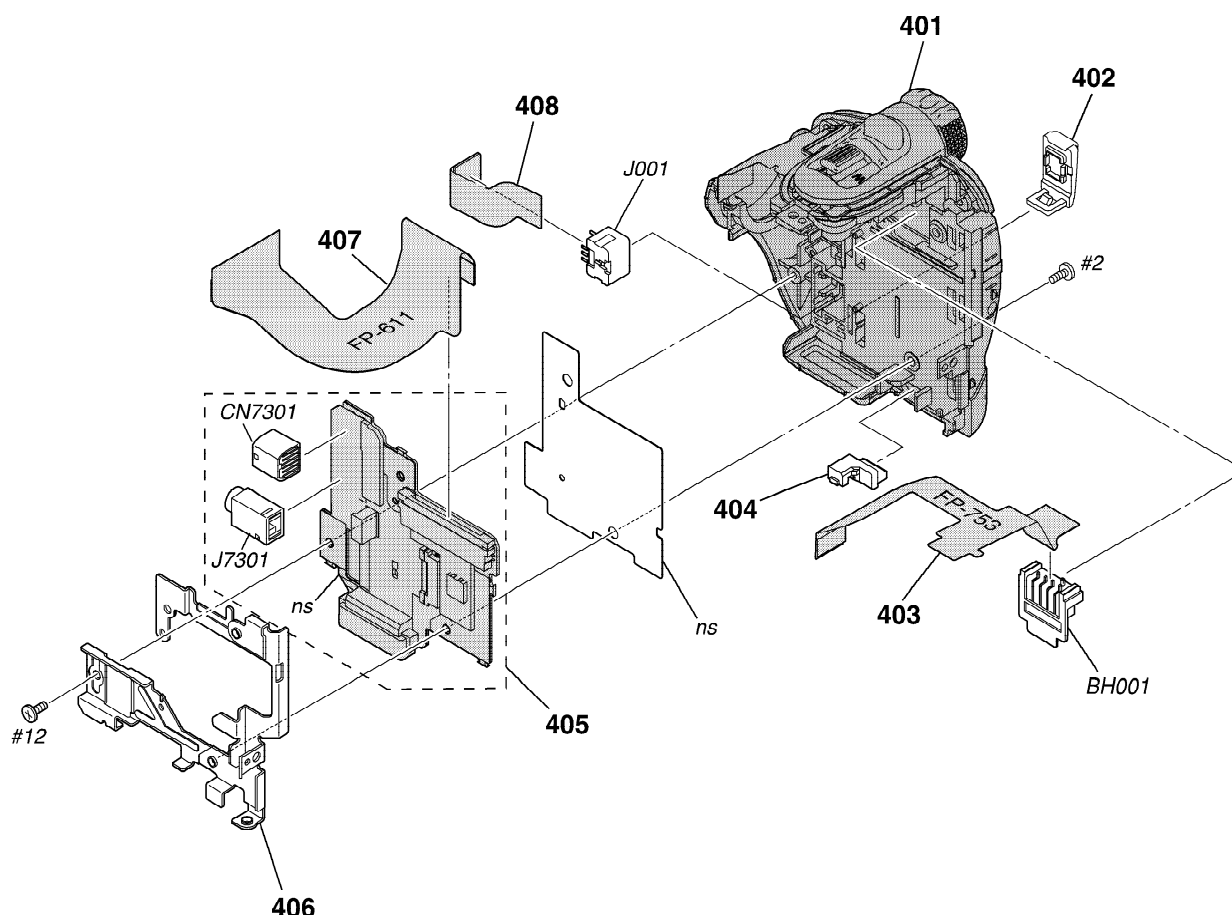

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
401	1-480-016-11	SWITCH BLOCK, CONTROL (PS23100) (SR32E/SR33E/SR42/SR42A/SR42E)	406	X-2178-023-1	PLATE, ASSY, BT BASE
401	1-480-016-21	SWITCH BLOCK, CONTROL (PS23100) (SR62: J)	407	1-871-458-11	FP-611 FLEXIBLE BOARD
401	1-480-016-31	SWITCH BLOCK, CONTROL (PS23100) (SR72E/SR82/SR82C/SR82E)	408	1-871-459-11	FP-612 FLEXIBLE BOARD
401	1-480-016-41	SWITCH BLOCK, CONTROL (PS23100) (SR52E/SR62: EXCEPT J/SR62E)	△BH001	1-780-064-21	BATTERY TERMINAL BOARD
402	3-098-172-01	COVER DC-IN	CN7301	1-815-794-13	CONNECTOR (MULTIPLE)
403	1-873-416-11	FP-753 FLEXIBLE BOARD	J001	1-815-792-11	CONNECTOR, DC-IN (7.2V)
* 404	3-098-246-01	CLAW, LOCK	J7301	1-793-995-21	JACK, SUPER SMALL TYPE (SR52E/SR62/ SR62E/SR72E/SR82/SR82C/SR82E)
405	A-1244-885-A	JK-325 BOARD, COMPLETE (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E)	#2	2-635-562-31	SCREW (M1.7) (Black)
405	A-1244-886-A	JK-324 BOARD, COMPLETE (SR32E/SR33E/SR42/SR42A/SR42E)	#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1244-919-A	CD-672 BOARD, COMPLETE (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E) ***** (IC7002 is not supplied, but this is included in CCD block assy.)
		< CAPACITOR >
C7002	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V
C7003	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V
C7005	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7006	1-100-591-91	CERAMIC CHIP 1uF 10% 25V
C7007	1-127-820-11	CERAMIC CHIP 4.7uF 10% 16V
C7010	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7011	1-165-875-11	CERAMIC CHIP 10uF 10% 10V
C7015	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7016	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7017	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7018	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7023	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C7024	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7025	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7026	1-100-251-11	CERAMIC CHIP 0.047uF 10% 10V
C7027	1-100-251-11	CERAMIC CHIP 0.047uF 10% 10V
C7028	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7029	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
		< CONNECTOR >
CN7001	1-820-586-51	CONNECTOR, FFC/FPC 28P
		< FERRITE BEAD >
FB7001	1-400-331-11	FERRITE, EMI (SMD) (1005)
		< IC >
IC7002	A-1249-720-A	CCD BLOCK ASSY (GLG (E)) (Note)
IC7003	8-759-489-19	IC uPC6756GR-8JG-E2
		< COIL >
L7001	1-400-588-11	INDUCTOR 10uH
L7002	1-400-588-11	INDUCTOR 10uH
		< TRANSISTOR >
Q7001	6-550-234-01	TRANSISTOR UNR32A300LS0
Q7002	8-729-055-21	TRANSISTOR 2SC5096-O/R (TE85L)
		< RESISTOR >
R7002	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R7004	1-218-965-11	RES-CHIP 10K 5% 1/16W
R7005	1-218-953-11	RES-CHIP 1K 5% 1/16W
R7006	1-218-966-11	RES-CHIP 12K 5% 1/16W
R7013	1-218-965-11	RES-CHIP 10K 5% 1/16W
R7014	1-218-989-11	RES-CHIP 1M 5% 1/16W
R7015	1-218-989-11	RES-CHIP 1M 5% 1/16W
R7016	1-218-965-11	RES-CHIP 10K 5% 1/16W
		< COMPOSITION CIRCUIT BLOCK >
* RB7001	1-234-379-21	RES, NETWORK 22K (1005X4)

Ref. No.	Part No.	Description
		< SENSOR >
* SE7001	1-479-022-61	SENSOR, ANGULAR VELOCITY (32.2 kHz) (YAW)
* SE7002	1-479-022-51	SENSOR, ANGULAR VELOCITY (30.8 kHz) (PITCH)
		< CAPACITOR >
	A-1244-920-A	CD-689 BOARD, COMPLETE (SR32E/SR33E/SR42/SR42A/SR42E) ***** (IC7101 is not included in this complete board.)
		< CAPACITOR >
C7101	1-124-779-00	ELECT CHIP 10uF 20% 16V
C7103	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C7104	1-124-779-00	ELECT CHIP 10uF 20% 16V
		< CONNECTOR >
* CN7101	1-818-045-51	CONNECTOR, FFC/FPC 14P
		< IC >
IC7101	8-753-244-70	IC ICX610NKF-13 (SR42/SR42A) (Note)
IC7101	8-753-244-71	IC ICX611NKF-13 (SR32E/SR33E/SR42E) (Note)
		< COIL >
L7101	1-400-588-11	INDUCTOR 10uH
		< TRANSISTOR >
Q7101	8-729-423-55	TRANSISTOR 2SC3931-D-TX
		< RESISTOR >
R7101	1-218-959-11	RES-CHIP 3.3K 5% 1/16W
R7103	1-218-937-11	RES-CHIP 47 5% 1/16W

Note : Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

Note : イメージャの交換時は4-4ページの“イメージャ交換時の注意”を必ずお読みください。

Ref. No.	Part No.	Description
	A-1244-880-A	CK-173 BOARD, COMPLETE (SR32E/SR33E/SR42/SR42A/SR42E) *****
(BT6401 (BATTERY, LITHIUM SECONDARY) is not included in this complete board.)		

< BATTERY HOLDER >

△ BH6401	1-756-615-31	HOLDER, BATTERY (Note)
----------	--------------	------------------------

< BATTERY >

△ BT6401	1-528-900-31	BATTERY, LITHIUM SECONDARY (Note)
----------	--------------	-----------------------------------

< CONNECTOR >

CN6405	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
* CN6409	1-816-650-51	FFC/CONNECTOR, FPC (LIF) 24P
* CN6411	1-817-554-51	CONNECTOR, FFC/FPC 6P
* CN6412	1-818-074-51	CONNECTOR, FFC/FPC (ZIF) 36P

< RESISTOR >

R6408	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R6409	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R6411	1-218-990-11	SHORT CHIP	0		

< SWITCH >

S6406	1-771-138-82	SWITCH, KEY BOARD (RESET)
S6408	1-771-138-82	SWITCH, KEY BOARD (EASY)
S6412	1-771-138-82	SWITCH, KEY BOARD (BACKLIGHT)
S6414	1-771-138-82	SWITCH, KEY BOARD (DISP/BATT INFO)
S6415	1-762-970-21	SWITCH, PUSH (1 KEY) (PANEL OPEN/CLOSE)

S6416	1-771-138-82	SWITCH, KEY BOARD (PLAY)
-------	--------------	--------------------------

	A-1244-879-A	CK-174 BOARD, COMPLETE (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E) *****
(BT6401 (BATTERY, LITHIUM SECONDARY) is not included in this complete board.)		

< BATTERY HOLDER >

△ BH6401	1-756-615-31	HOLDER, BATTERY (Note)
----------	--------------	------------------------

< BATTERY >

△ BT6401	1-528-900-31	BATTERY, LITHIUM SECONDARY (Note)
----------	--------------	-----------------------------------

< CONNECTOR >

CN6405	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
* CN6409	1-816-650-51	FFC/CONNECTOR, FPC (LIF) 24P
* CN6411	1-817-554-51	CONNECTOR, FFC/FPC 6P
* CN6412	1-818-074-51	CONNECTOR, FFC/FPC (ZIF) 36P

< RESISTOR >

R6408	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R6409	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R6411	1-218-958-11	RES-CHIP	2.7K	5%	1/16W

< SWITCH >

S6406	1-771-138-82	SWITCH, KEY BOARD (RESET)
S6407	1-771-138-82	SWITCH, KEY BOARD (BACKLIGHT)

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
S6408	1-771-138-82	SWITCH, KEY BOARD (EASY)
S6412	1-771-138-82	SWITCH, KEY BOARD (WIDE SELECT)
S6414	1-771-138-82	SWITCH, KEY BOARD (DISP/BATT INFO)
S6415	1-762-970-21	SWITCH, PUSH (1 KEY) (PANEL OPEN/CLOSE)
S6416	1-771-138-82	SWITCH, KEY BOARD (PLAY)

Electrical parts list of the DA-039 board is not shown.

Page 5-13 to 5-16 are not shown.

Note : CK-173基板, CK-174基板のリチウム電池(BT6401)を交換する場合はバッテリーホルダ(BH6401)も同時に新品に交換して下さい。
(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着してください。

Note : Replace the battery holder (BH6401) together when replacing the lithium battery (BT6401) on CK-173 board and CK-174 board.
(The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意
電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

FP-621

JK-324

JK-325

MS-348

Ref. No.	Part No.	Description
	A-1244-634-A	FP-621 FLEXIBLE BOARD, COMPLETE *****
		< SWITCH >
S001	1-786-680-21	SWITCH, DETECTION (SMD) (PANEL REVERSE)
	A-1244-886-A	JK-324 BOARD, COMPLETE (SR32E/SR33E/SR42/SR42A/SR42E) *****
		(CN7308 is not supplied, but this is included in JK-324 complete board.)
		< CAPACITOR >
C7301	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V
C7302	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V
		< CONNECTOR >
CN7301	1-815-794-13	CONNECTOR (MULTIPLE) (A/V OUT)
CN7303	1-779-328-51	CONNECTOR, FFC/FPC 8P
* CN7304	1-766-613-51	CONNECTOR, FFC/FPC 36P
CN7308	(Not supplied)	CONNECTOR, MULTIPLE (SOCKET)
* CN7309	1-817-459-71	CONNECTOR, FPC (ZIF) 14P
		< DIODE >
D7315	8-719-056-59	DIODE MAZS120008SO
D7316	8-719-056-59	DIODE MAZS120008SO
		< FERRITE BEAD >
FB7316	1-400-619-11	BEAD, FERRITE (CHIP) (1608)
FB7321	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
FB7323	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
		< RESISTOR >
R7304	1-218-990-11	SHORT CHIP 0
R7306	1-218-990-11	SHORT CHIP 0
R7308	1-218-953-11	RES-CHIP 1K 5% 1/16W
R7309	1-218-953-11	RES-CHIP 1K 5% 1/16W
		< VARISTOR >
VDR731	1-803-974-21	VARISTOR, CHIP (1608)
VDR738	1-803-974-21	VARISTOR, CHIP (1608)
VDR739	1-803-974-21	VARISTOR, CHIP (1608)
	A-1244-885-A	JK-325 BOARD, COMPLETE (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E) *****
		(CN7308 is not supplied, but this is included in JK-325 complete board.)
		< CAPACITOR >
C7301	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V
C7302	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V
		< CONNECTOR >
CN7301	1-815-794-13	CONNECTOR (MULTIPLE) (A/V OUT)
CN7303	1-779-328-51	CONNECTOR, FFC/FPC 8P
* CN7304	1-766-613-51	CONNECTOR, FFC/FPC 36P
CN7308	(Not supplied)	CONNECTOR, MULTIPLE (SOCKET)
* CN7309	1-817-459-71	CONNECTOR, FPC (ZIF) 14P

Ref. No.	Part No.	Description
		< DIODE >
D7312	6-500-776-01	DIODE MAZW068H0LSO
D7315	8-719-056-59	DIODE MAZS120008SO
D7316	8-719-056-59	DIODE MAZS120008SO
		< FERRITE BEAD >
FB7316	1-400-619-11	BEAD, FERRITE (CHIP) (1608)
FB7321	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
FB7323	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
		< JACK >
J7301	1-793-995-21	JACK, SUPER SMALL TYPE (REMOTE)
		< RESISTOR >
R7304	1-218-990-11	SHORT CHIP 0
R7305	1-218-990-11	SHORT CHIP 0
R7306	1-218-990-11	SHORT CHIP 0
R7308	1-218-953-11	RES-CHIP 1K 5% 1/16W
R7309	1-218-953-11	RES-CHIP 1K 5% 1/16W
		< VARISTOR >
VDR731	1-803-974-21	VARISTOR, CHIP (1608)
VDR738	1-803-974-21	VARISTOR, CHIP (1608)
VDR739	1-803-974-21	VARISTOR, CHIP (1608)
	A-1244-915-A	MS-348 BOARD, COMPLETE (SR32E/SR33E/SR42/SR42A/SR42E) *****
		< CONNECTOR >
* CN7401	1-819-990-21	MEMORY STICK DUO CONNECTOR 10P
* CN7403	1-818-045-51	CONNECTOR, FFC/FPC 14P
		< DIODE >
D7401	6-500-817-01	DIODE (LED) SML-512UWT86 (ACCESS)
		< FERRITE BEAD >
FB7401	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7402	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7403	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7404	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
		< RESISTOR >
R7402	1-218-990-11	SHORT CHIP 0
R7405	1-218-941-11	RES-CHIP 100 5% 1/16W
R7407	1-218-941-11	RES-CHIP 100 5% 1/16W
R7409	1-218-941-11	RES-CHIP 100 5% 1/16W
R7411	1-218-941-11	RES-CHIP 100 5% 1/16W
R7413	1-218-949-11	RES-CHIP 470 5% 1/16W

MS-349

PD-317

PD-318

Ref. No.	Part No.	Description
	A-1244-914-A	MS-349 BOARD, COMPLETE (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E) *****
		< CONNECTOR >
CN7401	1-817-827-11	MEMORY STICK DUO CONNECTOR
* CN7403	1-818-045-51	CONNECTOR, FFC/FPC 14P
		< DIODE >
D7401	6-500-817-01	DIODE (LED) SML-512UWT86 (ACCESS)
		< FERRITE BEAD >
FB7401	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7402	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7403	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7404	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
		< RESISTOR >
R7402	1-218-990-11	SHORT CHIP 0
R7405	1-218-941-11	RES-CHIP 100 5% 1/16W
R7407	1-218-941-11	RES-CHIP 100 5% 1/16W
R7409	1-218-941-11	RES-CHIP 100 5% 1/16W
R7411	1-218-941-11	RES-CHIP 100 5% 1/16W
R7413	1-218-949-11	RES-CHIP 470 5% 1/16W
	A-1244-659-A	PD-317 BOARD, COMPLETE (SR32E/SR33E/SR42/SR42A/SR42E) *****
		< CAPACITOR >
C6501	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C6502	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C6503	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6504	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C6505	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6506	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6507	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6508	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C6510	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6511	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6512	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C6516	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C6517	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6518	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6519	1-125-889-11	CERAMIC CHIP 2.2uF 10% 10V
C6521	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6524	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6525	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6526	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
		< CONNECTOR >
* CN6502	1-818-069-51	CONNECTOR, FFC/FPC (ZIF) 6P
CN6503	1-691-370-51	CONNECTOR, FFC/FPC 6P
* CN6504	1-785-905-51	FFC/CONNECTOR, FPC (ZIF) 24P
* CN6505	1-785-905-51	FFC/CONNECTOR, FPC (ZIF) 24P

Ref. No.	Part No.	Description
		< DIODE >
D6503	8-719-074-67	DIODE EDZ-TE61-5.6B
* D6505	6-501-476-01	DIODE NSSW008CT-T071 (BACK LIGHT)
* D6506	6-501-476-01	DIODE NSSW008CT-T071 (BACK LIGHT)
* D6507	6-501-476-01	DIODE NSSW008CT-T071 (BACK LIGHT)
		< FUSE >
* Δ F6501	1-576-997-21	FUSE (0.1A/24V)
		< FERRITE BEAD >
FB6501	1-400-619-11	BEAD, FERRITE (CHIP) (1608)
		< IC >
* IC6501	8-753-242-24	IC CXM3018R-T4
		< COIL >
L6501	1-400-588-11	INDUCTOR 10uH
L6502	1-400-588-11	INDUCTOR 10uH
L6504	1-400-588-11	INDUCTOR 10uH
		< TRANSISTOR >
Q6501	8-729-427-37	TRANSISTOR XP411F-TXE
Q6502	8-729-427-67	TRANSISTOR XP421F-TXE
Q6503	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q6504	6-550-234-01	TRANSISTOR UNR32A300LS0
Q6505	8-729-041-23	TRANSISTOR NDS356AP
		< RESISTOR >
R6501	1-216-864-11	SHORT CHIP 0
R6502	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R6503	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R6504	1-218-975-11	RES-CHIP 68K 5% 1/16W
R6508	1-218-949-11	RES-CHIP 470 5% 1/16W
R6509	1-218-953-11	RES-CHIP 1K 5% 1/16W
R6510	1-208-935-11	METAL CHIP 100K 0.5% 1/16W
R6515	1-218-965-11	RES-CHIP 10K 5% 1/16W
R6516	1-218-978-11	RES-CHIP 120K 5% 1/16W
R6517	1-218-977-11	RES-CHIP 100K 5% 1/16W
R6518	1-218-989-11	RES-CHIP 1M 5% 1/16W
R6522	1-216-864-11	SHORT CHIP 0
R6523	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
	A-1244-662-A	PD-318 BOARD, COMPLETE (SR52E/SR62/SR62E/SR72E/SR82/SR82C/SR82E) *****
		< CAPACITOR >
C6503	1-119-750-11	TANTAL. CHIP 22uF 20% 6.3V
C6504	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6506	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6508	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6509	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6510	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6511	1-137-710-91	CERAMIC CHIP 10uF 20% 6.3V
C6512	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6514	1-165-908-11	CERAMIC CHIP 1uF 10% 10V

• Refer to page 5-1 for mark Δ .

Ref. No.	Part No.	Description			
C6515	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C6517	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6518	1-164-739-11	CERAMIC CHIP	560PF	5%	50V
C6519	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C6520	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C6527	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V
C6531	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C6532	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C6533	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C6534	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6536	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V
C6537	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V
< CONNECTOR >					
* CN6501	1-785-905-51	FFC/CONNECTOR, FPC (ZIF) 24P			
CN6502	1-816-180-71	CONNECTOR, FPC (ZIF) 6P			
* CN6503	1-794-322-51	FFC/CONNECTOR, FPC (ZIF) 6P			
* CN6504	1-785-905-51	FFC/CONNECTOR, FPC (ZIF) 24P			
< DIODE >					
D6503	8-719-071-34	DIODE RB521S-30-TE61			
* D6504	6-501-597-01	DIODE NSSW008DT-T108 (BACK LIGHT)			
* D6505	6-501-597-01	DIODE NSSW008DT-T108 (BACK LIGHT)			
* D6506	6-501-597-01	DIODE NSSW008DT-T108 (BACK LIGHT)			
D6507	8-719-071-34	DIODE RB521S-30-TE61			
< FUSE >					
*△F6501	1-576-997-21	FUSE (0.1A/24V)			
< FERRITE BEAD >					
FB6501	1-414-760-21	FERRITE, EMI (SMD) (1608)			
< IC >					
* IC6501	6-709-852-01	IC LRS57415			
< COIL >					
L6501	1-400-588-11	INDUCTOR	10uH		
L6502	1-400-588-11	INDUCTOR	10uH		
L6503	1-400-588-11	INDUCTOR	10uH		
< TRANSISTOR >					
Q6506	6-550-119-01	TRANSISTOR	DTC144EMT2L		
Q6507	6-550-150-01	TRANSISTOR	SSM3J09FU (TE85L)		
Q6508	8-729-053-84	TRANSISTOR	SSM3K09FU (T5LSONY1)		
* Q6509	6-551-721-01	TRANSISTOR	SSM6J50TU (T5RSONYF)		
* Q6510	6-551-721-01	TRANSISTOR	SSM6J50TU (T5RSONYF)		
Q6511	8-729-427-67	TRANSISTOR	XP421F-TXE		
Q6512	8-729-427-37	TRANSISTOR	XP411F-TXE		
< RESISTOR >					
R6515	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6518	1-218-949-11	RES-CHIP	470	5%	1/16W
R6524	1-218-975-11	RES-CHIP	68K	5%	1/16W
R6525	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6526	1-208-911-11	METAL CHIP	10K	0.5%	1/16W

Ref. No.	Part No.	Description			
R6527	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R6530	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6532	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6533	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6534	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6536	1-216-804-11	METAL CHIP	39	5%	1/10W
R6543	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R6544	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R6546	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R6548	1-216-864-11	SHORT CHIP	0		
R6549	1-216-864-11	SHORT CHIP	0		

Electrical parts list of the VC-489 boards is not shown.


Page 5-20 to 5-24 is not shown.

• Refer to page 5-1 for mark △.

• EXCEPT J MODEL


Checking supplied accessories.

 to J MODEL




Power cord

- △ 1-823-945-41 (US, CND)
- △ 1-823-947-71 (KR)
- △ 1-827-826-41 (AEP, E: PAL)
- △ 1-827-945-61 (AUS)
- △ 1-828-050-31 (JE)
- △ 1-830-518-41 (E: NTSC)
- △ 1-832-106-31 (AR)
- △ 1-832-121-31 (CH)
- △ 1-832-169-31 (UK, HK)

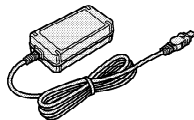


AC Adaptor
(AC-L200/L200B)
△ 1-479-285-21

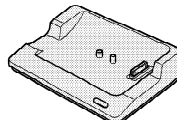

Handycam Station
(DCRA-C171)
1-820-945-21



 A/V connecting cable
1-831-553-11



USB cable
1-829-579-41



Wireless Remote Commander
(RMT-835)
1-479-275-41
(EXCEPT SR32E/SR33E/
SR42/SR42A/SR42E)



Rechargeable battery pack
NP-FH40
△ A-1201-658-A (US, CND)
△ A-1201-659-A (EXCEPT US, CND, CH)
△ A-1201-660-A (CH)



Conversion (2P) Adaptor
△ 1-569-007-12 (E: NTSC, JE)



Conversion (2P) Adaptor
△ 1-569-008-12 (HK)

 


21-Pin Adaptor
1-770-783-21 (AEP, UK)



Operating Guide

- 3-098-548-11 (ENGLISH) (US, CND, E: NTSC, JE)
- 3-098-548-21 (FRENCH) (CND)
- 3-098-548-31 (SPANISH) (US, E: NTSC, JE)
- 3-098-548-41 (PORTUGUESE) (JE)
- 3-098-548-51 (TRADITIONAL CHINESE) (E: NTSC)
- 3-098-548-61 (KOREAN) (KR, JE)
- 3-098-549-12 (ENGLISH) (AEP, UK, HK, AUS, E: PAL, JE)
- 3-098-549-21 (FRENCH, DUTCH) (AEP)
- 3-098-549-31 (GERMAN, ITALIAN, TURKISH) (AEP)
- 3-098-549-41 (SPANISH, PORTUGUESE, GREEK) (AEP)
- 3-098-549-51 (RUSSIAN, SWEDISH) (AEP, JE)
- 3-098-549-61 (DANISH, FINNISH, POLISH) (AEP)
- 3-098-549-71 (CZECH, HUNGARIAN, SLOVAK) (AEP)
- 3-098-549-81 (SIMPLIFIED CHINESE) (CH, E: PAL, JE)
- 3-098-550-31 (TRADITIONAL CHINESE) (HK)
- 3-098-550-41 (ARABIC, PERSIAN) (E: PAL)



DVD-ROM
(ENJOY HANDYCAM)

 
- 3-093-691-01 (ENGLISH, KOREAN, JAPANESE) (KR)
- 3-093-691-11 (ENGLISH, FRENCH, SPANISH, PORTUGUESE) (US, CND, AR)
- 3-093-691-21 (ENGLISH, RUSSIAN, GERMAN) (UK)
- 3-093-691-51 (ENGLISH, FRENCH, GERMAN, DUTCH, PORTUGUESE, ITALIAN, RUSSIAN) (AEP)
- 3-093-691-61 (ENGLISH, FRENCH, SIMPLIFIED CHINESE, TRADITIONAL CHINESE) (HK, AUS, CH, E: PAL)
- 3-093-691-71 (ENGLISH, TRADITIONAL CHINESE, SPANISH, PORTUGUESE) (E: NTSC)

• Refer to page 5-1 for mark △.

• EXCEPT J MODEL

Checking supplied accessories.

to J MODEL



CD-ROM
"Handycam Application Software"
3-098-198-01



Handycam Handbook (PDF)


The CD-ROM supplied contains all of language version of the Instruction Manual in pdf (Handycam Handbook.pdf) for printing.

Note: The printed matter is not supplied. If required, please order it with the part number below.


- 3-093-315-01 (JAPANESE) (SR42/SR42A/SR62/SR82/SR82C)
- 3-093-315-11 (ENGLISH) (SR42/SR42A/SR62/SR82/SR82C)
- 3-093-315-21 (FRENCH) (SR42/SR42A/SR62/SR82/SR82C)
- 3-093-315-31 (SPANISH) (SR42/SR42A/SR62/SR82/SR82C)
- 3-093-315-41 (PORTUGUESE) (SR42/SR42A/SR62/SR82/SR82C)
- 3-093-315-51 (TRADITIONAL CHINESE) (SR42/SR42A/SR62/SR82/SR82C)
- 3-093-315-61 (KOREAN) (SR42/SR42A/SR62/SR82/SR82C)
- 3-093-316-11 (ENGLISH) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-316-21 (FRENCH) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-316-31 (GERMAN) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-316-41 (DUTCH) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-316-51 (TURKISH) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-316-61 (SPANISH) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-316-71 (PORTUGUESE) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-316-81 (ITALIAN) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-316-91 (GREEK) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-317-11 (RUSSIAN) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-317-21 (SWEDISH) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-317-31 (DANISH) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-317-41 (FINNISH) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-317-51 (POLISH) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-317-61 (CZECH) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-317-71 (HUNGARIAN) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-317-81 (SLOVAK) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-317-91 (SIMPLIFIED CHINESE) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-318-11 (THAI) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-318-21 (INDONESIAN) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-318-31 (MALAY) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-318-41 (TRADITIONAL CHINESE) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-318-51 (ARABIC) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)
- 3-093-318-61 (PERSIAN) (SR32E/SR33E/SR42E/SR52E/SR62E/SR72E/SR82E)

• J MODEL

付属品

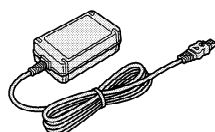


AC アダプター
(AC-L200/L200B)
△ 1-479-285-21

 


電源コード
△ 1-828-050-31

図面
番号

 
部品コード 部品名
3-098-548-01 取扱説明書



USB ケーブル
1-829-579-41

 


A/V 接続ケーブル
1-831-553-11

 


リチャージャブル
バッテリーパック
(NP-FH40)
△ A-1201-657-A



 DVD-ROM
(ENJOY HANDY CAM)
3-093-691-01 (日本語, 英語, 韓国語)



ワイヤレスリモコン
RMT-835
1-479-275-31

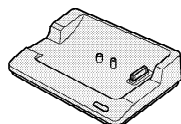

ハンディカムステーション
(DCRA-C170)
1-820-945-11

• △マークについては、5-1ページを参照して下さい。