


5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION-1

ns: not supplied

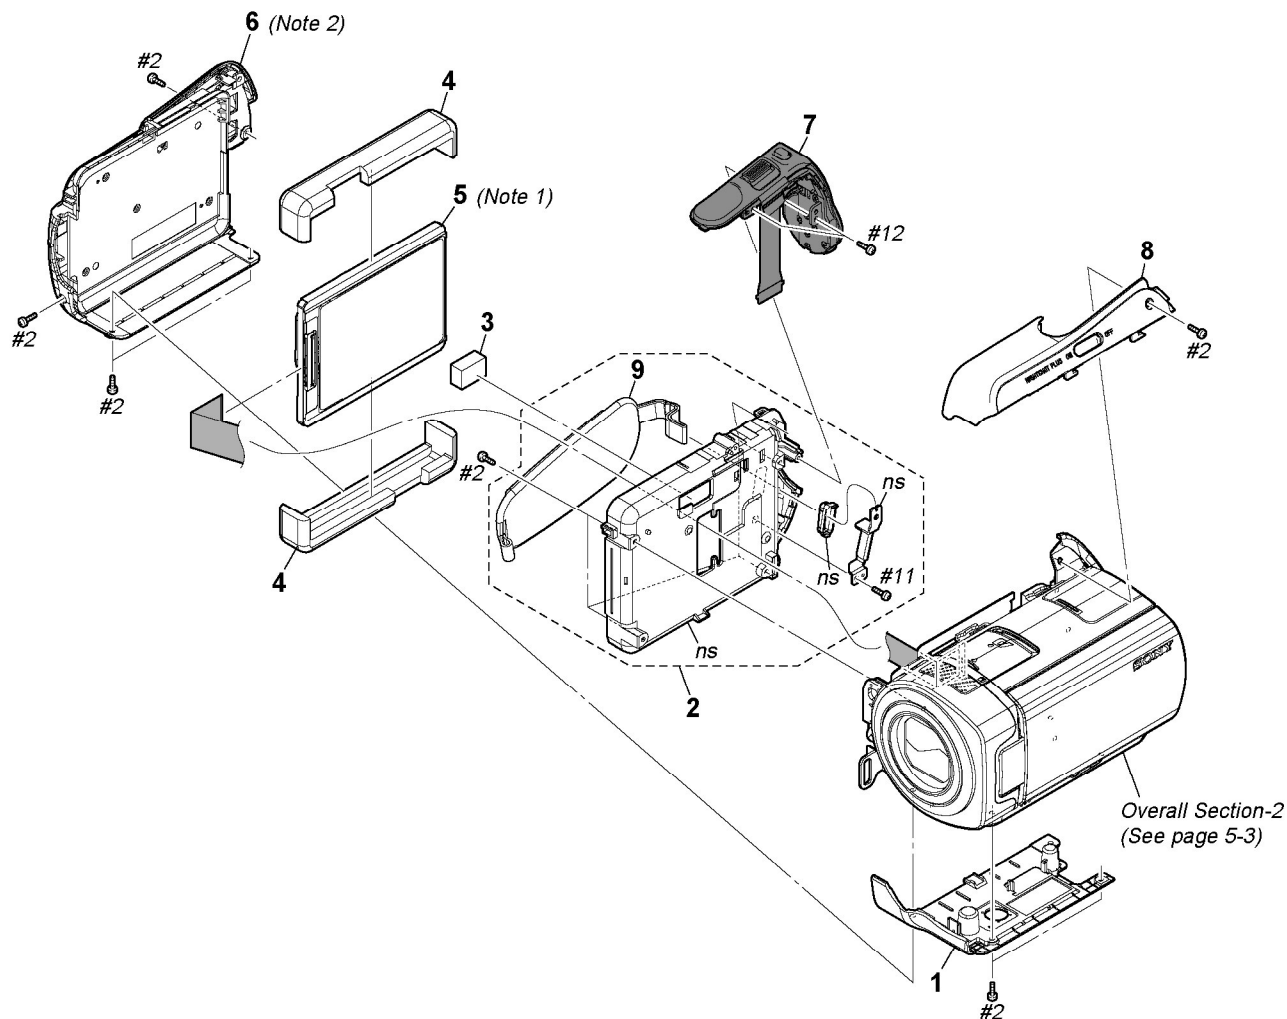

Note 1: 30GB model and 40GB model use the same parts.

Note 1: 30GB/40GB共に同一部品を使用します。

Note 2: When you exchange HDD LID ASSY, be sure to read "1-4. PRECAUTION ON REPLACING THE HDD LID ASSY" on page 1-3.


Note 2: HDDふた組立交換時は1-7ページの“1-4. HDDふた組立交換時の注意”を必ずお読みください。

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
1	3-283-724-01	CABINET, BOTTOM (SR35E/SR36E/SR45/ SR45E/SR46E/SR46E)
1	3-283-724-11	CABINET, BOTTOM (SR55E/SR65E/SR65E/ SR75E/SR85E/SR85E)
2	X-2187-938-1	CABINET (L) ASSY
3	3-289-951-01	GASKET (HDD)
4	3-294-308-01	DAMPER (1), 08STYLE
△ 5	1-797-994-21	HDD (MK6014GAL-60GB) (SR75E/SR85E/SR85E)
△ 5	1-797-998-21	HDD (MK6014GAL-40GB) (SR35E/SR36E/ SR45E/SR46E/SR46E/SR55E/SR65E/SR65E) (Note 1)

Ref. No.	Part No.	Description
6	(Note 2)	LID ASSY, HDD
7	1-480-427-11	SWITCH BLOCK, CONTROL (PS28100)
8	3-283-725-01	CABINET, NS
9	2-664-928-41	BELT, GRIP
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5-1-2. OVERALL SECTION-2

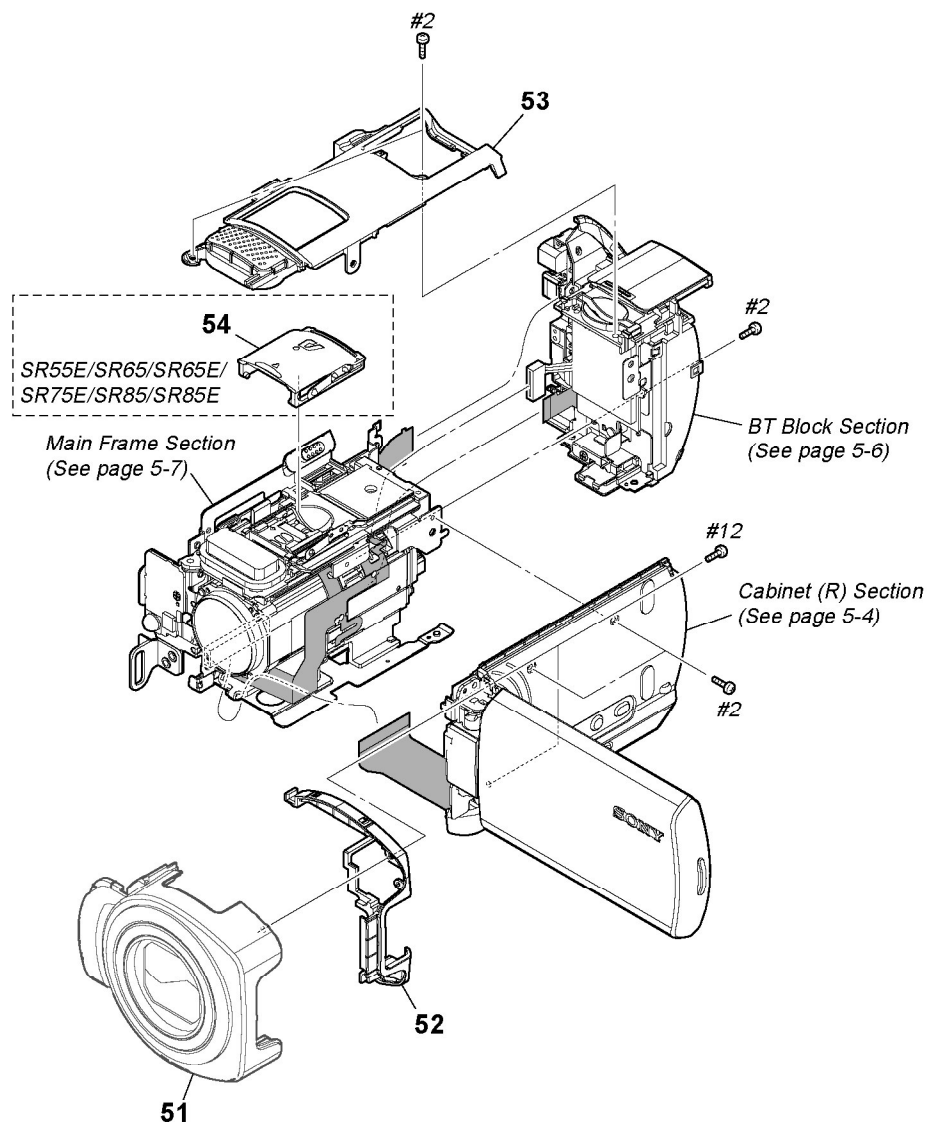


Ref. No.	Part No.	Description
51	X-2187-949-1	PANEL ASSY, F (SR75E/SR85/SR85E)
51	X-2189-209-1	PANEL ASSY (281S), F (SR35E/SR36E/SR45/ SR45E/SR46/SR46E)
51	X-2189-210-1	PANEL ASSY (282S), F (SR55E/SR65/SR65E)
52	3-283-728-01	BELT, F ORNAMENTAL
53	3-283-729-01	CABINET (UPPER (282)) (SR55E/SR65/SR65E)
53	3-283-729-11	CABINET (UPPER (282)) (SR75E/SR85/SR85E)

Ref. No.	Part No.	Description
53	3-283-730-01	CABINET (UPPER (281)) (SR35E/SR36E/SR45/ SR45E/SR46/SR46E)
54	X-2187-940-1	COVER ASSY, SHOE (SR55E/SR65/SR65E)
54	X-2187-959-1	COVER ASSY, SHOE (SR75E/SR85/SR85E)
#2	2-635-562-31	SCREW (M1.7) (Black)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5-1-4. LCD BLOCK SECTION


ns: not supplied

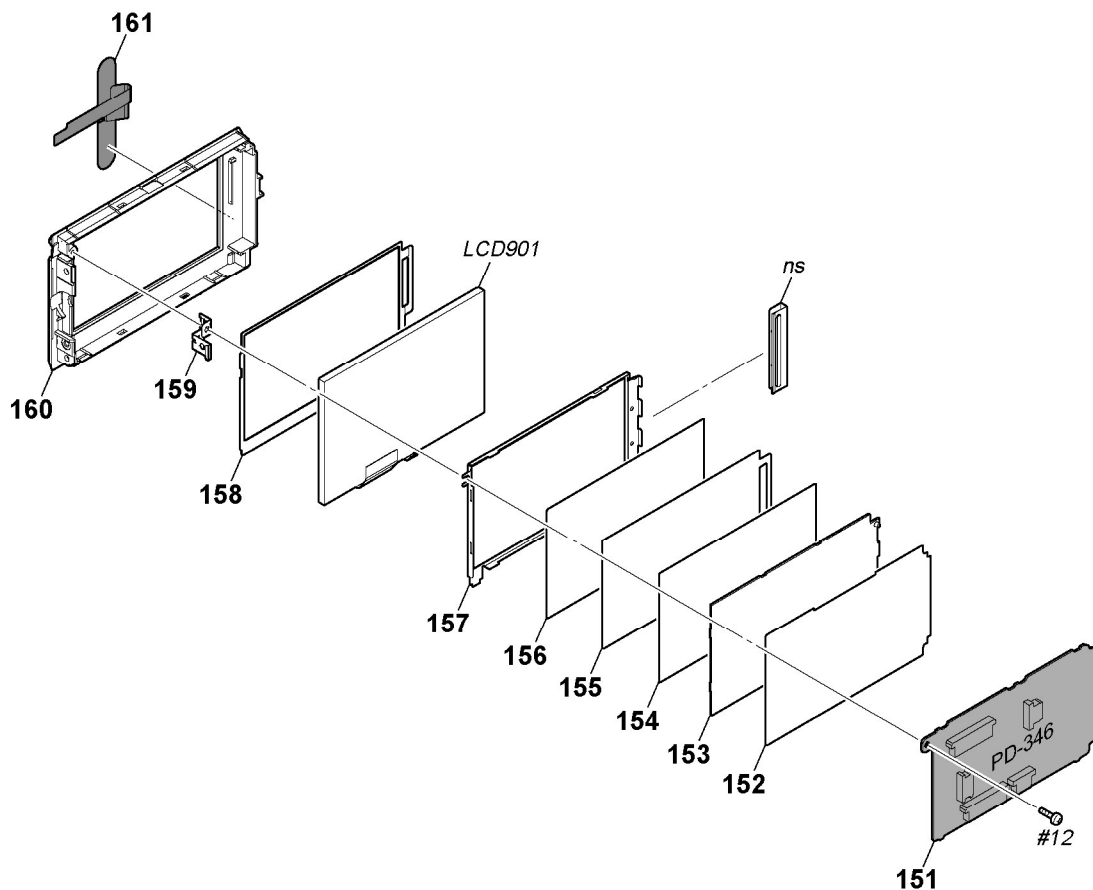

Ref. No.	Part No.	Description
151	A-1439-215-A	PD-346 BOARD, COMPLETE
152	2-694-515-01	REFLECTION SHEET (2.7)
153	2-666-801-01	LIGHT GUIDE (2.7)
154	2-694-514-01	DIFFUSION SHEET (2.7)
155	2-694-513-01	PRISM SHEET H (2.7)
156	2-694-512-01	PRISM SHEET V (2.7)
157	2-694-516-01	FRONT FRAME (2.7)

Ref. No.	Part No.	Description
158	3-283-828-01	CUSHION (2.7), TP
* 159	3-283-827-01	PLATE, LCD GROUND
160	3-283-826-01	CABINET (M), P
161	1-479-926-11	SWITCH BLOCK, CONTROL (SB22100)
LCD901	A-1363-616-A	TP BLOCK ASSY (27STMG08H)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5-1-5. BT BLOCK SECTION

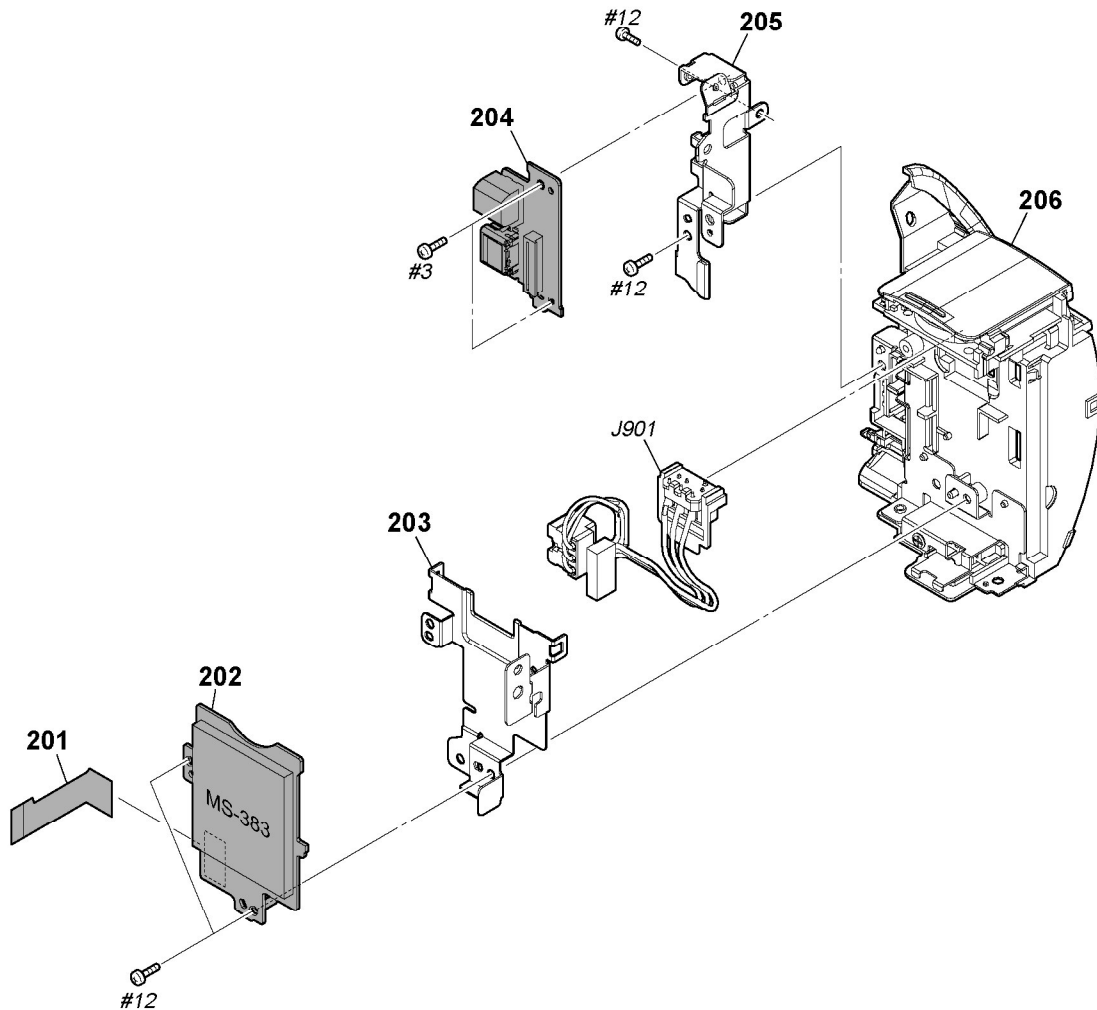

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
201	1-874-922-11	FP-825 FLEXIBLE BOARD	206	X-2187-945-1	PANEL ASSY, BT (SR55E/SR65/SR65E)
202	A-1439-140-A	MS-383 BOARD, COMPLETE	206	X-2187-946-1	PANEL ASSY, BT (SR75E/SR85/SR85E)
203	3-283-752-01	RETAINER, BT TERMINAL	△*J901	1-821-575-11	DC JACK (DC IN, BATTERY TERMINAL)
204	A-1439-139-A	JK-357 BOARD, COMPLETE	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
205	3-283-753-01	BRACKET, JK	#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
206	X-2187-944-1	PANEL ASSY, BT (SR35E/SR36E/SR45/SR45E/ SR46/SR46E)			

5-1-6. MAIN FRAME SECTION

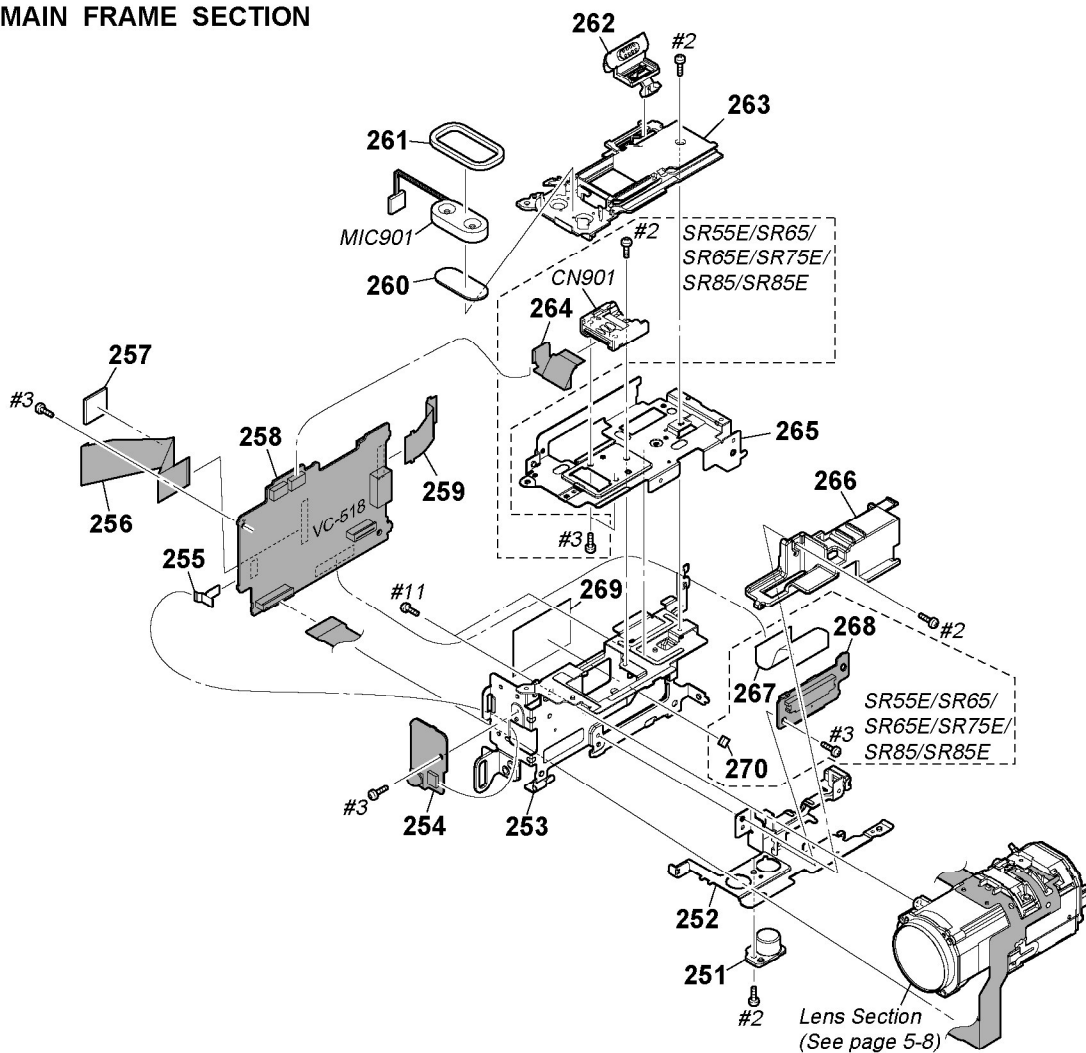


Ref. No.	Part No.	Description
251	3-283-643-01	SCREW, TRIPOD
252	3-283-722-01	FRAME, BOTTOM
253	X-2187-943-1	FRAME ASSY, MAIN
254	A-1439-108-A	IR-066 BOARD, COMPLETE (SR35E/SR36E/ SR45/SR45E/SR46/SR46E)
254	A-1439-109-A	IR-066 BOARD, COMPLETE (SR55E/SR65/ SR65E/SR75E/SR85/SR85E)
255	1-834-361-11	CABLE, FLEXIBLE FLAT (FFC-131)
256	1-874-927-11	FP-830 FLEXIBLE BOARD
257	3-288-685-01	CUSHION, HDD
258	A-1443-037-A	VC-518 BOARD, COMPLETE (SERVICE) (SR35E/SR36E)
258	A-1443-038-A	VC-518 BOARD, COMPLETE (SERVICE) (SR45/SR45E/SR46/SR46E)
258	A-1443-054-A	VC-518 BOARD, COMPLETE (SERVICE) (SR65/SR85)
258	A-1443-061-A	VC-518 BOARD, COMPLETE (SERVICE) (SR65E/SR85E)
258	A-1443-062-A	VC-518 BOARD, COMPLETE (SERVICE) (SR55E/SR75E)
259	1-874-921-11	FP-824 FLEXIBLE BOARD
260	3-288-684-01	SHEET, MICROPHONE ADHESIVE
261	3-283-732-01	CUSHION, MICROPHONE

Ref. No.	Part No.	Description
262	3-283-726-01	KNOB (282), NS (SR55E/SR65/SR65E/SR75E/ SR85/SR85E)
262	3-283-727-01	KNOB (281), NS (SR35E/SR36E/SR45/SR45E/ SR46/SR46E)
263	3-283-731-01	HOLDER, MICROPHONE
264	1-874-924-11	FP-827 FLEXIBLE BOARD (SR55E/SR65/SR65E/ SR75E/SR85/SR85E)
265	3-283-721-01	FRAME, SHOE
* 266	3-283-723-01	DIFENSER, MULTI
267	1-834-362-11	CABLE, FLEXIBLE FLAT (FFC-132) (SR55E/SR65/SR65E/SR75E/SR85/SR85E)
268	A-1439-166-A	CR-087 BOARD, COMPLETE (SR55E/SR65/SR65E/SR75E/SR85/SR85E)
269	2-659-500-01	LABEL, FUSE REPLACEMENT CAUTION
* 270	3-289-953-01	GASKET (HINGE) (SR55E/SR65/SR65E/SR75E/ SR85/SR85E)
CN901	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE) (SR55E/SR65/SR65E/SR75E/SR85/SR85E)
MIC901	1-542-712-11	MICROPHONE UNIT
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#11	3-078-890-11	SCREW, TAPPING (Silver)

5-1-7. LENS SECTION

ns: not supplied

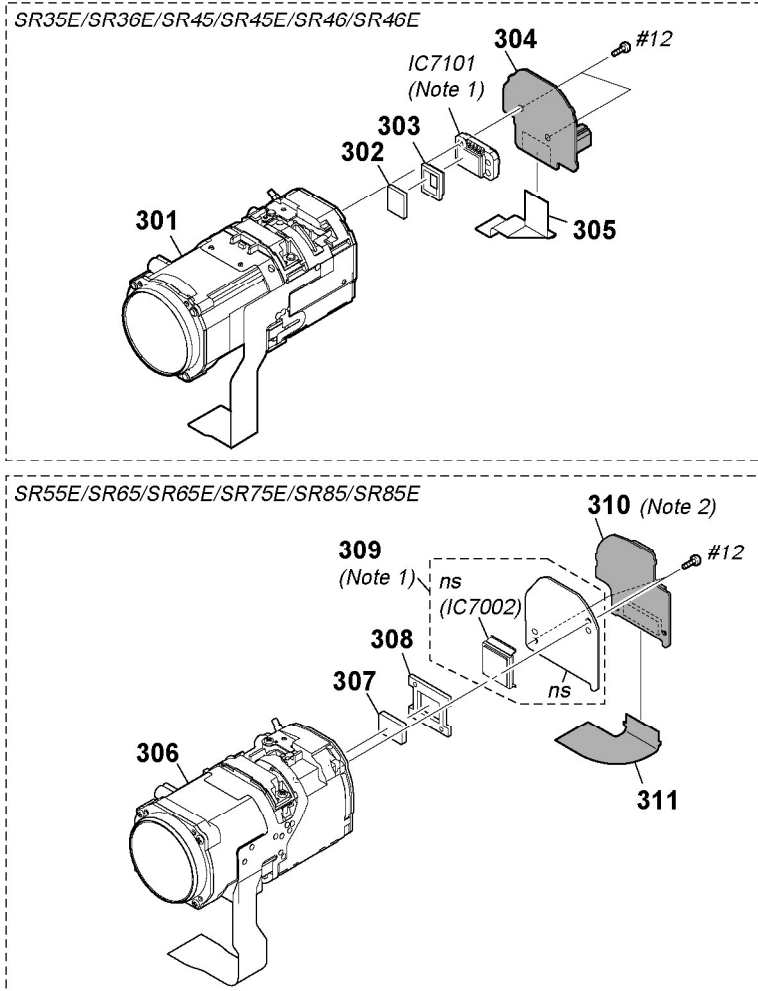

Note 1: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

Note 1: イメージャの交換時は4-3ページの“イメージャ交換時の注意”を必ずお読みください。

Note 2: CD-672 complete board is supplied instead of CD-687 complete board, because CD-672 complete board and CD-687 complete board are compatible.

Note 2: CD-687基板は供給されません。代わりにCD-672基板が供給されます。

Ref. No.	Part No.	Description
301	8-848-839-01	DEVICE, LENS LSV-1171A (SR35E/SR36E/SR45/SR45E/SR46/SR46E)
302	1-788-706-11	OPTICAL FILTER BLOCK (OFB-08-02) (SR35E/SR36E/SR45/SR45E/SR46/SR46E)
303	3-271-382-01	SEAL RUBBER 1171 (SR35E/SR36E/SR45/SR45E/SR46/SR46E)
304	A-1439-164-A	CD-720 BOARD, COMPLETE (SR35E/SR36E/SR45/SR45E/SR46/SR46E)
305	1-834-363-11	CABLE, FLEXIBLE FLAT (FFC-133) (SR35E/SR36E/SR45/SR45E/SR46/SR46E)
306	A-1248-849-A	LENS (BLOCK ASSY 1180 (J1)) (SR55E/SR65/SR65E/SR75E/SR85/SR85E)
307	1-788-523-11	OPTICAL FILTER BLOCK (OFB-06-11) (SR55E/SR65/SR65E/SR75E/SR85/SR85E)
308	3-088-645-01	RUBBER (Z), SEAL (SR55E/SR65/SR65E/SR75E/SR85/SR85E)

Ref. No.	Part No.	Description
309	A-1511-867-A	CCD BLOCK ASSY (1M SSGE) (CCD IMAGER) (SR55E/SR65/SR65E/SR75E/SR85/SR85E) (Note 1)
310	A-1244-919-A	CD-672 BOARD, COMPLETE (SR55E/SR65/SR65E/SR75E/SR85/SR85E)
310	A-1244-919-A	CD-687 BOARD, COMPLETE (SR65/SR65E/SR85/SR85E) (Note 2)
311	1-874-926-11	FP-829 FLEXIBLE BOARD (SR55E/SR65/SR65E/SR75E/SR85/SR85E)
IC7101	8-753-288-68	ICX650NKF-H (CCD IMAGER) (SR45/SR46) (Note 1)
IC7101	8-753-289-10	ICX651NKF-H (CCD IMAGER) (SR35E/SR36E/SR45E/SR46E) (Note 1)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
A-1244-919-A	CD-672 BOARD, COMPLETE (SR55E/SR65/SR65E/SR75E/SR85/SR85E)	
A-1244-919-A	CD-687 BOARD, COMPLETE (SR65/SR65E/ SR85/SR85E) (Note 1)	

(IC7002 (CCD imager) is not included in CD-672/CD-687 complete board. Included in CCD block assy.)		
< CAPACITOR >		
C7002	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V
C7003	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V
C7005	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7006	1-100-591-91	CERAMIC CHIP 1uF 10% 25V
		(CD-672)
C7007	1-127-820-11	CERAMIC CHIP 4.7uF 10% 16V
C7010	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
		(CD-672)
C7011	1-165-875-11	CERAMIC CHIP 10uF 10% 10V
C7015	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7016	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7017	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7018	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7023	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C7024	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7025	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7026	1-100-251-11	CERAMIC CHIP 0.047uF 10% 10V
C7027	1-100-251-11	CERAMIC CHIP 0.047uF 10% 10V
C7028	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C7029	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
< CONNECTOR >		
CN7001	1-820-586-51	CONNECTOR, FFC/FPC 28P
< FERRITE BEAD >		
FB7001	1-400-331-11	FERRITE, EMI (SMD) (1005)
< IC >		
IC7002	(Not supplied)	ICX617AKF-J (CCD IMAGER) (Note 2)
		(IC7002 is supplied including in CCD block assy.)
IC7003	8-759-489-19	IC uPC6756GR-8JG-E2
< COIL >		
L7001	1-400-588-11	INDUCTOR 10uH
L7002	1-400-588-11	INDUCTOR 10uH
< TRANSISTOR >		
Q7001	6-550-234-01	TRANSISTOR UNR32A300LS0
Q7002	8-729-055-21	TRANSISTOR 2SC5096-O/R (TE85L)
< RESISTOR >		
R7002	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R7004	1-218-965-11	RES-CHIP 10K 5% 1/16W
R7005	1-218-953-11	RES-CHIP 1K 5% 1/16W
R7006	1-218-966-11	RES-CHIP 12K 5% 1/16W
R7013	1-218-965-11	RES-CHIP 10K 5% 1/16W

Ref. No.	Part No.	Description
R7014	1-218-989-11	RES-CHIP 1M 5% 1/16W
R7015	1-218-989-11	RES-CHIP 1M 5% 1/16W
R7016	1-218-965-11	RES-CHIP 10K 5% 1/16W
< COMPOSITION CIRCUIT BLOCK >		
RB7001	1-234-379-21	RES, NETWORK 22K (1005X4)
< SENSOR >		
* SE7001	1-479-022-61	SENSOR, ANGULAR VELOCITY (32.2kHz)
		(YAW)
* SE7002	1-479-022-51	SENSOR, ANGULAR VELOCITY (30.8kHz)
		(PITCH)

A-1439-164-A	CD-720 BOARD, COMPLETE (SR35E/SR36E/SR45/SR45E/SR46/SR46E)	

(IC7101 is not included in CD-720 complete board.)		
< CAPACITOR >		
C7101	1-124-779-00	ELECT CHIP 10uF 20% 16V
C7103	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C7104	1-124-779-00	ELECT CHIP 10uF 20% 16V
C7105	1-164-854-11	CERAMIC CHIP 15PF 5% 50V
C7108	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V
< CONNECTOR >		
* CN7101	1-816-646-51	FFC/CONNECTOR, FPC (LIF) 16P
< IC >		
IC7101	8-753-288-68	ICX650NKF-H (CCD IMAGER) (SR45/SR46)
		(Note 2)
IC7101	8-753-289-10	ICX651NKF-H (CCD IMAGER)
		(SR35E/SR36E/SR45E/SR46E) (Note 2)
< COIL >		
L7101	1-400-588-11	INDUCTOR 10uH
< TRANSISTOR >		
* Q7101	6-551-873-01	TRANSISTOR 2SC3931G0LS0
< RESISTOR >		
R7101	1-218-959-11	RES-CHIP 3.3K 5% 1/16W

Note 1: CD-672 complete board is supplied instead of CD-687 complete board, because CD-672 complete board and CD-687 complete board are compatible.

Note 1: CD-687基板は供給されません。代わりにCD-672基板が供給されます。

Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

Note 2: イメージャの交換時は4-3ページの「イメージャ交換時の注意」を必ずお読みください。

Ref. No.	Part No.	Description
	A-1439-175-A	CK-188 BOARD, COMPLETE ***** (BT901 (lithium battery) is not included in CK-188 complete board.) < BATTERY HOLDER >
△* BH58011-756-615-51		HOLDER, BATTERY (Note) < BATTERY >
△ BT901	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note) < CONNECTOR >
CN5801	1-818-074-51	CONNECTOR, FFC/FPC (ZIF) 36P
CN5802	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
* CN5803	1-816-654-51	FFC/CONNECTOR, FPC (LIF) 6P
* CN5804	1-816-650-51	FFC/CONNECTOR, FPC (LIF) 24P < RESISTOR >
R5802	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R5803	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R5804	1-218-957-11	RES-CHIP 2.2K 5% 1/16W < SWITCH >
S5801	1-771-844-21	SWITCH, TACTILE (SMD) (DISP/BATT INFO)
S5802	1-771-844-21	SWITCH, TACTILE (SMD) (RESET)
S5803	1-771-844-21	SWITCH, TACTILE (SMD) (BACK LIGHT)
S5804	1-771-844-21	SWITCH, TACTILE (SMD) (▶)
S5805	1-771-844-21	SWITCH, TACTILE (SMD) (EASY) S5806 1-771-844-21 SWITCH, TACTILE (SMD) (DVD BURN) < TERMINAL >
* TB5801	1-694-592-21	TERMINAL
	A-1439-166-A	CR-087 BOARD, COMPLETE (SR55E/SR65/SR65E/SR75E/SR85/SR85E) ***** < CONNECTOR >
* CN7401	1-821-720-51	CONNECTOR, FFC/FPC (ZIF) 32P
△* CN74021-821-664-21		CONNECTOR, MULTIPLE (PLUG) 34P (INTERFACE CONNECTOR)
	A-1153-842-A	FP-386 FLEXIBLE BOARD, COMPLETE ***** < SWITCH >
S101	1-786-180-31	SWITCH, PUSH (1KEY) (PANEL REVERSE)

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
	A-1439-108-A	IR-066 BOARD, COMPLETE (SR35E/SR36E/SR45/SR45E/SR46/SR46E)
	A-1439-109-A	IR-066 BOARD, COMPLETE (SR55E/SR65/SR65E/SR75E/SR85/SR85E) ***** < CAPACITOR >
C6501	1-165-908-11	CERAMIC CHIP 1uF 10% 10V (SR55E/SR65/SR65E/SR75E/SR85/SR85E) < CONNECTOR >
* CN6501	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P < DIODE >
D6502	6-500-512-01	DIODE CL-330IRS-X-TU (NIGHTSHOT) < IC >
IC6501	6-600-163-01	IC RS-770 (SR55E/SR65/SR65E/SR75E/SR85/SR85E) < TRANSISTOR >
Q6501	6-550-102-01	TRANSISTOR 2SC5663T2L < RESISTOR >
R6502	1-218-959-11	RES-CHIP 3.3K 5% 1/16W
R6503	1-216-801-11	METAL CHIP 22 5% 1/10W
R6504	1-216-801-11	METAL CHIP 22 5% 1/10W
	A-1439-139-A	JK-357 BOARD, COMPLETE ***** < CONNECTOR >
* CN7201	1-793-331-51	CONNECTOR, FFC/FPC (LIF) 20P
* CN7202	1-818-513-31	CONNECTOR (SQUARE TYPE) (USB) 5P (USB)
CN7203	1-815-794-13	CONNECTOR (MULTIPLE) (A/V R) < FERRITE BEAD >
FB7201	1-500-238-11	BEAD, FERRITE (CHIP) (1608)
FB7202	1-500-238-11	BEAD, FERRITE (CHIP) (1608)

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意
電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Note: Replace the battery holder (BH5801) together when replacing the lithium battery (BT901) on the CK-188 board. (The battery holder removed once cannot be used again.) When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: CK-188基板のリチウム電池 (BT901) を交換する場合はバッテリーホルダ (BH5801) も同時に新品に交換してください。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着してください。

Ref. No.	Part No.	Description				
< LINE FILTER >						
LF7201	1-457-223-11	COMMON MODE CHOKE COIL				
< RESISTOR >						
R7203	1-216-809-11	METAL CHIP	100	5%	1/10W	
< VARISTOR >						
* VD7202	1-802-279-11	VARISTOR (SMD)				
* VD7203	1-802-279-11	VARISTOR (SMD)				
* VD7205	1-802-279-11	VARISTOR (SMD)				
A-1439-140-A		MS-383 BOARD, COMPLETE				

< CONNECTOR >						
* CN7301	1-816-646-51	FFC/FPC CONNECTOR (LIF) 16P				
* CN7302	1-819-990-21	MEMORY STICK DUO CONNECTOR 10P				
< DIODE >						
D7301	8-719-077-09	DIODE CL-196HR-CD-T (MS ACCESS)				
< FERRITE BEAD >						
FB7301	1-400-354-11	INDUCTOR, FERRITE BEAD (1005)				
FB7302	1-400-354-11	INDUCTOR, FERRITE BEAD (1005)				
FB7303	1-400-354-11	INDUCTOR, FERRITE BEAD (1005)				
FB7304	1-400-354-11	INDUCTOR, FERRITE BEAD (1005)				
< RESISTOR >						
R7301	1-218-942-11	RES-CHIP	120	5%	1/16W	
R7302	1-218-942-11	RES-CHIP	120	5%	1/16W	
R7303	1-218-942-11	RES-CHIP	120	5%	1/16W	
R7304	1-218-942-11	RES-CHIP	120	5%	1/16W	
R7306	1-218-947-11	RES-CHIP	330	5%	1/16W	
A-1439-215-A		PD-346 BOARD, COMPLETE				

< CAPACITOR >						
C6201	1-100-581-81	CERAMIC CHIP	0.0047uF	10%	50V	
C6202	1-100-581-81	CERAMIC CHIP	0.0047uF	10%	50V	
C6203	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
C6205	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C6206	1 100 567 81	CERAMIC CHIP	0.01uF	10%	25V	
C6207	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C6210	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V	
C6212	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	
C6216	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	
C6217	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V	
C6218	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C6221	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
C6224	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
C6225	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V	
C6226	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C6228	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	
C6229	1-125-889-11	CERAMIC CHIP	2.2uF	10%	10V	
C6231	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	

Ref. No.	Part No.	Description			
* C6232	1-100-741-81	CERAMIC CHIP	560PF	5%	50V
C6233	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
< CONNECTOR >					
CN6201	1-815-031-51	FFC/CONNECTOR, FPC (ZIF) 24P			
* CN6202	1-818-069-61	CONNECTOR, FFC/FPC (ZIF) 6P			
* CN6203	1-573-915-51	CONNECTOR, FFC/FPC (ZIF) 6P			
* CN6204	1-818-069-61	CONNECTOR, FFC/FPC (ZIF) 6P			
CN6205	1-815-031-51	FFC/CONNECTOR, FPC (ZIF) 24P			
< DIODE >					
D6201	8-719-084-17	DIODE EMZ6.8ET2R			
* D6203	6-501-955-01	DIODE MA7S056G08S0			
* D6205	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)			
* D6206	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)			
* D6207	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)			
< FERRITE BEAD >					
FB6201	1-400-619-11	BEAD, FERRITE (CHIP) (1608)			
< IC >					
* IC6201	8-753-242-24	IC CXM3018R-T4			
IC6202	8-759-693-13	IC NJM12904V (TE2)			
< COIL >					
L6201	1-400-588-11	INDUCTOR	10uH		
L6202	1-400-588-11	INDUCTOR	10uH		
L6205	1-400-588-11	INDUCTOR	10uH		
< TRANSISTOR >					
Q6201	8-729-427-37	TRANSISTOR	XP411F-TXE		
Q6202	8-729-427-67	TRANSISTOR	XP421F-TXE		
Q6203	6-550-232-01	TRANSISTOR	2SA2029FS6T2LQ/R		
Q6204	6-550-119-01	TRANSISTOR	DTC144EMFS6T2L		
Q6205	6-551-184-01	TRANSISTOR	MCH6305-TL-E-S		
* Q6207	6-551-847-01	TRANSISTOR	UP04501G08S0		
Q6208	8-729-037-53	TRANSISTOR	2SB1462-J-QR (TX). SO		
Q6209	8-729-037-53	TRANSISTOR	2SB1462-J-QR (TX). SO		
Q6210	8-729-037-53	TRANSISTOR	2SB1462-J-QR (TX). SO		
< RESISTOR >					
R6202	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R6203	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R6204	1-218-975-11	RES-CHIP	68K	5%	1/16W
R6210	1 208 935 11	METAL CHIP	100K	0.5%	1/16W
R6215	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6216	1-218-978-11	RES-CHIP	120K	5%	1/16W
R6217	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6218	1-218-989-11	RES-CHIP	1M	5%	1/16W
R6226	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R6232	1-208-943-11	METAL CHIP	220K	0.5%	1/16W
R6233	1-208-721-11	METAL CHIP	39K	0.5%	1/16W
R6234	1-220-876-81	MCTAL CHIP	18	0.5%	1/16W
R6235	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R6236	1-220-876-81	METAL CHIP	18	0.5%	1/16W
R6237	1-220-876-81	METAL CHIP	18	0.5%	1/16W
R6238	1-218-961-11	RES-CHIP	4.7K	5%	1/16W

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			
R6239	1-218-953-11	RES-CHIP	1K	5%	1/16W

< COMPOSITION CIRCUIT BLOCK >


RB6202	1-234-380-21	RES, NETWORK	47K (1005X4)		
--------	--------------	--------------	--------------	--	--

Electrical parts list of the VC-518 board is not shown.
Pages 5-13 to 5-19 are not shown.

• EXCEPT J MODEL

Checking supplied accessories.


to J MODEL

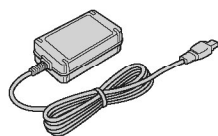

AC Adaptor
(AC-L200/L200B)
△ 1-479-285-61
(EXCEPT BR)



Power Cord
△ 1-555-074-91 (AUS)
△ 1-783-952-61 (AR)
△ 1-790-107-61 (US, CND)
△ 1-792-549-41 (JE)
△ 1-824-910-71 (AEP, NE,
E: PAL, E: NTSC (Latin America))
△ 1-827-269-12 (UK, HK)
△ 1-832-121-31 (CH)
△ 1-833-892-21 (KR)
△ 1-834-852-11 (E: NTSC
(Except Latin America))
△ 1-834-482-21 (TH)

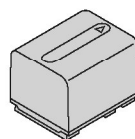


Rechargeable Battery Pack
(NP-FH40)
△ A-1201-658-A (US, CND)
△ A-1201-659-B (EXCEPT US, CND, CH)
△ A-1201-660-A (CH)




Conversion (2P) Adaptor
△ 1-569-008-12
(E: NTSC (Latin America))



 Conversion (2P) Adaptor
△ 1-569-007-12
(E: NTSC (Except Latin
America), JE)



DVD-ROM
"ENJOY HANDYCAM"
3-282-264-01 (KR)
ENGLISH/KOREAN/JAPANESE
3-282-264-11 (US, CND, E, AR)
ENGLISH/FRENCH/SPANISH/PORTUGUESE
3-282-264-21 (AEP, UK, NE)
ENGLISH/RUSSIAN/GERMAN/TURKISH
3-282-264-51 (AEP)
ENGLISH/FRENCH/GERMAN/DUTCH/SPANISH/
PORTUGUESE/ITALIAN/TURKISH
3-282-264-61 (E, HK, AUS, CH, TH)
ENGLISH/FRENCH/SIMPLIFIED CHINESE for CHINA/
TRADITIONAL CHINESE for HONG KONG
3-282-264-71 (E)
ENGLISH/TRADITIONAL CHINESE for TAIWAN/
SPANISH/PORTUGUESE

 


Handycam Station
(DCRA-C200)
1-821-663-11
(SR55E/SR65/SR65E/
SR75E/SR85/SR85E)



21-pin Adaptor
1-770-783-21
(SR55E/SR65E: NE/
SR75E/SR85E: NE)



 A/V Connecting Cable
1-823-156-61



USB Cable
1-829-579-41



 
Wireless Remote Commander
(RMT-835)
1-479-275-41
(SR55E/SR65/SR65E/
SR75E/SR85/SR85E)

• Refer to page 5-1 for mark △.




Operating Guide

- 3-280-869-11 (ENGLISH, SPANISH) (SR45: E, AR/SR65: E/SR85: E, JE)
- 3-280-869-21 (PORTUGUESE) (SR85: JE)
- 3-280-869-41 (KOREAN) (SR45: KR/SR46: KR/SR65: KR/SR85: KR, JE)
- 3-280-870-11 (ENGLISH) (SR35E: AEP, UK/SR36E: AEP, UK/SR45E: E, HK, AUS, TH/SR46E: E, HK, AUS, TH, SR55E: AEP, UK/SR65E: E, HK, AUS, TH/SR75E: AEP, UK/SR85E: E, HK, AUS, TH, JE)
- 3-280-870-21 (FRENCH, DUTCH, GREEK) (SR35E: AEP/SR36E: AEP/SR55E: AEP/SR75E: AEP)
- 3-280-870-31 (GERMAN, ITALIAN, TURKISH) (SR35E: AEP/SR36E: AEP/SR55E: AEP/SR75E: AEP)
- 3-280-870-41 (SPANISH, PORTUGUESE, POLISH) (SR35E: AEP/SR36E: AEP/SR55E: AEP/SR75E: AEP)
- 3-280-870-51 (CZECH, HUNGARIAN, SLOVAK) (SR35E: AEP/SR36E: AEP/SR55E: AEP/SR75E: AEP)
- 3-280-870-61 (RUSSIAN, UKRAINIAN) (SR35E: NE/SR36E: NE/SR45E: NE/SR46E: NE/SR55E: NE/SR65E: NE/SR75E: NE/SR85E: NE, JE)
- 3-280-870-71 (SWEDISH, DANISH, FINNISH) (SR35E: NE/SR36E: NE/SR55E: NE/SR75E: NE)
- 3-280-870-81 (SIMPLIFIED CHINESE) (SR45E: E/SR46E: E/SR65E: E/SR85E: E, JE)
- 3-280-870-91 (ARABIC, PERSIAN) (SR45E: E/SR46E: E/SR65E: E/SR85E: E)
- 3-286-666-41 (TRADITIONAL CHINESE) (SR45E: HK/SR46E: HK/SR65E: HK/SR85E: HK)
- 3-286-666-51 (THAI) (SR45E: TH/SR46E: TH/SR65E: TH/SR85E: TH)
- 3-286-667-11 (ENGLISH, SPANISH) (SR45: US, CND/SR46: US, CND/SR65: US, CND/SR85: US, CND)
- 3-286-667-21 (FRENCH) (SR45: CND/SR46: CND/SR65: CND/SR85: CND)
- 3-286-668-11 (SIMPLIFIED CHINESE) (SR45E: CH/SR46E: CH/SR65E: CH/SR85E: CH)



CD-ROM

“Handycam Application Software”
 (“Picture Motion Browser (Software)”/
 “PMB Guide”/
 “Handycam Handbook (PDF)”
 3-286-669-01

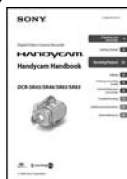

Handycam Handbook (PDF)

The CD-ROM supplied contains all of language version of the Handycam Handbook (PDF) for printing.

- The printed matter is not supplied. If required, please order it with the part number below.
- (Only for destination Japanese model)
 日本国内については日本語のみが印刷での部品供給可能です。

DCR-SR35E/SR36E/SR45E/SR46E/ SR55E/SR65E/SR75E/SR85E


- * 3-286-671-11 (ENGLISH)
- * 3-286-671-21 (FRENCH)
- * 3-286-671-31 (DUTCH)
- * 3-286-671-41 (GREEK)
- * 3-286-671-51 (GERMAN)
- * 3-286-671-61 (ITALIAN)
- * 3-286-671-71 (TURKISH)
- * 3-286-671-81 (SPANISH)
- * 3-286-671-91 (PORTUGUESE)
- * 3-286-672-11 (POLISH)
- * 3-286-672-21 (CZECH)
- * 3-286-672-31 (HUNGARIAN)
- * 3-286-672-41 (SLOVAK)
- * 3-286-672-51 (RUSSIAN)
- * 3-286-672-61 (UKRAINIAN)
- * 3-286-672-71 (SWEDISH)
- * 3-286-672-81 (DANISH)
- * 3-286-672-91 (FINNISH)
- * 3-286-673-11 (SIMPLIFIED CHINESE)
- * 3-286-673-21 (ARABIC)
- * 3-286-673-31 (PERSIAN)
- * 3-286-673-41 (MALAY)
- * 3-286-673-51 (THAI)
- * 3-286-673-61 (INDONESIAN)
- * 3-286-673-71 (TRADITIONAL CHINESE)

DCR-SR45/SR46/SR65/SR85


- * 3-286-670-11 (ENGLISH)
- * 3-286-670-21 (FRENCH)
- * 3-286-670-31 (SPANISH)
- * 3-286-670-41 (PORTUGUESE)
- * 3-286-670-51 (TRADITIONAL CHINESE)
- * 3-286-670-61 (KOREAN)

● J MODEL


付属品

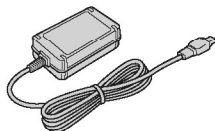


AC アダプター
(AC-L200/L200B)
△ 1-479-285-61

 

電源コード
△ 1-792-549-41

 

 DVD-ROM
「エンジョイハンディカム」
3-282-264-01
英語/韓国語/日本語



ハンディカムステーション
(DCRA-C200)
1-821-663-11



A/V接続ケーブル
1-823-156-61




取扱説明書
3-280-869-01 (日本語)




USBケーブル
1-829-579-41



ワイヤレスリモコン
(RMT-835)
1-479-275-41

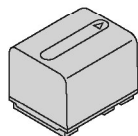

 リチャージャブル
バッテリーパック
(NP-FH40)
△ A-1201-657-A



CD-ROM
「Handycam Application Software」
(「Picture Motion Browser」(ソフトウェア)/
「PMBガイド」/
「ハンディカムハンドブック」(PDF))
3-286-669-02



ハンディカムハンドブック (PDF)

印刷用のハンディカムハンドブック (PDF) は
全ての言語が付属品のCD-ROMに含まれています。
・印刷物は付属されていません。
・必要な場合は下記部品番号にて注文となります。

* 3-286-670-01 (日本語)

● △マークについては、5-1ページを参照して下さい。