

SECTION 6 REPAIR PARTS LIST


6-1. EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.


The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

6-1-1. OVERALL SECTION

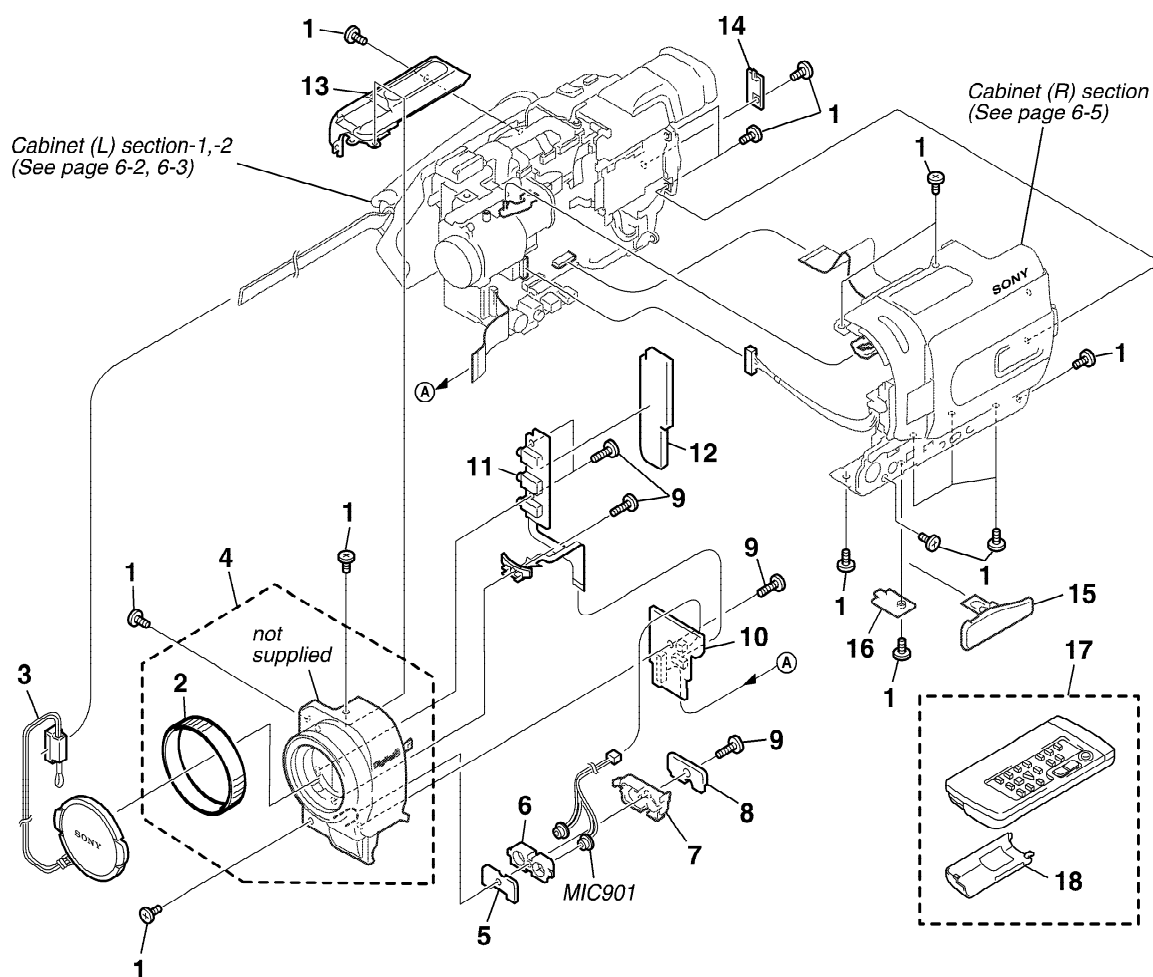


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	3-067-347-01	MI SCREW M2 (H)		11	1-683-627-21	FP-411 FLEXIBLE BOARD	
2	3-065-310-01	RING, RUBBER		12	3-072-309-01	CUSHION (1), F	
3	X-3949-376-1	CAP (N) ASSY, LENS		13	3-065-326-01	CABINET (UPPER)	
4	X-3952-131-1	PANEL ASSY (24), FRONT		14	3-072-271-01	LID (BT), CPC	
5	3-072-279-01	CUSHION (F), MICROPHONE		15	3-072-343-01	COVER, JACK	
6	3-072-278-01	HOLDER, MICROPHONE		16	3-072-344-01	RETAINER, JACK COVER	
7	3-072-277-01	RETAINER, MICROPHONE		17	1-475-141-61	REMOTE COMMANDER (RMT-814)	
8	3-072-307-01	SHEET, MICROPHONE		18	3-742-854-01	LID, BATTERY CASE (FOR RMT-814)	
9	3-065-567-01	TAPPING (M1.7)		MIC901	1-542-477-11	MICROPHONE	
10	A-7078-047-A	SI-032 BOARD, COMPLETE					

6-1-2. CABINET (L) SECTION-1

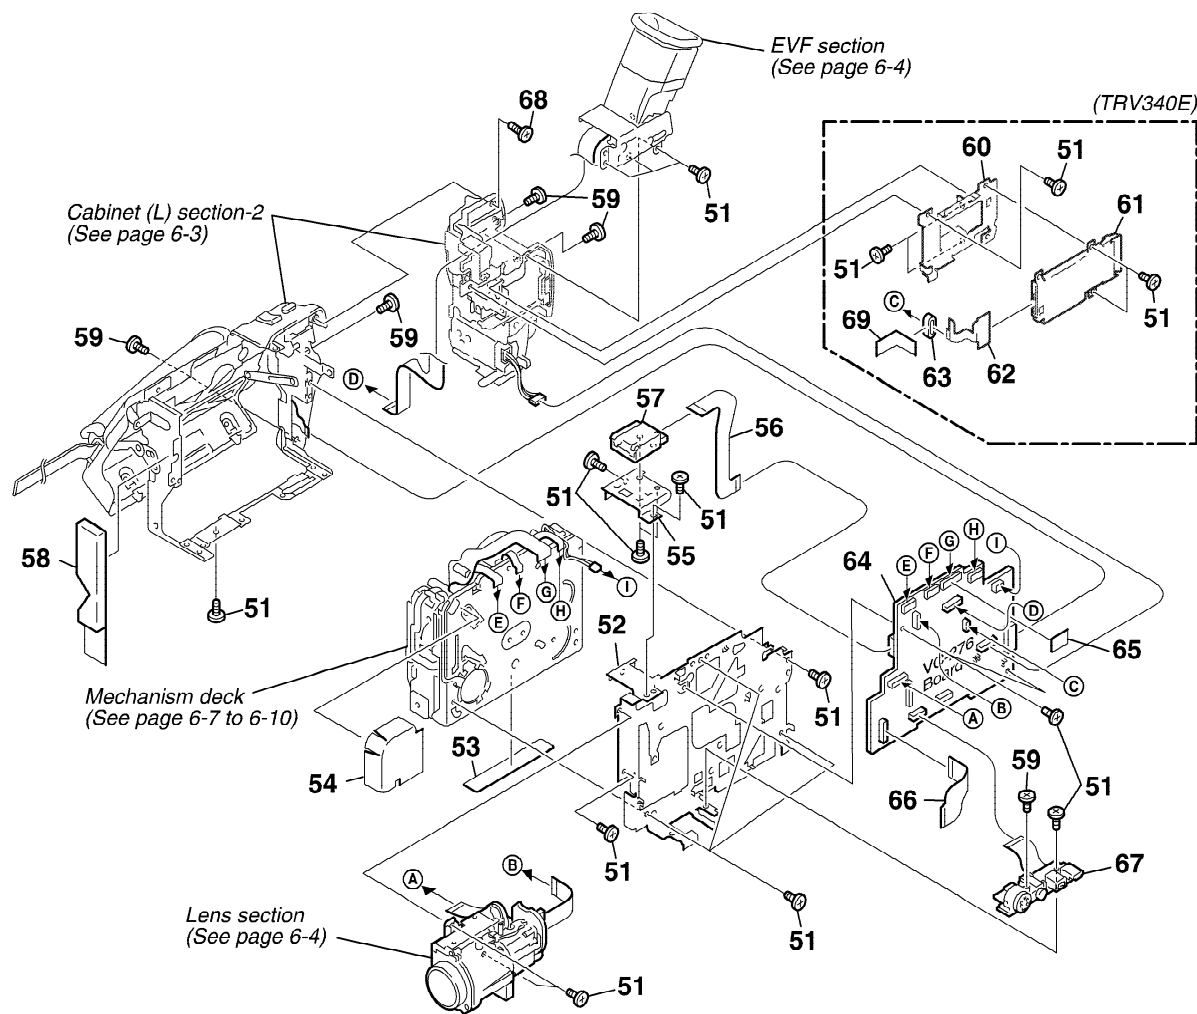


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	4-974-725-01	SCREW (M1.7X2.5), P		61	1-816-271-11	CONNECTOR, MEMORY STICK 10P (TRV340E)	
52	3-072-267-01	FRAME, MD		62	1-683-625-11	FP-409 FLEXIBLE BOARD (TRV340E)	
53	3-065-662-01	LABEL, LS CAUTION		63	1-500-226-11	BEAD, FERRITE (TRV340E)	
54	3-066-169-01	SHEET, MD		64	A-7012-071-A	VC-276 (QPA) BOARD, COMPLETE (SERVICE)	
55	3-072-268-01	FRAME, SHOE		64	A-7028-924-A	VC-276 (QPFS) BOARD, COMPLETE (SERVICE)	(TRV240E) (TRV340E)
56	1-680-118-11	FP-264 FLEXIBLE BOARD		65	3-066-759-01	SHEET, VC	
57	1-815-124-11	CONNECTOR, EXTERNAL (HOT SHOE)	(TRV340E)	66	1-683-623-11	FP-406 FLEXIBLE BOARD	
57	1-815-124-21	CONNECTOR, EXTERNAL (HOT SHOE)	(TRV240E)	67	1-683-626-21	FP-410 FLEXIBLE BOARD	
58	3-072-308-01	COVER, MD		68	3-065-567-01	TAPPING (M1.7)	
59	3-067-347-01	M1 SCREW M2 (H)		69	3-941-343-21	TAPE (A)	
60	3-072-273-01	HOLDER, MS (TRV340E)					

6-1-3. CABINET (L) SECTION-2

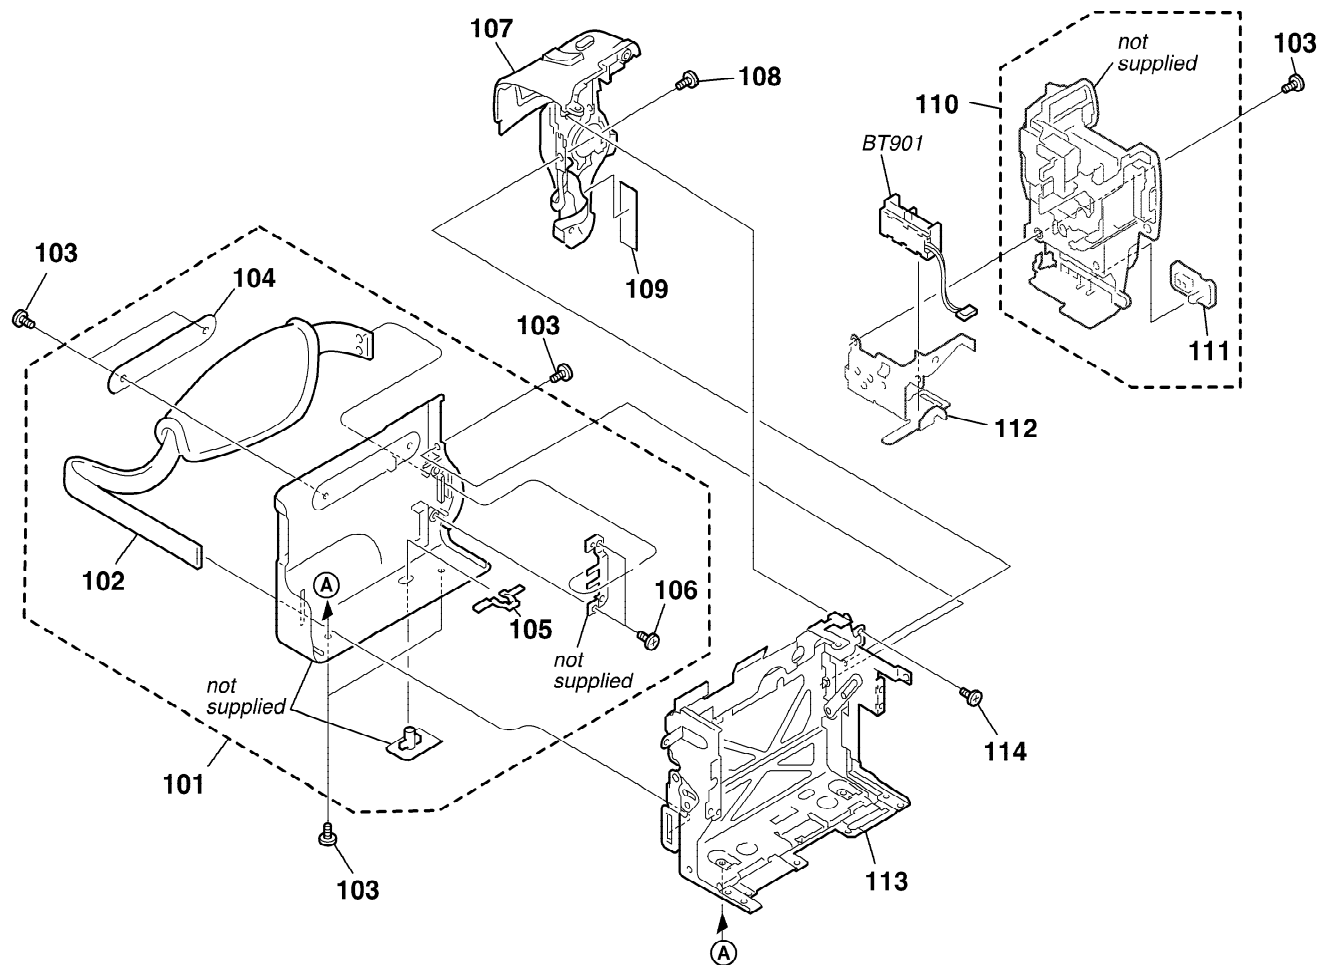

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	X-3951-159-1	CABINET (L) ASSY		108	4-974-725-01	SCREW (M1.7X2.5), P	
102	3-052-815-01	BELT (ES), GRIP		109	3-941-343-21	TAPE (A)	
103	3-067-347-01	MI SCREW M2 (H)		110	X-3952-148-1	PANEL ASSY (MS), BATTERY (TRV340E)	
104	3-065-308-01	LABEL (L)		110	X-3952-149-1	PANEL ASSY, BATTERY (TRV240E)	
105	3-978-765-01	SLIDER, G LOCK		111	3-072-305-01	LID (2500), JACK	
106	3-713-791-01	SCREW (M1.7X4), TAPPING, P2		112	3-072-274-01	SHEET METAL (LOWER), STRAP	
107	1-476-415-11	SWITCH BLOCK, CONTROL (SS-1380)	(TRV340E)	113	X-3952-136-1	FRAME ASSY (25), CS	
107	1-476-415-21	SWITCH BLOCK, CONTROL (SS-1380)	(TRV240E)	114	3-065-567-01	TAPPING (M1.7)	
				BT901	1-694-772-11	TERMINAL BOARD, BATTERY	


6-1-4. LENS, EVF SECTION

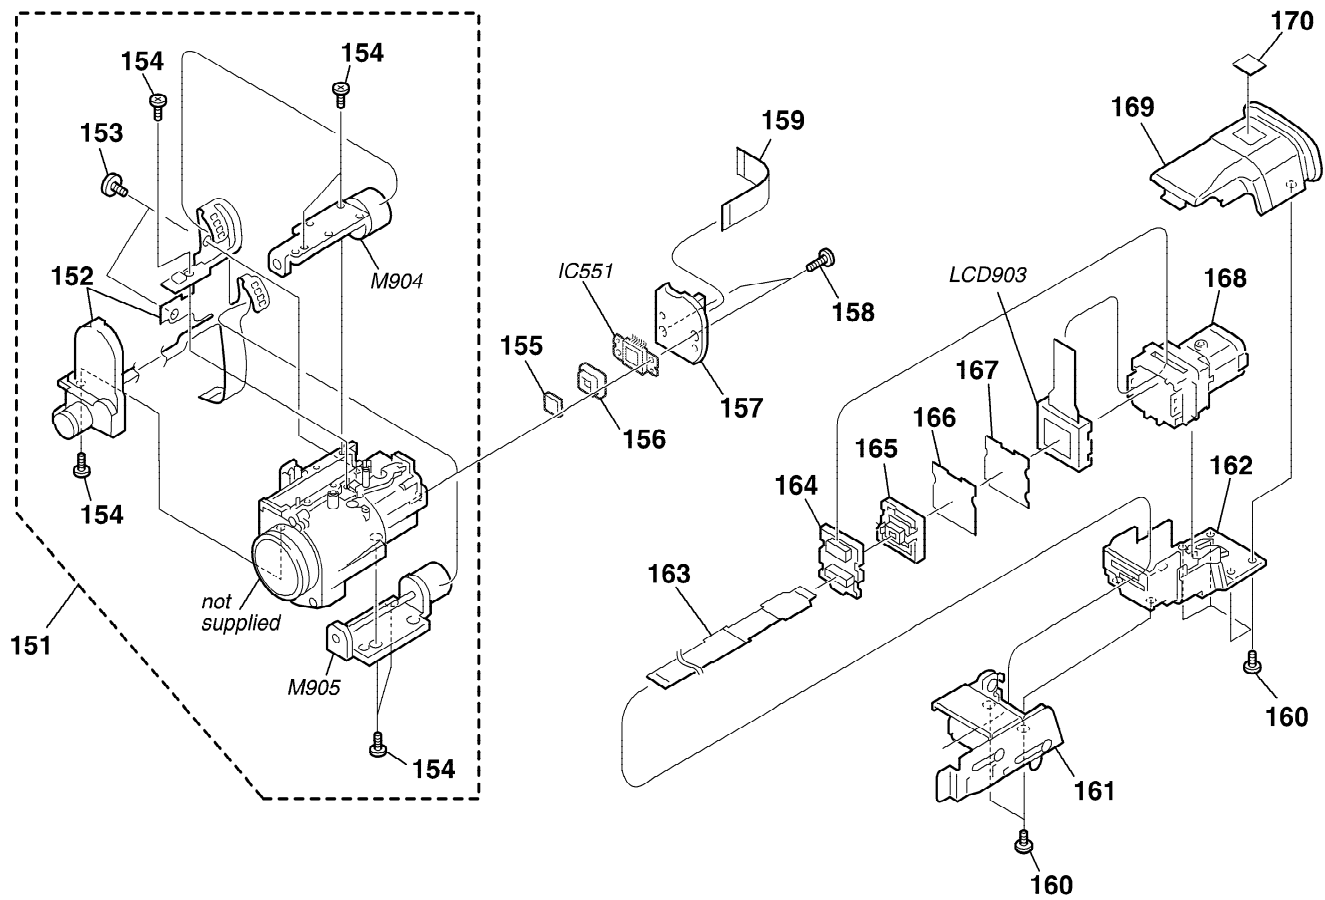

Be sure to read “Precautions upon replacing CCD imager” on page 4-8 when changing the CCD imager.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
151	8-848-740-01	DEVICE, LENS LSV-700A		163	1-683-624-11	FP-407 FLEXIBLE BOARD	
152	X-3951-248-1	IRIS FLEXIBLE, ASSY		164	A-7078-049-A	LB-076 BOARD, COMPLETE	
153	3-065-022-01	TAPPING (B1.7X3.5), HEAD		165	3-065-058-01	GUIDE, LAMP	
154	3-713-791-41	SCREW, TAPPING (M1.7X5), P2		166	3-072-211-01	ILLUMINATOR	
155	1-758-553-11	FILTER BLOCK, OPTICAL		167	3-072-210-01	SHEET, PRISM	
156	3-053-973-01	RUBBER (W), SEAL		168	X-3952-214-1	LENS (B) ASSY, VF	
157	A-7078-051-A	CD-357 (Q) BOARD, COMPLETE		169	X-3952-132-1	CABINET (UPPER) ASSY, EVF	
158	3-318-203-11	SCREW (B1.7X6), TAPPING		* 170	3-065-376-01	LABEL (138), B	
159	1-676-822-11	FP-161 FLEXIBLE BOARD		IC551	A-7028-921-A	CCD BLOCK ASSY (CCD IMAGER)	
160	3-065-567-01	TAPPING (M1.7)		LCD903	8-753-028-49	LCX032AP-5	
161	X-3951-165-1	HINGE ASSY, VF		M904	1-763-634-11	MOTOR STEPPING Z700 (ZOOM)	
162	X-3952-134-1	CABINET (LOWER) ASSY, EVF		M905	1-763-365-11	MOTOR STEPPING F700 (FOCUS)	

6-1-5. CABINET (R) SECTION

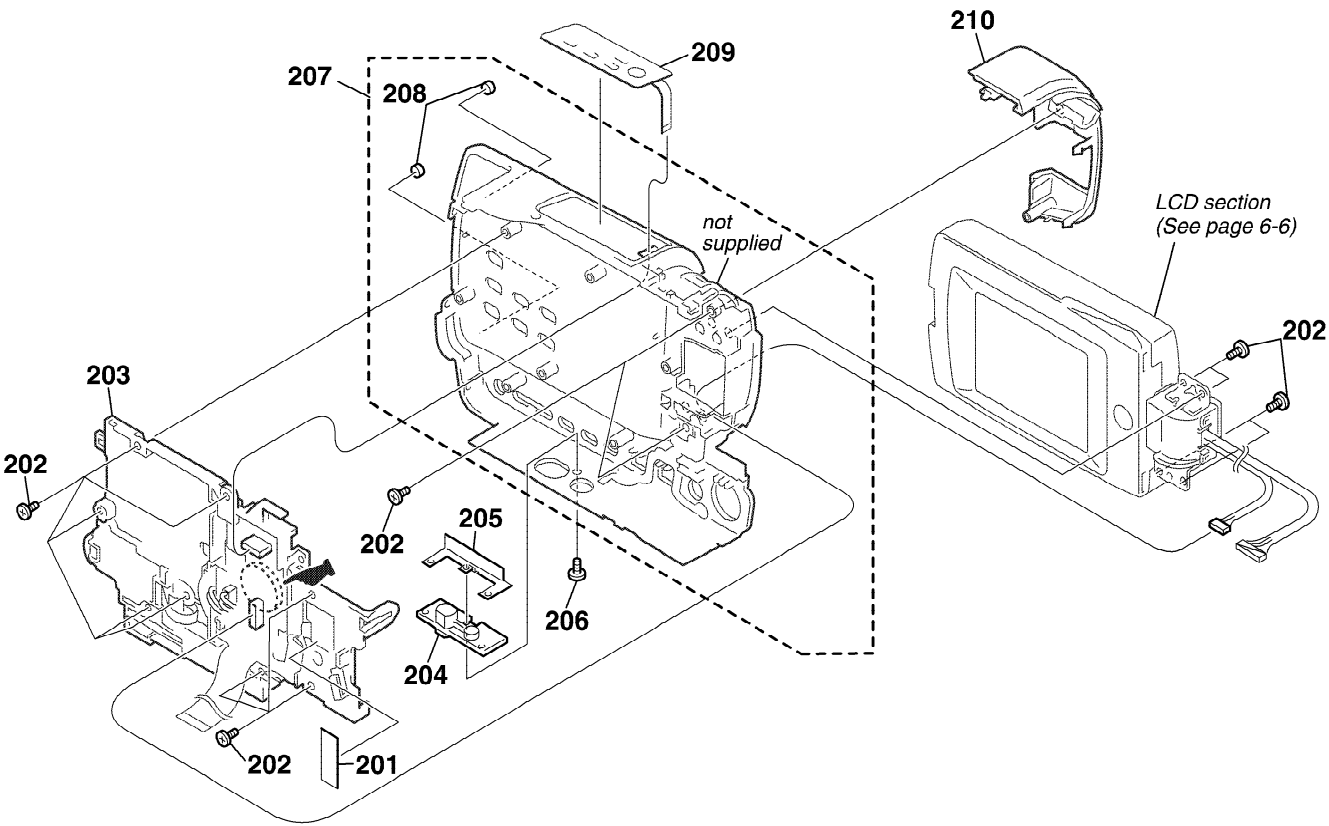


 : The printed wiring board of the Control switch block (CF-2500) on which BT001 (lithium battery) is mounted, is not shown.

CAUTION :
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
201	3-941-343-21	TAPE (A)		206	3-067-347-01	MI SCREW M2 (H)	
202	3-948-339-61	TAPPING		207	X-3952-250-1	ASSEMBLY, CABINET R (2) (TRV340E)	
203	1-477-085-11	SWITCH BLOCK, CONTROL (CF-2500)	(TRV240E)	207	X-3952-254-1	ASSEMBLY, CABINET R (2) (TRV240E)	
203	1-477-085-21	SWITCH BLOCK, CONTROL (CF-2500)	(TRV340E)	208	3-959-978-02	CUSHION, PANEL	
204	3-065-373-01	SCREW (Y), TRIPOD		209	1-477-084-31	SWITCH BLOCK, CONTROL (FK-2500)	
205	3-072-455-01	RETAINER, TRIPOD		210	X-3952-170-1	RING (2) ASSY, ORNAMENTAL (TRV340E)	
				210	X-3952-171-1	RING (2) ASSY, ORNAMENTAL (TRV240E)	

6-1-6. LCD SECTION

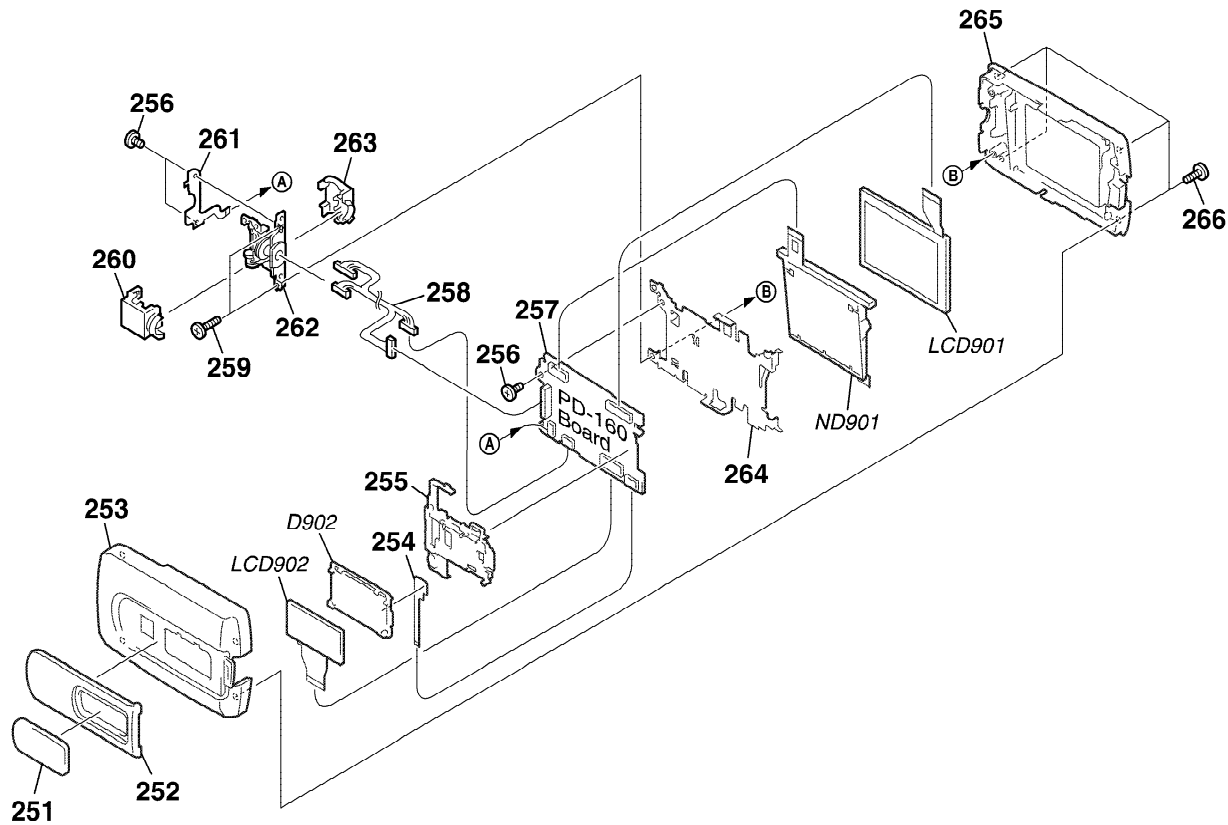


Ref. No.	Part No.	Description	Remarks
251	3-072-272-01	WINDOW, LCD	
252	X-3952-193-1	COVER (2) ASSY, CPC (TRV340E)	
252	X-3952-194-1	COVER (2) ASSY, CPC (TRV240E)	
253	3-072-341-01	CABINET (C (2)), P	
254	1-683-629-11	FP-414 FLEXIBLE BOARD	
255	3-072-286-01	HOLDER, LCD	
256	4-974-725-01	SCREW (M1.7X2.5), P	
257	A-7078-052-A	PD-160 (X6) BOARD, COMPLETE	
258	1-961-556-11	HARNESS (PD-117)	
259	3-318-203-11	SCREW (B1.7X6), TAPPING	
260	3-072-288-01	COVER (C), HINGE	

Ref. No.	Part No.	Description	Remarks
261	1-683-628-21	FP-412 FLEXIBLE BOARD	
262	X-3952-147-1	HINGE ASSY	
263	3-072-287-01	COVER (M), HINGE	
264	3-072-403-01	FRAME (2), P	
265	X-3952-150-1	CABINET (M) (2) ASSY, P	
266	3-065-567-01	TAPPING (M1.7)	
△D902	1-518-721-11	LIGHT, BACK	
△ND901	1-518-796-11	TUBE, FLUORESCENT,COLD CATHODE	
LCD901	8-753-050-65	ACX308AK-1	
LCD902	A-7028-811-A	INDICATION LCD BLOCK ASSY	


Note : The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

6-1-7. CASSETTE COMPARTMENT ASSY, DRUM ASSY

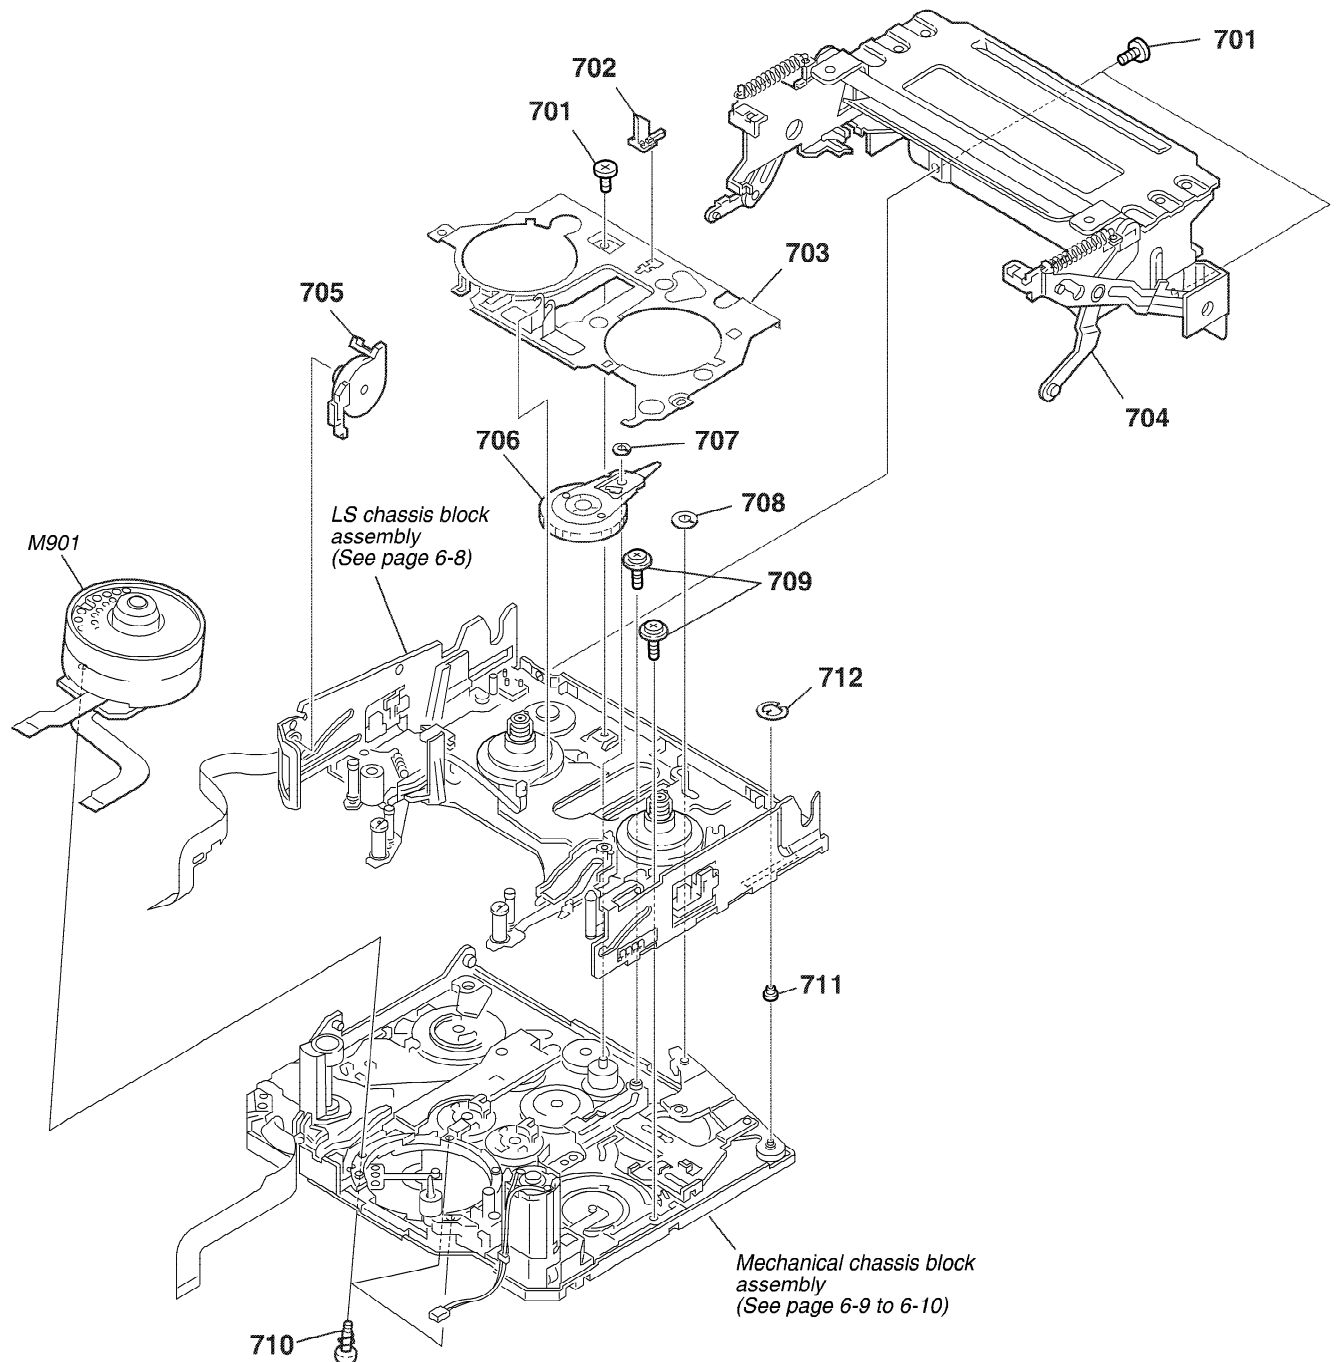


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
701	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA		708	3-065-935-01	HLC CUT 1.8X4X0.5	
702	3-065-895-01	LEVER, REEL RELEASE		709	3-947-503-01	SCREW (M1.4)	
703	3-065-896-01	PLATE, BLIND		710	X-3951-299-1	SCREW ASSY, DRUM FITTING	
704	X-3951-298-1	CASSETTE COMPARTMENT ASSY		711	7-624-101-04	STOP RING 1.2 (E TYPE)	
705	X-3951-302-1	DAMPER ASSY		712	3-074-309-01	ROLLER A, LS GUIDE	
706	X-3951-297-1	GEAR ASSY, R DRIVE					
707	3-065-840-01	CUT (0.98X3X0.13), LUMILER (W)		M901	A-7048-951-A	DRUM (DKH-04A-R)	

6-1-8. LS CHASSIS BLOCK ASSEMBLY

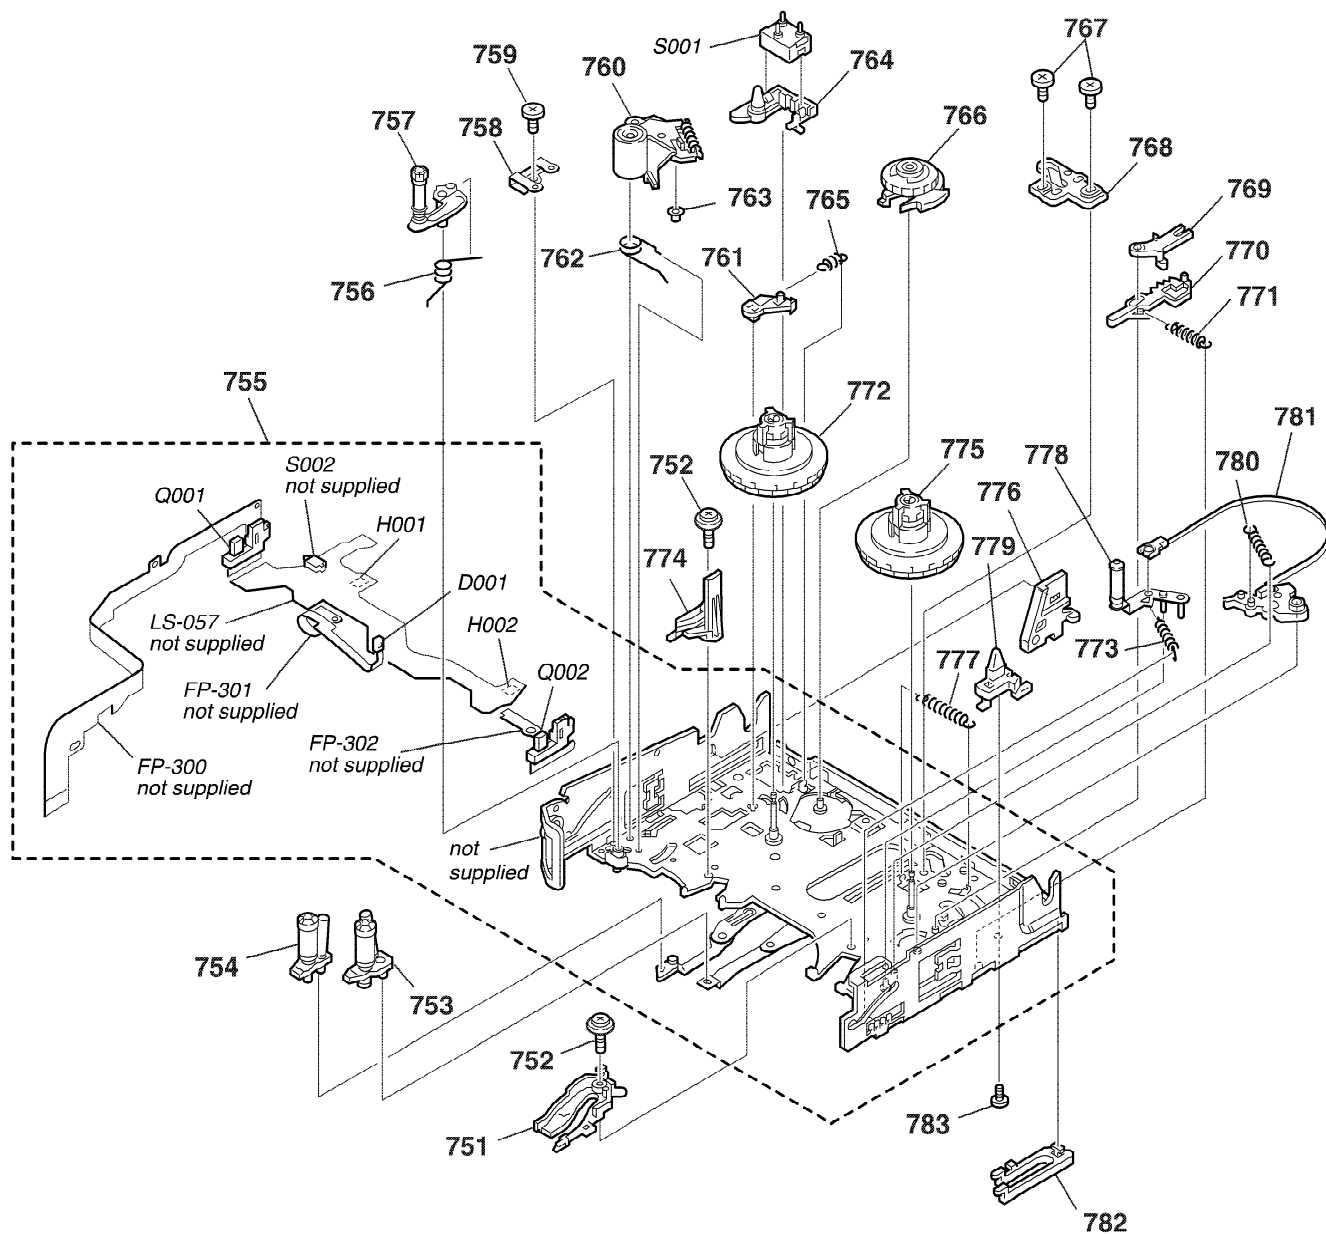


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
751	3-065-822-01	RAIL (S), GUIDE		771	3-065-830-01	SPRING, S RATCHET	
752	3-947-503-01	SCREW (M1.4)		772	X-3951-288-1	TABLE (T) ASSY, REEL	
753	A-7096-416-A	BASE (S) BLOCK ASSY, GUIDE		773	3-065-819-01	SPRING, TG1 ARM	
754	A-7096-415-A	BASE (T) BLOCK ASSY, GUIDE		774	3-065-821-01	RAIL (T), GUIDE	
755	A-7096-426-A	CHASSIS ASSY, LS		775	X-3951-289-1	TABLE (S) ASSY, REEL	
756	3-065-802-01	SPRING, TG7 ARM		776	3-065-833-01	GUIDE, LOCK	
757	A-7096-414-A	ARM BLOCK ASSY, TG7		777	3-065-831-01	PLATE (SPR), RE RETURN	
758	3-065-801-01	RETAINER, TG7		778	X-3951-304-1	ARM ASSY, TG1	
759	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA		779	3-065-835-01	GUIDE (S), CASSETTE	
760	X-3951-303-1	ARM ASSY, PINCH		780	3-065-820-01	SPRING, RVS ARM	
761	3-065-823-01	ARM, T RATCHET		781	X-3951-296-1	BAND (ASSY), BT	
762	3-065-794-01	ROAD (SPR), PINCH ARM		782	3-065-836-01	COVER, LS GREASE	
763	3-065-792-01	ROLLER, P LIM ARM		783	3-067-167-01	SCREW (M1.4X2), CAMERA TAPPING	
764	3-065-834-01	GUIDE (T), CASSETTE		S001	1-692-614-11	SWITCH, PUSH (3 KEY) (REC PROOF)	
765	3-065-824-01	SPRING, T RATCHET		H001	8-719-033-37	ELEMENT, HALL HW-105C (T REEL)	
766	A-7096-417-A	SOFT ASSY, T		H002	8-719-033-37	ELEMENT, HALL HW-105C (S REEL)	
767	7-627-852-38	SCREW,PRECISION +P1.7X1.8TYPE3		D001	8-719-988-42	DIODE GL453 (TAPE LED)	
768	3-065-832-01	PLATE, LS CAM		Q001	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE TOP)	
769	3-065-828-01	ARM, S RATCHET		Q002	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE END)	
770	3-065-829-01	PLATE, S RATCHET (RE)					

6-1-9. MECHANICAL CHASSIS BLOCK ASSEMBLY-1

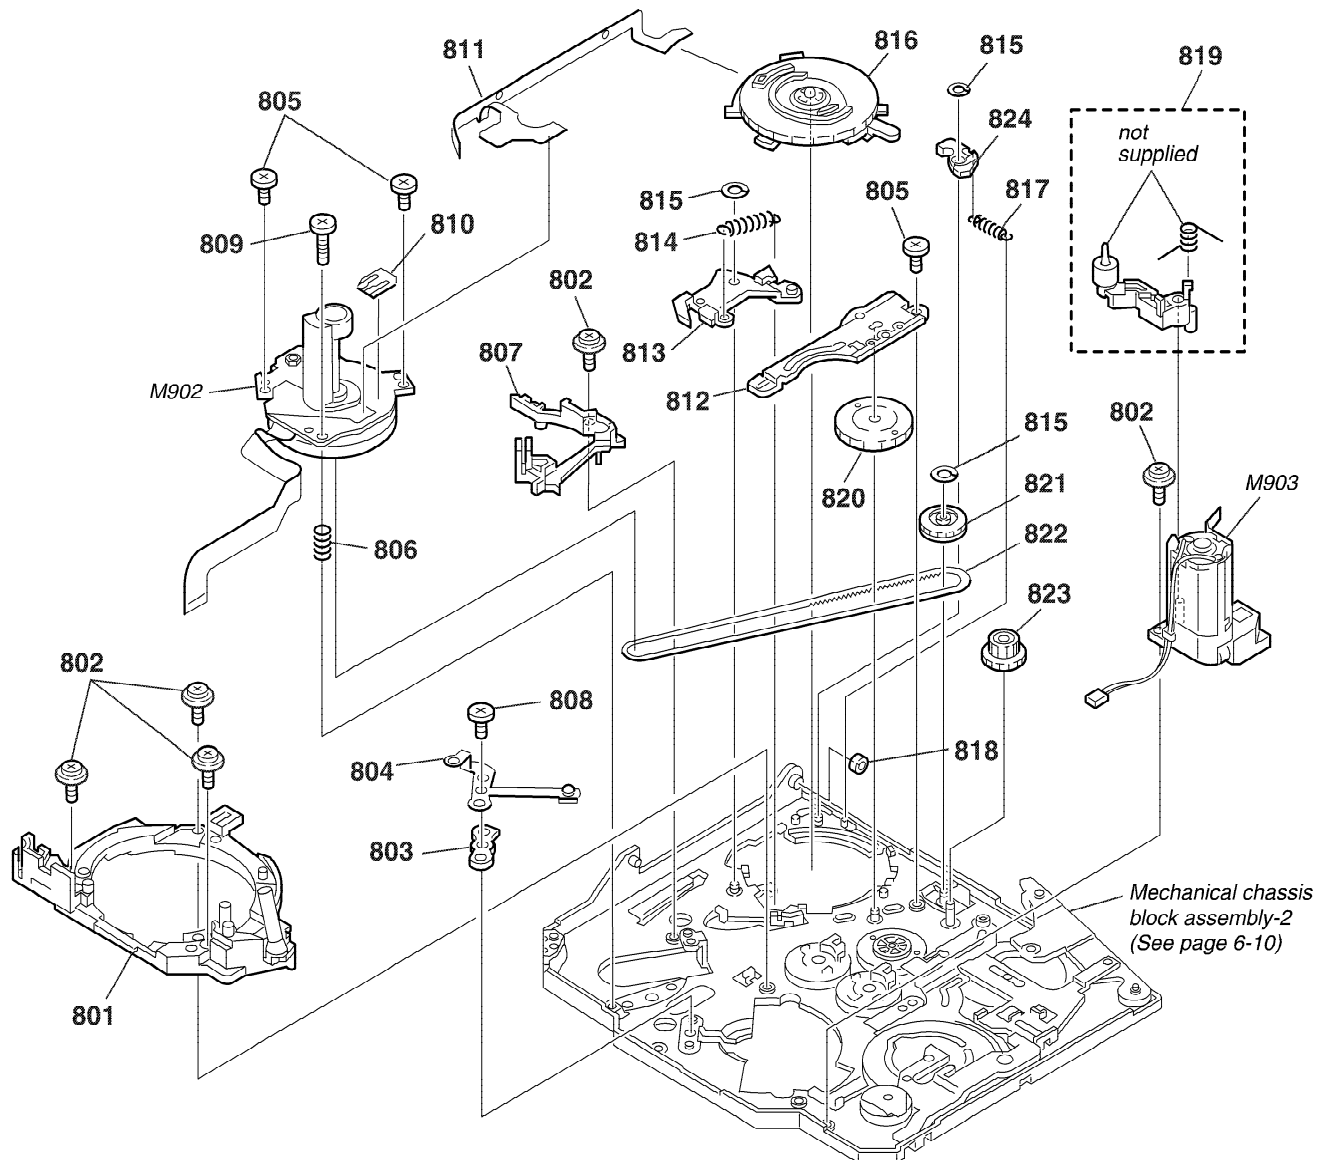

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
801	A-7096-422-A	BASE ASSY, DRUM		814	3-065-881-01	SPRING, P PRESSURE PLATE	
802	3-947-503-01	SCREW (M1.4)		815	3-065-934-01	HLW CUT 0.98X3X0.25	
803	3-065-928-01	SPACER, GROUND		816	1-786-096-11	SWITCH, ROTARY	
804	3-065-927-01	GROUND, DRUM		817	3-065-898-01	SPRING, EJECT ARM	
805	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA		818	3-065-870-01	ROLLER, LS GUIDE	
806	3-067-154-01	SPRING, CAPSTAN		819	A-7096-421-A	ARM ASSY, HCL	
807	3-065-931-01	RAIL (T2), GUIDE		820	3-065-918-01	GEAR (2), CAM RELAY	
808	X-3947-398-1	SCREW ASSY, M1.7 PW		821	A-7096-419-A	GEAR ASSY, CHANGE	
809	3-065-933-01	PAN (2 MAIN 1.4X4.5), CAMERA		822	3-065-902-01	BELT, TIMING	
810	1-677-049-11	FP-228 FLEXIBLE BOARD (DEW SENSOR)		823	3-065-905-01	GEAR, RELAY	
811	1-680-434-11	FP-299 FLEXIBLE BOARD		824	3-065-882-01	ARM, EJECT	
812	3-065-877-01	PLATE (T), GUIDE LOCK		M902	8-835-701-01	MOTOR, DC SCE13A/C-NP (CAPSTAN)	
813	X-3951-301-1	PLATE ASSY, PINCH PRESSURE		M903	A-7096-420-A	MOTOR ASSY, LD (LOADING)	

6-1-10. MECHANICAL CHASSIS BLOCK ASSEMBLY-2

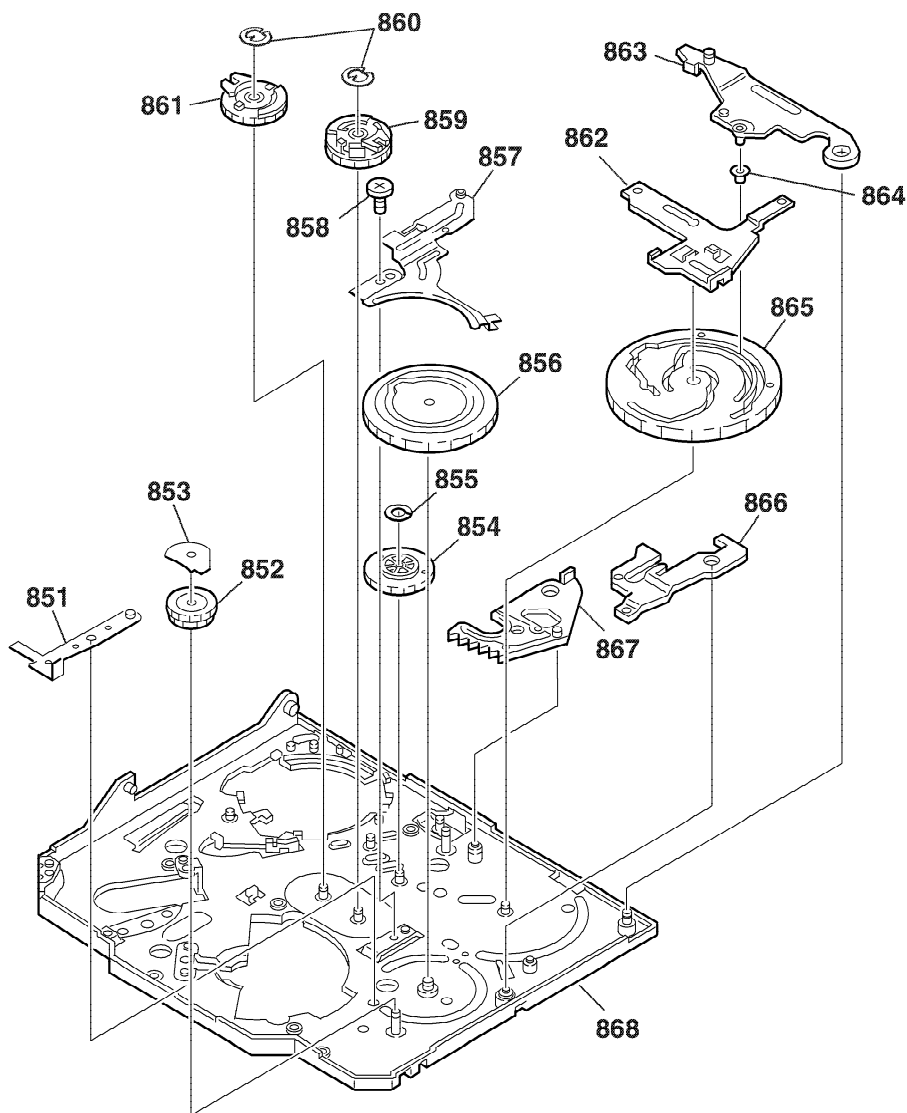

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
851	3-065-920-01	ARM, HC DRIVE		860	7-624-101-04	STOP RING 1.2 (E TYPE)	
852	3-065-913-01	GEAR (4), LD		861	A-7096-412-A	GEAR (T) ASSY, GUIDE	
853	3-065-914-01	SHEET, COVER		862	X-3951-307-1	PLATE ASSY, M SLIDE	
854	3-065-917-01	GEAR (1), CAM RELAY		863	X-3951-305-1	ARM ASSY, LS	
855	3-065-934-01	HLW CUT 0.98X3X0.25		864	3-065-901-01	ROLLER, LS ARM	
856	3-065-915-01	GEAR (1), CAM		865	3-065-916-01	GEAR (2), CAM	
857	3-065-878-01	PLATE (S), GUIDE LOCK		866	3-065-919-01	ARM, T1 LIMITTER	
858	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA		867	X-3951-308-1	ARM ASSY, GL	
859	A-7096-413-A	GEAR (S) ASSY, GUIDE		868	X-3951-300-2	CHASSIS ASSY, MECHANICAL	

CD-357

LB-076

PD-160

6-2. ELECTRICAL PARTS LIST**NOTE:**

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- CAPACITORS:
uF: μ F
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: μ H

- SEMICONDUCTORS
In each case, u: μ , for example:
uA..., μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	A-7078-051-A	CD-357 (Q) BOARD, COMPLETE ***** (IC551 is not included in this complete board.)				< CONNECTOR >	
		< CAPACITOR >				< DIODE >	
C552	1-113-985-11	TANTAL. CHIP 10uF 20% 20V		Δ D701	8-719-082-33	DIODE NSCW100-T38	
C556	1-113-682-11	TANTAL. CHIP 33uF 20% 10V		D702	8-719-074-30	DIODE SML-310LT86	
C560	1-164-360-11	CERAMIC CHIP 0.1uF 16V				< IC >	
C561	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		IC701	8-759-581-11	IC NJM2125F(Te2)	
		< CONNECTOR >				< TRANSISTOR >	
CN551	1-779-332-11	CONNECTOR, FFC/FPC 16P		Q701	8-759-054-48	TRANSISTOR UP04601008S0	
		< DIODE >		Q702	8-729-054-45	TRANSISTOR UP04312008S0	
D551	8-719-073-01	DIODE MA111-(K8).S0				< RESISTOR >	
		< FERRITE BEAD >		R701	1-218-883-11	METAL CHIP 33K 0.5% 1/10W	
FB552	1-414-445-11	FERRITE 0UH		R702	1-218-901-11	METAL CHIP 180K 0.5% 1/10W	
		< IC >		R703	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
IC551	A-7028-921-A	CCD BLOCK ASSY (CCD IMAGER)		R704	1-211-977-11	METAL CHIP 22 0.5% 1/10W	
		< COIL >		R706	1-216-839-11	METAL CHIP 33K 5% 1/16W	
L552	1-469-528-91	INDUCTOR 100uH		R707	1-218-867-11	RES-CHIP 6.8K 5% 1/10W	
		< TRANSISTOR >					
Q551	8-729-117-73	TRANSISTOR 2SC4178-F13F14-T1					
		< RESISTOR >					
R551	1-218-940-11	RES-CHIP 82 5% 1/16W					
R553	1-218-959-11	RES-CHIP 3.3K 5% 1/16W					
R557	1-218-977-11	RES-CHIP 100K 5% 1/16W					
R565	1-218-990-11	SHORT 0					
R566	1-218-990-11	SHORT 0					
R568	1-218-990-11	SHORT 0					
R569	1-216-864-11	METAL CHIP 0 5% 1/16W					
	A-7078-049-A	LB-076 BOARD, COMPLETE *****					
		< CAPACITOR >					
C702	1-164-505-11	CERAMIC CHIP 2.2uF 16V					

Be sure to read "Precautions upon replacing CCD imager" on page 4-8 when changing the CCD imager.

DCR-TRV240E/TRV340E

PD-160

SI-032

Ref. No.	Part No.	Description	Remarks
C5533	1-115-566-11	CERAMIC CHIP 4.7uF 10%	10V
C5534	1-109-982-11	CERAMIC CHIP 1uF 10%	10V
C5536	1-125-777-11	CERAMIC CHIP 0.1uF 10%	10V
C5538	1-164-943-11	CERAMIC CHIP 0.01uF 10%	16V
C5540	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C5602	1-115-566-11	CERAMIC CHIP 4.7uF 10%	10V
C5604	1-164-657-11	CERAMIC CHIP 0.015uF 10%	50V
C5605	1-125-777-11	CERAMIC CHIP 0.1uF 10%	10V
C5606	1-125-777-11	CERAMIC CHIP 0.1uF 10%	10V
△C5607	1-131-959-91	CERAMIC CHIP 12PF 10%	3KV
C5701	1-125-777-11	CERAMIC CHIP 0.1uF 10%	10V
< CONNECTOR >			
CN5501	1-815-031-11	CONNECTOR, FFC/FPC (ZIF) 24P	
* CN5502	1-573-984-11	CONNECTOR, BOARD TO BOARD 10P	
CN5601	1-764-709-11	CONNECTOR, FFC/FPC 10P	
CN5701	1-794-998-31	PIN, CONNECTOR 20P	
CN5702	1-816-176-11	CONNECTOR, FFC/FPC (ZIF) 6P	
CN5703	1-816-178-11	CONNECTOR, FFC/FPC (ZIF) 20P	
CN5704	1-778-508-21	PIN, CONNECTOR (PC BOARD) 6P	
CN5705	1-766-759-11	CONNECTOR, FFC/FPC 4P	
< DIODE >			
D5502	8-719-084-47	DIODE 1SV290(TPL3)	
D5503	8-719-050-42	DIODE RD3.3UM-T1B	
D5601	8-719-073-01	DIODE MA111-(K8).S0	
< FERRITE BEAD >			
FB5502	1-414-760-21	FERRITE 0UH	
FB5504	1-414-760-21	FERRITE 0UH	
< IC >			
IC5501	8-752-100-95	IC CXA3289AR-T4	
IC5502	8-752-407-33	IC CXD3512R-T4	
IC5601	8-759-564-49	IC TC7W53FU(TE12R)	
IC5602	8-759-075-70	IC TA75S393F-TE85R	
IC5701	8-759-573-02	IC BU9735K-E2	
< COIL >			
L5501	1-469-527-91	INDUCTOR 47uH	
L5505	1-412-956-21	INDUCTOR 27uH	
L5601	1-419-387-21	INDUCTOR 100uH	
L5602	1-412-056-11	INDUCTOR 4.7uH	
< TRANSISTOR >			
Q5503	8-759-054-48	TRANSISTOR UP04601008S0	
Q5504	8-729-052-65	TRANSISTOR 2SA1774HT2L	
Q5505	8-729-041-23	TRANSISTOR NDS356AP	
Q5506	8-729-052-64	TRANSISTOR DTC144EHT2L	
Q5508	8-759-054-48	TRANSISTOR UP04601008S0	
Q5601	8-729-052-64	TRANSISTOR DTC144EHT2L	
Q5602	6-550-083-01	TRANSISTOR TPC6C01(TE85R)	
Q5603	8-729-054-45	TRANSISTOR UP04312008S0	

Ref. No.	Part No.	Description	Remarks
< RESISTOR >			
R5501	1-218-985-11	RES-CHIP 470K 5%	1/16W
R5503	1-208-935-11	METAL CHIP 100K 0.5%	1/16W
R5506	1-218-958-11	RES-CHIP 2.7K 5%	1/16W
R5507	1-218-973-11	RES-CHIP 47K 5%	1/16W
R5508	1-218-975-11	RES-CHIP 68K 5%	1/16W
R5509	1-218-969-11	RES-CHIP 22K 5%	1/16W
R5510	1-218-975-11	RES-CHIP 68K 5%	1/16W
R5511	1-218-989-11	RES-CHIP 1M 5%	1/16W
R5512	1-218-977-11	RES-CHIP 100K 5%	1/16W
R5522	1-218-969-11	RES-CHIP 22K 5%	1/16W
R5551	1-218-973-11	RES-CHIP 47K 5%	1/16W
R5572	1-218-965-11	RES-CHIP 10K 5%	1/16W
R5573	1-218-965-11	RES-CHIP 10K 5%	1/16W
R5574	1-208-957-11	RES-CHIP 820K 5%	1/16W
R5575	1-218-975-11	RES-CHIP 68K 5%	1/16W
R5576	1-218-989-11	RES-CHIP 1M 5%	1/16W
R5577	1-218-985-11	RES-CHIP 470K 5%	1/16W
R5579	1-218-979-11	RES-CHIP 150K 5%	1/16W
R5590	1-218-990-11	SHORT 0	
R5609	1-218-965-11	RES-CHIP 10K 5%	1/16W
R5610	1-216-055-00	METAL CHIP 1.8K 5%	1/10W
R5611	1-218-980-11	RES-CHIP 180K 5%	1/16W
R5612	1-218-969-11	RES-CHIP 22K 5%	1/16W
R5614	1-218-965-11	RES-CHIP 10K 5%	1/16W
R5617	1-218-969-11	RES-CHIP 22K 5%	1/16W
R5618	1-218-949-11	RES-CHIP 470 5%	1/16W
R5704	1-218-987-11	RES-CHIP 680K 5%	1/16W
< COMPOSITION CIRCUIT BLOCK >			
RB5501	1-234-372-21	RES, NETWORK 100X4 (1005)	
< TRANSFORMER >			
△T5601	1-435-227-11	TRANSFORMER, INVERTER	
A-7078-047-A SI-032 BOARD, COMPLETE			

< CAPACITOR >			
C305	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C310	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C311	1-104-847-11	TANTAL. CHIP 22uF 20%	4V
C312	1-104-847-11	TANTAL. CHIP 22uF 20%	4V
C314	1-162-969-11	CERAMIC CHIP 0.0068uF 10%	25V
C315	1-162-969-11	CERAMIC CHIP 0.0068uF 10%	25V
< CONNECTOR >			
CN301	1-764-526-11	CONNECTOR, FFC/FPC 18P	
CN302	1-816-232-11	PIN, CONNECTOR (PC BOARD) 4P	
CN304	1-779-339-21	CONNECTOR, FFC/FPC 30P	

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

SI-032

VC-276

Ref. No.	Part No.	Description	Remarks
		< DIODE >	
D301	8-719-067-44	DIODE CL-310IRS-X-TU	
D302	8-719-067-44	DIODE CL-310IRS-X-TU	
D303	8-719-062-16	DIODE 01ZA8.2(TPL3)	
D304	8-719-056-85	DIODE UDZSTE-178.2B	
D306	8-719-074-30	DIODE SML-310LTT86	
D309	8-719-062-16	DIODE 01ZA8.2(TPL3)	
D313	8-719-062-16	DIODE 01ZA8.2(TPL3)	
		< FERRITE BEAD >	
FB301	1-414-760-21	FERRITE 0UH	
FB302	1-414-760-21	FERRITE 0UH	
		< IC >	
IC301	6-701-681-01	IC NJL61H400A	
		< TRANSISTOR >	
Q301	8-729-141-73	TRANSISTOR 2SD1938(F)-S(TX).SO	
		< RESISTOR >	
R301	1-216-810-11	METAL CHIP 120 5% 1/16W	
R307	1-216-864-11	METAL CHIP 0 5% 1/16W	
R316	1-216-817-11	METAL CHIP 470 5% 1/16W	
R319	1-216-019-00	METAL CHIP 56 5% 1/10W	
R320	1-216-019-00	METAL CHIP 56 5% 1/10W	
		< SENSOR >	
SE301	1-803-042-31	SENSOR, ANGULAR VELOCITY (PITCH)	
SE302	1-803-042-41	SENSOR, ANGULAR VELOCITY (YAW)	
		< VARISTOR >	
VDR301	1-801-923-11	VARISTOR, CHIP	
VDR302	1-801-923-11	VARISTOR, CHIP	
VDR303	1-801-923-11	VARISTOR, CHIP	

Ref. No.	Part No.	Description	Remarks
A-7012-071-A	VC-276 (QPA) BOARD, COMPLETE (SERVICE)	(TRV240E)	

A-7028-924-A	VC-276 (QPFS) BOARD, COMPLETE (SERVICE)	(TRV340E)	


**Electrical parts list of the VC-276 board
are not shown.
Pages 6-14 to 6-25 are not shown.**

DCR-TRV240E/TRV340E

Ref. No.	Part No.	Description	Remarks
		ACCESSORIES	

	1-475-141-61	REMOTE COMMANDER (RMT-814)	
⚠	1-475-599-11	ADAPTOR, AC (AC-L10A)	
⚠	1-569-008-21	ADAPTOR, CONVERSION 2P	
	1-757-293-21	CORD, CONNECTION (USB 5P)	
	1-765-080-11	CORD, CONNECTION (AV CABLE) (1.5m)	
⚠	1-769-608-11	CORD, POWER	
	3-072-414-01	SPVD-008 (CD-ROM USB DRIVER)	
	3-072-651-11	MANUAL, INSTRUCTION (ENGLISH/RUSSIAN)	
	3-072-651-21	MANUAL, INSTRUCTION (FRENCH/GERMAN)	
	3-072-651-31	MANUAL, INSTRUCTION (ARABIC/PERSIAN)	
	3-072-651-51	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE)	
	3-987-015-01	BELT (S), SHOULDER	
	A-7024-735-A	MEMORY STICK (TRV340E)	
	X-3949-376-1	CAP (N) ASSY, LENS	

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

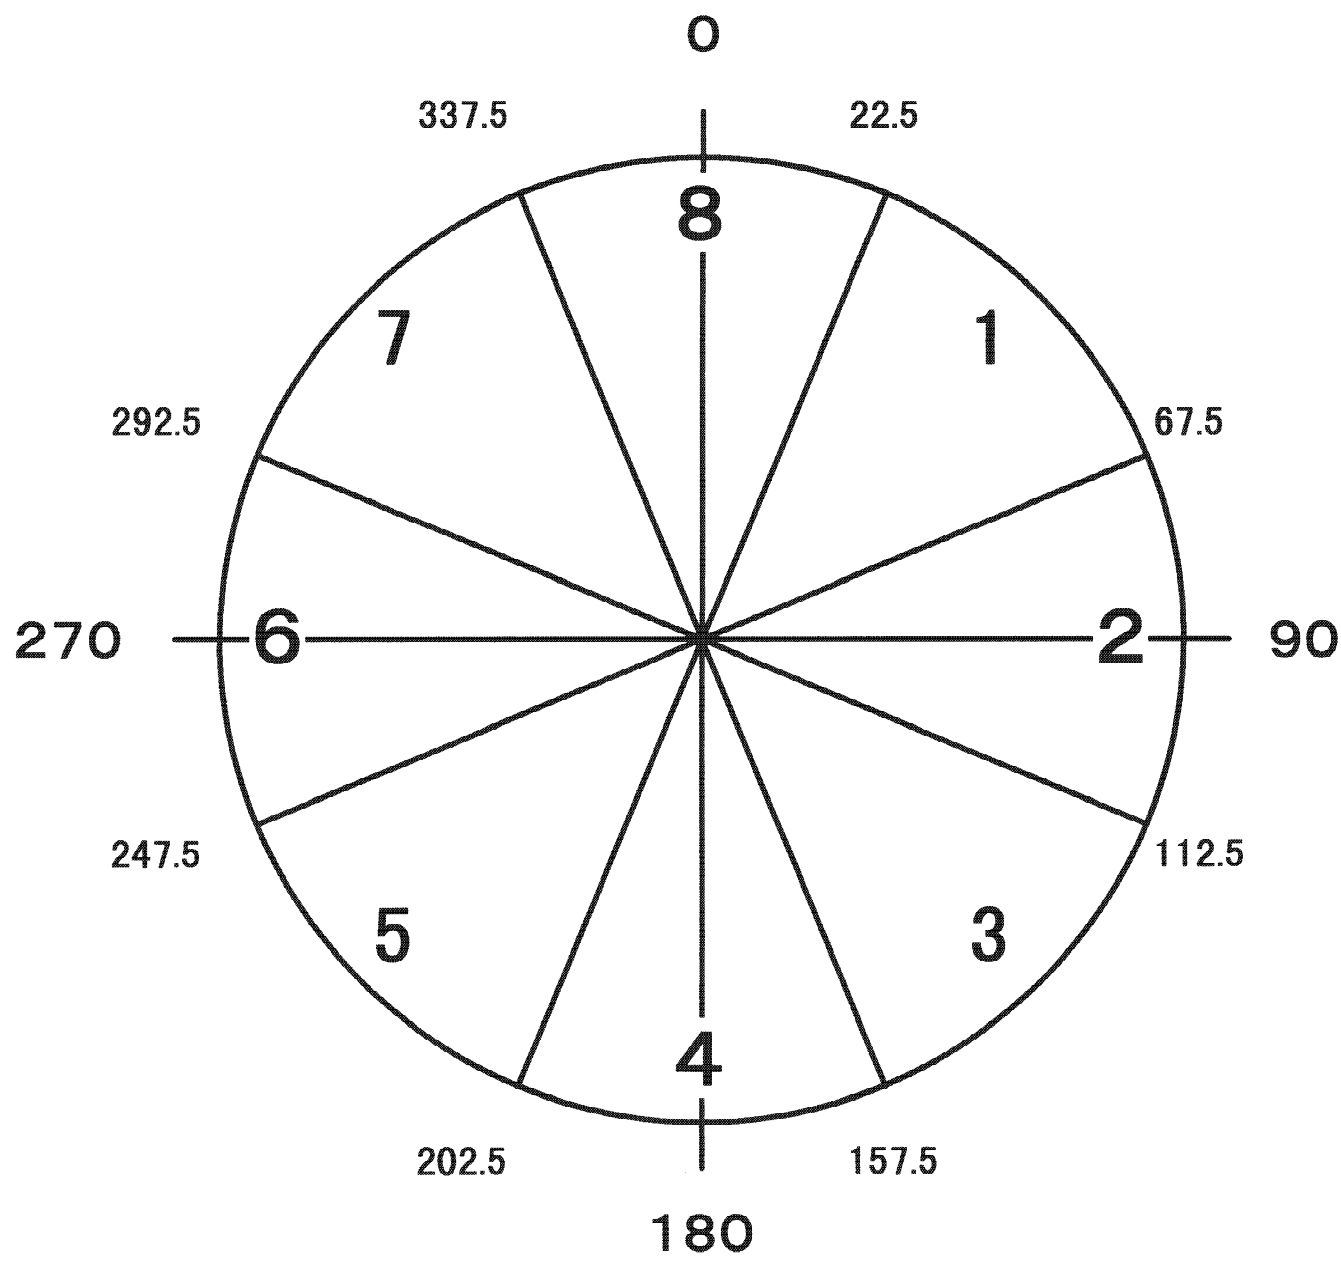

Take a copy of OPTICAL AXIS
FRAME with a clear sheet for use.



〈FOR CAMERA COLOR REPRODUCTION ADJUSTMENT〉

Take a copy of CAMERA COLOR
REPRODUCTION FRAME with
a clear sheet for use.

