5-1-8. MECHANISM CHASSIS ASSEMBLY (1) (TOP SIDE VIEW (1))

Be sure to refer to the exploded view (page 58) in the "DV MECHANICAL ADJUSTMENT MANUAL II [E mechanism]", and check the "PHASE ADJUSTMENT", "PLACE FOR GREASE" and "NOT FOR INSTALLATION" etc.

