




Model No. : DMC-FZ200 Frame and Casing Section

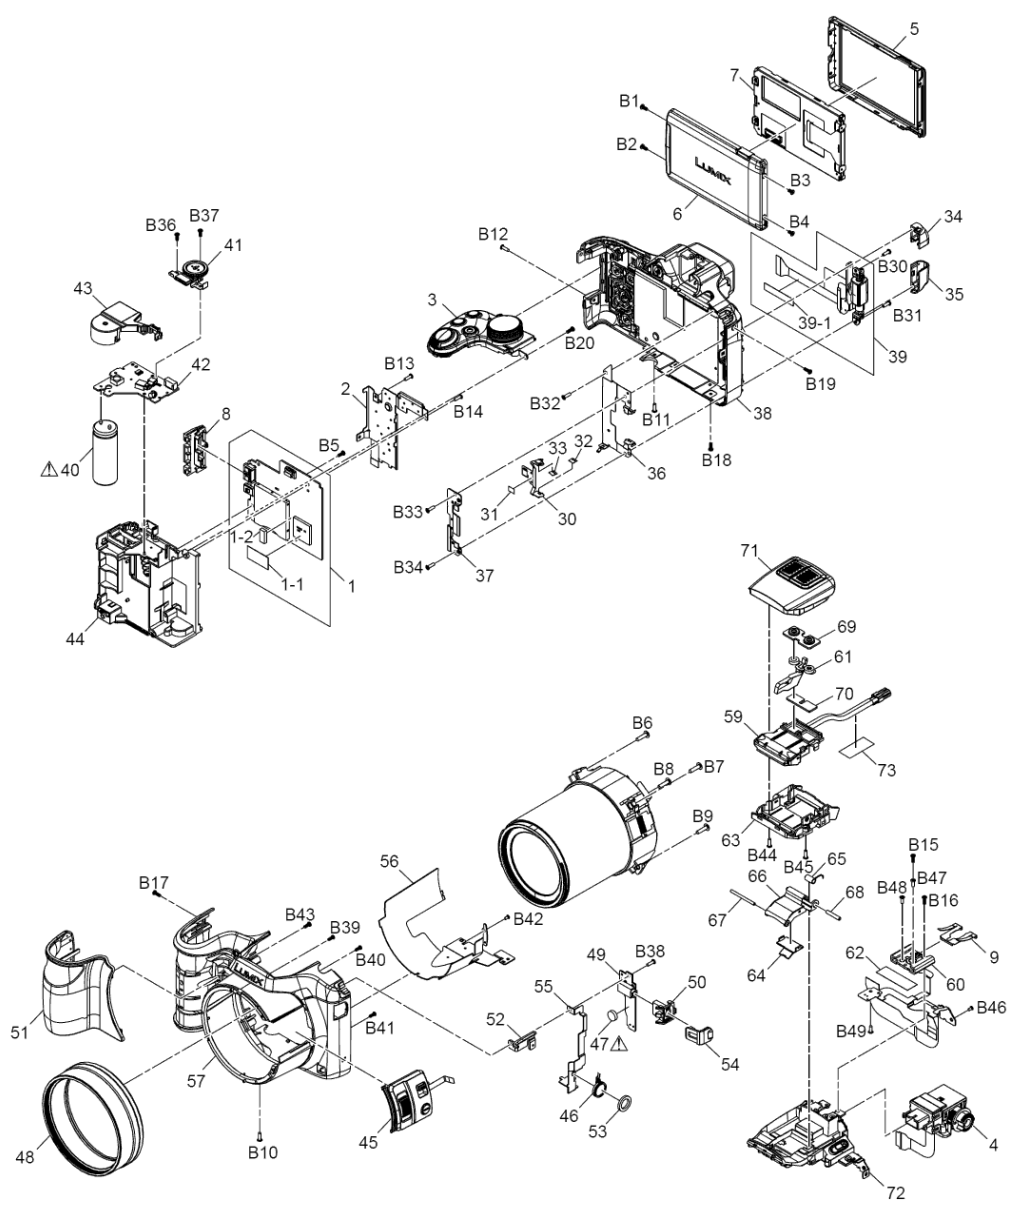



Model No. : DMC-FZ200 Camera Lens Section

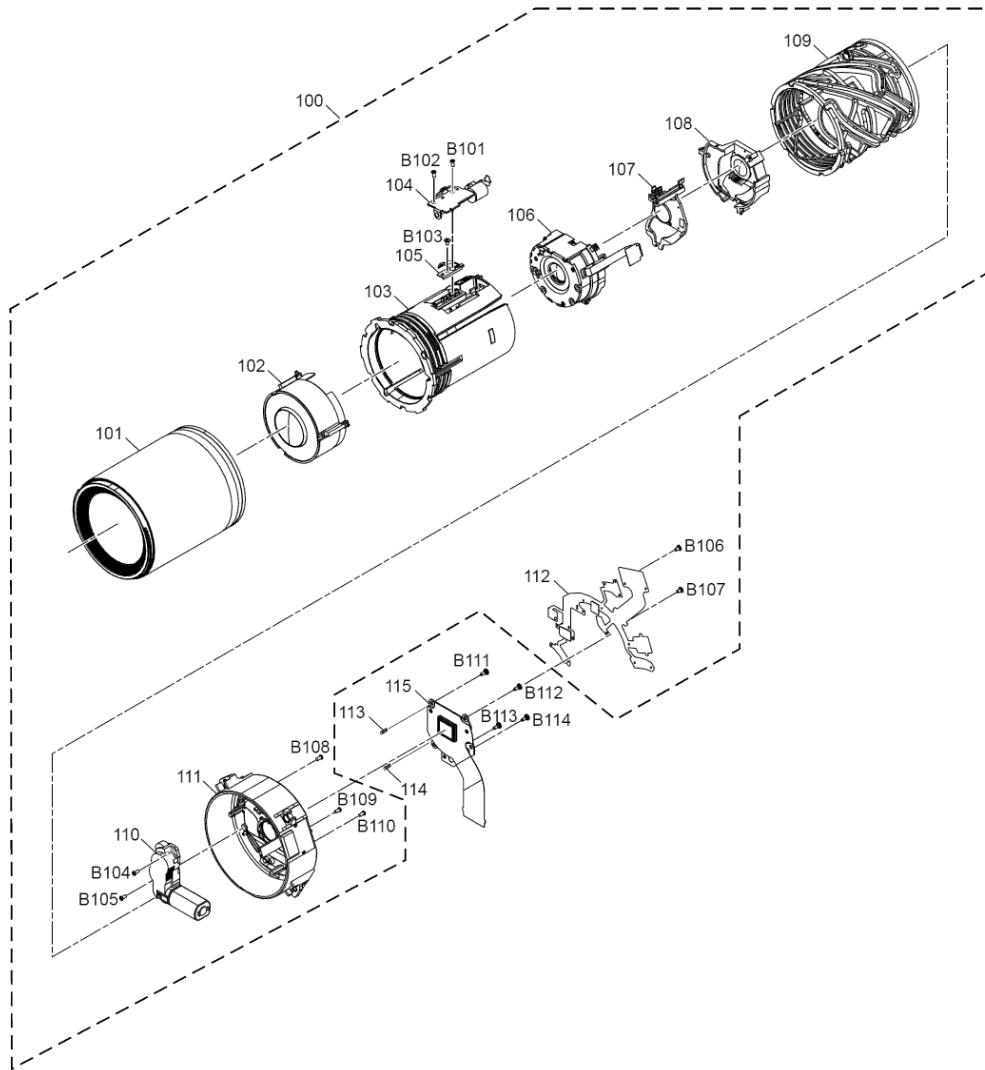

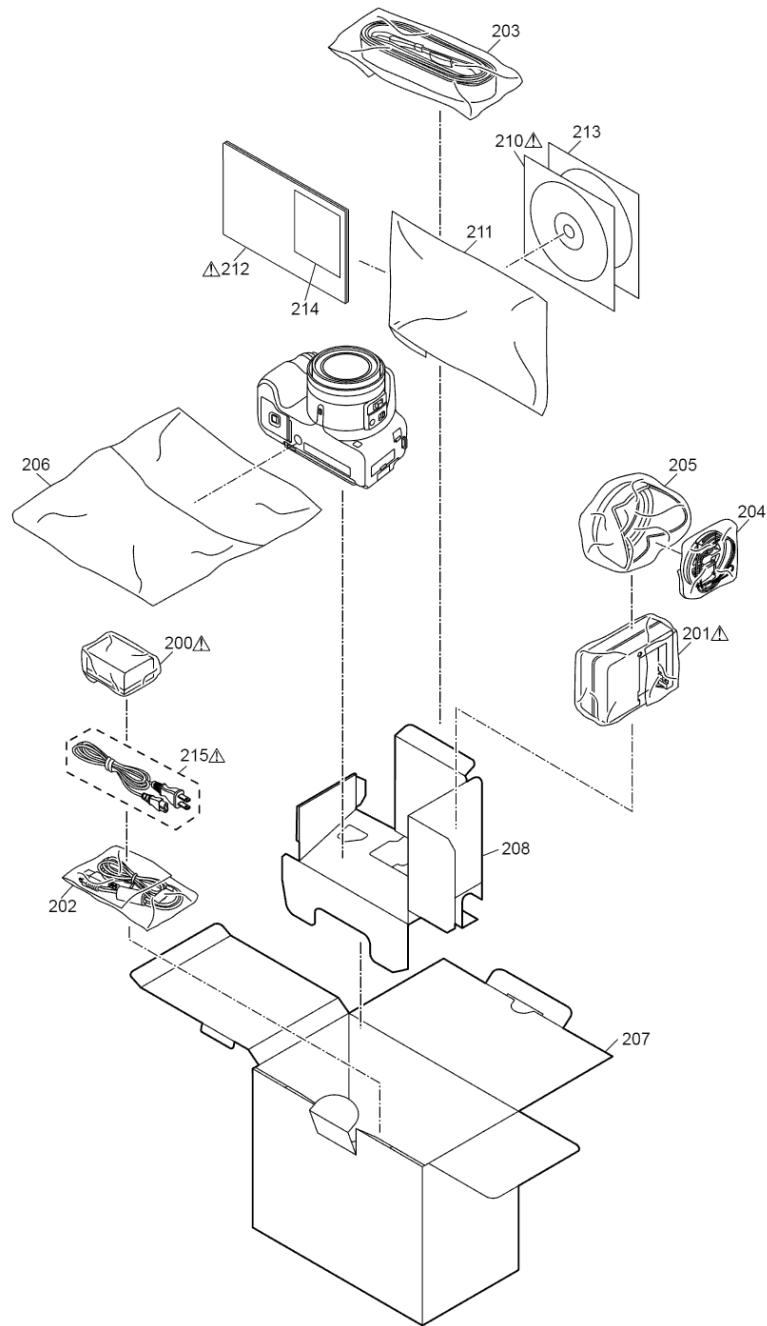Model No. : DMC-FZ200 Packing Parts and Accessories Section







 
 













 
 














 
Model No. : DMC-FZ200 Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		1	VEP56170A	MAIN P.C.B.	1	(RTL) E.S.D. P, PC, PU, EE, GC, SG, GT, GK, GN
		1	VEP56170B	MAIN P.C.B.	1	(RTL) E.S.D. EG, EP, EF, EB
		1-1	VGQ1H72	MAIN COPPER SHEET	1	
		1-2	VGQ1H73	HEAT RADIATION SHEET	1	
		2	K0RB01000015	REAR OPERATION UNIT	1	
		3	K0RB01700001	TOP OPERATION UNIT	1	
		4	L5EDDY00421	EVF UNIT	1	
		5	VKM9529	LCD CASE (TOP)	1	
		6	VKM0B72	LCD CASE (BOTTOM)	1	
		7	VYK5G58	LCD UNIT	1	
		8	VGQ1E10	JACK HOLDER	1	
		9	VMC2111	SHOE SPRING	1	
		30	VEP59105A	HINGE SW FPC	1	[PAVCX]
		31	VGQ0V71	HINGE SW FPC SHEET	1	[PAVCX]
		32	VGQ0Y75	HINGE SW TAPE	1	[PAVCX]
		33	VGQ0Y75	HINGE SW TAPE	1	[PAVCX]
		34	VKM0B75	HINGE ARM COVER TOP	1	[PAVCX]
		35	VKM0B76	HINGE ARM COVER BOTTOM	1	[PAVCX]
		36	VMC2217	REAR EARTH PLATE B	1	[PAVCX]
		37	VMP0A09	HINGE PLATE	1	[PAVCX]
		38	VYK5V56	REAR CASE UNIT	1	[PAVCX]
		39	VYK5W48	LCD HINGE UNIT	1	[PAVCX]
		39-1	VGQ1H74	DPR SHEET	1	[PAVCX]
		40	F9Z000000038	E.CAPACITOR	1	[PAVCX] (C8003)
		41	K0RB00300004	SWITCH UNIT	1	[PAVCX]
		42	VEP58183A	FLASH P.C.B.	1	[PAVCX] (RTL) E.S.D.
		43	VGQ1D82	CONDENSOR COVER	1	[PAVCX]
		44	VYK5V61	BATTERY CASE UNIT	1	[PAVCX]
		45	K0RB00300003	SIDE SWITCH UNIT	1	[PAVCX]
		46	L0AA01A00100	SPEAKER	1	[PAVCX]
		47	ML-614S/DN	BUTTON BATTERY	1	[ENERGY] (B9301)
		48	VDW2491	LENS RING FRONT	1	[PAVCX]
		49	VEP59120A	SUB P.C.B.	1	[PAVCX] (RTL)
		50	VGQ0W52	REMOTE HOLDER	1	[PAVCX]
		51	VGQ1D75	GRIP PIECE FRONT	1	[PAVCX]
		52	VGQ1D78	STRAP HOLDER (R)	1	[PAVCX]
		53	VGQ1H40	SP SPACER A	1	[PAVCX]
		54	VKF5073	REMOTE COVER	1	[PAVCX]
		55	VMP0C97	SIDE FRAME (R)	1	[PAVCX]
		56	VSC6424	FRONT HEAT SINK	1	[PAVCX]
		57	VYK5V53	FRONT CASE UNIT	1	[PAVCX]
		59	EFN-AMDK7ZJ	FLASH	1	[PAVCX]
		60	VEK0T25	HOT SHOE UNIT	1	[PAVCX]
		61	VEP54034A	MIC FPC UNIT	1	[PAVCX]
		62	VGQ1F41	MULTI HOT SHOE FPC SHEET	1	[PAVCX]
		63	VKM0B70	FLASH CASE BOTTOM	1	[PAVCX]
		64	VKM0B74	FLASH LINK COVER	1	[PAVCX]
		65	VMB4614	FLASH SPRING	1	[PAVCX]
		66	VMM0479	FLASH LINK	1	[PAVCX]
		67	VMS8267	FLASH SHAFT	1	[PAVCX]
		68	VMS8286	FLASH SHAFT 2	1	[PAVCX]
		69	VMT1962	MIC DAMPER	1	[PAVCX]
		70	VMT2011	MIC CUSHION	1	[PAVCX]
		71	VYK5V58	FLASH CASE TOP UNIT	1	[PAVCX]
		72	VYK5Z73	FLASH BASE UNIT	1	[PAVCX]
		73	VGQ1H36	REED WIRE SHEET	1	[PAVCX]
		B1	VHD2149	SCREW	1	
		B2	VHD2149	SCREW	1	
		B3	VHD2179	SCREW	1	
		B4	VHD2179	SCREW	1	
		B5	XQN16+BJ4FN	SCREW	1	

Model No. : DMC-FZ200 Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		B6	XTV2+8JFN	SCREW	1	
		B7	XTV2+8JFN	SCREW	1	
		B8	XTV2+8JFN	SCREW	1	
		B9	XTV2+8JFN	SCREW	1	
		B10	VHD1870	SCREW	1	
		B11	VHD1870	SCREW	1	
		B12	VHD1870	SCREW	1	
		B13	VHD1870	SCREW	1	
		B14	VHD1870	SCREW	1	
		B15	VHD2337	SCREW	1	
		B16	VHD2337	SCREW	1	
		B17	VHD2337	SCREW	1	
		B18	VHD2337	SCREW	1	
		B19	VHD2337	SCREW	1	
		B20	VHD2337	SCREW	1	
		B30	VHD2190	SCREW	1	[PAVCX]
		B31	VHD2190	SCREW	1	[PAVCX]
		B32	VHD2281	SCREW	1	[PAVCX]
		B33	VHD2281	SCREW	1	[PAVCX]
		B34	VHD2281	SCREW	1	[PAVCX]
		B36	XQN16+BJ4FN	SCREW	1	[PAVCX]
		B37	XQN16+BJ4FN	SCREW	1	[PAVCX]
		B38	VHD1870	SCREW	1	[PAVCX]
		B39	VHD2252	SCREW	1	[PAVCX]
		B40	VHD2252	SCREW	1	[PAVCX]
		B41	VHD2252	SCREW	1	[PAVCX]
		B42	VHD2409	SCREW	1	[PAVCX]
		B43	XQN16+BJ4FN	SCREW	1	[PAVCX]
		B44	VHD1870	SCREW	1	[PAVCX]
		B45	VHD1870	SCREW	1	[PAVCX]
		B46	VHD2039	SCREW	1	[PAVCX]
		B47	VHD2150	SCREW	1	[PAVCX]
		B48	VHD2150	SCREW	1	[PAVCX]
		B49	XQN16+BJ4FN	SCREW	1	[PAVCX]
		100	VXW1531	LENS UNIT (W/O MOS)	1	
		101	VXP3823	1ST LENS FRAME UNIT	1	
		102	VXP3824	2ND LENS FRAME UNIT	1	
		103	VXQ2295	MIDDLE FRAME UNIT	1	
		104	L6HAYYYD0056	FOCUS MOTOR UNIT	1	
		105	VMC2225	CAM FRAME SPRING	1	
		106	VXP3825	3RD LENS FRAME UNIT	1	
		107	VXP3828	4TH LENS FRAME UNIT	1	
		108	VXP3830	5TH LENS FRAME UNIT	1	
		109	VDW2567	CAM FRAME	1	
		110	L6DAYYYC0005	ZOOM MOTOR	1	
		111	VXQ2296	MASTER FLANGE UNIT	1	
		112	VEK0T33	LENS FLEX UNIT	1	
		113	VMB4205	TILT SPRING	1	
		114	VMB4205	TILT SPRING	1	
		115	VEK0T48	MOS UNIT	1	E.S.D.
		B101	VHD1974	SCREW	1	
		B102	VHD1974	SCREW	1	
		B103	VHD2109	SCREW	1	
		B104	VHD1974	SCREW	1	
		B105	VHD1974	SCREW	1	
		B106	VHD2109	SCREW	1	
		B107	VHD2109	SCREW	1	
		B108	VHD1974	SCREW	1	
		B109	VHD1974	SCREW	1	
		B110	VHD1974	SCREW	1	
		B111	VHD2351	SCREW	1	
		B112	VHD2351	SCREW	1	

Model No. : DMC-FZ200 Parts List

Change	Safety	Ref. No.	Part No.	Part Name & Description	Q'ty	Remarks
		B113	VHD2351	SCREW	1	
		B114	VHD2351	SCREW	1	
		200	-----	BATTERY	1	
		201	DE-A79BB	BATTERY CHARGER	1	P, PC
		201	DE-A80AC	BATTERY CHARGER	1	PU, EG, EP, EF, EB, EE, GN
		201	DE-A80BD	BATTERY CHARGER	1	GC, GK
		201	DE-A80DA	BATTERY CHARGER	1	SG
		201	DE-A80CB	BATTERY CHARGER	1	GT
		202	K1HY08YY0025	USB CONNECTION CABLE	1	
		203	VFC4453	SHOULDER STRAP	1	
		204	VYQ5607	LENS CAP UNIT	1	
		205	VYQ7878	LENS HOOD UNIT	1	
		206	VPF1166	CAMERA BAG	1	
		207	VPK5409	PACKING CASE	1	EXCEPT GK
		207	VPK5412	PACKING CASE	1	GK
		208	VPN7421	CUSHION	1	
		210	VFF1045	CD-ROM (INSTRUCTION BOOK)	1	P, PC, PU
		210	VFF1046	CD-ROM (INSTRUCTION BOOK)	1	EG, EP, EF, EB
		210	VFF1047	CD-ROM (INSTRUCTION BOOK)	1	EE
		210	VFF1048	CD-ROM (INSTRUCTION BOOK)	1	GC, SG, GN
		210	VFF1049	CD-ROM (INSTRUCTION BOOK)	1	GT
		210	VFF1050	CD-ROM (INSTRUCTION BOOK)	1	GK
		211	VPF1230	BAG, POLYETHYLENE	1	
		212	VQT4H46	BASIC O/I (ENGLISH/SPANISH)	1	P
		212	VQT4H47	BASIC O/I (ENGLISH/CANADIAN FRENCH)	1	PC
		212	VQT4H48	BASIC O/I (SPANISH/PORTUGUESE)	1	PU
		212	VQT4H49	BASIC O/I (GERMAN/TURKISH)	1	EG
		212	VQT4H50	BASIC O/I (ITALIAN/DUTCH)	1	EG
		212	VQT4H51	BASIC O/I (SPANISH/PORTUGUESE)	1	EG
		212	VQT4H52	BASIC O/I (FRENCH)	1	EG, EF
		212	VQT4H53	BASIC O/I (SWEDISH/DANISH)	1	EP
		212	VQT4H54	BASIC O/I (POLISH/CZECH)	1	EP
		212	VQT4H55	BASIC O/I (HUNGARIAN/FINNISH)	1	EP
		212	VQT4H57	BASIC O/I (ENGLISH)	1	EB
		212	VQT4H58	BASIC O/I (RUSSIAN/UKRAINIAN)	1	EE
		212	VQT4H59	BASIC O/I (ENGLISH/CHINESE (TRADITIONAL))	1	GC, SG
		212	VQT4H60	BASIC O/I (ARABIC/PERSIAN)	1	GC
		212	VQT4H61	BASIC O/I (VIETNAMESE)	1	GC
		212	VQT4J57	BASIC O/I (CHINESE (TRADITIONAL))	1	GT
		212	VQT4H62	BASIC O/I (CHINESE (SIMPLIFIED))	1	GK
		212	VQT4H63	BASIC O/I (ENGLISH)	1	GN
		213	VFF1023-E	CD-ROM (SOFT)	1	EXCEPT GK See "Notes"
		213	VFF1024-E	CD-ROM (SOFT)	1	GK See "Notes"
		214	VQL2C67-2	OPERATING LABEL	1	PC
		214	VQL2C68-1	OPERATING LABEL	1	GT
		215	K2CA2CA00025	AC CORD W/PLUG	1	PU
		215	K2CQ2YY00082	AC CORD W/PLUG	1	EG, EP, EF, EE, GC
		215	K2CT3YY00034	AC CORD W/PLUG	1	EB, GC
		215	K2CA2YY00247	AC CORD W/PLUG	1	SG
		215	K2CA2YY00129	AC CORD W/PLUG	1	GT
		215	K2CA2YY00130	AC CORD W/PLUG	1	GK
		215	K2CJ2YY00052	AC CORD W/PLUG	1	GN