


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

ns: not supplied

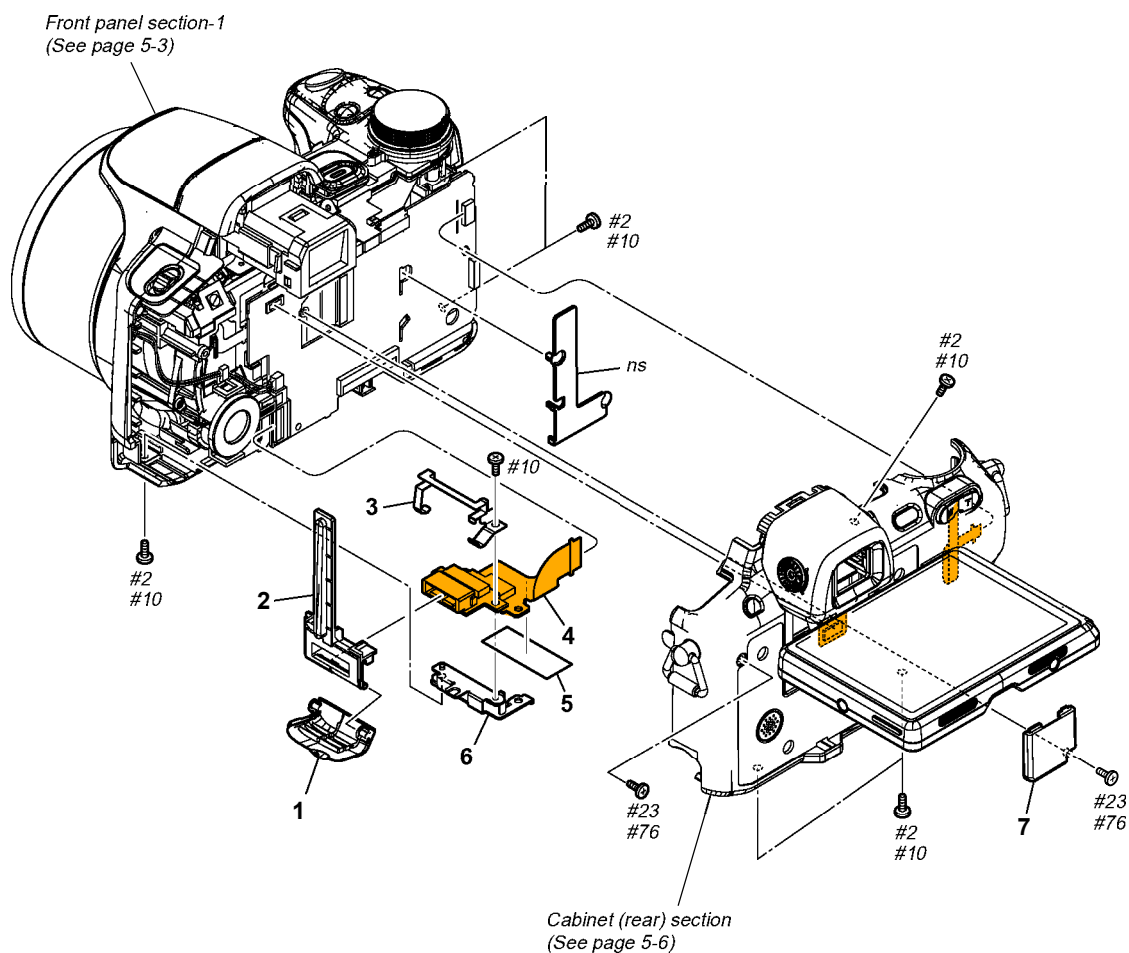

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
1	3-452-720-01	LID, MULTI (BLACK)
1	3-452-720-11	LID, MULTI (SILVER)
2	3-452-721-01	CABINET (R), SIDE (BLACK)
2	3-452-721-11	CABINET (R), SIDE (SILVER)
* 3	3-452-723-01	SPRING, MULTI LID CLICK
4	A-1519-825-A	JK-371 FLEXIBLE BOARD, COMPLETE
5	3-080-272-01	TAPE (A)
* 6	3-452-722-01	PLATE, MULTI FIXED


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
7	3-452-729-01	DRIVING, SY MECHANICAL (BLACK)
7	3-452-729-11	DRIVING, SY MECHANICAL (SILVER)
#2	2-635-562-31	SCREW (M1.7) (Black)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)
#76	2-666-551-11	SCREW, TAPPING, P2 (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. FRONT PANEL SECTION-1

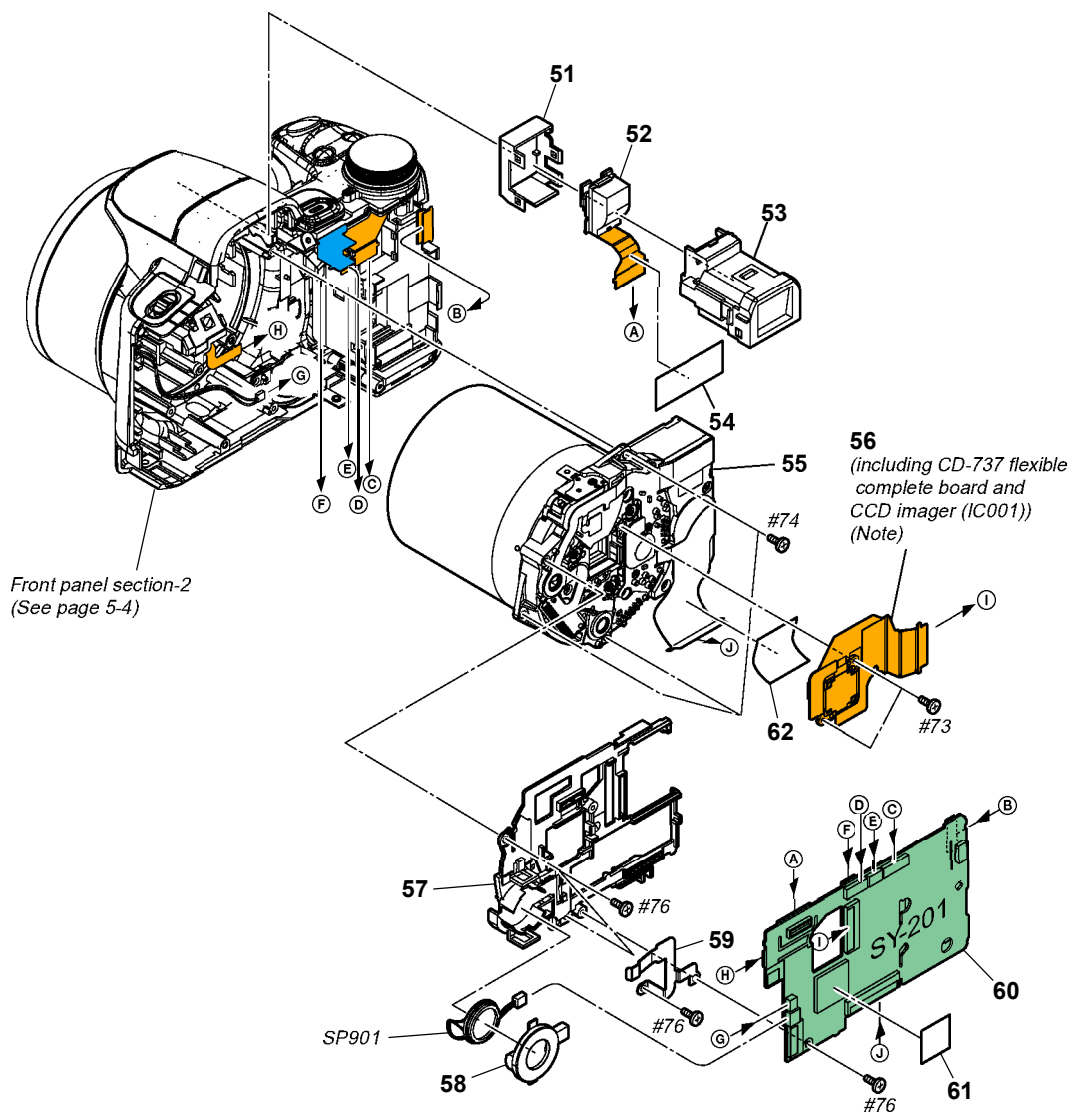

Note: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

Note: イメージャの交換時は4-3ページの“イメージャ交換時の注意”を必ずお読みください。

Ref. No.	Part No.	Description
51	3-452-711-01	RETAINER, MODULE
52	1-802-033-31	LCD MODULE
53	X-2190-274-1	VF ASSY (470)
54	3-080-272-01	TAPE (A)
55	A-1530-428-A	LENS BLOCK ASSY (SERVICE)
56	A-1539-809-A	CCD BLOCK ASSY (including CD-737 flexible complete board and CCD imager (IC001).) (Note)
* 57	3-452-725-01	FRAME, SY
* 58	3-452-724-01	HOLDER, SP

Ref. No.	Part No.	Description
* 59	3-452-726-01	PLATE, SY GROUND
60	A-1519-829-A	SY-201 BOARD, COMPLETE (SERVICE)
* 61	4-000-555-01	SHEET (470), SY RADIATION
* 62	4-000-556-01	SHEET, LENS (RADIATION)
SP901	1-825-945-51	LOUDSPEAKER (1.3CM)
#73	3-086-156-61	SCREW B1.2 (Black)
#74	2-666-551-31	SCREW, TAPPING, P2 (Silver)
#76	2-666-551-11	SCREW, TAPPING, P2 (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. FRONT PANEL SECTION-2

ns: not supplied

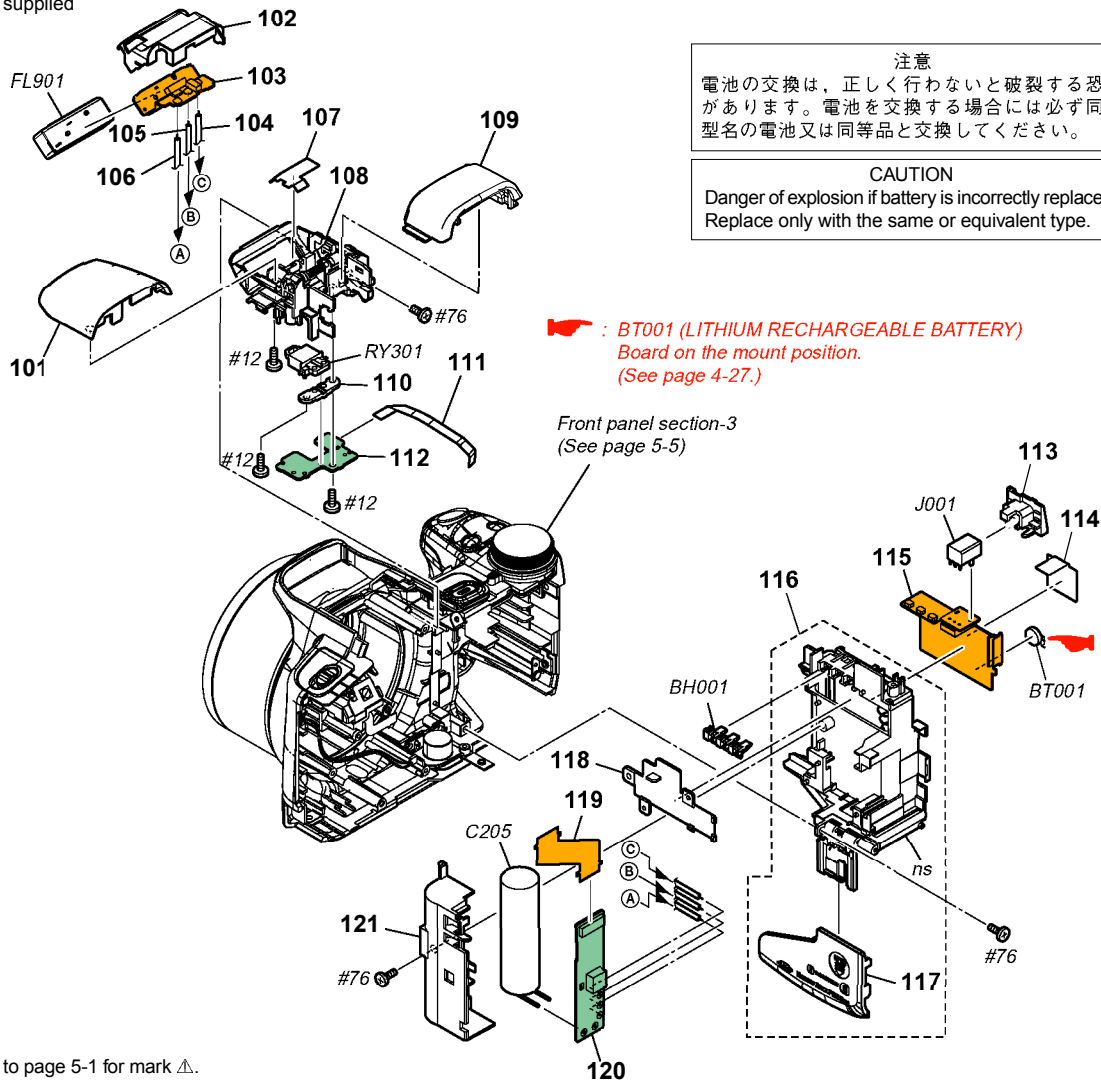

注意
電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
101	3-452-701-01	COVER, ST (BLACK)
101	3-452-701-11	COVER, ST (SILVER)
* 102	3-452-704-01	COVER, FL
103	A-1519-828-A	ST-195 FLEXIBLE BOARD, COMPLETE
* 104	1-965-160-21	HARNESS (HN-044) (BLUE)
* 105	1-965-159-21	HARNESS (HN-043) (WHITE)
* 106	1-965-158-21	HARNESS (HN-042) (PINK)
* 107	3-452-705-01	SHEET, ST INSULATING
108	X-2190-272-1	BASE ASSY (470), ST (BLACK)
108	X-2190-273-1	BASE ASSY (470D), ST (SILVER)
109	3-452-702-01	CABINET (UPPER) (BLACK)
109	3-452-702-11	CABINET (UPPER) (SILVER)
* 110	3-452-703-01	RETAINER, SOLENOID
111	1-835-133-11	FLEXIBLE FLAT CABLE (FFC-160)
112	A-1519-819-A	PL-051 BOARD, COMPLETE
* 113	3-452-595-01	HOLDER, DC (BLACK)
* 113	3-452-595-11	HOLDER, DC (SILVER)
* 114	3-452-597-01	SHEET, DC INSULATING

Ref. No.	Part No.	Description
115	A-1519-824-A	DC-111 FLEXIBLE BOARD, COMPLETE
116	X-2190-256-1	HOLDER ASSY, BATTERY (BLACK)
116	X-2190-257-1	HOLDER ASSY, BATTERY (SILVER)
117	3-452-586-01	LID, BT (BLACK)
117	3-452-586-11	LID, BT (SILVER)
* 118	3-452-598-01	COVER, BT HOLDER
119	1-875-749-11	FP-900 FLEXIBLE BOARD
120	A-1519-820-A	ST-194 BOARD, COMPLETE
* 121	3-452-596-01	HOLDER, CAPACITOR
△ BH001	1-780-456-11	TERMINAL BOARD, BATTERY
△ BT001	1-756-711-11	LITHIUM RECHARGEABLE BATTERY
△ C205	1-114-341-21	CAP, ALUMINUM ELECT 180uF 99% 315V
△ FL901	1-480-062-21	FLASH UNIT
△ J001	1-817-331-11	DC JACK 5P (DC IN)
* RY301	1-455-056-11	SOLENOID, PLUNGER (STROBE OPEN)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#76	2-666-551-11	SCREW, TAPPING, P2 (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. FRONT PANEL SECTION-3

ns: not supplied

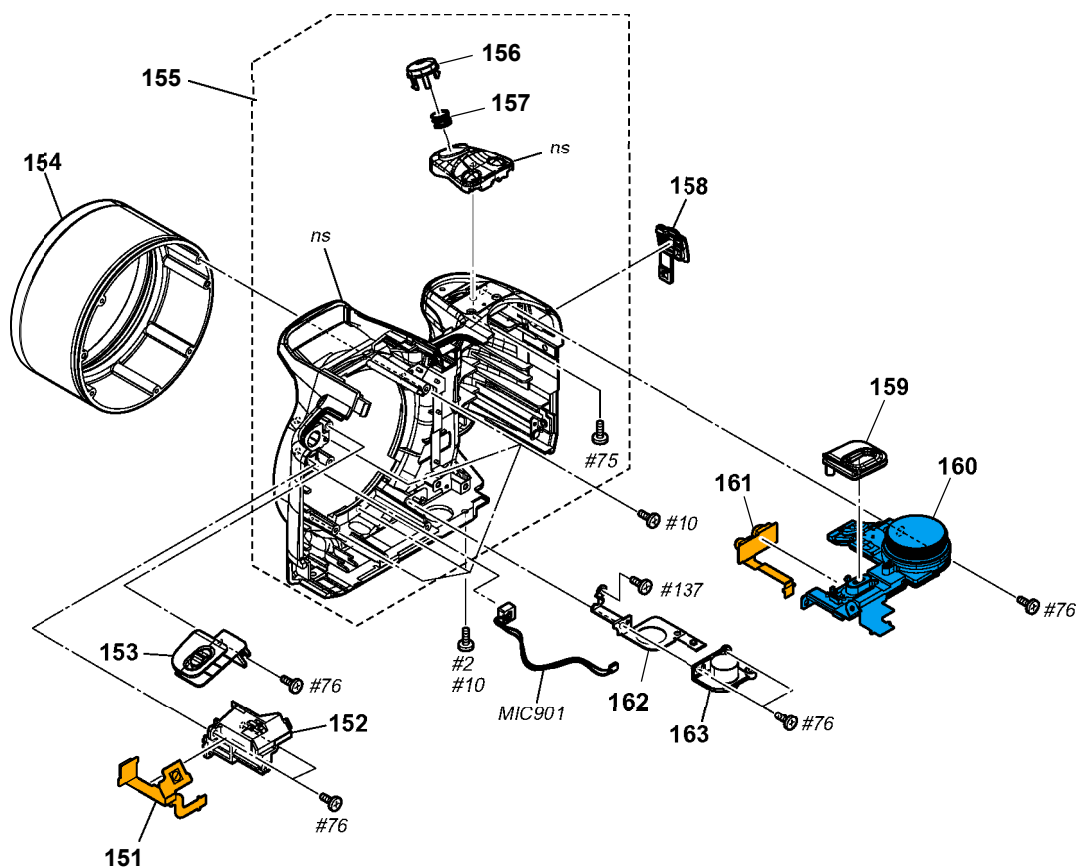

Ref. No.	Part No.	Description
151	A-1519-827-A	SI-115 FLEXIBLE BOARD, COMPLETE
* 152	3-452-682-01	HOLDER, MICROPHONE
153	X-2190-268-1	CABINET (UPPER (R)) ASSY (BLACK)
153	X-2190-269-1	CABINET (UPPER (R)) ASSY (SILVER)
154	3-452-680-11	RING, LENS (SILVER)
154	3-452-680-21	RING, LENS (BLACK)
155	X-2190-264-1	CABINET (FRONT) ASSY (BLACK)
155	X-2190-265-1	CABINET (FRONT) ASSY (SILVER)
156	X-2190-288-1	SERVICE, RELEASE BUTTON ASSY (BLACK)
156	X-2190-289-1	SERVICE, RELEASE BUTTON ASSY (SILVER)
157	3-106-745-01	SPRING (350), RELEASE
158	3-452-728-01	LID, DC (BLACK)
158	3-452-728-11	LID, DC (SILVER)

Ref. No.	Part No.	Description
159	3-452-679-01	CABINET (UPPER (L)) (BLACK)
159	3-452-679-11	CABINET (UPPER (L)) (SILVER)
160	1-479-699-31	SWITCH BLOCK, CONTROL (BLACK)
160	1-479-699-41	SWITCH BLOCK, CONTROL (SILVER)
161	A-1519-826-A	LE-042 FLEXIBLE BOARD, COMPLETE
* 162	3-452-681-01	FRAME, TRIPOD
163	3-106-766-01	SCREW, TRIPOD
MIC901	1-542-757-21	MICROPHONE UNIT
#2	2-635-562-31	SCREW (M1.7) (Black)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#75	2-666-551-01	SCREW, TAPPING, P2 (Silver)
#76	2-666-551-11	SCREW, TAPPING, P2 (Silver)
#137	3-090-976-62	ACE, LOCK M1.7 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. CABINET (REAR) SECTION

ns: not supplied

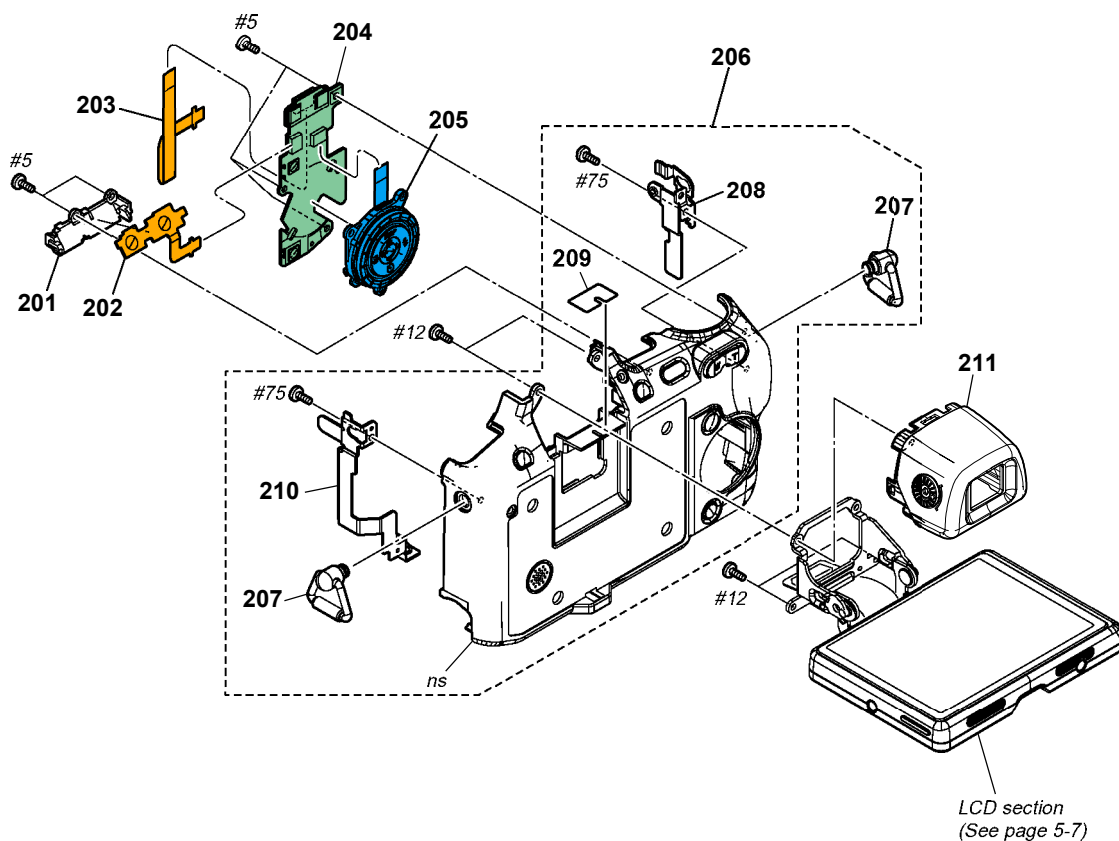

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
* 201	3-452-694-01	RETAINER, FL	206	X-2190-271-1	CABINET (REAR) ASSY (470) (SILVER)
202	1-875-545-11	PB-052 FLEXIBLE BOARD	* 207	3-106-615-01	BRACKET (350), STRAP
203	1-875-750-11	FP-901 FLEXIBLE BOARD	* 208	3-452-689-01	SHEET METAL (L), STRAP
204	A-1519-821-A	SW-532 BOARD, COMPLETE			
205	1-480-173-31	SWITCH BLOCK, CONTROL (SW60350)	209	3-877-749-01	SHEET, FLEXIBLE ADHESIVE
		(BLACK)	* 210	3-452-690-01	SHEET METAL (R), STRAP
205	1-480-173-41	SWITCH BLOCK, CONTROL (SW60350)	211	X-2190-275-1	EYE CUP ASSY (470) (BLACK)
		(SILVER)	211	X-2190-277-1	EYE CUP ASSY (470) (SILVER)
206	X-2190-270-1	CABINET (REAR) ASSY (470) (BLACK)	#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
			#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
			#75	2-666-551-01	SCREW, TAPPING, P2 (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. LCD SECTION

ns: not supplied

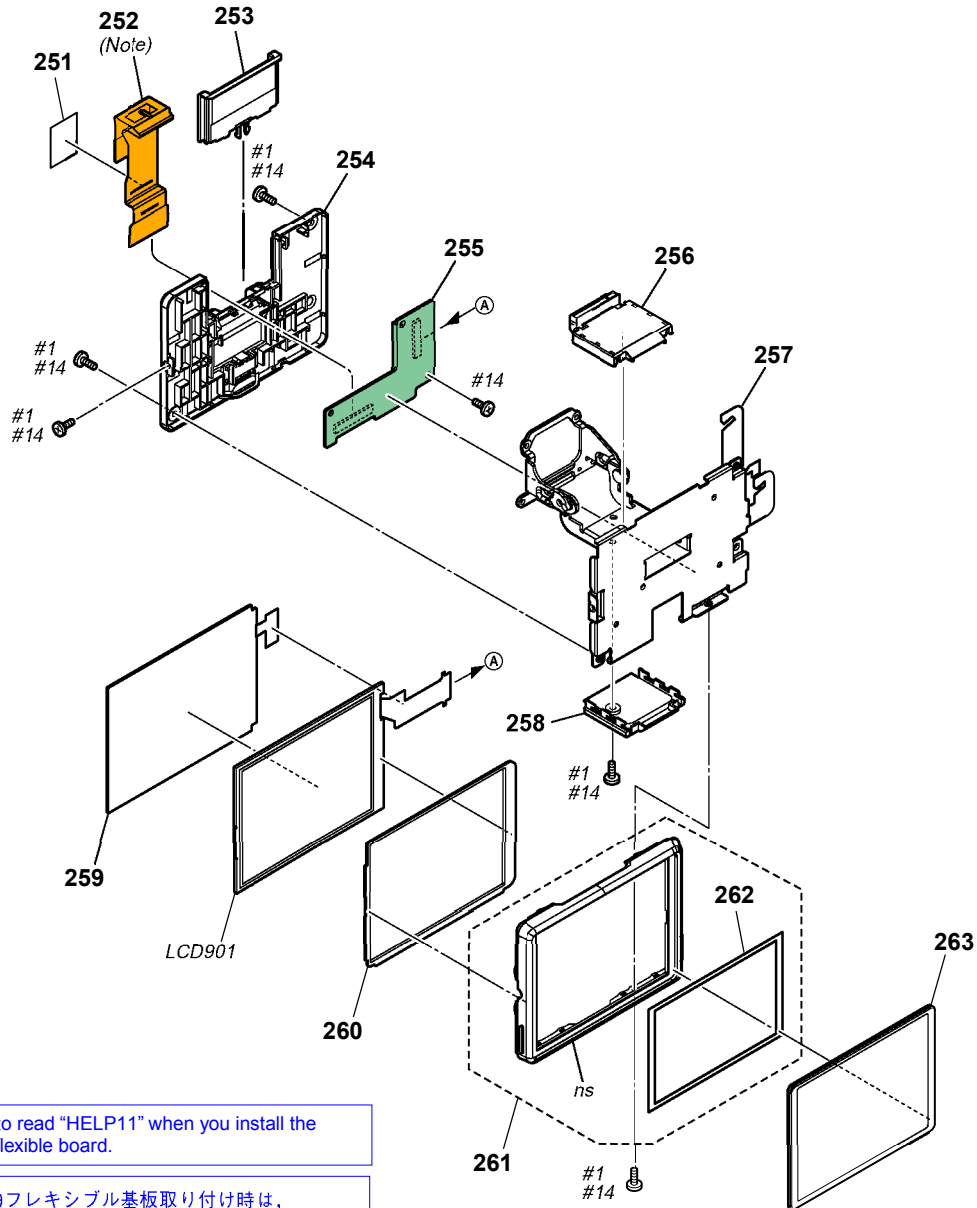

Note: Be sure to read "HELP11" when you install the CK-199 flexible board.

Note: CK-199フレキシブル基板取り付け時は、"HELP11"を必ずお読みください。

Ref. No.	Part No.	Description
* 251	3-213-424-01	SHEET, FLEXIBLE SLIDER
252	A-1519-823-A	CK-199 FLEXIBLE BOARD, COMPLETE (Note)
253	3-452-579-01	PLATE, BLIND (BLACK)
253	3-452-579-11	PLATE, BLIND (SILVER)
254	X-2190-250-1	CABINET (C) ASSY (470), P (BLACK)
254	X-2190-251-1	CABINET (C) ASSY (470), P (SILVER)
255	A-1519-818-A	CK-198 BOARD, COMPLETE
256	X-2190-254-1	COVER (M) ASSY (470), HINGE (BLACK)
256	X-2190-255-1	COVER (M) ASSY (470), HINGE (SILVER)
257	X-2190-249-1	HINGE ASSY (470)
258	3-452-580-01	COVER (C), HINGE (BLACK)

Ref. No.	Part No.	Description
258	3-452-580-11	COVER (C), HINGE (SILVER)
259	1-480-592-11	BLOCK, LIGHT GUIDE PLATE (3.0)
260	3-452-583-01	CUSHION LCD (470)
261	X-2190-252-1	CABINET (M) ASSY (470), P (BLACK)
261	X-2190-253-1	CABINET (M) ASSY (470), P (SILVER)
262	3-452-575-01	SHEET, LCD WINDOW ADHESIVE
263	3-452-730-01	WINDOW LCD (470)
LCD901	8-753-316-51	ACX555BKA-1
#1	2-635-562-11	SCREW (M1.7) (Black)
#14	2-599-475-11	SCREW (M1.7) (Silver)