


2-1. EXPLODED VIEWS

2-1-1. OVERALL SECTION

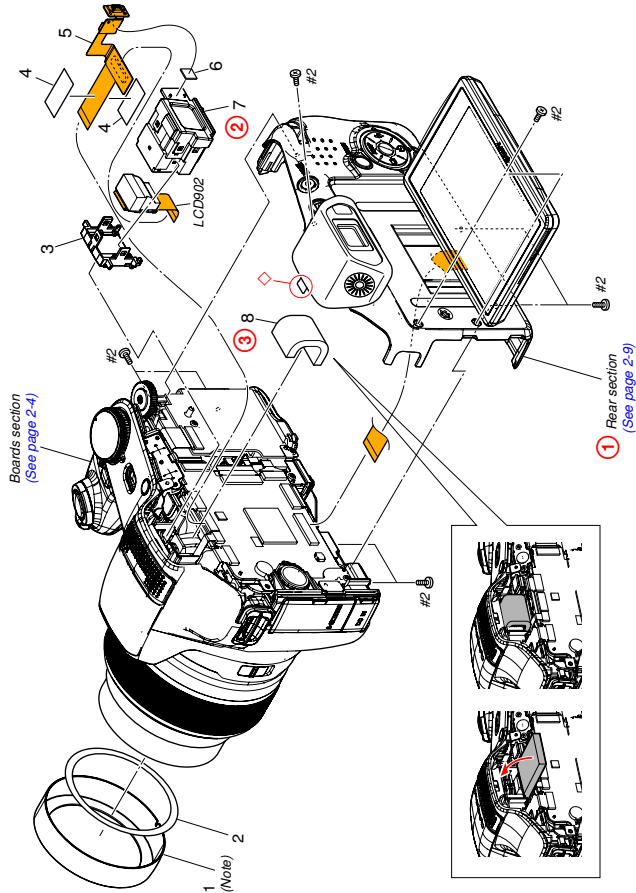


Ref. No.	Part No.	Description
1	4-260-368-01	RING, CAP (Note)
2	4-263-809-01	SHEET (CAP RING), ADHESIVE
3	4-279-877-01	RETAINER, MODULE
4	4-266-551-01	SHEET (VF), RADIATION
5	A-182-1-393-A	SE-181 FLEXIBLE BOARD, COMPLETE
6	4-279-878-01	CUSHION (EYE SENSOR)

Ref. No.	Part No.	Description
7	X-2581-259-1	VF ASSY (970)
8	4-284-295-01	CUSHION (VF-R)
LCD902		
	1-811-013-11	LCD MODULE (FL0906)
#2	2-635-562-31	SCREW (M1.7)


DISASSEMBLY

1. Remove to numerical order ① to ③ in the left figure.
◇-X: Solder

① #2 X 9

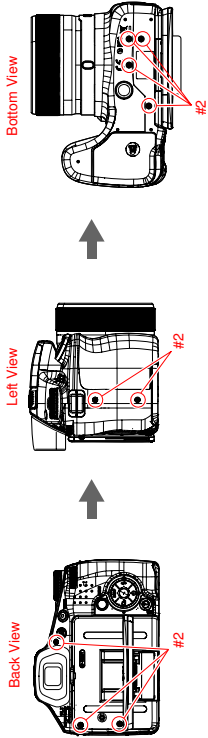


Screw

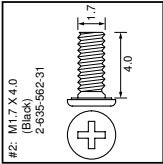


Note

- Note :
How to Remove the Cap Ring
- ① Turn on the power and pull out the lens to set.
 - ② Apply alcohol to gaps of the Cap Ring with tweezers or a fine-tipped stick as shown in the figure below.
 - ③ Detach the Cap Ring.

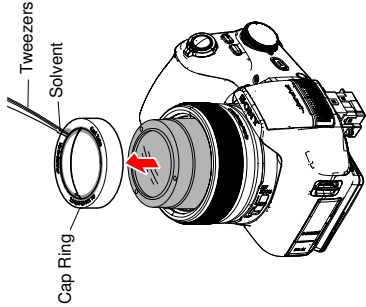


- Note :
Cap Ring の外し方
- ① 電源を入れ、レンズを引き出す。
 - ② 下図のように、ピンセットか先の細い棒でアルコールを、Cap Ring の隙間全面に塗布する。
 - ③ Cap Ring を取り外す。

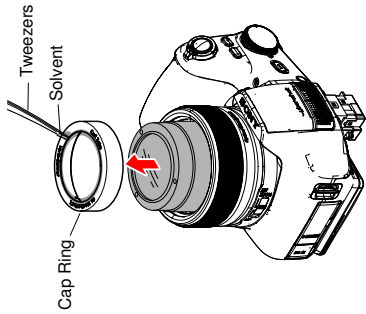

2-1-2. BOARDS SECTION

ns: not supplied

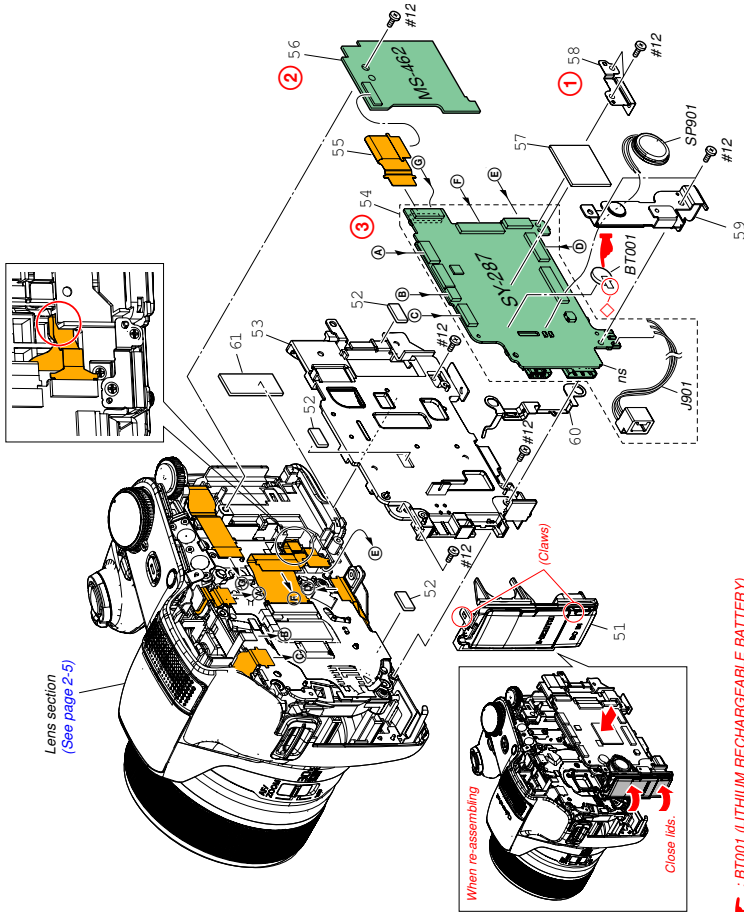

Ref. No.	Part No.	Description
51	X-2561-261-1	COVER ASSY, JACK
52	4-284-291-01	GASKET (SY)
53	X-2581-260-1	HOLDER ASSY, SY
54	A-1821-616-A	SY287 BOARD, COMPLETE (SERVICE)
55	1-883-264-11	MS-463 FLEXIBLE BOARD
56	A-1821-586-A	MS-462 BOARD, COMPLETE
57	4-270-079-01	SHEET (IC, RADIATION
58	4-279-788-01	PLATE (SY), GROUND
59	4-279-786-01	PLATE (JACK), FIXED
60	4-279-787-01	PLATE (CONNECTOR), FIXED


DSC-HX100/HX100V_L2

DISASSEMBLY


1. Remove to numerical order ① to ③ in the left figure.

◇-X: Solder


① #12 X 2

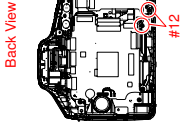


② #12 X 1

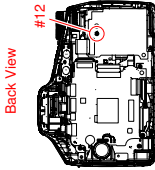

③ #12 X 3

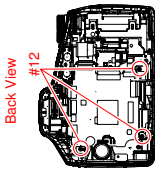

Screw

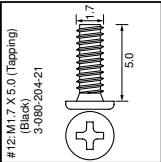


Note

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

注意
電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。使用済み電池は、取扱指示に従って処分してください。

2-1-3. LENS SECTION

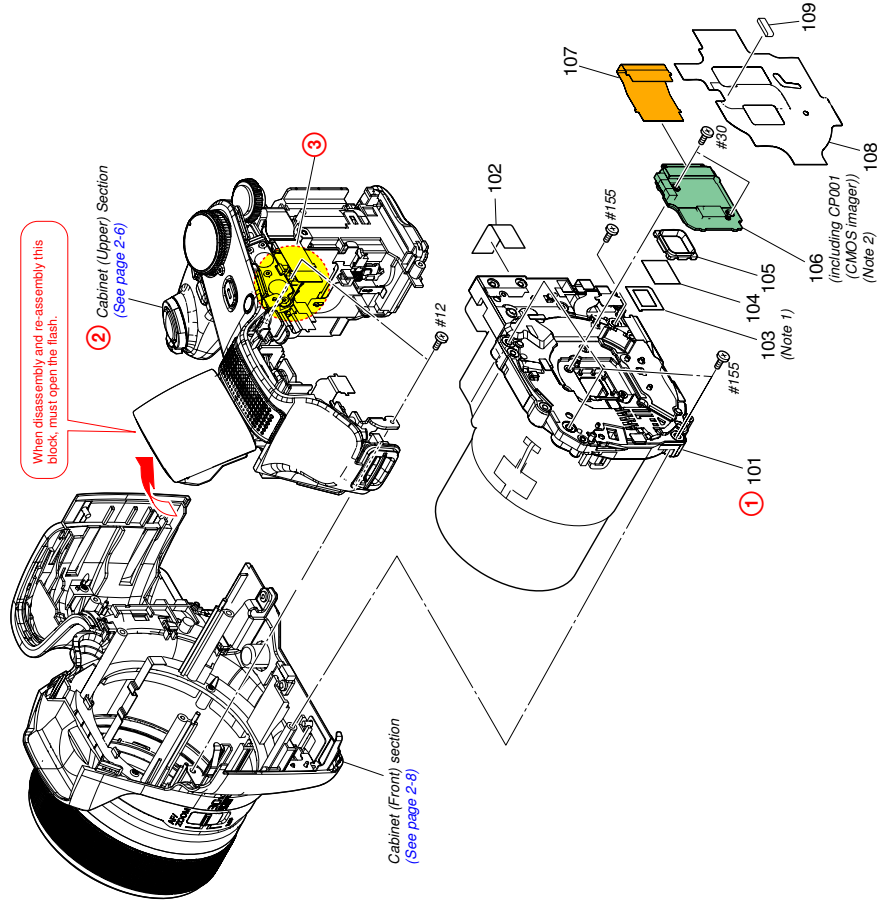


Ref. No.	Part No.	Description
101	1-856-156-11	OPTICAL UNIT (NY213B)
102	4-284-296-01	SHEET, PD
103	4-276-127-01	MASK (NY213B) (Note 1)
104	1-856-188-31	FILTER BLOCK, OPTICAL
105	4-238-931-01	RUBBER (NY213B), SEAL
106	A-1821-590-A	CD-814 BOARD, COMPLETE (including CP001 (CMOS imager)) (Note 2)
107	1-882-898-11	CN-470 FLEXIBLE BOARD
108	4-284-293-01	SHEET (LENS), RADIATION
109	4-284-294-01	GASKET (CMOS)
#12	3-080-204-21	SCREW, TAPPING, P2
#30	3-086-156-11	SCREW B1.2
#155	3-080-204-31	SCREW, TAPPING, P2

DISC-HX100/HX100V_L2

DISASSEMBLY


1. Remove to numerical order ① to ③ in the left figure.

① #155 X 4 → Open Flash

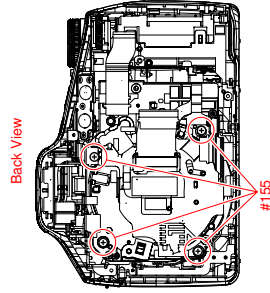

Back View

② #12 X 2



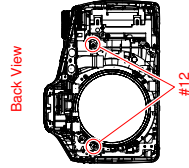


Back View

DISCHARGING OF THE CHARGING CAPACITOR

ストロボ用充電コンデンサの放電

Screw

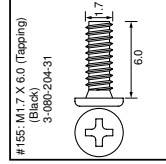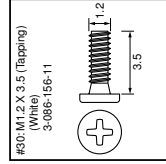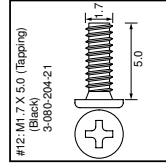

Note


Note 1: Refer to "Assembly-1: Installation Cautions of the Mask (NY213B)".

Note 1: "Assembly-1: Installation Cautions of the Mask (NY213B)" を参照してください。



Note 2: Be sure to read "Precautions for Replacement of Imager" on page 6-1 of Level 3 when changing the imager.

Note 2: イメージャの交換時はLevel3の6-1ページ、「イメージャ交換時の注意」を必ずお読みください。

2-1-4. CABINET (UPPER) SECTION

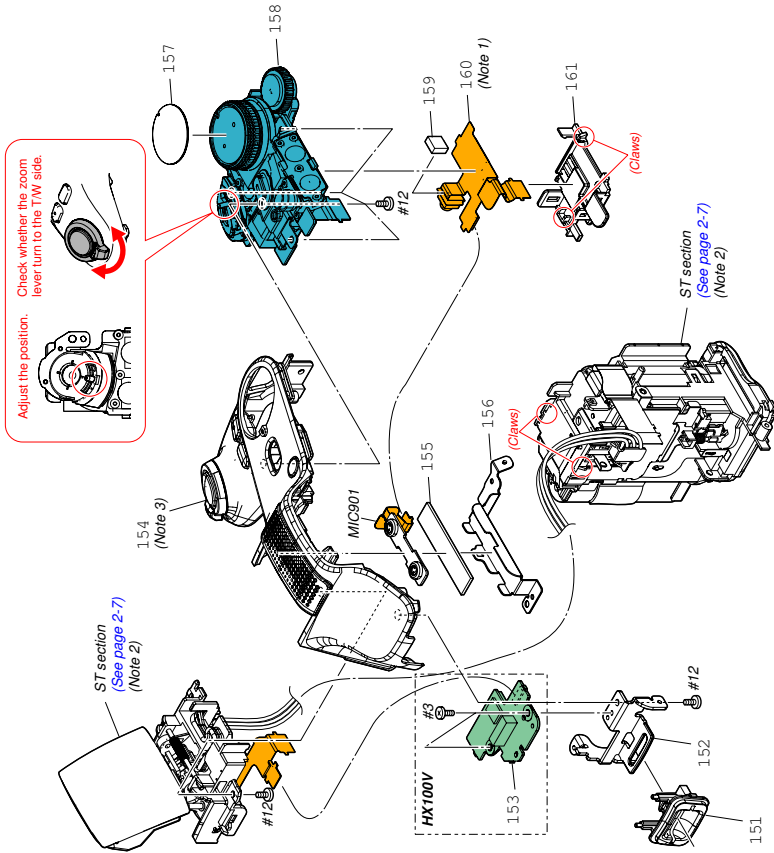

Screw

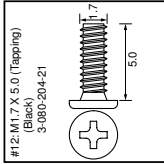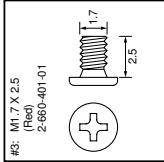



Note

Note 1: Refer to "Assembly-2: Installation Cautions of the RL-110 Flexible Board."

Note 1: "Assembly-2: Installation Cautions of the RL-110 Flexible Board."を参照してください。

Note 2: Refer to "Assembly-4: Route the Flash Harnesses."

Note 2: "Assembly-4: Route the Flash Harnesses."を参照してください。

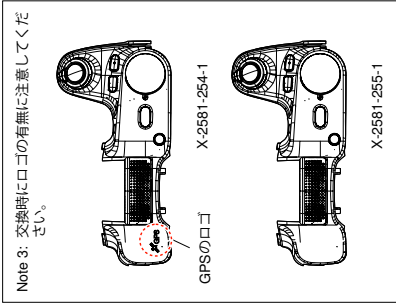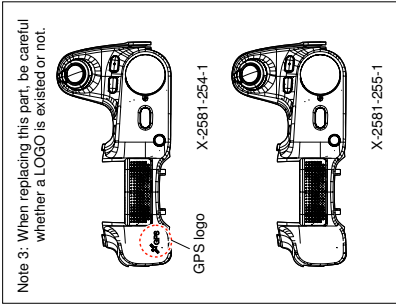

Ref. No.	Part No.	Description
151	4-279-810-01	FRAME (R), STRAP
152	4-279-809-01	SHEET METAL (R), STRAP
153	A-1821-589-A	GP-038 BOARD, COMPLETE (HX100V)
154	X-2581-254-1	CABINET (UPPER) ASSY (HX100V) (Note 3)
154	X-2581-255-1	CABINET (UPPER) ASSY (861) (HX100) (Note 3)
155	4-279-806-02	CUSHION (MICROPHONE)
156	4-279-804-01	PLATE (MIC), GROUND
157	4-279-807-01	PLATE, MODE
158	1-489-561-11	SWITCH BLOCK, CONTROL (SW61970)

DSC-HX100/HX100V_L2

DISASSEMBLY

- ## Screw



Note 1: "Assembly-3: The Method of installation of the ST section."




TransferJet logo


X-2581-2552-1




TransferJet の口
X-2581-252-1

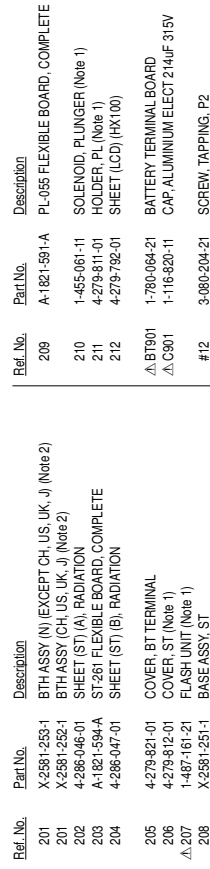

Screw

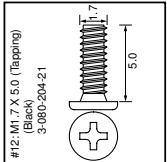


2-1-6. CABINET (FRONT) SECTION

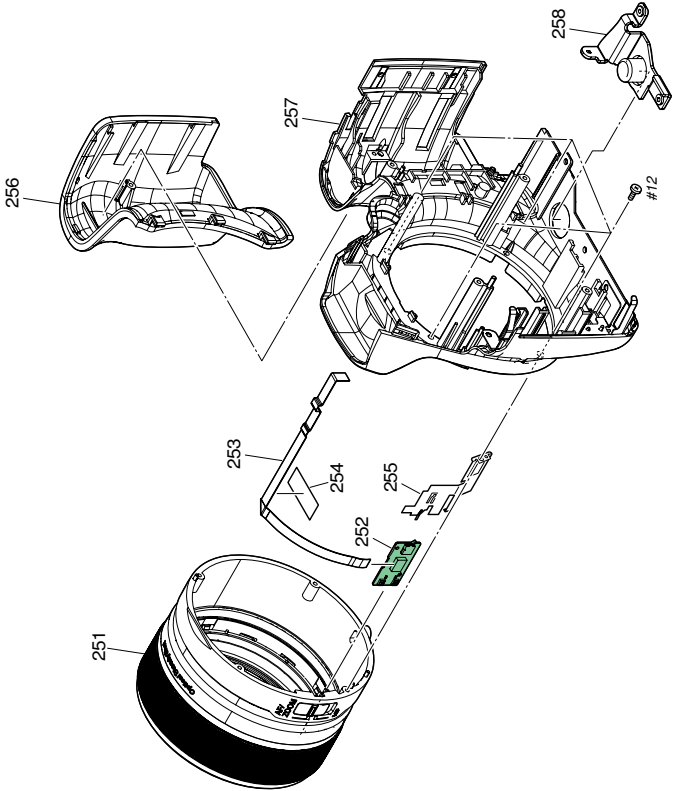

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
251	X-2581-250-1	RING ASSY LENS	256	4-279-799-01	GRIP
252	A-1021-588-A	SE-179 BOARD, COMPLETE	257	X-2581-249-1	CABINET (FRONT) ASSY
253	1-967-586-11	CABLE FLEXIBLE FLAT	258	4-279-790-01	PLATE, TRIPOD
254	4-279-792-01	SHEET (LCD)			
255	4-279-791-01	PLATE, MF GROUND	#12	3-080-204-21	SCREW, TAPPING, P2

DSC-HX100/HX100V_L2



2-1-7. REAR SECTION

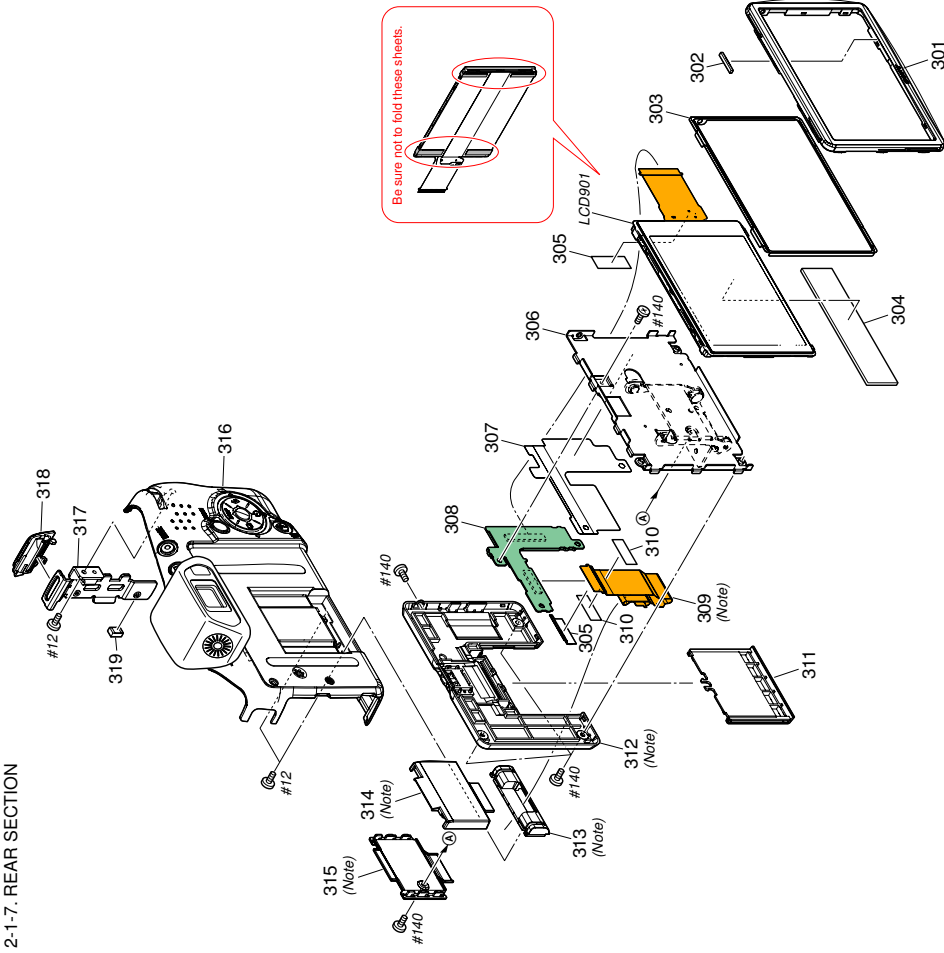

Ref. No.	Part No.	Description
301	4-279-848-01	CABINET (M), P
302	4-284-282-01	GASKET (LCD)
303	4-279-848-01	PLATE (P CABINET M), GROUND
304	4-279-855-01	CUSHION (LCD)
305	4-279-792-01	SHEET (LCD)
306	X-2581-256-1	HINGE ASSY (970)
307	4-279-850-01	INSULATING SHEET, OK
308	A-1821-587-A	PD-438 BOARD, COMPLETE
309	1-883-266-11	PD-441 FLEXIBLE BOARD (Note)
310	4-284-286-01	SHEET, PD
311	4-279-851-01	PLATE, BLIND
312	X-2581-257-1	CABINET (C) ASSY, P (Note)

Ref. No.	Part No.	Description
313	4-279-854-01	COVER (R), HINGE (Note)
314	4-279-853-01	COVER (M), HINGE (Note)
315	4-279-852-01	COVER (C), HINGE (Note)
316	X-2581-258-1	CABINET (REAR) ASSY
317	4-279-846-01	SHEET METAL (L), STRAP
318	4-279-847-01	FRAME (L), STRAP
319	4-284-281-01	GASKET (SY)
LCD901	A-1830-850-A	SERVICE, LCD BLOCK ASSY (950)
#12	3-080-204-21	SCREW, TAPPING, P2
#140	2-635-562-01	SCREW (M1.7)

Screw

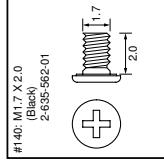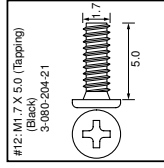

Note

Note : Refer to "Assembly-5: The Method of Installation of the LCD section."

Note : "Assembly-5: The Method of Installation of the LCD section."を参照してください。