


5. REPAIR PARTS LIST

5-1. EXPLODED VIEWS

5-1-1. CABINET SECTION


ns: not supplied

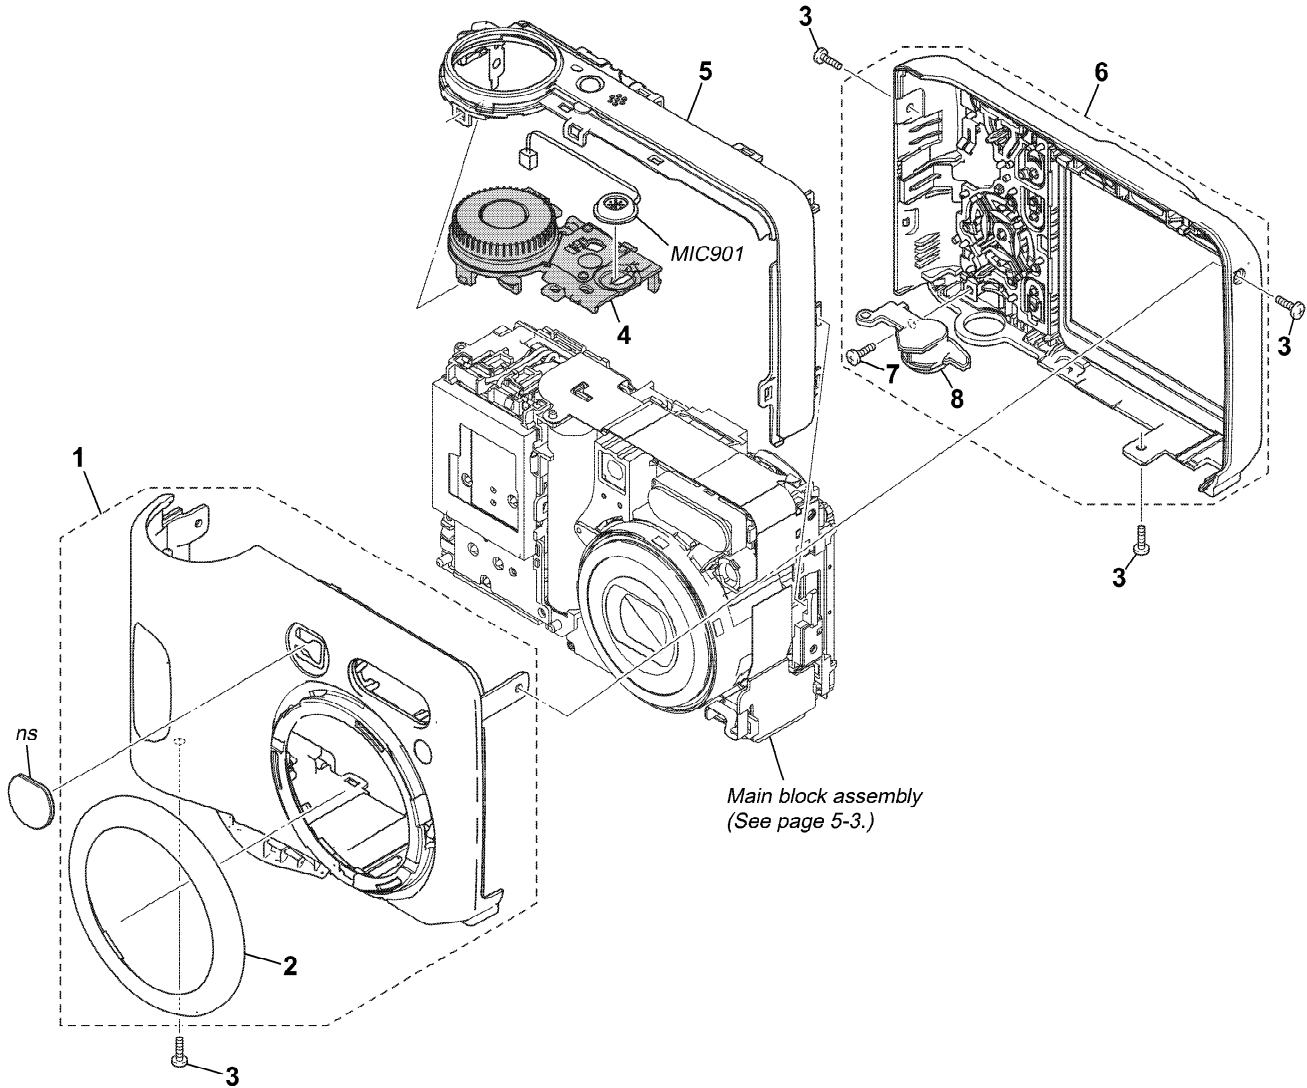

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	X-2055-111-1	CABINET FRONT ASSY (630C) (S90: SILVER)	5	X-2055-120-1	CABINET (UPPER) ASSY (630D) (S90: BLUE)
1	X-2055-118-1	CABINET FRONT ASSY (630D) (S90: BLUE)	6	X-2055-123-1	CABINET (REAR) ASSY (240) (ST80)
1	X-2055-115-1	CABINET, FRONT, ASSY (620) (S60/S80/ST80)	6	X-2055-122-1	CABINET (REAR) ASSY (380) (S80)
2	2-591-956-01	RING (630), LENS (S90)	6	X-2055-119-1	CABINET REAR ASSY (630D) (S90: BLUE)
2	2-595-847-01	RING (620), LENS (S60/S80/ST80)	6	X-2055-116-1	CABINET, REAR, ASSY (620) (S60)
3	2-025-236-31	SCREW (M1.7)	6	X-2055-112-1	CABINET, REAR, ASSY (630C) (S90: SILVER)
4	1-479-108-11	CONTROL SWITCH BLOCK	7	3-078-890-11	SCREW, TAPPING
5	X-2055-114-1	CABINET (UPPER) ASSY (620) (S60/S80/ST80)	8	2-591-970-01	SCREW, TRIPOD
5	X-2055-110-1	CABINET (UPPER) ASSY (630C) (S90: SILVER)	MIC901	1-542-618-11	MICROPHONE

5. REPAIR PARTS LIST

5-1-2. MAIN BLOCK ASSEMBLY

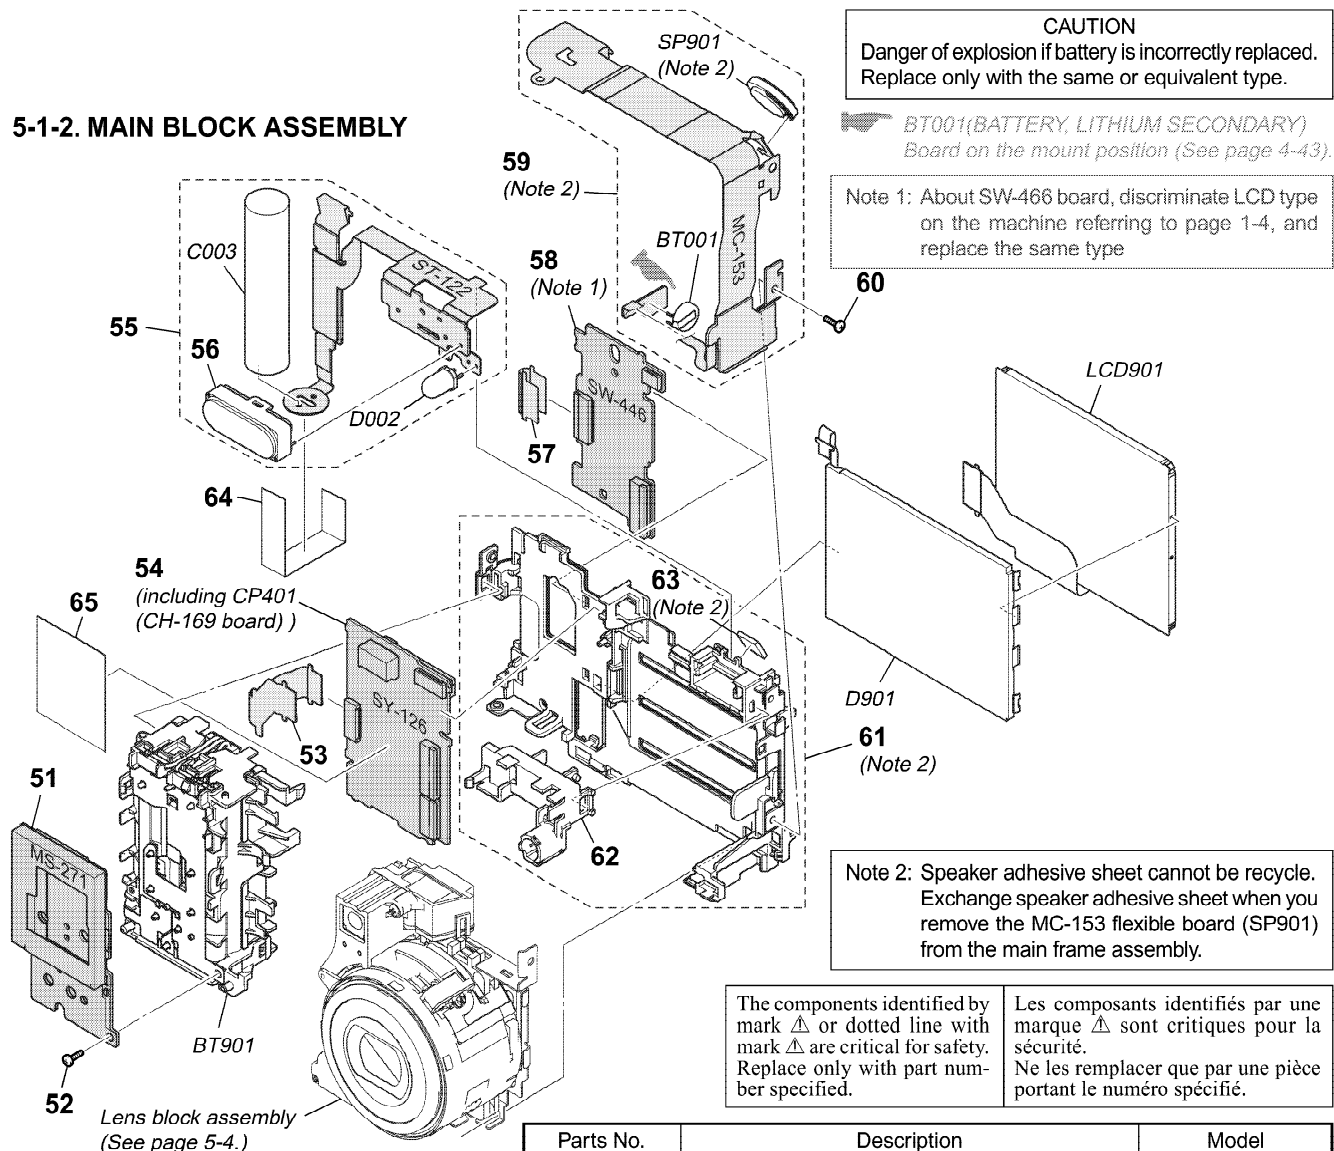

Parts No.	Description	Model
A-1119-576-A	SY-126 BOARD, COMPLETE (SERVICE) (GP2)	S60/S80/S90
A-1119-577-A	SY-126 BOARD, COMPLETE (SERVICE) (GP3)	S60/S80/ST80/S90
A-1119-578-A	SY-126 BOARD, COMPLETE (SERVICE) (GP4)	S60/S80/ST80/S90
A-1119-579-A	SY-126 BOARD, COMPLETE (SERVICE) (GP5)	S60/S80/ST80/S90


* Including CP401 (CH-169 board)

* Refer to the table of page 5-1 about language of SY-126 board.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
51	A-1106-341-A	MS-271 BOARD, COMPLETE	62	2-595-972-01	HOLDER (620), ST (S60/S80/ST80)
52	3-078-890-11	SCREW, TAPPING	62	2-591-992-01	HOLDER (630), ST (S90)
53	1-866-283-11	FP-199 FLEXIBLE BOARD	63	2-591-993-01	SHEET, SPEAKER ADHESIVE (Note 2)
54	A-1119-576-A	SY-126 BOARD, COMPLETE (SERVICE) (GP2)	64	2-591-988-01	SHEET, ST INSULATING
54	A-1119-577-A	SY-126 BOARD, COMPLETE (SERVICE) (GP3)	65	2-595-692-01	LABEL, FUSE REPLACEMENT CAUTION
54	A-1119-578-A	SY-126 BOARD, COMPLETE (SERVICE) (GP4)	Δ BT001	1-528-999-51	BATTERY, LITHIUM SECONDARY
54	A-1119-579-A	SY-126 BOARD, COMPLETE (SERVICE) (GP5)	Δ BT901	1-756-541-11	HOLDER, BATTERY (WITH TERMINAL)
Δ 55	A-1106-345-A	ST-122 FLEXIBLE BOARD, COMPLETE	Δ C003	1-112-186-11	CAP, ELECT 135uF 315V
Δ 56	1-478-349-11	FLASH UNIT	D002	6-500-505-01	DIODE OPY5052
57	1-866-284-11	FP-200 FLEXIBLE BOARD	D901	1-479-131-11	BLOCK, LIGHT GUIDE PLATE (2.0) (S60/S80/ST80)
58	A-1106-342-A	SW-446 BOARD, COMPLETE (TYPE C) (Note 1)	D901	1-479-126-11	BLOCK, LIGHT GUIDE PLATE (2.5) (S90)
58	A-1106-349-A	SW-446 BOARD, COMPLETE (TYPE S) (Note 1)	LCD901	1-805-787-31	INDICATOR MODULE, LIQUID CRYSTAL (TYPE C) (Note 1) (S60/S80/ST80)
59	A-1106-346-A	MC-153 FLEXIBLE BOARD, COMPLETE (Note 2)	LCD901	1-805-785-31	INDICATOR MODULE, LIQUID CRYSTAL (TYPE C) (Note 1) (S90)
60	2-025-236-31	SCREW (M1.7)	LCD901	1-805-798-31	DISPLAY PANEL, LIQUID CRYSTAL (TYPE S) (Note 1) (S90)
61	X-2055-117-1	MAIN FRAME ASSY (620) (Note 2) (S60/S80/ST80)	SP901	1-825-665-11	SPEAKER (1.3CM) (Note 2)
61	X-2055-113-1	MAIN FRAME, ASSY (630C) (Note 2) (S90: SILVER)			
61	X-2055-121-1	MAIN FRAME, ASSY (630D) (Note 2) (S90: BLUE)			

5. REPAIR PARTS LIST

5-1-3. LENS BLOCK ASSEMBLY

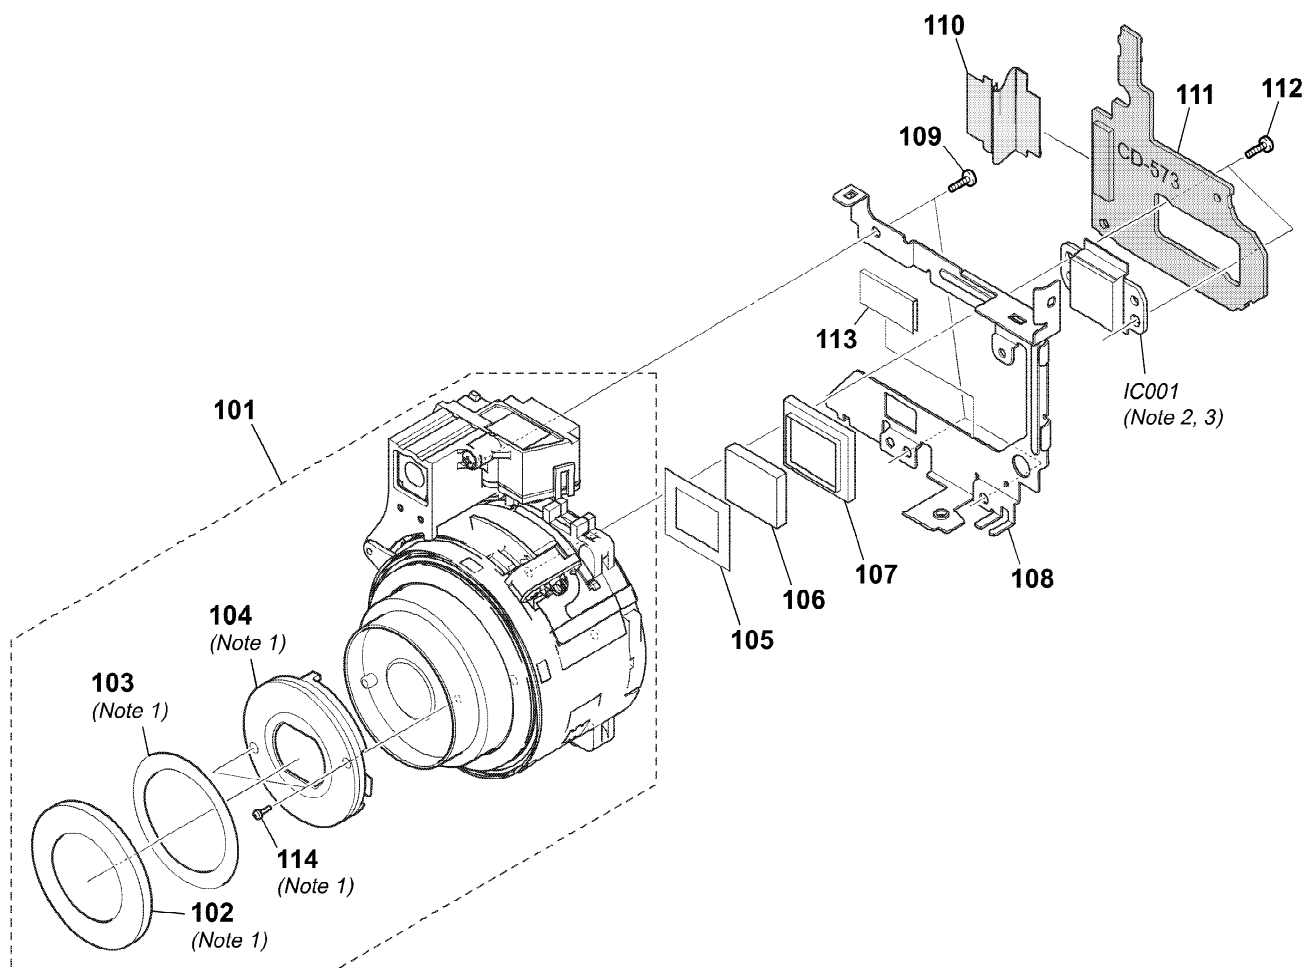

Note 1: Be sure to read "Barrier Unit" and "Barrier Operation Test Method" on page 2-7 when changing the barrier unit or the ornamental fixed plate (A).

Note 2: Be sure to read "Precautions for Replacement of CCD Imager" on page 4-5 when changing the CCD imager.

Note 3: IC001 is not included in CD-573 complete board.

Ref. No.	Part No.	Description
101	1-788-215-11	LENS, VIDEO (ED02E)
102	2-591-682-01	PLATE (A), ORNAMENTAL FIXED (Note 1)
103	3-709-676-01	MATERIAL, FIXED PLATE ADHESION (Note 1)
104	3-709-677-01	BARRIER UNIT (Note 1)
105	3-076-569-01	PLATE, LIGHT INTERCEPTION
106	1-788-103-11	OPTICAL FILTER BLOCK
107	3-075-085-01	RUBBER (DQ), SEAL
108	2-591-986-11	FRAME, LENS

Ref. No.	Part No.	Description
109	3-078-890-11	SCREW, TAPPING
110	1-866-285-11	FP-201 FLEXIBLE BOARD
111	A-1106-343-A	CD-573 BOARD, COMPLETE
112	3-080-204-21	SCREW, TAPPING, P2
113	2-591-987-01	SHEET, LENS INSULATING
114	3-709-678-01	TITE (B TITE M1.4X4.5), TAP
IC001	A-7112-263-A	CCD BLOCK ASSY (CCD IMAGER) (Note 2, 3)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1106-343-A	CD-573 BOARD, COMPLETE ***** (IC001 is not included in this complete board.)

Note: Be sure to read "Precautions for Replacement of CCD Imager" on page 4-5 when changing the CCD imager.

< CAPACITOR >

C001	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C003	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C006	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C007	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C008	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

< CONNECTOR >

CN001	1-817-942-11	CONNECTOR, FPC (ZIF) 39P
-------	--------------	--------------------------

< DIODE >

D001	8-719-063-83	DIODE SML-510MWT86 (AE/AF LOCK)
D002	8-719-077-34	DIODE SML-310YTT86 (FLASH/RECORDING)

< FERRITE BEAD >

FB001	1-414-228-11	INDUCTOR, FERRITE BEAD
-------	--------------	------------------------

< IC >

IC001	A-7112-263-A	CCD BLOCK ASSY (CCD IMAGER) (Note)
-------	--------------	------------------------------------

< TRANSISTOR >

Q001	6-550-119-01	TRANSISTOR	DTC144EMT2L
Q002	6-550-119-01	TRANSISTOR	DTC144EMT2L
Q003	6-550-885-01	TRANSISTOR	2SC39320S2S0
Q004	6-550-119-01	TRANSISTOR	DTC144EMT2L

< RESISTOR >

R001	1-216-864-11	SHORT CHIP	0		
R002	1-218-969-11	RES-CHIP	22K	5%	1/16W
R003	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R004	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R005	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R006	1-220-184-11	RES-CHIP	1.3K	5%	1/16W
R007	1-218-938-11	RES-CHIP	56	5%	1/16W

Electrical parts list of the CH-169 board is not shown.
Page 5-6 is not shown.

Ref. No.	Part No.	Description
	A-1106-346-A	MC-153 FLEXIBLE BOARD, COMPLETE ***** (This flexible complete board is including CN002 (multi connector).)
SP901	1-825-665-11	SPEAKER (1.3CM)
		< BATTERY >
△ BT001	1-528-999-51	BATTERY, LITHIUM SECONDARY
		< CONNECTOR >
CN002	(Not supplied)	CONNECTOR, MULTIPLE (SOCKET)
		< DIODE >
D001	8-719-056-54	DIODE MAZS068008SO
D002	6-500-776-01	DIODE MAZW068H0LS0
D003	6-500-776-01	DIODE MAZW068H0LS0
		< FERRITE BEAD >
FB001	1-469-580-11	INDUCTOR, FERRITE BEAD (1005)
FB002	1-469-580-11	INDUCTOR, FERRITE BEAD (1005)
		< LINE FILTER >
LF001	1-456-583-11	COMMON MODE CHOKE COIL
		< RESISTOR >
R003	1-218-990-11	SHORT CHIP 0
△ R006	1-218-949-11	RES-CHIP 470 5% 1/16W
	A-1106-341-A	MS-271 BOARD, COMPLETE *****
		< CONNECTOR >
CN002	1-815-572-61	CONNECTOR, MEMORY STICK
CN004	1-816-646-31	FFC/FPC CONNECTOR (LIF) 16P
		< FERRITE BEAD >
FB001	1-469-580-11	INDUCTOR, FERRITE BEAD (1005)
FB002	1-469-580-11	INDUCTOR, FERRITE BEAD (1005)
FB003	1-469-580-11	INDUCTOR, FERRITE BEAD (1005)
FB004	1-469-580-11	INDUCTOR, FERRITE BEAD (1005)
		< RESISTOR >
R004	1-218-953-11	RES-CHIP 1K 5% 1/16W
		< SWITCH >
S001	1-771-483-61	SWITCH, PUSH (1 KEY) (BATTERY INSERTION DETECT)
		< THERMISTOR >
TH001	1-810-816-11	THERMISTOR, NTC (1608)

Note: About SW-446 board, discriminate LCD type on the machine referring to page 1-4, and replace the same type.

Ref. No.	Part No.	Description
△	A-1106-345-A	ST-122 FLEXIBLE BOARD, COMPLETE *****
△	1-478-349-11	FLASH UNIT
		< CAPACITOR >
C001	1-100-611-91	CERAMIC CHIP 22uF 20% 6.3V
C002	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V
△ C003	1-112-186-11	CAP, ELECT 135uF 315V
△ C004	1-100-758-11	CERAMIC CHIP 0.047uF 10% 250V
C006	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
		< DIODE >
△ D001	6-501-096-01	DIODE CRF02 (TE85R)
D002	6-500-505-01	DIODE OPY5052 (AF ILLUMINATOR/SELF TIMER)
		< IC >
△ IC002	6-707-555-01	IC TPS65552RGTR
		< COIL >
L001	1-412-027-11	INDUCTOR 2.2uH
△ L002	1-456-193-11	COIL, TRIGGER
		< TRANSISTOR >
△ Q001	6-550-656-01	TRANSISTOR CY25BAJ-8F-T23
		< RESISTOR >
R002	1-208-291-11	RES-CHIP 4.7M 5% 1/10W
R003	1-211-981-11	METAL CHIP 33 0.5% 1/10W
△ R004	1-216-121-11	RES-CHIP 1M 5% 1/10W
		< TRANSFORMER >
△ T001	1-443-648-21	DC-DC CONVERTER TRANSFORMER
	A-1106-342-A	SW-446 BOARD, COMPLETE (TYPE C) (Note) *****
		< CAPACITOR >
C001	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V
C005	1-100-743-91	CERAMIC CHIP 2.2uF 20% 16V
C006	1-100-743-91	CERAMIC CHIP 2.2uF 20% 16V
C008	1-100-743-91	CERAMIC CHIP 2.2uF 20% 16V
C010	1-100-742-91	CERAMIC CHIP 2.2uF 20% 10V
C011	1-100-591-91	CERAMIC CHIP 1uF 10% 25V
C013	1-100-502-11	TANTAL. CHIP 3.3uF 20% 25V
C014	1-100-502-11	TANTAL. CHIP 3.3uF 20% 25V
C015	1-100-502-11	TANTAL. CHIP 3.3uF 20% 25V
		< CONNECTOR >
CN003	1-784-423-21	FFC/CONNECTOR, FPC (ZIF) 39P
CN004	1-816-654-31	FFC/FPC CONNECTOR (LIF) 6P
CN005	1-815-333-11	CONNECTOR, FPC (ZIF) 33P
		< DIODE >
D003	6-500-776-01	DIODE MAZW068H0LS0
D006	8-719-069-29	DIODE RB520S-30TE61

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SW-446 (TYPE C)**SW-446 (TYPE S)**

Ref. No.	Part No.	Description
D008	8-719-064-07	DIODE SML-310LTT86 (MS ACCESS)
D009	6-500-345-01	DIODE MAZS220008SO
D010	8-719-056-60	DIODE MAZS130008SO
< COIL >		
L001	1-469-570-11	INDUCTOR 10uH
L002	1-469-570-11	INDUCTOR 10uH
< TRANSISTOR >		
Q001	6-550-242-01	TRANSISTOR DTC114EMT2L
Q002	8-729-927-99	TRANSISTOR 2SC4617R
< RESISTOR >		
R004	1-218-965-11	RES-CHIP 10K 5% 1/16W
R005	1-218-986-11	RES-CHIP 560K 5% 1/16W
R008	1-218-990-11	SHORT CHIP 0
R009	1-218-990-11	SHORT CHIP 0
R029	1-218-948-11	RES-CHIP 390 5% 1/16W
R032	1-208-715-11	METAL CHIP 22K 0.5% 1/16W
R033	1-208-933-11	METAL CHIP 82K 0.5% 1/16W
R034	1-208-927-11	METAL CHIP 47K 0.5% 1/16W
R036	1-208-935-11	METAL CHIP 100K 0.5% 1/16W
R037	1-218-941-81	RES-CHIP 100 5% 1/16W
R038	1-218-990-11	SHORT CHIP 0
R039	1-218-965-11	RES-CHIP 10K 5% 1/16W
R040	1-218-941-81	RES-CHIP 100 5% 1/16W
R041	1-218-929-11	RES-CHIP 10 5% 1/16W
R043	1-218-989-11	RES-CHIP 1M 5% 1/16W
R044	1-208-923-11	METAL CHIP 33K 0.5% 1/16W
R045	1-208-715-11	METAL CHIP 22K 0.5% 1/16W
R047	1-216-864-11	SHORT CHIP 0
< COMPOSITION CIRCUIT BLOCK >		
RB001	1-234-376-21	RES, NETWORK 2.2K (1005 x4)
RB002	1-234-376-21	RES, NETWORK 2.2K (1005 x4)
< SWITCH >		
S001	1-786-157-11	SWITCH, TACTILE (▽ (SELF TIMER))
S002	1-786-157-11	SWITCH, TACTILE (Δ (FLASH))
S003	1-786-157-11	SWITCH, TACTILE (○ (SET))
S004	1-786-157-11	SWITCH, TACTILE (▷ (MACRO))
S005	1-786-157-11	SWITCH, TACTILE (◁ (REVIEW))
S006	1-786-157-11	SWITCH, TACTILE (DISPLAY / LCD ON/OFF)
S007	1-786-157-11	SWITCH, TACTILE (MENU)
S008	1-786-157-11	SWITCH, TACTILE (T (ZOOM))
S010	1-786-157-11	SWITCH, TACTILE (IMAGE SIZE/DELETE)
S011	1-786-157-11	SWITCH, TACTILE (W (ZOOM))

A-1106-349-A SW-446 BOARD, COMPLETE (TYPE S) (Note)

< CAPACITOR >

C001	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V
C002	1-112-021-91	CAP, CERAMIC 2.2MF F (1608)
C003	1-112-021-91	CAP, CERAMIC 2.2MF F (1608)

Ref. No.	Part No.	Description
C004	1-112-021-91	CAP, CERAMIC 2.2MF F (1608)
C005	1-100-743-91	CERAMIC CHIP 2.2uF 20% 16V
C006	1-100-743-91	CERAMIC CHIP 2.2uF 20% 16V
C008	1-100-743-91	CERAMIC CHIP 2.2uF 20% 16V
C009	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C010	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C011	1-100-743-91	CERAMIC CHIP 2.2uF 20% 16V
C012	1-112-021-91	CAP, CERAMIC 2.2MF F (1608)
< CONNECTOR >		
CN003	1-784-423-21	FFC/CONNECTOR, FPC (ZIF) 39P
CN004	1-816-654-31	FFC/FPC CONNECTOR (LIF) 6P
CN005	1-815-333-11	CONNECTOR, FPC (ZIF) 33P
< DIODE >		
D003	6-500-776-01	DIODE MAZW068H0LSO
D004	8-719-069-29	DIODE RB520S-30TE61
D005	8-719-069-29	DIODE RB520S-30TE61
D008	8-719-064-07	DIODE SML-310LTT86 (MS ACCESS)
D009	6-500-345-01	DIODE MAZS220008SO
D010	8-719-056-60	DIODE MAZS130008SO
< COIL >		
L001	1-469-570-11	INDUCTOR 10uH
< RESISTOR >		
R002	1-218-990-11	SHORT CHIP 0
R004	1-218-974-11	RES-CHIP 56K 5% 1/16W
R029	1-218-948-11	RES-CHIP 390 5% 1/16W
R032	1-208-715-11	METAL CHIP 22K 0.5% 1/16W
R033	1-208-931-11	METAL CHIP 68K 0.5% 1/16W
R034	1-208-927-11	METAL CHIP 47K 0.5% 1/16W
R035	1-208-927-11	METAL CHIP 47K 0.5% 1/16W
R038	1-218-990-11	SHORT CHIP 0
R041	1-218-990-11	SHORT CHIP 0
R044	1-208-931-11	METAL CHIP 68K 0.5% 1/16W
R045	1-208-911-11	METAL CHIP 10K 0.5% 1/16W
R046	1-218-989-11	RES-CHIP 1M 5% 1/16W
R047	1-216-864-11	SHORT CHIP 0
< COMPOSITION CIRCUIT BLOCK >		
RB001	1-234-376-21	RES, NETWORK 2.2K (1005 x4)
RB002	1-234-376-21	RES, NETWORK 2.2K (1005 x4)
< SWITCH >		
S001	1-786-157-11	SWITCH, TACTILE (▽ (SELF TIMER))
S002	1-786-157-11	SWITCH, TACTILE (Δ (FLASH))
S003	1-786-157-11	SWITCH, TACTILE (○ (SET))
S004	1-786-157-11	SWITCH, TACTILE (▷ (MACRO))
S005	1-786-157-11	SWITCH, TACTILE (◁ (REVIEW))
S006	1-786-157-11	SWITCH, TACTILE (DISPLAY / LCD ON/OFF)
S007	1-786-157-11	SWITCH, TACTILE (MENU)
S008	1-786-157-11	SWITCH, TACTILE (T (ZOOM))
S010	1-786-157-11	SWITCH, TACTILE (IMAGE SIZE/DELETE)
S011	1-786-157-11	SWITCH, TACTILE (W (ZOOM))


Note: About SW-446 board, discriminate LCD type on the machine referring to page 1-4, and replace the same type.

Electrical parts list of the SY-126 board is not shown.


Pages 5-9 to 5-11 are not shown.

Checking supplied accessories.

 DSC-S60 only




R6 (size AA) alkaline batteries (2)
(not supplied)

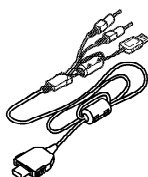

USB, AV cable for multi-use terminal (1)
1-830-345-11

DSC-ST80 only

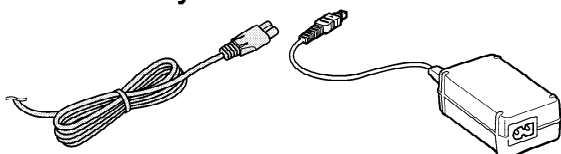


Power cord (1)
△ 1-783-374-12 (UK, HK)
△ 1-823-946-12 (AEP, E)


AC Adaptor
AC-LS5 (1)
△ 1-477-730-71



 Conversion 2P adaptor (1)
△ 1-569-008-21 (E)




A/V connecting cable (1)
△ 1-824-519-11

 

USB cable (1)
1-827-754-11



 Multiple (cradle) connector (1)
1-819-202-11




Rechargeable battery pack (NP-NH25) (1)
(not supplied)


Other accessories

- 2-590-046-11 MANUAL, INSTRUCTION (CSS-SA)
(ENGLISH, FRENCH) (AEP, UK, E, HK)
2-590-046-21 MANUAL, INSTRUCTION (CSS-SA)
(GERMAN, ITALIAN, DUTCH, SPANISH,
PORTUGUESE, SWEDISH, DANISH,
FINNISH, RUSSIAN) (AEP, E)
2-590-046-31 MANUAL, INSTRUCTION (CSS-SA)
(TRADITIONAL CHINESE, SIMPLIFIED
CHINESE, KOREAN, ARABIC) (E, HK)


DSC-S80/S90 only

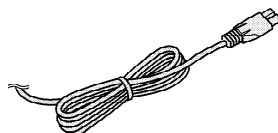

 Power cord (1)
△ 1-776-985-11 (KR)
△ 1-782-476-13 (CH)
△ 1-783-374-12 (UK, HK)
△ 1-783-952-21 (AR)
△ 1-790-107-22 (US, CND)
△ 1-790-732-71 (JE)
△ 1-823-946-12 (AEP, E)
△ 1-827-945-12 (AUS)



HR6 (size AA) Nickel-Metal
Hydride batteries (2)
(not supplied)

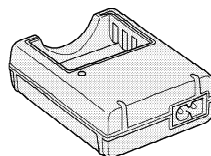


Battery charger
(BC-CS2A/CS2B) (1)
△ 1-477-814-21 (AEP, UK, E, AR, HK, AUS)
△ 1-477-814-31 (KR, CH)
△ 1-477-814-41 (US, CND, JE)




Conversion 2P adaptor (1)
△ 1-569-008-21 (E)



Conversion 2P adaptor (1)
△ 1-573-856-12 (JE)

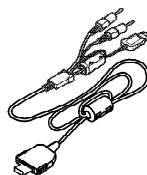


USB, AV cable for multi-use terminal (1)
1-830-345-11

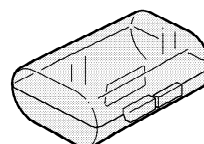


Battery case (1)
3-074-757-01

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

 Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



Wrist strap (1)
2-050-981-01

 

CD-ROM
(Cyber-shot application
software) (1)
2-583-852-11 (US)
2-583-853-01 (EXCEPT US)

Other accessories

- 2-590-636-11 INSTRUCTION (READ THIS FIRST) (ENGLISH) (US, CND, AEP, UK, E, HK, AUS, JE)
- 2-590-636-21 INSTRUCTION (READ THIS FIRST) (FRENCH, ITALIAN) (CND, AEP)
- 2-590-636-31 INSTRUCTION (READ THIS FIRST) (SPANISH, PORTUGUESE) (AEP, E, AR, JE)
- 2-590-636-41 INSTRUCTION (READ THIS FIRST) (GERMAN, DUTCH) (AEP)
- 2-590-636-51 INSTRUCTION (READ THIS FIRST) (TRADITIONAL CHINESE, SIMPLIFIED CHINESE) (E, HK, CH, JE)

- 2-590-636-61 INSTRUCTION (READ THIS FIRST) (RUSSIAN, SWEDISH) (AEP)
- 2-590-636-71 INSTRUCTION (READ THIS FIRST) (ARABIC, PERSIAN) (E)
- 2-590-636-81 INSTRUCTION (READ THIS FIRST) (KOREAN) (KR, JE)
- 2-590-636-91 INSTRUCTION (READ THIS FIRST) (POLISH, CZECH) (AEP)
- 2-590-637-11 INSTRUCTION (READ THIS FIRST) (HUNGARIAN, SLOVAK) (AEP)

- 2-590-639-11 INSTRUCTION (USER'S GUIDE) (ENGLISH) (US, CND, AEP, UK, E, HK, AUS, JE)
- 2-590-639-21 INSTRUCTION (USER'S GUIDE) (FRENCH, ITALIAN) (CND, AEP)
- 2-590-639-31 INSTRUCTION (USER'S GUIDE) (SPANISH, PORTUGUESE) (AEP, E, AR, JE)
- 2-590-639-41 INSTRUCTION (USER'S GUIDE) (GERMAN, DUTCH) (AEP)
- 2-590-639-51 INSTRUCTION (USER'S GUIDE) (TRADITIONAL CHINESE, SIMPLIFIED CHINESE) (E, HK, CH, JE)

- 2-590-639-61 INSTRUCTION (USER'S GUIDE) (RUSSIAN, SWEDISH) (AEP)
- 2-590-639-71 INSTRUCTION (USER'S GUIDE) (ARABIC, PERSIAN) (E)
- 2-590-639-81 INSTRUCTION (USER'S GUIDE) (KOREAN) (KR, JE)
- 2-590-639-91 INSTRUCTION (USER'S GUIDE) (POLISH, CZECH) (AEP)
- 2-590-640-11 INSTRUCTION (USER'S GUIDE) (HUNGARIAN, SLOVAK) (AEP)