


2-1. EXPLODED VIEWS

2-1-1. OVERALL SECTION-1

ns: not supplied

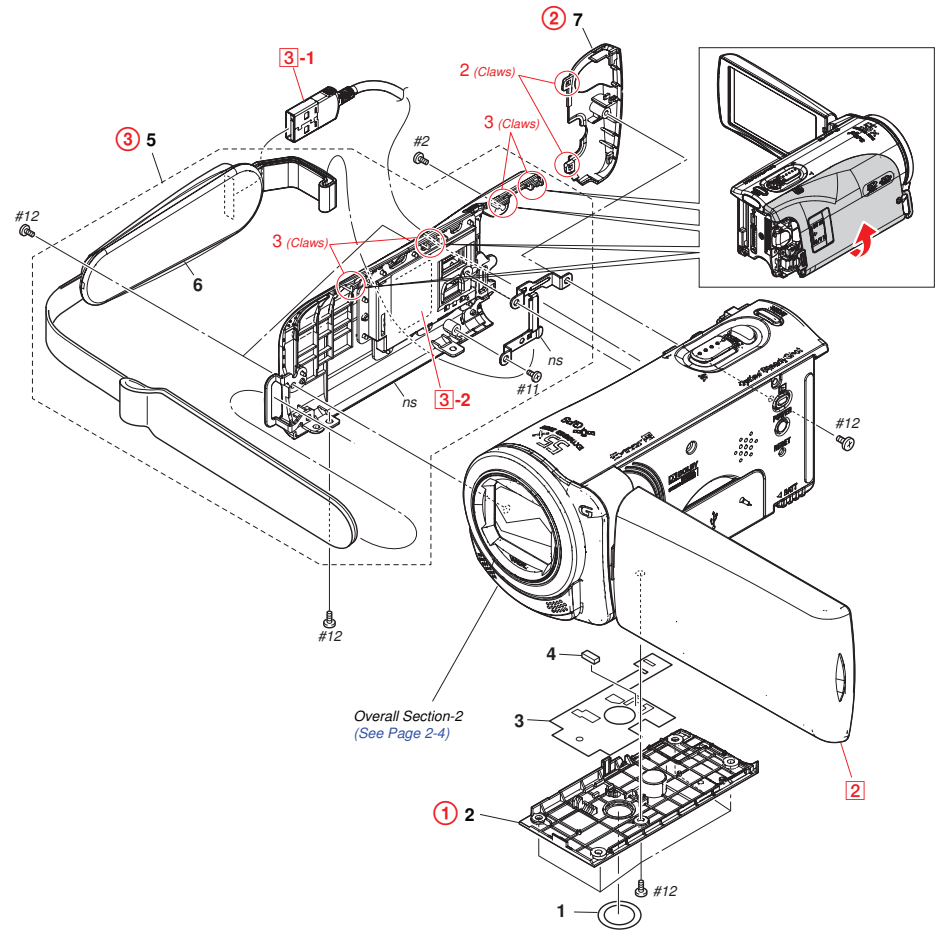

Ref. No.	Part No.	Description
1	4-414-749-01	SHEET, TRIPOD
2	4-294-873-01	CABINET (375), BOTTOM
3	4-297-641-01	SHEET (375), BOTTOM RADIATION
4	4-409-067-01	GASKET (BOTTOM) (375)
5	A-1854-067-A	CABINET (L) ASSY (375, B) (BLACK, BLUE)
5	A-1854-068-A	CABINET (L) ASSY (375, P) (PINK)
5	A-1854-069-A	CABINET (L) ASSY (375, T) (BROWN)
5	A-1854-070-A	CABINET (L) ASSY (375, W) (WHITE)
6	4-413-125-01	BELT (S (K)), 12 TYPE GRIP (BLACK, BROWN, BLUE)
6	4-413-125-11	BELT (S (K)), 12 TYPE GRIP (WHITE, PINK)

Ref. No.	Part No.	Description
7	4-294-886-01	CABINET (LR (375)) (BLACK, BLUE)
7	4-294-886-11	CABINET (LR (375)) (BROWN)
7	4-294-886-21	CABINET (LR (375)) (WHITE)
7	4-294-886-31	CABINET (LR (375)) (PINK)
#2	2-635-562-31	SCREW (M1.7)
#11	3-078-890-11	SCREW, TAPPING
#12	3-080-204-21	SCREW, TAPPING, P2

2-1-2. OVERALL SECTION-2

①

②

② 54 (Note)

#12

#11

2 (Claws)

Overall Section-3 (See Page 2-6)

④ F Inner Section (See Page 2-5)

#2 4 (Boss)

4 (Claw)

#12

4 (Claw)

③ 52

④ 53

①-1, 2, ②

#12

① 51


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
54	A-1853-934-A	CABINET ASSY (376, B), TOP (CX260V/CX260VE/CX270V (BLACK)) (Note)
54	A-1853-935-A	CABINET ASSY (376, P), TOP (CX260V/CX260VE/CX270V (PINK)) (Note)
54	A-1853-936-A	CABINET ASSY (376, T), TOP (CX260V/CX260VE/CX270V (BROWN)) (Note)
54	A-1853-937-A	CABINET ASSY (376, W), TOP (CX260V/CX260VE/CX270V (WHITE)) (Note)
54	A-1860-590-A	CABINET ASSY (376, L), TOP (CX260V (BLUE)) (Note)
#2	2-635-562-31	SCREW (M1.7)
#11	3-078-890-11	SCREW, TAPPING
#12	3-080-204-21	SCREW, TAPPING, P2

Ver. 1.2 2012.05

The changed portions from
Ver. 1.1 are shown in blue.

2-1-3. F INNER SECTION


ns: not supplied

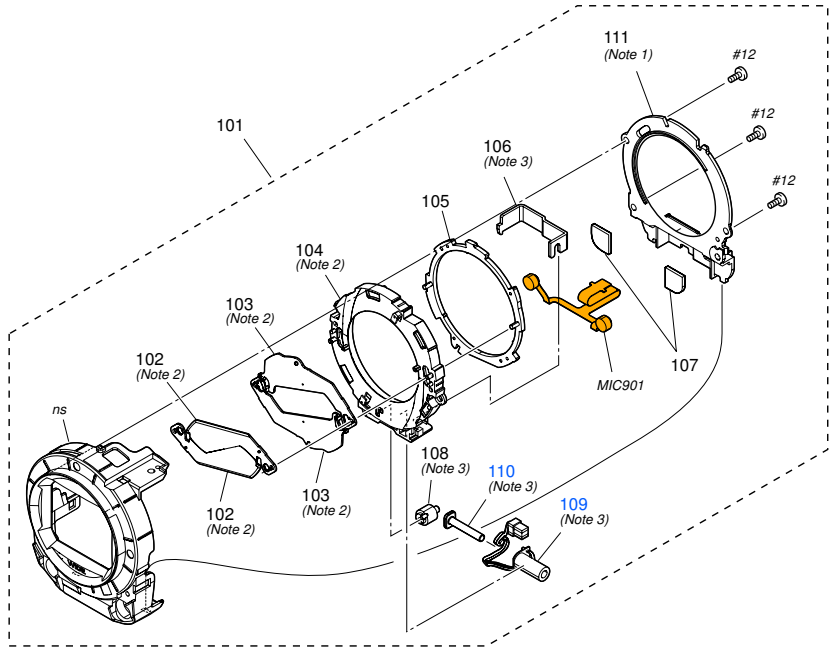

Ref. No.	Part No.	Description
101	A-1854-342-A	CABINET ASSY (375), F INNER
102	4-269-133-01	COVER (A) (Note 2)
103	4-269-134-01	COVER (B) (Note 2)
104	4-269-131-01	BASE (Note 2)
105	4-269-132-01	RING

Ref. No.	Part No.	Description
106	4-269-227-01	YOKE (Note 3)
107	4-294-899-01	CUSHION (375), MICROPHONE
108	1-471-579-11	MAGNET (Note 3)
109	1-457-901-12	COIL (Note 3)
110	4-269-135-01	YOKE, COIL (Note 3)
111	4-294-897-01	RETAINER (375), BARRIER (Note 1)
MIC901	1-489-977-11	MICROPHONE UNIT
#12	3-080-204-21	SCREW, TAPPING, P2


ns: not supplied

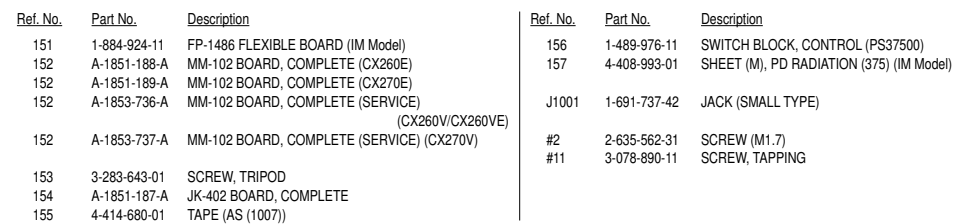

The changed portions from ver. 1.1 are shown in blue.

2-1-5. LENS SECTION

ns: not supplied

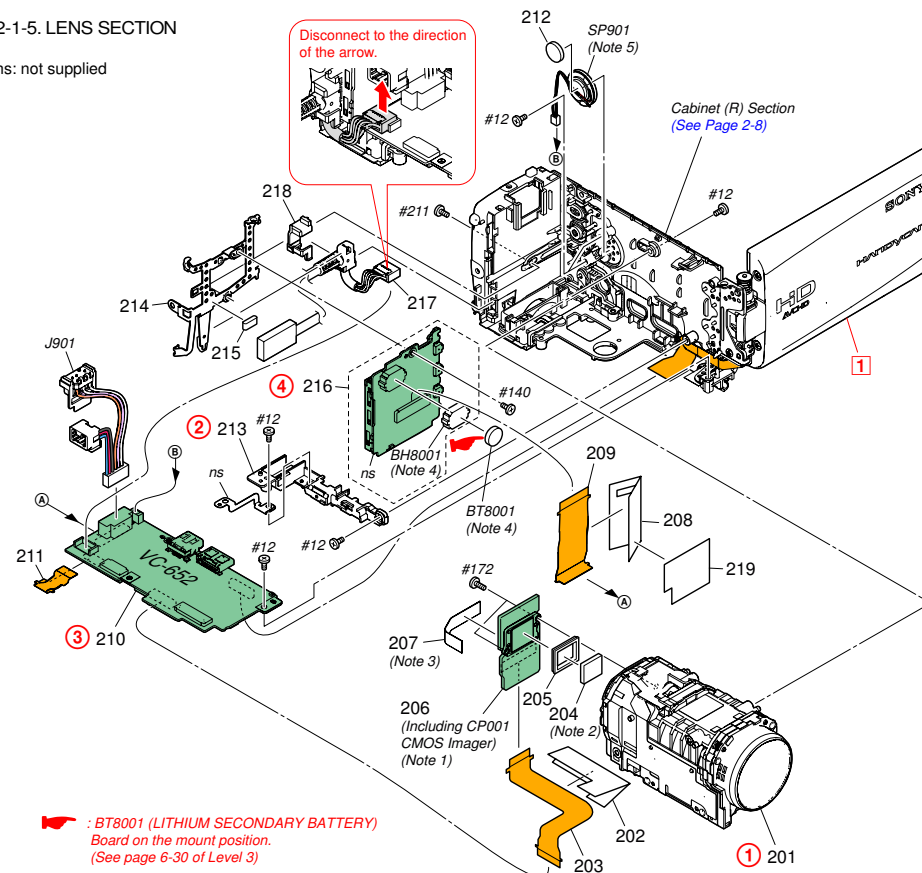

Caution:
 Danger of explosion if battery is incorrectly replaced.
 Replace only with the same or equivalent type. 品 同 兼 又 池 電 の 名 型
 Dispose of used batteries according to the instructions.


電線行な電線があります
 ください。
 使電線してください

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
201	A-1781-268-A	SERVICE, LSV-1450A (SERVICE)
202	4-408-991-01	SHEET, CM RADIATION (375)
203	1-884-922-11	FP-1484 FLEXIBLE BOARD
204	1-856-163-21	OPTICAL FILTER BLOCK (Note 2)
205	4-268-482-01	RUBBER (1450), SEAL
206	A-1851-196-A	CM-123 BOARD, COMPLETE (Including CP001 CMOS Imager) (Note 1)
207	4-297-640-01	SHEET (375), GRAPHITE (Note 3)
208	4-408-992-01	SHEET, MS RADIATION (375)
209	1-884-923-11	FP-1485 FLEXIBLE BOARD
210	A-1853-734-A	VC-652 BOARD, COMPLETE (SERVICE)
211	1-885-089-21	FP-1516 FLEXIBLE BOARD
* 212	3-283-835-01	CUSHION, SP
213	4-294-869-01	RETAINER (375), JACK

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
214	A-1854-132-A	LOCK ASSY (375), BT SUB
215	4-409-067-01	GASKET (BOTTOM) (375)
216	A-1853-735-A	MS-477 BOARD, COMPLETE (SERVICE)
217	1-838-712-21	CABLE, BUILT-IN USB
218	A-297-155-01	RETAINER (375), USB ARM
219	4-419-634-01	SHEET (CU), SD RADIATION (375)
△ BH8001	1-251-928-21	HOLDER, BATTERY (Note 4)
△ BT8001	1-756-134-15	BATTERY, LITHIUM (SECONDARY) (Note 4)
J901	1-842-658-61	JACK, DC
SP901	1-826-837-91	SPEAKER (1.3CM) (Note 5)
#12	3-080-204-21	SCREW, TAPPING, P2
#140	2-635-562-01	SCREW (M1.7)
#172	2-178-410-01	TITE (UB TITE) 1.4
#211	2-187-345-01	SCREW (M1.7, P2 (Note 1)

2-1-6. CABINET (R) SECTION

ns: not supplied

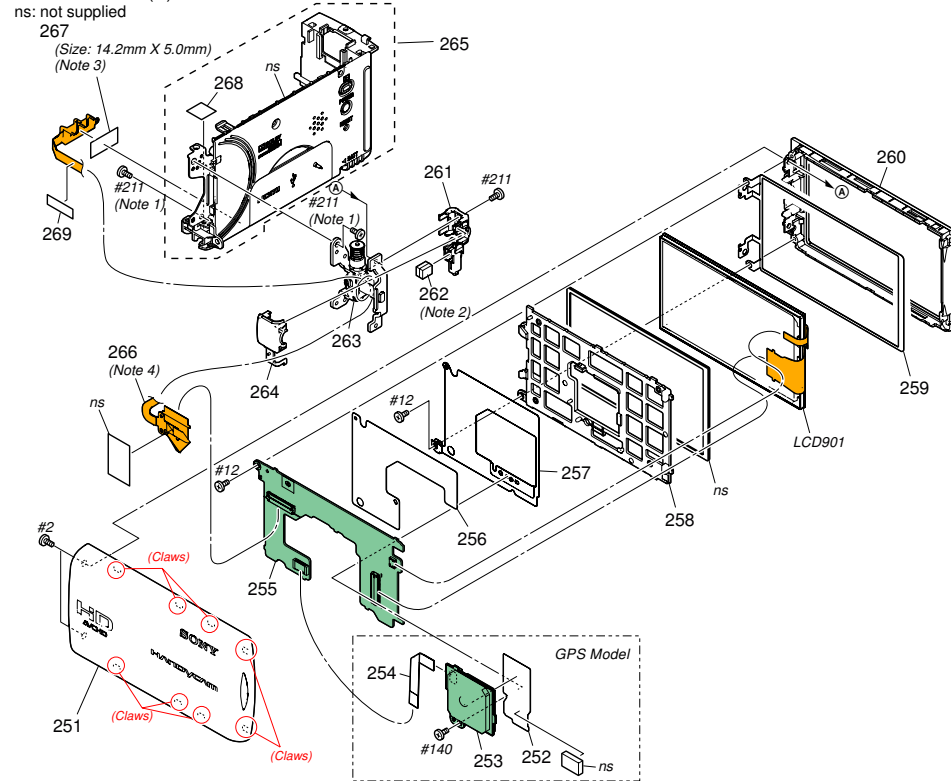

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
251	4-294-894-01	CABINET (C (375)), P (CX250/CX250E (BLACK))	258	4-294-888-01	RETAINER (375), LCD
251	4-294-894-11	CABINET (C (375)), P (CX250E (BROWN))	259	4-294-889-01	PLATE (375), GROUND
251	4-294-894-21	CABINET (C (375)), P (CX250E (WHITE))	260	4-294-887-01	CABINET (M (375)), P
251	4-294-894-31	CABINET (C (375)), P (CX250E (PINK))	261	4-294-891-01	COVER (M (375)), HINGE
251	4-294-894-41	CABINET (C (375)), P (CX260V BLUE)	262	1-471-573-11	MAGNET (Note 2)
251	4-410-990-01	CABINET (C (375)), P (CX260E/CX260V/CX260VE (BLACK))	263	X-2582-514-1	HINGE (Y (375)) ASSY, T TYPE
251	4-410-990-11	CABINET (C (375)), P (CX260E/CX260V/CX260VE (BROWN))	264	4-294-895-01	COVER (C (375)), HINGE (BLACK)
251	4-410-990-21	CABINET (C (375)), P (CX260E/CX260V/CX260VE (WHITE))	264	4-294-895-11	COVER (C (375)), HINGE (BROWN)
251	4-410-990-31	CABINET (C (375)), P (CX260E/CX260V/CX260VE (PINK))	264	4-294-895-21	COVER (C (375)), HINGE (WHITE)
251	4-410-990-41	CABINET (C (375)), P (CX260E/CX260V/CX260VE (BLUE))	264	4-294-895-31	COVER (C (375)), HINGE (PINK)
251	4-410-990-51	CABINET (C (375)), P (CX270E/CX270V (BROWN))	264	4-294-895-41	COVER (C (375)), HINGE (BLUE)
251	4-410-990-61	CABINET (C (375)), P (CX270E/CX270V (WHITE))	265	A-1854-133-A	CABINET (R) ASSY (375)
251	4-410-990-71	CABINET (C (375)), P (CX270E/CX270V (PINK))	266	1-884-925-11	FP-1487 FLEXIBLE BOARD (Note 4)
252	4-410-533-01	SHEET (GPS (375)), CONDUCTIVE (GPS Model)	267	2-649-300-01	SHEET, ADHESIVE (Note 3)
253	A-1865-435-A	GP375 ASSY (GPS Model)	268	4-414-303-01	SHEET (R (375)), ELECTROSTATIC
254	1-839-409-11	CABLE, FLEXIBLE FLAT (FFC-283) (GPS Model)	269	4-408-993-01	SHEET (M), PD RADIATION (375)
255	A-1851-186-A	PD-458 BOARD, COMPLETE	LCD901	A-1854-122-A	LCD BLOCK ASSY (SZ814C)
256	4-410-534-01	INSULATING SHEET (PD (375))	#2	2-635-562-31	SCREW (M1.7)
257	X-2583-241-1	PLATE (GP (375)) ASSY, GROUND	#12	3-080-204-21	SCREW, TAPPING, P2
			#140	2-635-562-01	SCREW (M1.7)
			#211	2-187-345-01	SCREW (M1.7), P2 (Note 1)

HDR-CX250/CX250E/CX260E/CX260V/CX270E/CX270V_L2