


2-1. EXPLODED VIEWS

2-1-1. OVERALL SECTION-1

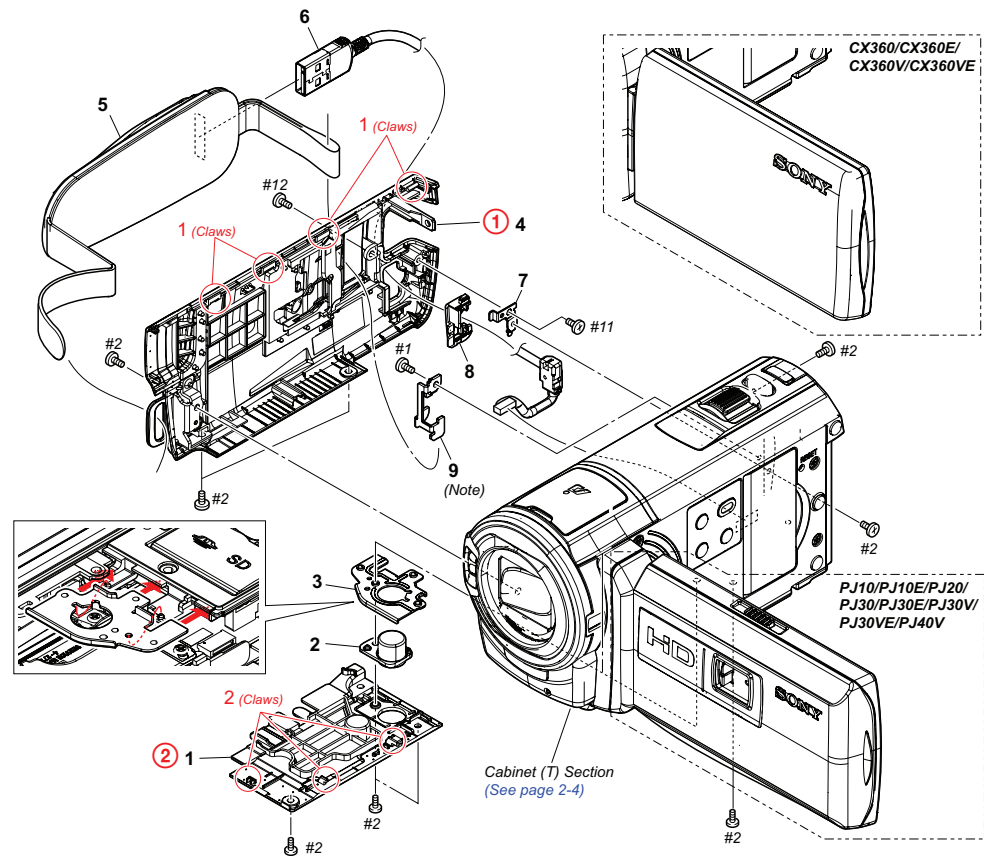

Ref. No.	Part No.	Description
1	4-271-963-01	CABINET (BM (381))
2	3-283-643-01	SCREW, TRIPOD
3	4-265-542-01	RETAINER, TRIPOD
4	A-1810-406-A	CABINET (L) ASSY (381 BK) (CX360/CX360E/CX360V/CX360VE/PJ40V(BROWN))
4	A-1810-407-A	CABINET (L) ASSY (381 BK) (PJ30/PJ30E/PJ30V/PJ30VE)

Ref. No.	Part No.	Description
4	A-1810-408-A	CABINET (L) ASSY (380 BK) (PJ10/PJ10E/PJ20)
4	A-1810-409-A	CABINET (L) ASSY (381 SL) (PJ40V(SILVER))
5	4-265-549-01	BELT (K), 11 TYPE GRIP
6	1-838-712-11	CABLE, BUILT-IN USB
7	4-265-545-01	SHEET METAL (365), CONNECT
8	4-271-959-01	GUARD (381), BELT
9	4-265-546-01	SHEET METAL (R (365)), BELT (Note)


#1	2-635-562-11	TITE (UB TITE) 1.4
#2	2-635-562-31	TITE (UB TITE) 1.4
#11	3-078-890-11	SCREW, TAPPING
#12	3-080-204-21	SCREW, TAPPING, P2

HDR-CX360/CX360E/CX360V/CX360VE/PJ10/PJ10E/PJ20/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V_L2


DISASSEMBLY

1. Remove to numerical order (① to ②) in the left figure.

① Disconnect → #12 X 1 → #2 X 5 → #1 X 1

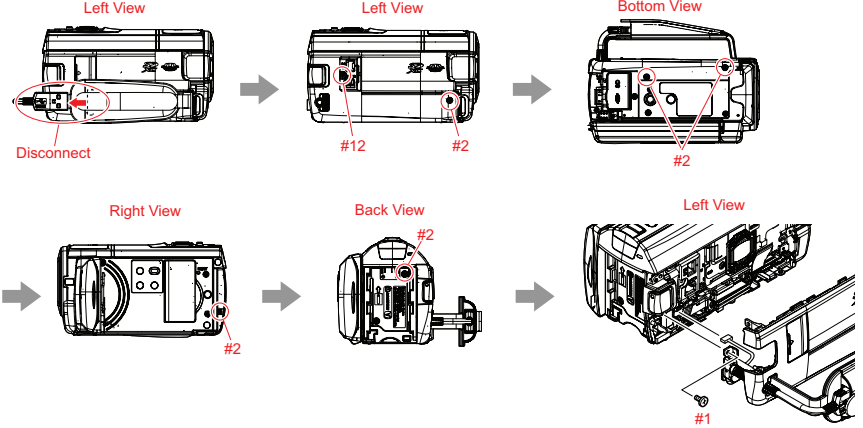

② #2 X 4

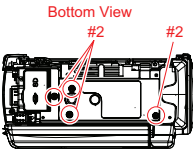

Screw


#1: M1.7 X 2.5 (Black) 2-635-562-11	#2: M1.7 X 4.0 (Black) 2-635-562-31	#11: M1.7 X 4.0 (Tapping) (Silver) 3-078-890-11	#12: M1.7 X 5.0 (Tapping) (Black) 3-080-204-21
---	---	---	--

Note

Note: Refer to "Assembly-1: Installation Cautions of the USB Harness and the DC Jack Harness."

Note: "Assembly-1: Installation Cautions of the USB Harness and the DC Jack Harness."を参照してください。

2-1-2. CABINET (T) SECTION

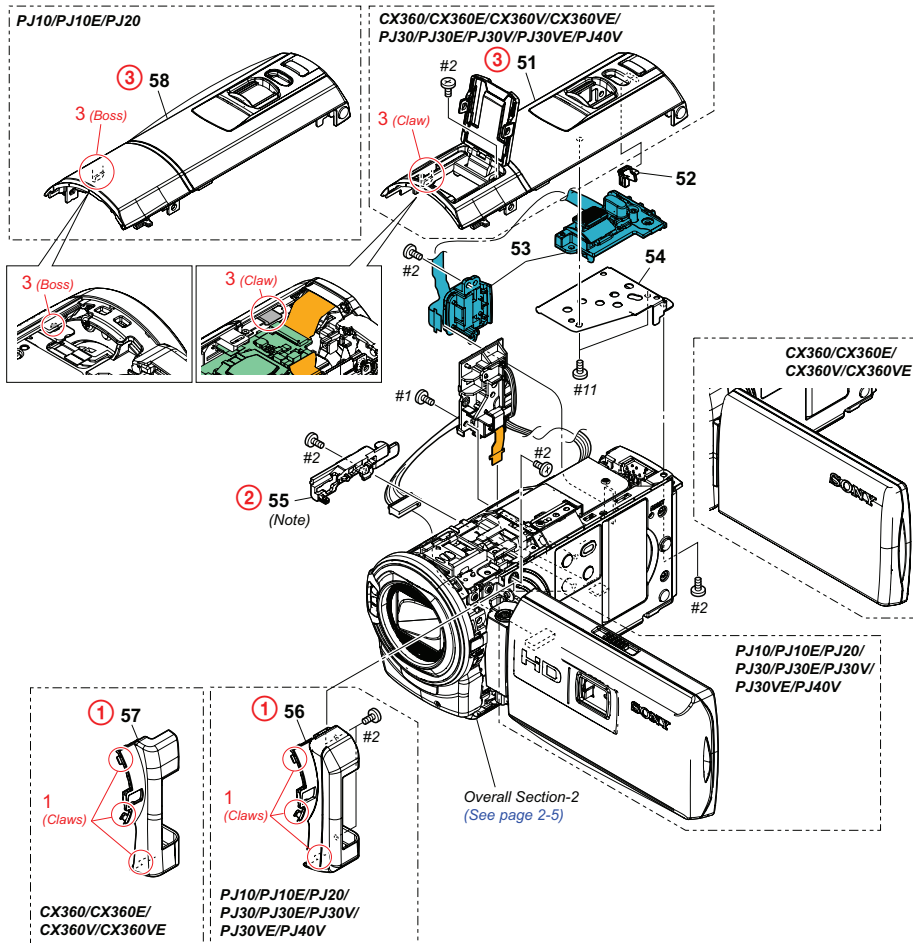


Ref. No.	Part No.	Description
51	A-1809-354-A	CABINET (TOP) ASSY (381 BR) (CX360V/CX360VE/PJ40V(BROWN))
51	A-1809-372-A	CABINET (TOP) ASSY (381 BR) (N) (CX360/CX360E)
51	A-1809-373-A	CABINET (TOP) ASSY (381 BK) (PJ30V/PJ30VE)
51	A-1809-374-A	CABINET (TOP) ASSY (381 BK) (N) (PJ30/PJ30E)
51	A-1809-377-A	CABINET (TOP) ASSY (381 SL) (PJ40V(SILVER))
52	4-271-692-01	PLATE, CHG LED LIGHT GUIDE
53	1-489-301-11	SWITCH BLOCK, CONTROL (PS38100) (EXCEPT PJ40V(SILVER))
53	1-489-301-21	SWITCH BLOCK, CONTROL (PS38210) (PJ40V(SILVER))
54	4-271-693-01	SHEET METAL (381), TOP
55	4-271-971-01	DC, HOLDER (Note)

Ref. No.	Part No.	Description
56	A-1810-539-A	COVER (R (PJ BK)) ASSY, HINGE (PJ30/PJ30E/PJ30V/PJ30VE)
56	A-1810-540-A	COVER (R (L-PJ BK)) ASSY, HINGE (PJ10/PJ10E/PJ20)
56	A-1810-541-A	COVER (R (PJ SL)) ASSY, HINGE (PJ40V(SILVER))
56	A-1810-542-A	COVER (R (PJ BR)) ASSY, HINGE (PJ40V(BROWN))
57	4-271-960-01	COVER (R (381)), HINGE (CX360/CX360E/CX360V/CX360VE)
58	A-1809-376-A	CABINET (TOP) ASSY (380 BK) (PJ10/PJ10E/PJ20)
#1	2-635-562-11	TITE (UB TITE) 1.4
#2	2-635-562-31	TITE (UB TITE) 1.4
#11	3-078-890-11	SCREW, TAPPING


DISASSEMBLY

1. Remove to numerical order (① to ③) in the left figure.


① #1 X 2

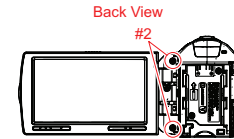

② #2 X 1

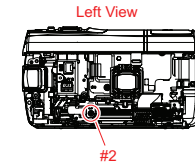

③ #1 X 1 → Remove the Jack Holder → #2 X 3 → #2 X 1 (CX360/CX360E/CX360V/CX360VE/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V)

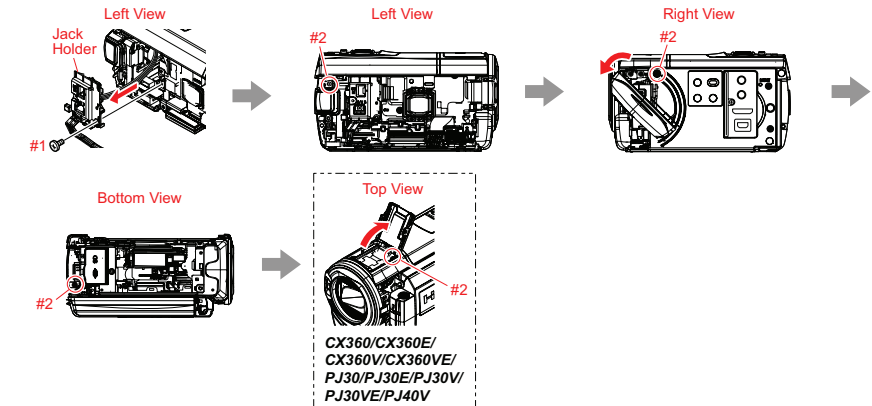

Screw


#1: M1.7 X 2.5 (Black) 2-635-562-11	#2: M1.7 X 4.0 (Black) 2-635-562-31	#11: M1.7 X 4.0 (Tapping) (Silver) 3-078-890-11
---	---	---

Note

Note: Refer to "Assembly-1: Installation Cautions of the USB Harness and the DC Jack Harness."

Note: "Assembly-1: Installation Cautions of the USB Harness and the DC Jack Harness."を参照してください。

2-1-3. OVERALL SECTION -2

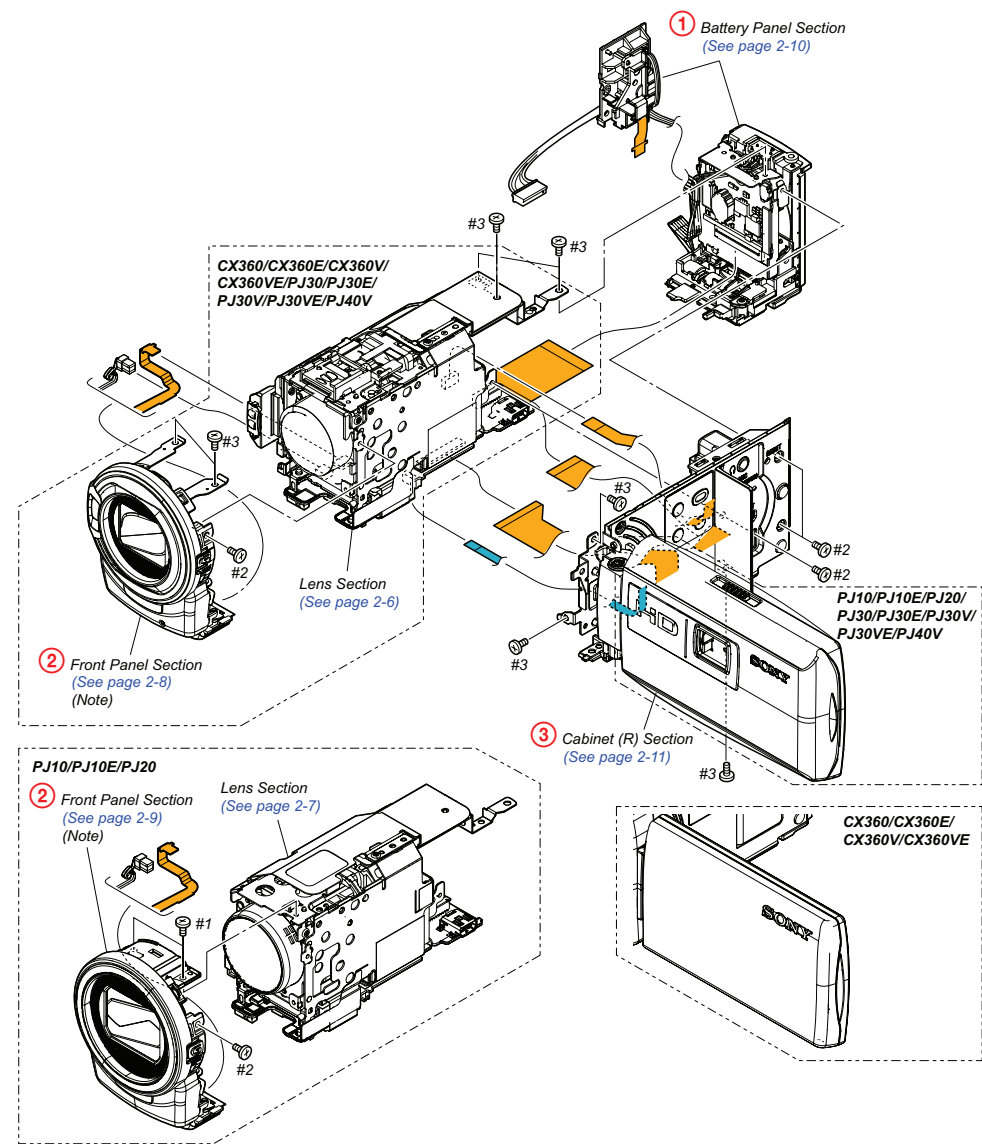


Ref. No.	Part No.	Description
#1	2-635-562-11	TITE (UB TITE) 1.4
#2	2-635-562-31	TITE (UB TITE) 1.4
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2

HDR-CX360/CX360E/CX360V/CX360VE/PJ10/PJ10E/PJ20/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V_L2


DISASSEMBLY

1. Remove to numerical order (1) to (3) in the left figure.


1 #3 X 3 → #2 X 2

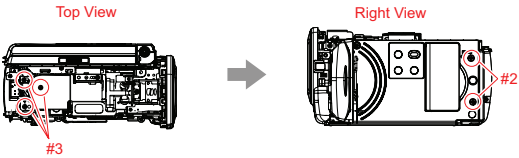


2 #2 X 1 → #3 X 2 (CX360/CX360E/CX360V/CX360VE/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V)/ #1 X 2 (PJ10/PJ10E/PJ20)

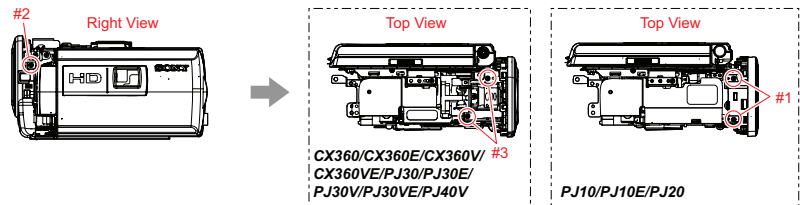

3 #3 X 3 → #2 X 1

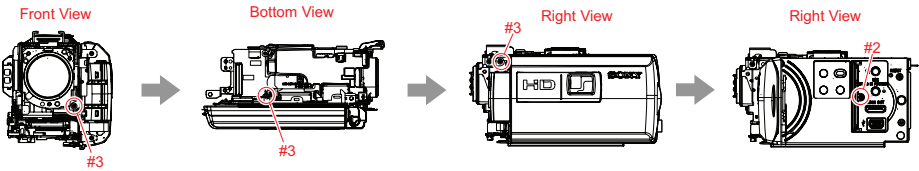

Screw

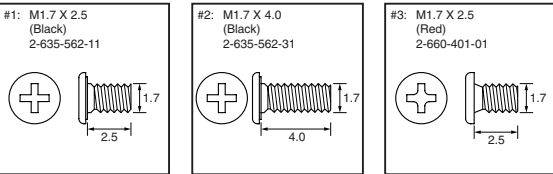

Note


Note: Refer to "Assembly-2: Installation Cautions of the Front Panel Section."

Note: "Assembly-2: Installation Cautions of the Front Panel Section."を参照してください。

2-1-4. LENS SECTION

(CX360/CX360E/CX360V/CX360VE/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V)

Refer to page 2-7 about PJ10/PJ10E/PJ20.

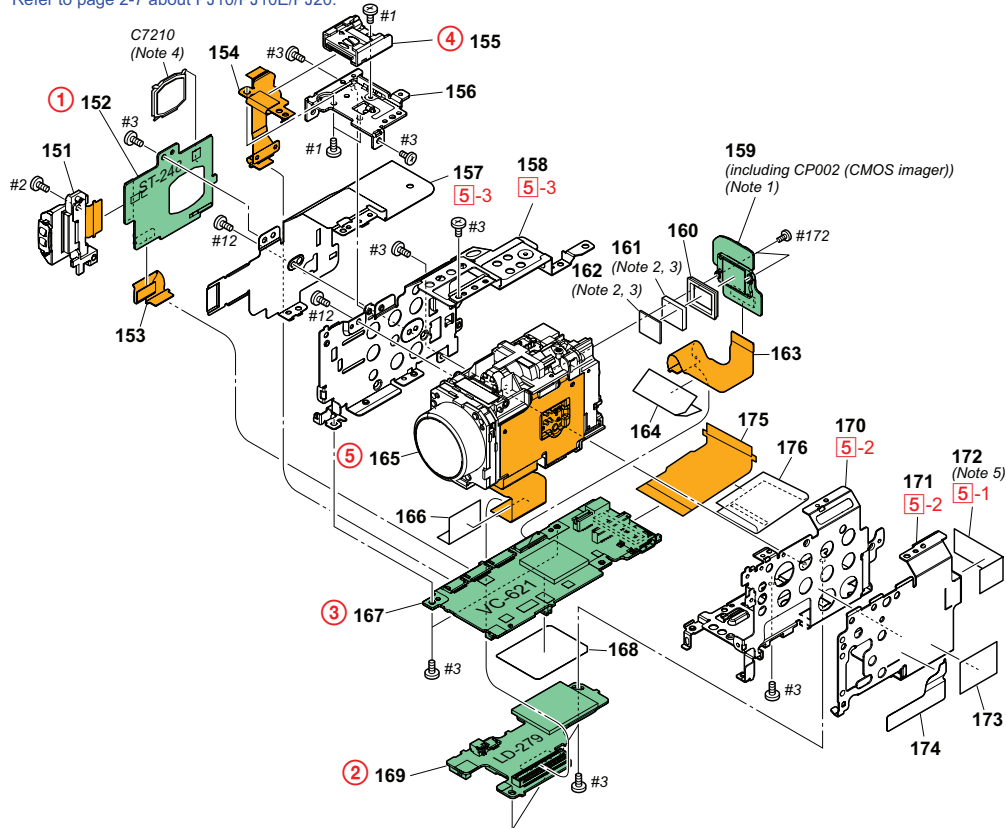


Ref. No.	Part No.	Description
△ 151	A-1800-670-A	LED BLOCK ASSY, ST
152	A-1810-651-A	ST-248 BOARD, COMPLETE
153	1-882-882-11	FP-1327 FLEXIBLE BOARD
154	1-882-883-11	FP-1328 FLEXIBLE BOARD
155	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
156	4-271-966-01	FRAME, SHOE
157	4-271-724-01	HEAT SINK (L) (381)
158	4-271-723-01	FRAME (L) (381), LENS
159	A-1767-897-A	CM-114 BOARD, COMPLETE (including CP002 (CMOS imager)) (Note 1)
160	3-216-044-01	RUBBER (1270), SEAL
161	1-856-172-21	FILTER BLOCK, OPTICAL (Note 2, 3)
162	1-856-171-21	FILTER BLOCK, OPTICAL (Note 2, 3)
163	1-882-879-11	FP-1324 FLEXIBLE BOARD
164	4-272-545-01	SHEET (CM (381)), SHIELD
165	A-1733-588-A	DEVICE, LENS LSV-1400A (SERVICE)
166	4-276-408-01	SHEET (FPC (LENS))
167	A-1817-603-A	VC-621 BOARD, COMPLETE (SERVICE) (CX360/CX360E/CX360V/CX360VE)

Ref. No.	Part No.	Description
167	A-1817-605-A	VC-621 BOARD, COMPLETE (SERVICE) (PJ30/PJ30E/PJ30V/PJ30VE/PJ40V)
168	4-271-970-01	LABEL (381), CAUTION
169	A-1817-601-A	LD-279 BOARD, COMPLETE (SERVICE) (CX360/CX360E/CX360V/CX360VE/PJ30/PJ30E/PJ30V/PJ30VE)
169	A-1817-602-A	LD-279 BOARD, COMPLETE (SERVICE) (PJ40V)
170	4-271-964-01	FRAME (R), LENS
171	4-271-965-01	HEAT SINK (R)
172	4-271-967-01	SHEET, CM RADIATION (Note 5)
173	4-271-968-01	SHEET (HEAT SINK R)
174	4-271-969-01	SHEET (FRAME R)
175	1-882-736-11	FP-1313 FLEXIBLE BOARD
176	4-272-050-01	SHEET (MM), SHIELD
△ C7210	1-116-781-11	CAP, DOUBLE LAYERS (Note 4)
#1	2-635-562-11	TITE (UB TITE) 1.4
#2	2-635-562-31	TITE (UB TITE) 1.4
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#12	3-080-204-21	SCREW, TAPPING, P2
#172	2-178-410-01	TITE (UB TITE) 1.4


DISASSEMBLY

1. Remove to numerical order (① to ⑤) in the left figure.


① #2 X 1 → #3 X 1

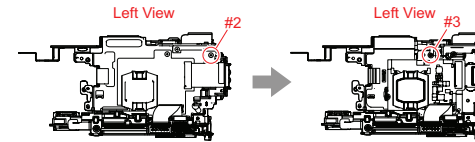


② #3 X 2

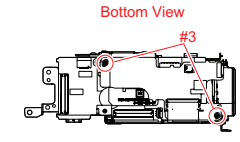


③ #3 X 2

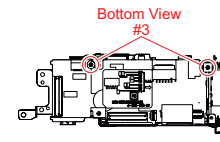

④ #3 X 2

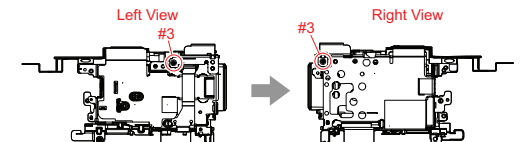

⑤ CM Radiation Sheet (⑤-1) → #3 X 3 → Heat Sink (R)/ Lens Frame (R) (⑤-2) → #12 X 2 → Heat Sink (L) (381)/ Lens Frame (L) (381) (⑤-3)

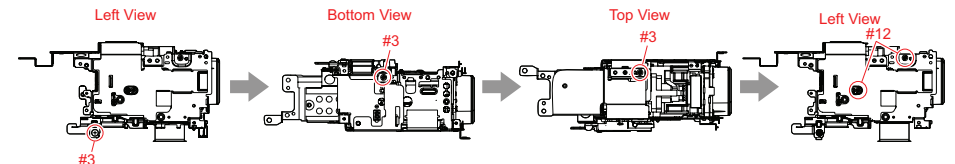

Screw

#1: M1.7 X 2.5 (Black) 2-635-562-11	#2: M1.7 X 4.0 (Black) 2-635-562-31	#3: M1.7 X 2.5 (Red) 2-660-401-01	#12: M1.7 X 5.0 (Tapping) (Black) 3-080-204-21	#172: M1.4 X 4.0 (Tapping) (Black) 2-178-410-01
---	---	---	--	---

Note

Note 1: Be sure to read "Precautions for Replacement of Imager" on page 6-1 of Level 3 when changing the imager.

Note 1: イメージャの交換時はLevel 3の6-1ページ、「イメージャ交換時の注意」を必ずお読みください。

Note 2: Refer to "Assembly-3: How to distinguish the side of Optical Filter Block facing to Lens Device".

Note 2: "Assembly-3: How to distinguish the side of Optical Filter Block facing to Lens Device"を参照してください。

Note 3: Install the thin filter to the lens device side, and install the thick filter in the ASM module side.

Note 3: 薄いフィルタをレンズ側に、厚いフィルタをASM側に取り付けてください。

Note 4: This model is provided with a flash unit using LED light. Therefore, the flash unit does not need to be discharged.


Note 4: この機種ではLEDを使用したフラッシュを使用しております。そのため、放電は不要です。

Note 5: The CM Radiation Sheet when peeling off once, so that it cannot be reused.

Note 5: CM Radiation Sheetは一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-5. LENS SECTION (PJ10/PJ10E/PJ20)

Refer to page 2-6 about CX360/CX360E/CX360V/CX360VE/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V.

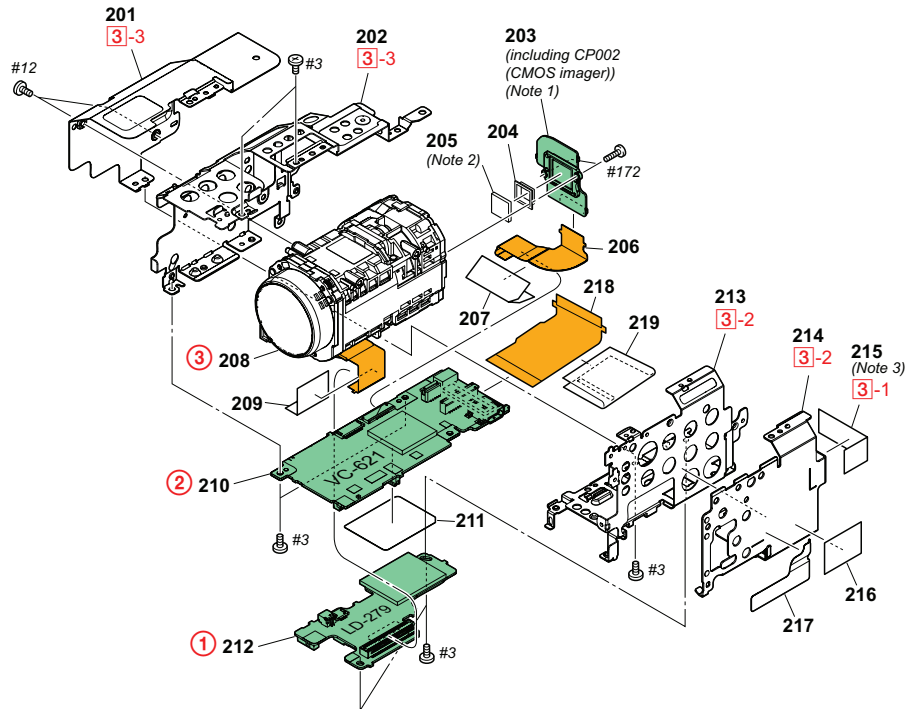


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
201	4-271-726-01	HEAT SINK (L) (380)	211	4-271-970-01	LABEL (381), CAUTION
202	4-271-725-01	FRAME (L) (380), LENS	212	A-1810-657-A	LD-279 BOARD, COMPLETE (PJ10/PJ10E)
203	A-1822-825-A	CM-114 BOARD, COMPLETE (including CP002 (CMOS imager)) (Note 1)	213	A-1810-658-A	LD-279 BOARD, COMPLETE (PJ20)
204	4-268-482-01	RUBBER (1450), SEAL	214	4-271-964-01	FRAME (R), LENS
205	1-856-163-21	OPTICAL FILTER BLOCK (Note 2)	214	4-271-965-01	HEAT SINK (R)
206	1-882-879-11	FP-1324 FLEXIBLE BOARD	215	4-271-967-01	SHEET, CM RADIATION (Note 3)
207	4-272-545-01	SHEET (CM (381)), SHIELD	216	4-271-968-01	SHEET (HEAT SINK R)
208	A-1781-268-A	SERVICE, LSV-1450A (SERVICE)	217	4-271-969-01	SHEET (FRAME R)
209	4-276-408-01	SHEET (FPC (LENS))	218	1-882-736-11	FP-1313 FLEXIBLE BOARD
210	A-1817-607-A	VC-621 BOARD, COMPLETE (SERVICE)	219	4-272-050-01	SHEET (MM), SHIELD

#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#12	3-080-204-21	SCREW, TAPPING, P2
#172	2-178-410-01	TITE (UB TITE) 1.4


DISASSEMBLY

1. Remove to numerical order (1) to (3) in the left figure.




① #3 X 2

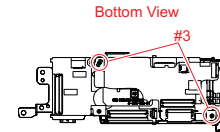




② #3 X 2

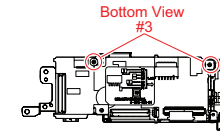

③ CM Radiation Sheet (3-1) → #3 X 3 → Heat Sink (R)/ Lens Frame (R) (3-2) → #12 X 2 → Heat Sink (L) (380)/ Lens Frame (L) (380) (3-3)

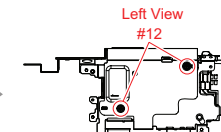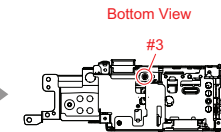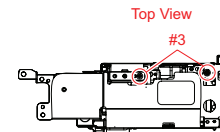

Screw

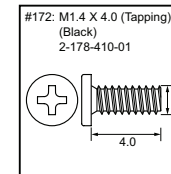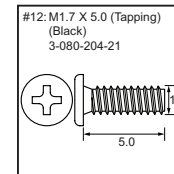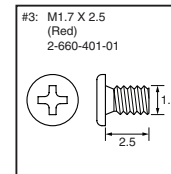

Note

Note 1: Be sure to read "Precautions for Replacement of Imager" on page 6-1 of Level 3 when changing the imager.

Note 1: イメージャの交換時はLevel 3の6-1ページ、「イメージャ交換時の注意」を必ずお読みください。

Note 2: Refer to "Assembly-3: How to distinguish the side of Optical Filter Block facing to Lens Device".


Note 2: "Assembly-3: How to distinguish the side of Optical Filter Block facing to Lens Device"を参照してください。

Note 3: The CM Radiation Sheet when peeling off once, so that it cannot be reused.

Note 3: CM Radiation Sheetは一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-6. FRONT PANEL SECTION
(CX360/CX360E/CX360V/CX360VE/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V)

Refer to page 2-9 about PJ10/PJ10E/PJ20.

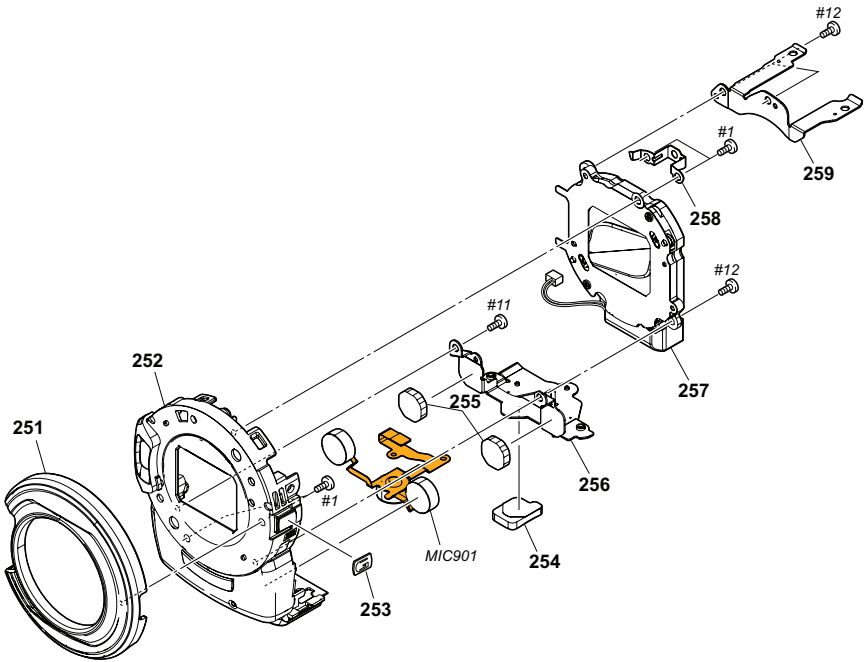


Ref. No.	Part No.	Description
251	4-271-642-01	RING (381), LENS
252	A-1823-899-A	CABINET (F) ASSY (381), SERVICE
253	4-271-948-01	EMBLEM (4.4), G
254	4-275-996-01	CUSHION (BM), MICROPHONE
255	4-271-649-01	CUSHION, MICROPHONE


Ref. No.	Part No.	Description
256	4-271-643-01	RETAINER, MICROPHONE
257	A-1760-156-B	BARRIER UNIT, LENS
258	4-271-647-01	PLATE, F GROUND
259	4-271-650-01	FRAME, F
MIC901	1-542-856-11	MICROPHONE UNIT
#1	2-635-562-11	TITE (UB TITE) 1.4
#11	3-078-890-11	SCREW, TAPPING
#12	3-080-204-21	SCREW, TAPPING, P2

Screw


#1: M1.7 X 2.5
(Black)
2-635-562-11

 

#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

 


#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21

 

2-1-7. FRONT PANEL SECTION
(PJ10/PJ10E/PJ20)


Refer to page 2-8 about CX360/CX360E/CX360V/CX360VE/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V.

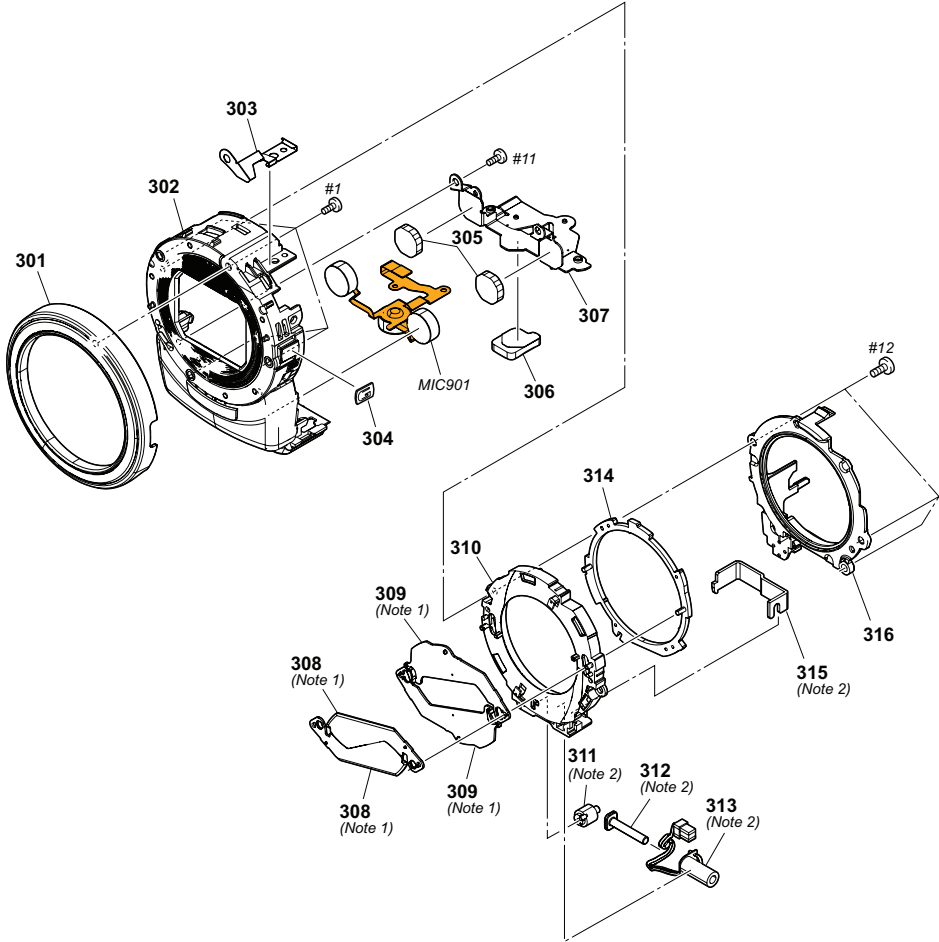

Ref. No.	Part No.	Description
301	4-271-656-01	RING (380), LENS
302	A-1823-900-A	CABINET (F) ASSY (380), SERVICE
303	4-271-657-01	PLATE (UPPER), LENS RING GROUND
304	4-271-948-01	EMBLEM (4.4), G
305	4-271-649-01	CUSHION, MICROPHONE
306	4-275-996-01	CUSHION (BM), MICROPHONE
307	4-271-643-01	RETAINER, MICROPHONE
308	4-269-133-01	COVER (A) (Note 1)
309	4-269-134-01	COVER (B) (Note 1)
310	4-269-131-01	BASE

Ref. No.	Part No.	Description
311	1-471-579-11	MAGNET (Note 2)
312	1-457-901-12	COIL (Note 2)
313	4-269-135-01	YOKE, COIL (Note 2)
314	4-269-132-01	RING
315	4-269-227-01	YOKE (Note 2)
316	4-271-659-01	RETAINER (380), BARRIER
MIC901	1-542-856-11	MICROPHONE UNIT
#1	2-635-562-11	TITE (UB TITE) 1.4
#11	3-078-890-11	SCREW, TAPPING
#12	3-080-204-21	SCREW, TAPPING, P2

Screw

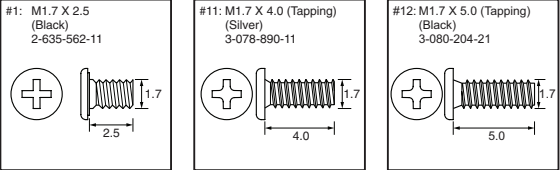

Note

Note 1: Refer to "Assembly-5: The Method of attachment of Cover (A), Cover (B).".


Note 1: "Assembly-5: The Method of attachment of Cover (A), Cover (B)."を参照してください。

Note 2: Refer to "Assembly-6: The Method of attachment of Barrier Motor.".

Note 2: "Assembly-6: The Method of attachment of Barrier Motor."を参照してください。

2-1-8. BATTERY PANEL SECTION


ns : not supplied

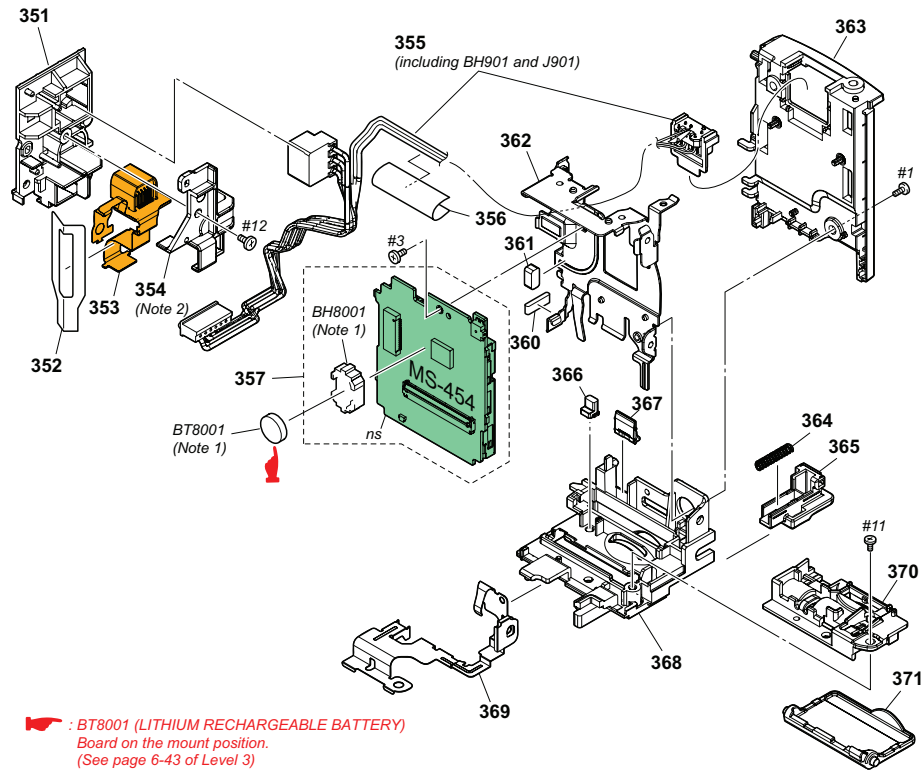

Ref. No.	Part No.	Description
351	4-271-957-01	HOLDER (O (381)), JACK
352	4-277-792-01	SHEET (AVR (381)), SHIELD
353	A-1810-661-A	FP-1323 FLEXIBLE BOARD, COMPLETE
354	4-271-958-01	HOLDER (U (381)), JACK (Note 2)
△ 355	1-842-658-31	JACK, DC (including BH901 and J901)
356	4-274-130-01	SHEET (BT), SHIELD
357	A-1815-404-A	MS-454 BOARD, COMPLETE (SERVICE)
360	4-265-547-01	GASKET UA
361	4-271-962-01	GASKET (MS)
362	4-265-602-01	FRAME, BT
363	4-265-603-01	PANEL, BT
364	4-265-606-01	SPRING, BT LOCK
365	4-265-605-01	LOCK, BT
366	4-265-610-01	TALLY, MS
367	4-265-609-01	CLAW, BT RETAINER

Ref. No.	Part No.	Description
368	4-265-604-01	HOLDER (O (381)), JACK
369	4-265-611-01	SHEET (AVR (381)), SHIELD
370	4-265-608-01	FP-1323 FLEXIBLE BOARD, COMPLETE
371	4-265-607-01	HOLDER (U (381)), JACK (Note 2)
△ BH8001	1-251-928-21	JACK, DC (including BH901 and J901)
△ BT8001	1-756-135-31	BATTERY LITHIUM SECONDARY (Note 1)
#1	2-635-562-11	TITE (UB TITE) 1.4
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#11	3-078-890-11	SCREW, TAPPING
#12	3-080-204-21	SCREW, TAPPING, P2

Screw

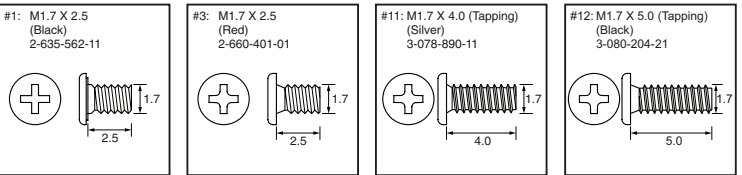

Note

Caution:
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

注意:
電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。


Note 1: Replace the battery holder (BH8001) together when replacing the lithium secondary battery (BT8001) on the MS-454 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium storage battery next.

Note 1: MS-454基板のリチウム蓄電池 (BT8001) を交換する場合はバッテリーホルダ (BH8001) も同時に新品に交換してください。
(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム蓄電池を装着してください。

Note 2: Refer to "Assembly-4: Installation Cautions of the DC Jack Harness and the FP-1323 Flexible Board."

Note 2: "Assembly-4: Installation Cautions of the DC Jack Harness and the FP-1323 Flexible Board."を参照してください。

2-1-9. CABINET (R) SECTION

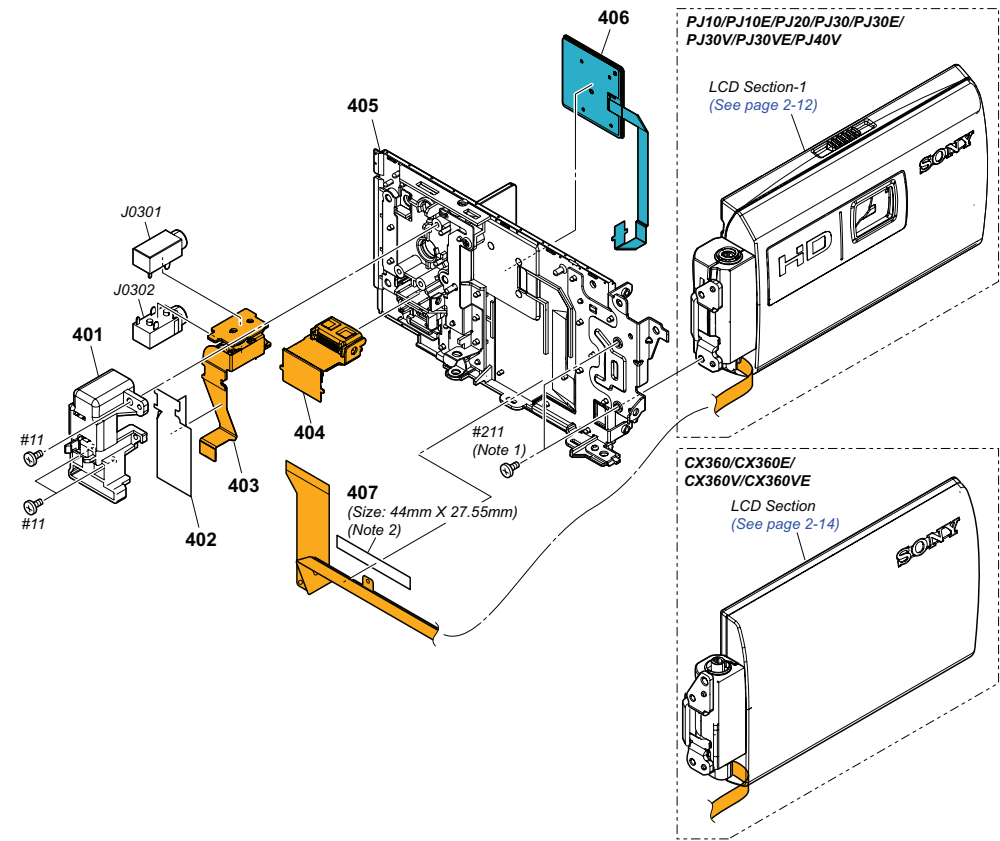


Ref. No.	Part No.	Description
401	4-272-281-01	HOLDER (381), HP_MIC
402	4-276-816-01	SHEET (HP), SHIELD
403	1-882-875-11	FP-1320 FLEXIBLE BOARD
404	A-1809-635-A	FP-1352 FLEXIBLE BOARD, COMPLETE
405	A-1810-454-A	CABINET (R) ASSY (381) (CX360/CX360E/CX360V/CX360VE)
405	A-1810-455-A	CABINET (R) ASSY (389) (PJ10/PJ10E/PJ20/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V)
406	1-489-381-31	SWITCH BLOCK, CONTROL (SK38010) (PJ10/PJ10E/PJ20)
406	1-489-381-41	SWITCH BLOCK, CONTROL (SK38100) (CX360/CX360E/CX360V/CX360VE)

Ref. No.	Part No.	Description
406	1-489-381-51	SWITCH BLOCK, CONTROL (SK38110) (PJ30/PJ30E/PJ30V/PJ30VE/PJ40V)
407	2-649-300-01	SHEET, ADHESIVE (Note 2)
J0301	1-691-737-42	JACK (SMALL TYPE) (HEADPHONE)
J0302	1-569-950-41	JACK (SMALL TYPE) (EXTERNAL MICROPHONE)
#11	3-078-890-11	SCREW, TAPPING
#211	2-187-345-01	SCREW (M1.7), P2 (Note 1)



HDR-CX360/CX360E/CX360V/CX360VE/PJ10/PJ10E/PJ20/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V_L2

Screw

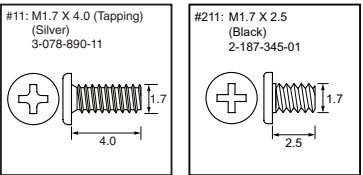

Note


- Note 1:** This screw cannot be re-used. discard the screw removed once in servicing. In-stead, use a new screw.
- Note 1:** このねじは再利用することができません。サービス対応時に一度でも外した場合は新品のねじと交換してください。

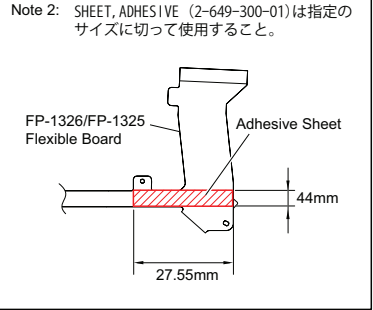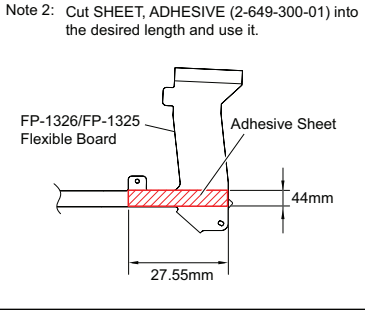

2-1-10. LCD SECTION-1

(PJ10/PJ10E/PJ20/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V)

Refer to page 2-14 about CX360/CX360E/CX360V/CX360VE

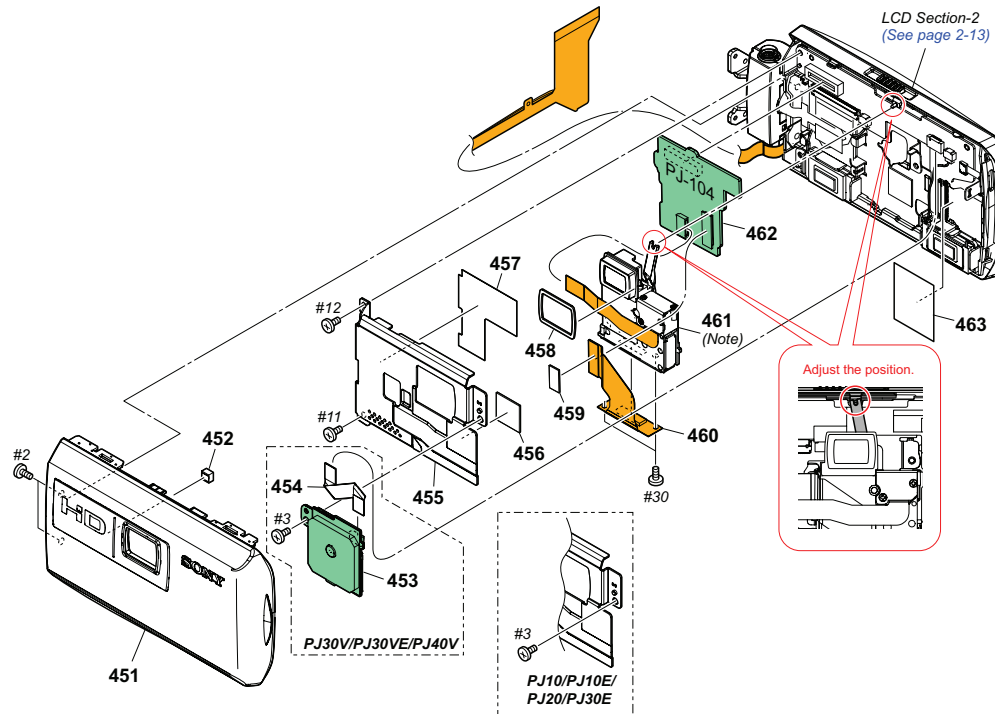


Ref. No.	Part No.	Description
451	A-1809-281-A	CABINET (C (PJ30)) ASSY (BK), P (PJ30/PJ30E/PJ30V/PJ30VE)
451	A-1809-282-A	CABINET (C (PJ20)) ASSY (BK), P (PJ20)
451	A-1809-283-A	CABINET (C (PJ10)) ASSY (BK), P (PJ10/PJ10E)
451	A-1809-284-A	CABINET (C (PJ40)) ASSY (SL), P (PJ40V(SILVER))
451	A-1809-285-A	CABINET (C (PJ40)) ASSY (BR), P (PJ40V(BROWN))
452	4-272-357-01	GASKET (P (389))
453	A-1808-076-A	GP392ASSY (J30V/PJ30VE/PJ40V)
454	1-838-558-11	CABLE, FLEXIBLE FLAT (FFC-254) (PJ30V/PJ30VE/PJ40V)
455	4-272-350-01	HEAT SINK, P
456	4-272-354-01	SHEET, P RADIATION

Ref. No.	Part No.	Description
457	4-272-356-01	INSULATING SHEET (P (389))
458	4-272-358-01	CUSHION, P
459	4-271-668-01	CUSHION (M)
460	A-1810-716-A	FP-1319 FLEXIBLE BOARD, COMPLETE
461	A-1802-781-A	FLT3 0.2 DLP PICO OPTICAL ENG (Note)
462	A-1810-708-A	PJ-104 BOARD, COMPLETE
463	4-281-443-01	TAPE (GP)
#2	2-635-562-31	TITE (UB TITE) 1.4
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#11	3-078-890-11	SCREW, TAPPING
#12	3-080-204-21	SCREW, TAPPING, P2
#30	3-086-156-11	SCREW B1.2

HDR-CX360/CX360E/CX360V/CX360VE/PJ10/PJ10E/PJ20/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V_L2


Screw

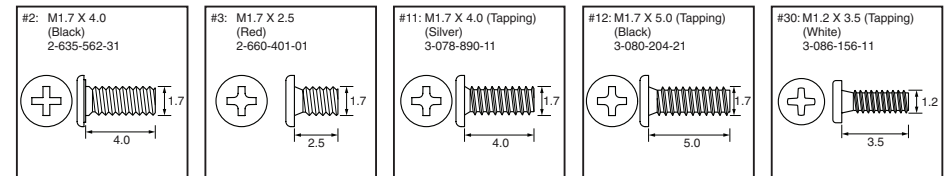

Note

Note :


Do not hold the following part.

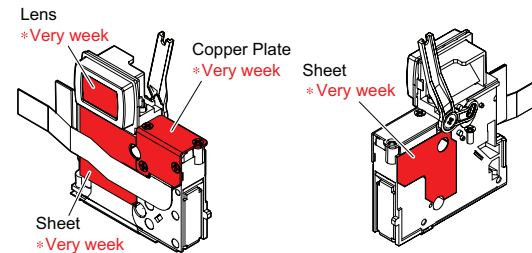

The projector unit (copper plate in particular) becomes hot after it is used. When replacing a part of the projector unit, wait until it is cooled down.

Note :

持ってはいけない部分

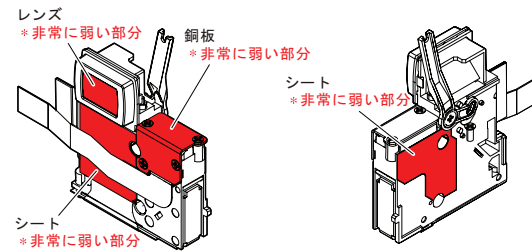


プロジェクターを使用した後は、プロジェクターユニットが熱くなっています。特に銅板の部分は高温になります。部品を交換する時は、温度が下がってから作業を行ってください。

2-1-11. LCD SECTION-2

(PJ10/PJ10E/PJ20/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V)

Refer to page 2-14 about CX360/CX360E/CX360V/CX360VE

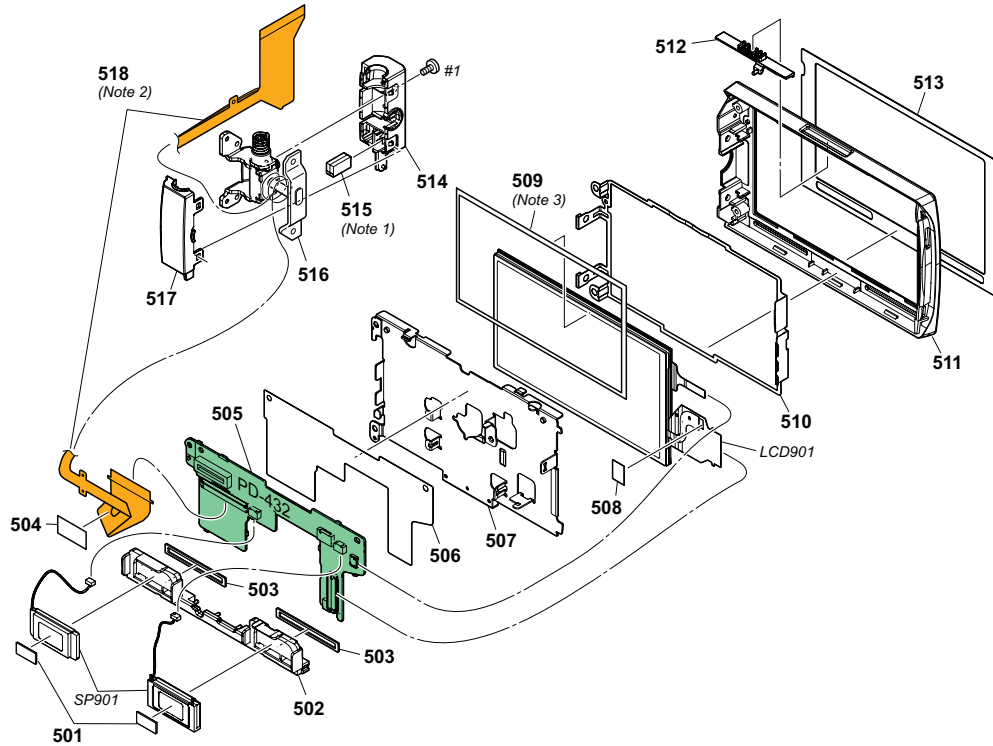


Ref. No.	Part No.	Description
501	4-271-688-01	CUSHION (M)
502	4-271-686-01	HOLDER, SP
503	4-271-689-01	CUSHION, SP HOLDER
504	4-274-987-01	TAPE (AS 1/2) (C)
505	A-1810-706-A	PD-432 BOARD, COMPLETE (SERVICE)
506	4-271-687-01	INSULATING SHEET (PD (381))
507	4-272-360-01	RETAINER (389), LCD
508	4-265-596-01	SHEET (BL)
509	4-265-598-01	CUSHION, LCD (Note 3)
510	4-272-359-01	PLATE (P (389)), GROUND
511	4-270-132-01	CABINET (M (389)), P (PJ30/PJ30E/PJ30V/PJ30VE/PJ40V)
511	4-270-132-11	CABINET (M (389)), P (PJ10/PJ10E/PJ20)
512	4-272-353-01	KNOB, FOCUS
513	4-272-355-01	SHEET (389), PANEL
514	4-272-352-01	COVER (U (389)), HINGE

Ref. No.	Part No.	Description
515	1-471-583-21	MAGNET (Note 1)
516	X-2549-616-1	HINGE (P) ASSY, T STYLE
517	4-272-351-01	COVER (O (389)), HINGE (PJ10/PJ10E/PJ20/PJ30/PJ30E/PJ30V/PJ30VE)
517	4-272-351-11	COVER (O (389)), HINGE (PJ40V (BROWN))
517	4-272-351-21	COVER (O (389)), HINGE (PJ40V (SILVER))
518	1-882-881-11	FP-1326 FLEXIBLE BOARD (Note 2)
LCD901	A-1814-240-A	LCD BLOCK ASSY (SZ814B)
SP901	1-858-528-31	SPEAKER (2-1CM)
#1	2-635-562-11	TITE (UB TITE) 1.4


HDR-CX360/CX360E/CX360V/CX360VE/PJ10/PJ10E/PJ20/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V_L2

Screw

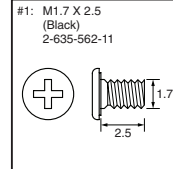


Note

Note 1: Put the marking side together on the position of figure when you install the magnet.

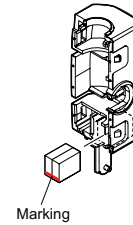

Note 1: マグネットを取付ける際は、マーキング面を図の位置にあわせてください。

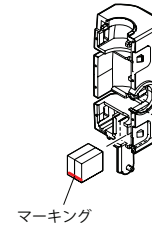

Note 2: Refer to "Assembly-7: The Method of attachment of FP-1325/FP-1326 Flexible Board."

Note 2: "Assembly-7: The Method of attachment of FP-1325/FP-1326 Flexible Board."を参照してください。


Note 3: Refer to "Assembly-8: Installation Cautions of LCD Cushion."

Note 3: "Assembly-8: Installation Cautions of LCD Cushion."を参照してください。

2-1-12. LCD SECTION

(CX360/CX360E/CX360V/CX360VE)


Refer to page 2-12 to 2-13 about PJ10/PJ10E/PJ20/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V

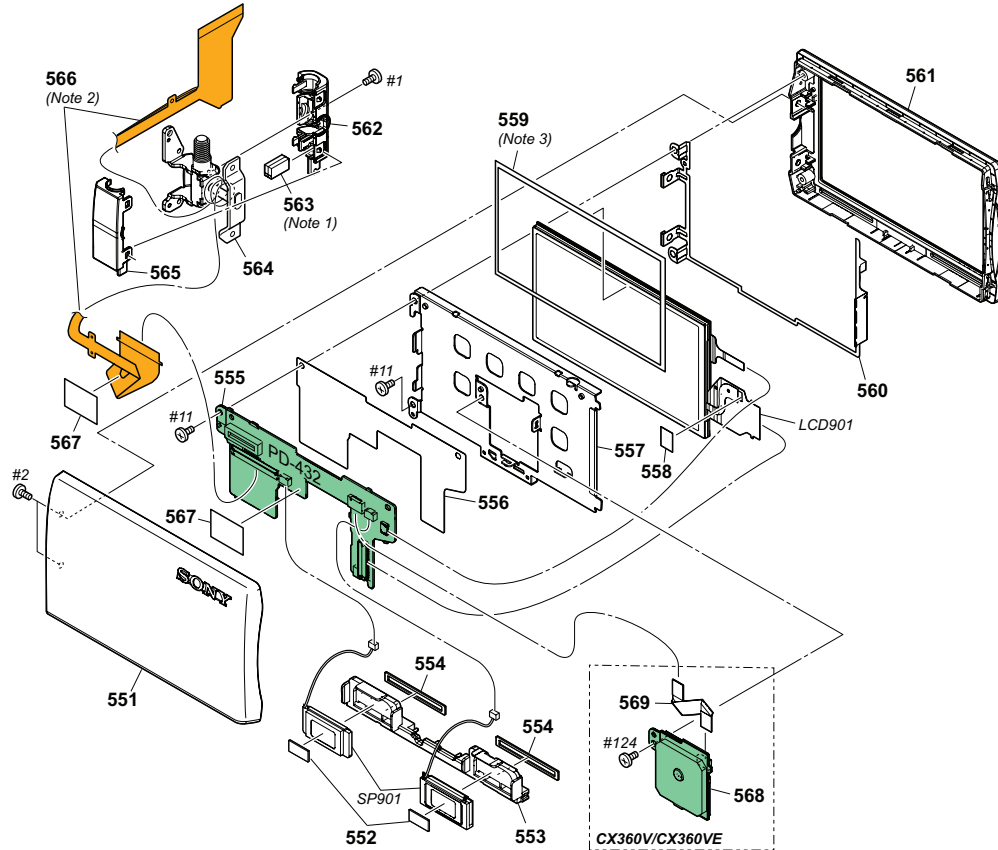

Ref. No.	Part No.	Description
551	A-1809-273-A	CABINET C (CX360) ASSY BR, P
552	4-271-688-01	CUSHION (M)
553	4-271-686-01	HOLDER, SP
554	4-271-689-01	CUSHION, SP HOLDER
555	A-1810-704-A	PD-432 BOARD, COMPLETE (SERVICE)
556	4-271-687-01	INSULATING SHEET (PD (381))
557	4-271-685-01	RETAINER (381), LCD
558	4-265-596-01	SHEET (BL)
559	4-265-598-01	CUSHION, LCD (Note 3)
560	4-271-684-01	PLATE (P (381)), GROUND
561	4-271-683-01	CABINET (M (381)), P
562	4-271-691-01	COVER (U (381)), HINGE
563	1-471-583-21	MAGNET (Note 1)
564	X-2549-615-1	HINGE Y(A) ASSY, T STYLE
565	X-2560-826-1	HINGE M(A) ASSY, T STYLE


Ref. No.	Part No.	Description
566	4-271-690-01	COVER (O (381)), HINGE
567	1-882-880-11	FP-1325 FLEXIBLE BOARD (Note 2)
568	4-274-987-01	TAPE (AS 1/2) (C)
569	A-1808-076-A	GP392A ASSY (CX360V/CX360VE)
569	1-838-558-11	CABLE, FLEXIBLE FLAT (FFC-254) (CX360V/CX360VE)
LCD901	A-1814-240-A	LCD BLOCK ASSY (SZ814B)
SP901	1-858-528-31	SPEAKER (2-1CM)
#1	2-635-562-11	TITE (UB TITE) 1.4
#2	2-635-562-31	TITE (UB TITE) 1.4
#11	3-078-890-11	SCREW, TAPPING
#124	2-599-475-01	SCREW (M1.7) (CX360V/CX360VE)

Screw

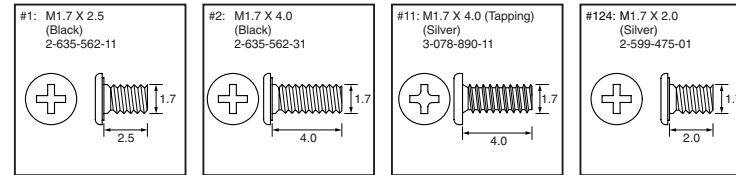


Note

Note 1: Put the marking side together on the position of figure when you install the magnet.

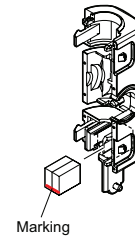

Note 1: マグネットを取付ける際は、マーキング面を図の位置にあわせてください。

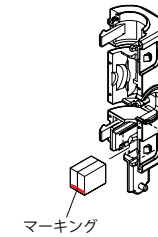

Note 2: Refer to "Assembly-7: The Method of attachment of FP-1325/FP-1326 Flexible Board."

Note 2: "Assembly-7: The Method of attachment of FP-1325/FP-1326 Flexible Board."を参照してください。


Note 3: Refer to "Assembly-8: Installation Cautions of LCD Cushion."

Note 3: "Assembly-8: Installation Cautions of LCD Cushion."を参照してください。

• EXCEPT J MODEL

Checking supplied accessories.

 Note: This item is supplied with the unit as an accessory, but is not prepared as a service part.



AC Adaptor
(AC-L200C/L200D)
(EXCEPT BR)
* Compatible in
L200C and L200D.
△ 1-487-150-71



Power cord (Mains lead)
△ 1-832-121-31 (CH)
△ 1-832-169-41 (UK, HK)
△ 1-837-428-51 (KR)
△ 1-834-482-21 (AEP, NE, E-PAL)
△ 1-834-484-31 (US, CND)
△ 1-834-852-11 (E-NTSC, BR)
△ 1-835-983-11 (AUS)
△ 1-836-251-11 (JE)



Operating Guide
(Only for destination Japanese model)
日本語、韓国語のみ部品供給可能です。

- 4-271-168-01 (JAPANESE)
- * 4-271-168-11 (ENGLISH, SPANISH)
- 4-271-168-21 (ENGLISH, FRENCH)
- 4-271-168-31 (PORTUGUESE)
- * 4-271-168-41 (TRADITIONAL CHINESE) (E-NTSC)
- 4-271-168-51 (KOREAN)
- 4-271-169-11 (ENGLISH)
- 4-271-169-21 (FRENCH, GERMAN, ITALIAN, DUTCH)
- * 4-271-169-31 (SPANISH, PORTUGUESE, TURKISH, GREEK)
- * 4-271-169-41 (CZECH, HUNGARIAN, SLOVAK, POLISH)
- * 4-271-169-51 (SWEDISH, DANISH, FINNISH, ROMANIAN)
- * 4-271-169-61 (RUSSIAN, UKRAINIAN) (NE)
- * 4-271-169-71 (TRADITIONAL CHINESE) (HK)
- 4-271-169-81 (SIMPLIFIED CHINESE)
- * 4-271-169-91 (ARABIC, PERSIAN)
- 4-271-171-11 (SIMPLIFIED CHINESE) (CH)
- * 4-271-172-11 (RUSSIAN, UKRAINIAN) (JE)



Conversion (2P) Adaptor
△ 1-569-007-12 (E-NTSC, JE)



 
Wireless Remote Commander
(RMT-835)
1-479-275-51



A/V connecting cable
1-838-205-11



USB connection support cable
1-838-714-11



Component A/V cable
1-834-646-11



Rechargeable battery pack
(NP-FV50)
(Note)



Handycam Handbook (PDF)

The CD-ROM supplied contains all of language version of the Instruction Manual in pdf (Handycam Handbook.pdf) for printing.

- The printed matter is not supplied. If required, please order it with the part number below.

- (Only for destination Japanese model)
日本国内については印刷での部品供給は行っておりません。



CD-ROM "Handycam
Application Software"
— "PMB" (software) including
"PMB Help"
— "Handycam Handbook"
(PDF)

4-271-162-01


- * 4-271-164-01 (JAPANESE)
- * 4-271-164-11 (ENGLISH)
- * 4-271-164-21 (FRENCH)
- * 4-271-164-31 (SPANISH)
- * 4-271-164-41 (PORTUGUESE)
- * 4-271-164-51 (TRADITIONAL CHINESE)
- * 4-271-164-61 (KOREA)
- * 4-271-165-11 (ENGLISH)
- * 4-271-165-21 (FRENCH)
- * 4-271-165-31 (GERMAN)
- * 4-271-165-41 (ITALIAN)
- * 4-271-165-51 (DUTCH)
- * 4-271-165-61 (SPANISH)
- * 4-271-165-71 (PORTUGUESE)
- * 4-271-165-81 (TURKISH)
- * 4-271-165-91 (GREEK)
- * 4-271-166-11 (CZECH)
- * 4-271-166-21 (HUNGARIAN)

- * 4-271-166-31 (SLOVAK)
- * 4-271-166-41 (POLISH)
- * 4-271-166-51 (SWEDISH)
- * 4-271-166-61 (DANISH)
- * 4-271-166-71 (FINNISH)
- * 4-271-166-81 (ROMANIAN)
- * 4-271-166-91 (RUSSIAN)
- * 4-271-167-11 (UKRAINIAN)
- * 4-271-167-21 (TRADITIONAL CHINESE)
- * 4-271-167-31 (SIMPLIFIED CHINESE)
- * 4-271-167-41 (ARABIC)
- * 4-271-167-51 (PERSIAN)
- * 4-271-167-61 (MALAY)
- * 4-271-167-71 (INDONESIAN)
- * 4-271-167-81 (THAI)

• J MODEL

付属品

 Note1: 当商品はアクセサリとして同梱されておりますがサービス用補修部品としては準備しておりません。



ACアダプター
(AC-L200C/L200D)
* L200CとL200Dには
互換性があります。
△ 1-487-150-71



 
電源コード
△ 1-836-251-11



取扱説明書
4-271-168-01 (日本語)




AV接続ケーブル
1-838-205-11



D端子AVケーブル
1-834-646-21



 ワイヤレスリモコン
(RMT-835)
1-479-275-51



リチャージャブルバッテリーパック
(NP-FV50)
(Note1)



USB接続サポートケーブル
1-838-714-11




CD-ROM 「Handycam
Application Software」
— 「PMB」 (ソフトウェア、 「PMB ヘルプ」を含む)
— 「ハンディカムハンドブック」 (PDF) (Note 2)
4-271-162-01

Note 2: 日本国内については印刷での部品供給は行っておりません。


3. ASSEMBLY

Assembly-1: Installation Cautions of the USB Harness and the DC Jack Harness.


Don't crossover the USB harness and the VC-621 board.

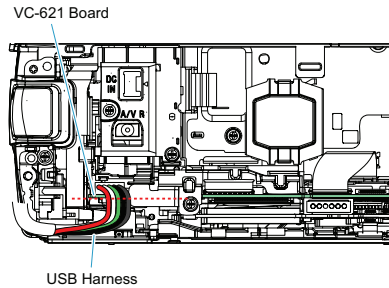

- 1 Pass the DC Jack harness (White, Purple, Brown) in the five libs.

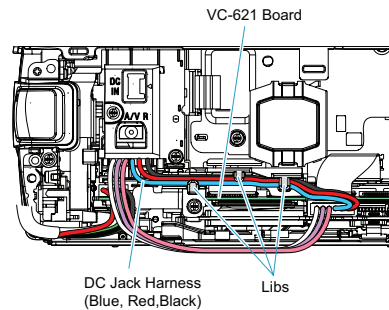


- 2 Pass the DC Jack harness (Black, Blue, Red) in the five libs.

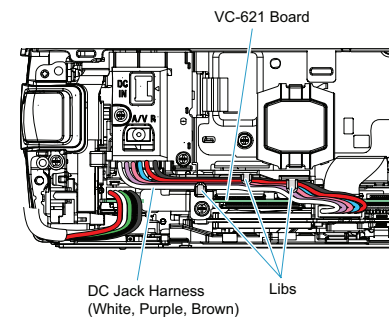

Assembly-2: Installation Cautions of the Front Panel Section.



CX360/CX360E/CX360V/CX360VE/PJ30/PJ30E/PJ30V/PJ30VE/PJ40V

Pass the mic harness the lib.
(Pull the mic harness in the direction of the arrow.)

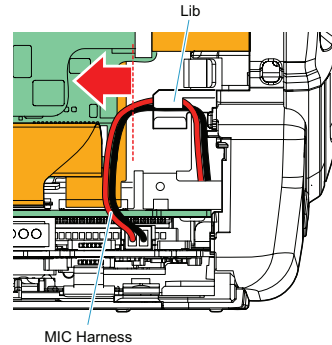


PJ10/PJ10E/PJ20

Pass the mic harness the lib.
(Pull the mic harness in the direction of the arrow.)

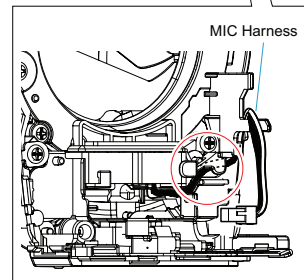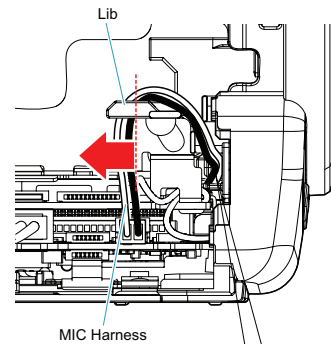


Assembly-3: How to distinguish the side of Optical Filter Block facing to Lens Device

This IR coated optical filter block has side A and side B.
When the optical filter block is exposed to fluorescent light at a place where environmental light is blocked, side A glow red and side B glow white at certain angles.
Install the optical filter block with side B facing toward the lens.

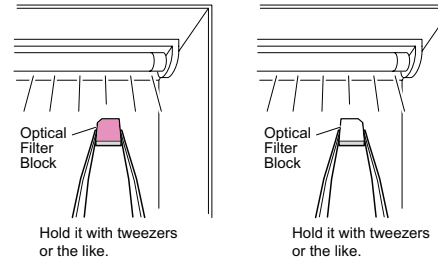


[IR Cut Coated Side A]

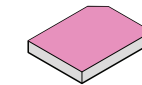

Glow red at certain angles.


[IR Cut Coated Side B]

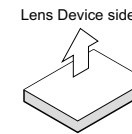

Glow white at certain angles.


Assembly-4: Installation Cautions of the DC Jack Harness and the FP-1323 Flexible Board.

Route the DC jack harness and the FP-1323 flexible board.

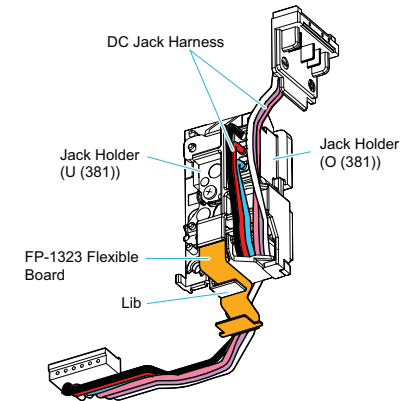


Assembly-5: The Method of attachment of Cover (A), Cover (B).

- ① Install the two covers (B) and slide its.

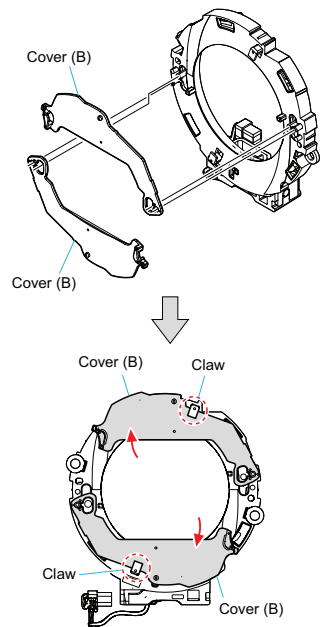


- ② Install the two covers (A) and slide its.

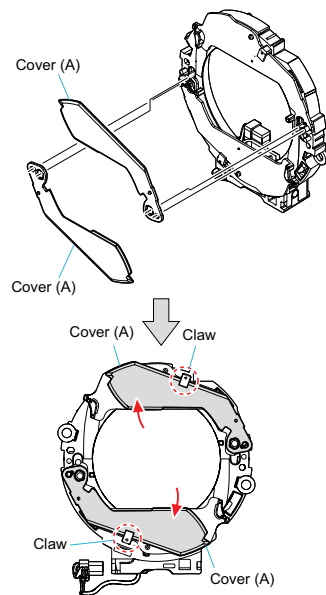

Assembly-6: The Method of attachment of Barrier Motor.

- ① Install the magnet, coil yoke, coil, and the yoke.


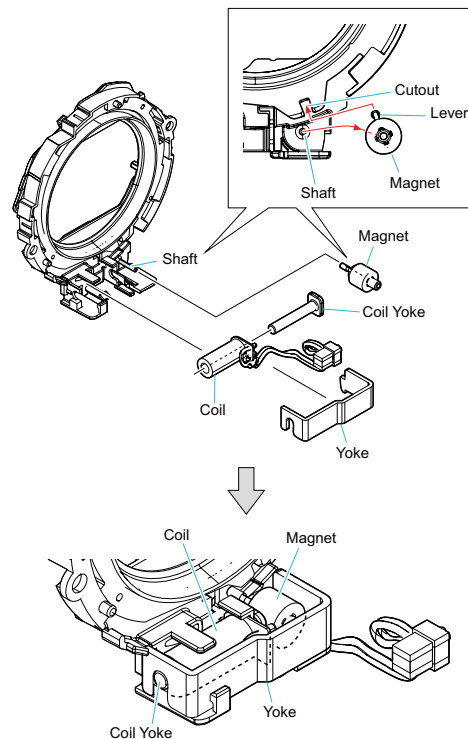


Assembly-7: The Method of attachment of FP-1325/FP-1326 Flexible Board.

- ① Fold dotted line parts of the FP-1325/FP1326 flexible board as shown in figure.

下図はFP-1325 Flexible BoardとFP-1326 Flexible Boardの形状が異なります。


As for the figure below, the FP-1325 flexible board and the shape of the FP-1326 flexible board are different.

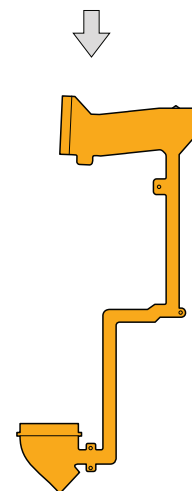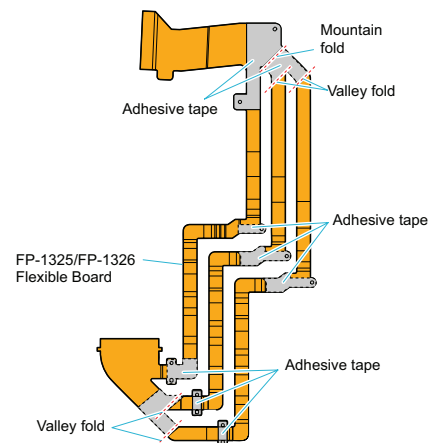


- ② Insert the FP-1325/FP-1326 Flexible Board to the T Style Hinge (P) Assy/T Style Hinge M(A) Assy and the Hinge Cover (U(381/389)) as shown in figure.

下図はT Style Hinge (P) AssyとT Style Hinge M(A) Assy、およびHinge Cover (U(389))とHinge Cover (U(381))および、Hinge Cover (O(389))とHinge Cover (O(381))の形状が若干異なります。


As for the figure below, the T Style Hinge (P) Assy/Hinge Cover (U (381))/Hinge Cover (U (389)) and the shape of the T Style Hinge M(A) Assy/Hinge Cover (U (389))/Hinge Cover (U (389)) are slightly different.

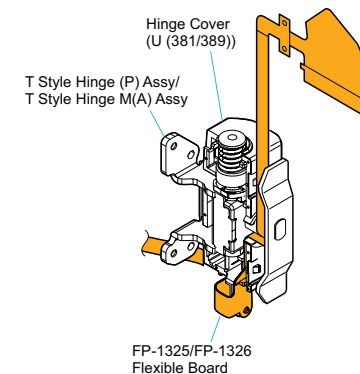


- ③ Roll the FP-1325/FP-1326 flexible board 2 times in the hinge Assy as shown in figure.

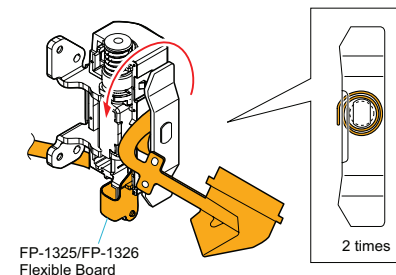


- ④ Insert the FP-1325/FP-1326 Flexible Board to the Hinge Cover (O(381/389)) as shown in figure.

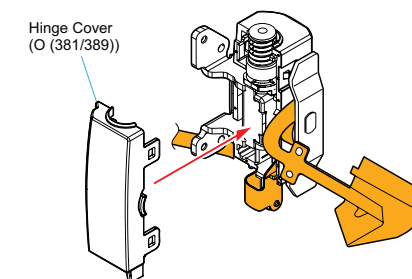

- ⑤ Attach the FP-1308 flexible board to the Cabinet (R) assy as shown in figure.

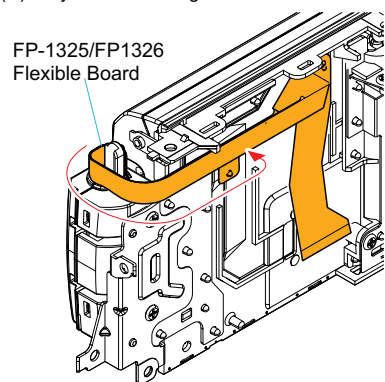

- ⑥ Attach the FP-1325/FP1326 flexible board and the Control Switch Block (SK38010/SK38100/SK38110) as shown in figure.

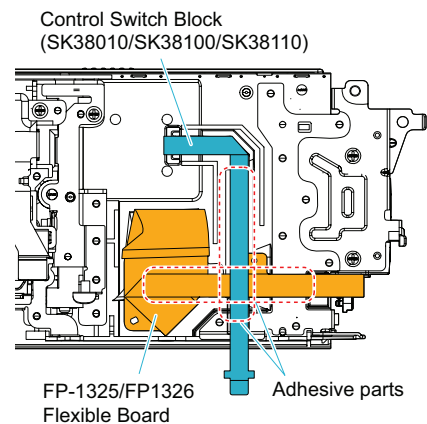

Assembly-8: Installation Cautions of LCD Cushion.

Apply LCD cushion.
And have the Tab of the Release Paper and peel it off.

