


2-1. EXPLODED VIEWS

2-1-1. OVERALL SECTION-1
(CX690E/CX700/CX700E/CX700V/CX700VE)

Refer to page 2-4 about CX560/CX560E/CX560V/CX560VE.

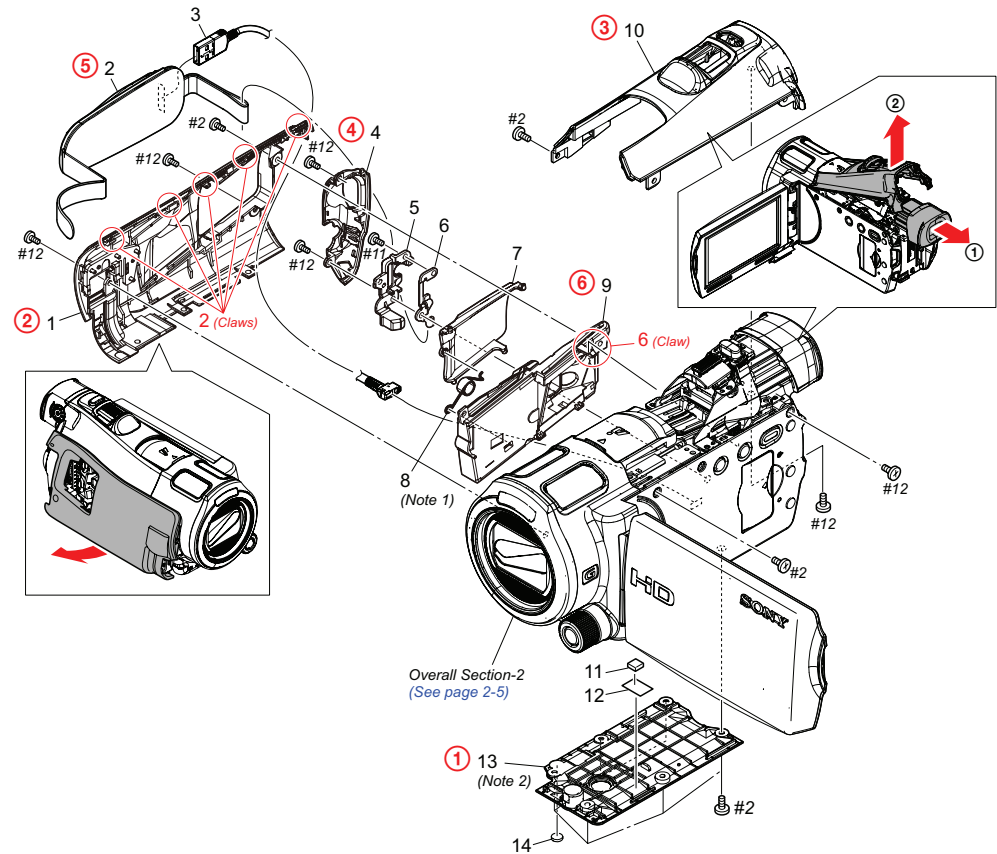

Ref. No.	Part No.	Description
1	X-2560-824-1	CABINET (G) ASSY
2	4-265-549-01	BELT (K), 11 TYPE GRIP
3	1-838-712-11	CABLE, BUILT-IN USB
4	4-209-775-01	CABINET (L)
5	4-209-773-01	GUIDE, BELT
6	4-209-774-01	PLATE, BELT FIXED
7	4-209-837-01	LID, JACK
8	4-209-839-01	SPRING, JACK (Note 1)
9	4-209-838-01	BASE, JACK LID
10	X-2560-822-1	CABINET ASSY (394), TOP (CX700V/CX700VE)


Ref. No.	Part No.	Description
10	X-2581-015-1	CABINET ASSY (394N), TOP (CX690E/CX700/CX700E)
11	4-281-774-01	GASKET (4X4X2)
12	4-281-775-01	SHEET (9X6.5), COPPER
13	(Note 2)	CABINET, BOTTOM
14	2-589-376-01	FOOT (395), RUBBER
#2	2-635-562-31	SCREW (M1.7)
#11	3-078-890-11	SCREW, TAPPING, P2
#12	3-080-204-21	SCREW, TAPPING, P2

HDR-CX560/CX560E/CX560V/CX560VE/CX690E/CX700/CX700E/CX700V/CX700VE_L2


DISASSEMBLY

1. Remove to numerical order (① to ⑥) in the left figure.


① #2 X 6

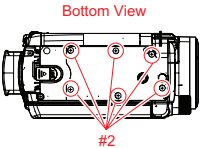


② #12 X 2 → #2 X 1

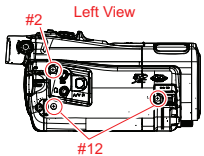


③ #2 X 1 → #12 X 2 → #2 X 1

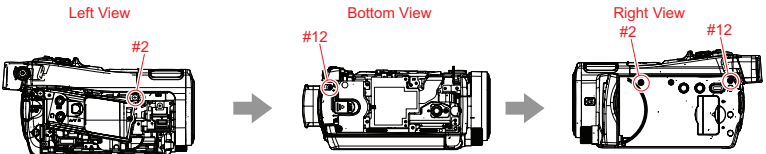


④ #12 X 2

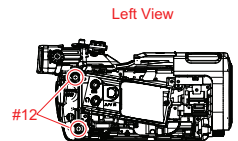

⑤ #11 X 1

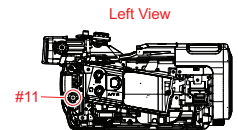


Screw

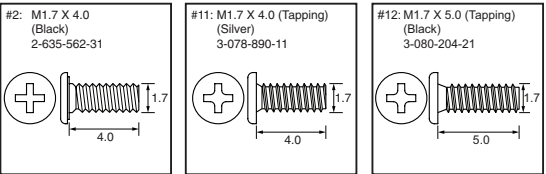


Note

Note 1: Install the jack spring as shown in figure.

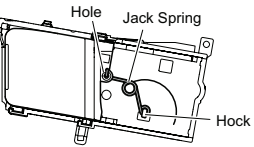

Note 2: Refer to page 1-4 "Precaution on replacing the BOTTOM CABINET" when changing the BOTTOM CABINET.

Note 1: ジャックスプリングは、図のように取り付けてください。

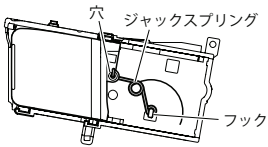


Note 2: ボトムキャビネット組立の交換時は、1-9ページの"ボトムキャビネット交換時の注意"を参照してください。

2-1-2. OVERALL SECTION-1

(CX560/CX560E/CX560V/CX560VE)

Refer to page 2-3 about CX690E/CX700/CX700E/CX700V/CX700VE.

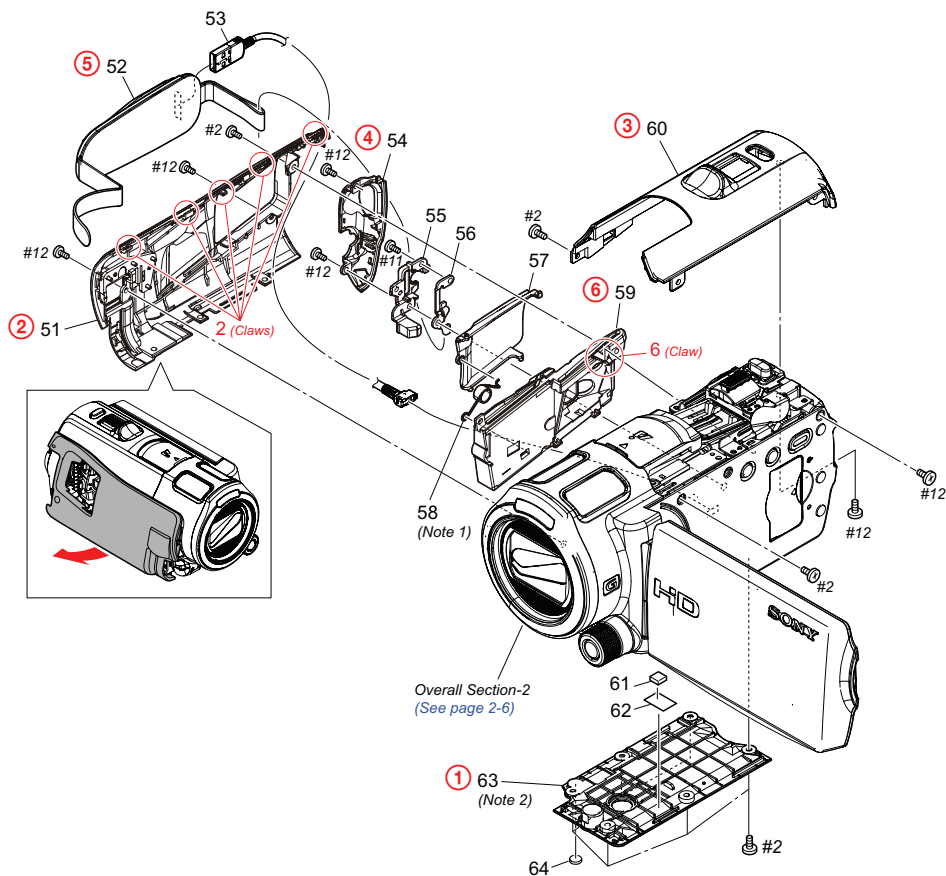

Ref. No.	Part No.	Description
51	X-2560-824-1	CABINET (G) ASSY
52	4-265-549-01	BELT (K), 11 TYPE GRIP
53	1-838-712-11	CABLE, BUILT-IN USB
54	4-209-775-01	CABINET (L)
55	4-209-773-01	GUIDE, BELT
56	4-209-774-01	PLATE, BELT FIXED
57	4-209-837-01	LID, JACK
58	4-209-839-01	SPRING, JACK (Note 1)
59	4-209-838-01	BASE, JACK LID
60	X-2560-820-1	CABINET ASSY (B), TOP (CX560V (BLACK)/CX560VE)


Ref. No.	Part No.	Description
60	X-2580-248-1	CABINET ASSY (S), TOP (CX560V (SILVER))
60	X-2580-249-1	CABINET ASSY (T), TOP (CX560V (BROWN))
60	X-2581-014-1	CABINET ASSY (BN), TOP (CX560/CX560E)
61	4-281-774-01	GASKET (4X4XT2)
62	4-281-775-01	SHEET (9X6.5), COPPER
63	(Note 2)	CABINET, BOTTOM
64	2-589-376-01	FOOT (395), RUBBER
#2	2-635-562-31	SCREW (M1.7)
#11	3-078-890-11	SCREW, TAPPING
#12	3-080-204-21	SCREW, TAPPING, P2

DISASSEMBLY

1. Remove to numerical order (① to ⑥) in the left figure.


① #2 X 6

Bottom View

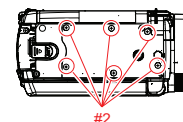


② #12 X 2 → #2 X 1

Left View

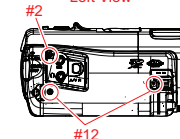


③ #2 X 1 → #12 X 2 → #2 X 1

 
Left View



Bottom View

 


Right View

 


④ #12 X 2

 Left View




⑤ #11 X 1

 Left View




Screw

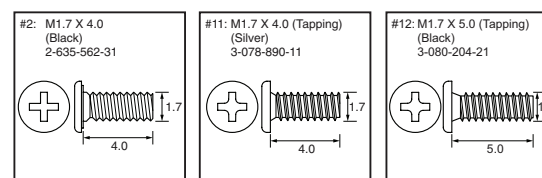


Note

Note 1: Install the jack spring as shown in figure.

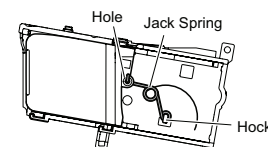

Note 2: Refer to page 1-4 "Precaution on replacing the BOTTOM CABINET" when changing the BOTTOM CABINET.


Note 1: ジャックスpringは、図のように取り付けてください。

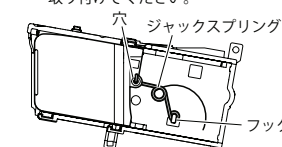

Note 2: ボトムキャビネット組立の交換時は、1-9ページの"ボトムキャビネット交換時の注意"を参照してください。

2-1-3. OVERALL SECTION-2
(CX690E/CX700V/CX700E/CX700V/CX700VE)

Refer to page 2-6 about CX560/CX560E/CX560V/CX560VE.

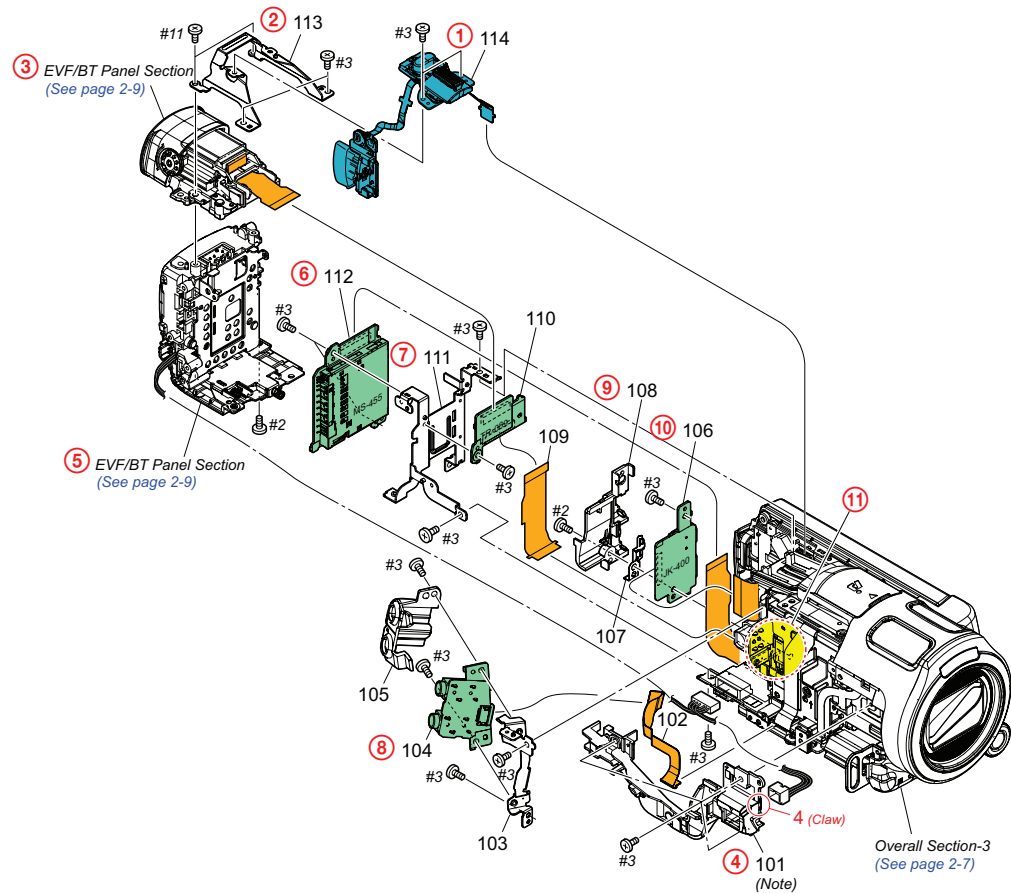


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
101	4-209-767-01	HOLDER, DCIN (Note)	111	4-209-756-01	FRAME, MS
102	1-882-965-11	FP-1346 FLEXIBLE BOARD	112	A-1810-367-A	MS-455 BOARD, COMPLETE
103	4-209-759-01	FRAME, RH	113	4-209-772-01	FRAME (394), PS BLOCK
104	A-1807-072-A	RH-013 BOARD, COMPLETE	114	1-489-387-11	SWITCH BLOCK, CONTROL (PS39200)
105	4-209-768-01	HOLDER, RH			
106	A-1807-068-A	JK-400 BOARD, COMPLETE	#2	2-635-562-31	SCREW (M1.7)
107	4-209-778-01	PLATE (H), GROUND	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
108	4-209-766-01	RETAINER, HDMI	#11	3-078-890-11	SCREW, TAPPING
109	1-882-967-11	FP-1348 FLEXIBLE BOARD			
110	A-1807-067-A	TR-089 BOARD, COMPLETE			

HDR-CX560/CX560E/CX560V/CX560VE/CX690E/CX700V/CX700E/CX700V/CX700VE_L2


DISASSEMBLY

1. Remove to numerical order (1) to (11) in the left figure.

 
① #3 X 2




② #11 X 2 → #3 X 2

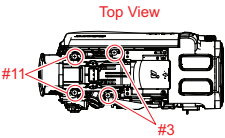


④ #3 X 3

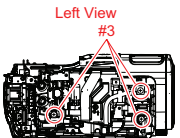




⑤ #2 X 1

 


⑥ #3 X 2

 



⑦ #3 X 3

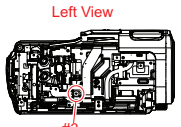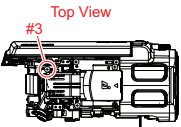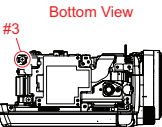


⑧ #3 X 2

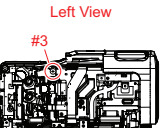

⑨ #2 X 1

  

⑩ #3 X 1

 


⑪

DISCHARGING OF THE CHARGING CAPACITOR

ストロボ充電コンデンサの放電

Screw

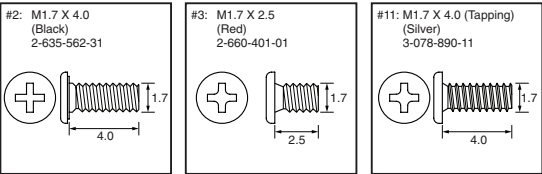


Note

Note: Refer to "Assembly-1: Installation Cautions of the DC Jack Harness".

Note: "Assembly-1: Installation Cautions of the DC Jack Harness."を参照してください。

2-1-4. OVERALL SECTION-2
(CX560/CX560E/CX560V/CX560VE)
Refer to page 2-5 about CX690E/CX700/CX700E/CX700V/CX700VE.

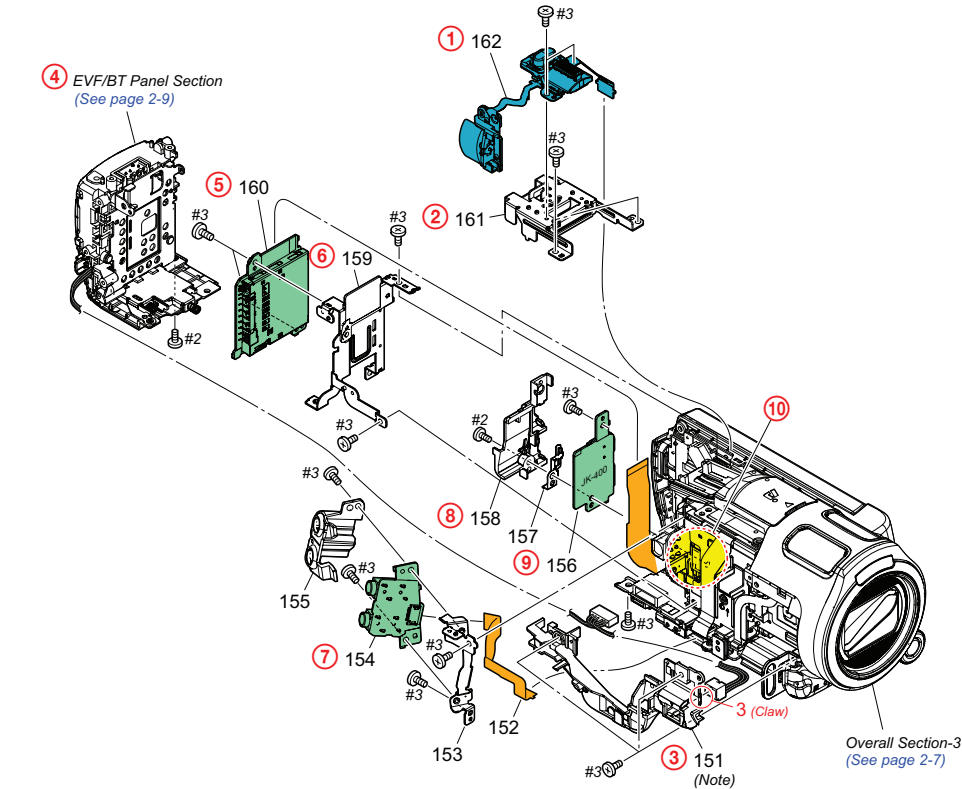


Ref. No.	Part No.	Description
151	4-209-767-01	HOLDER, DCIN (Note)
152	1-882-965-11	FP-1346 FLEXIBLE BOARD
153	4-209-759-01	FRAME, RH
154	A-1807-072-A	RH-013 BOARD, COMPLETE
155	4-209-768-01	HOLDER, RH
156	A-1807-068-A	JK-400 BOARD, COMPLETE
157	4-209-778-01	PLATE (H), GROUND
158	4-209-766-01	RETAINER, HDMI
159	4-209-756-01	FRAME, MS
160	A-1810-367-A	MS-455 BOARD, COMPLETE

Ref. No.	Part No.	Description
161	4-209-771-01	FRAME (391), PS BLOCK
162	1-489-387-11	SWITCH BLOCK, CONTROL (PS39200)
#2	2-635-562-31	SCREW (M1.7)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2

DISASSEMBLY


1. Remove to numerical order (1) to (10) in the left figure.

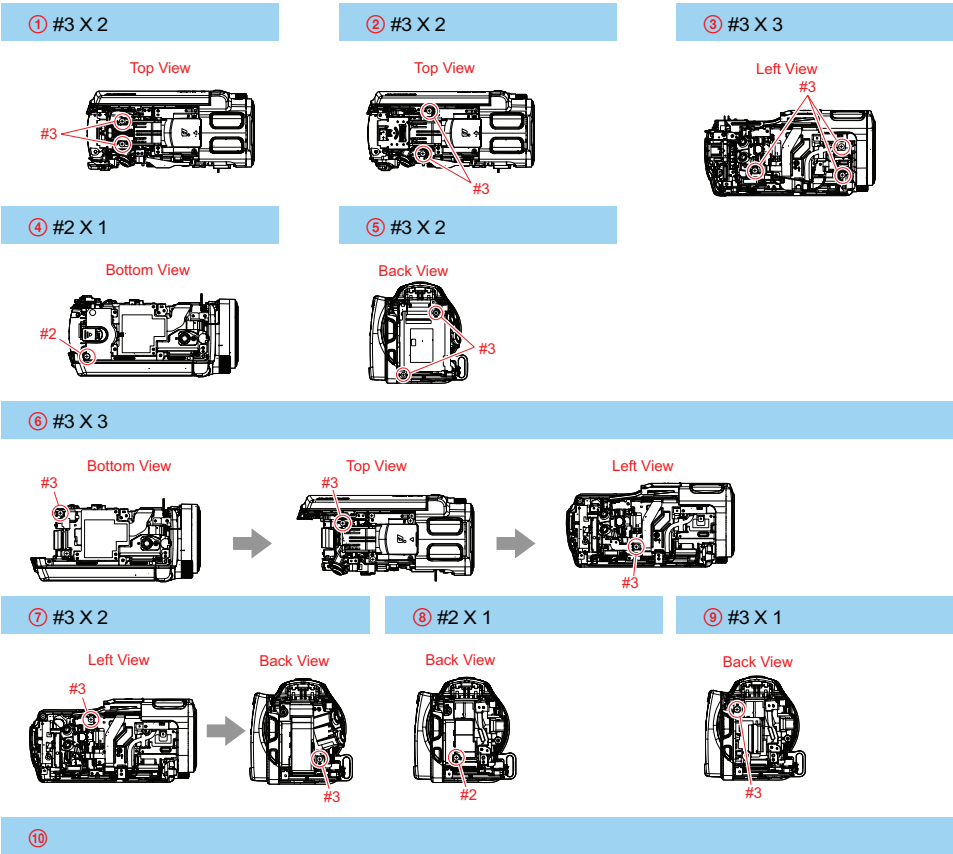

DISCHARGING OF THE CHARGING CAPACITOR

ストロボ用充電コンデンサの放電

Screw

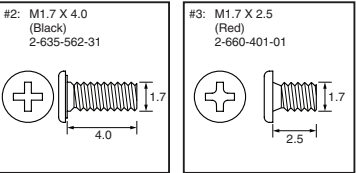


Note

Note: Refer to "Assembly-1: Installation Cautions of the DC Jack Harness".

Note: "Assembly-1: Installation Cautions of the DC Jack Harness."を参照してください。

2-1-5. OVERALL SECTION-3

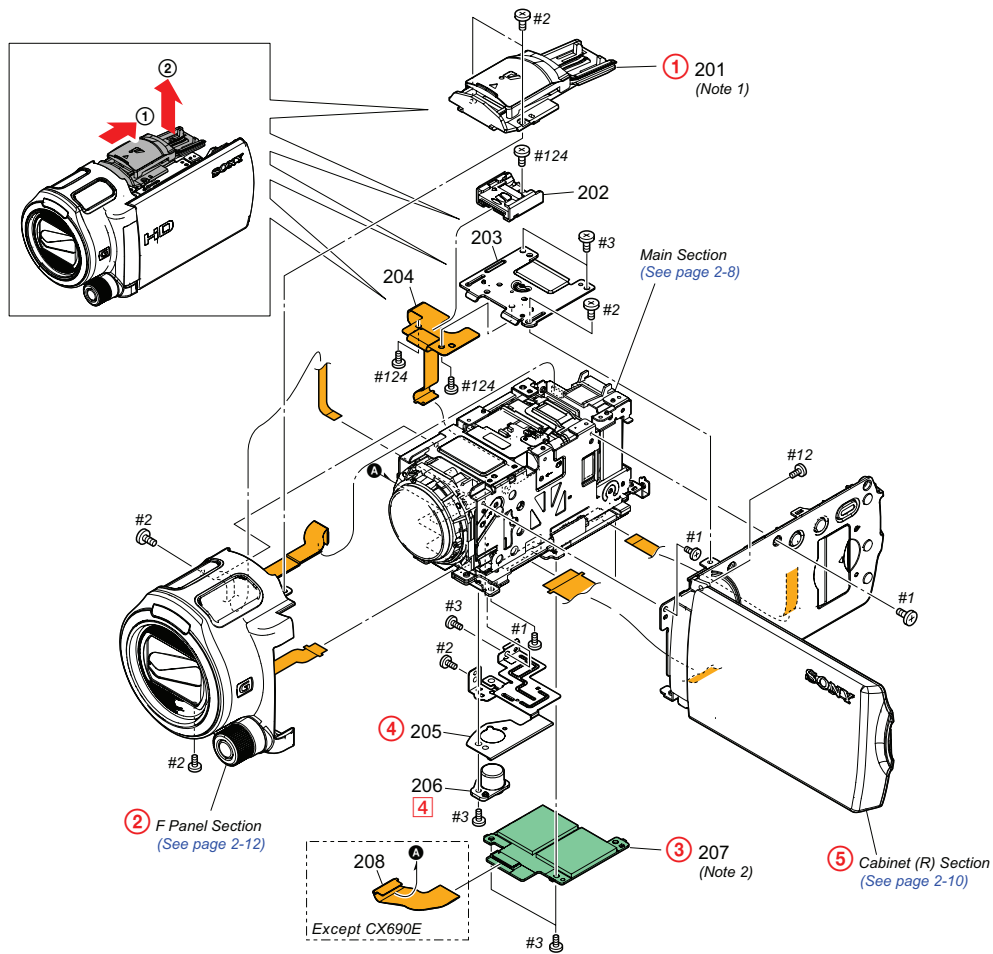


Ref. No.	Part No.	Description
201	X-2560-821-1	COVER ASSY (B), SHOE (CX560/CX560E/CX560V(BLACK)/CX560VE) (Note 1)
201	X-2560-823-1	COVER ASSY (394), SHOE (CX690E/CX700/CX700E/CX700V(CX700VE) (Note 1)
201	X-2580-250-1	COVER ASSY (S), SHOE (CX560V (SILVER)) (Note 1)
201	X-2580-251-1	COVER ASSY (T), SHOE (CX560V (BROWN)) (Note 1)
202	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
203	4-209-760-01	FRAME, HOT SHOE
204	1-882-962-11	FP-1343 FLEXIBLE BOARD
205	4-209-764-01	HEAT SINK, L
206	3-283-643-01	SCREW, TRIPOD

Ref. No.	Part No.	Description
207	A-1810-368-A	MM-099 BOARD, COMPLETE (SERVICE) (CX560/CX560E/CX560V(CX560VE) (Note 1)
207	A-1810-369-A	MM-099 BOARD, COMPLETE (SERVICE) (CX700/CX700E/CX700V(CX700VE) (Note 1)
207	A-1821-631-A	MM-099 BOARD, COMPLETE (SERVICE) (CX690E) (Note 2)
208	1-882-969-11	FP-1350 FLEXIBLE BOARD (EXCEPT CX690E)
#1	2-635-562-11	SCREW (M1.7)
#2	2-635-562-31	SCREW (M1.7)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#12	3-080-204-21	SCREW, TAPPING, P2
#124	2-599-475-01	SCREW (M1.7)


DISASSEMBLY

1. Remove to numerical order (1) to (5) in the left figure.

 
① #3 X 2 → #2 X 3




② #2 X 2 → #12 X 1

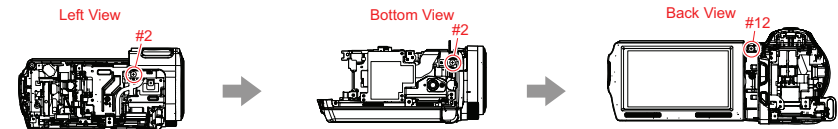


③ #3 X 2

 

④ #3 X 1 → Tripod Screw (4) → #3 X 1 → #2 X 1

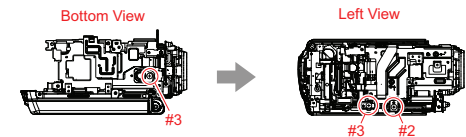

⑤ #1 X 3

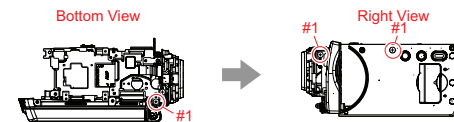

Screw

#1: M1.7 X 2.5 (Black) 2-635-562-11	#2: M1.7 X 4.0 (Black) 2-635-562-31	#3: M1.7 X 2.5 (Red) 2-660-401-01	#12: M1.7 X 5.0 (Tapping) (Black) 3-080-204-21	#124: M1.7 X 2.0 (Silver) 2-599-475-01
-------------------------------------	-------------------------------------	-----------------------------------	--	--

Note

Note 1: Refer to "Assembly-2: Installation Cautions of the Shoe Cover Block."


Note 1: "Assembly-2: Installation Cautions of the Shoe Cover Block."を参照してください。

Note 2: The MM-099 BOARD (SERVICE) (A-1821-631-A) is used as a mechanical part because no electrical part is mounted on the board.

Note 2: MM-099 BOARD (SERVICE) (A-1821-631-A) は電気部品の実装されていない基板です。メカ用の部品として使用します。

2-1-6. MAIN SECTION

ns : not supplied

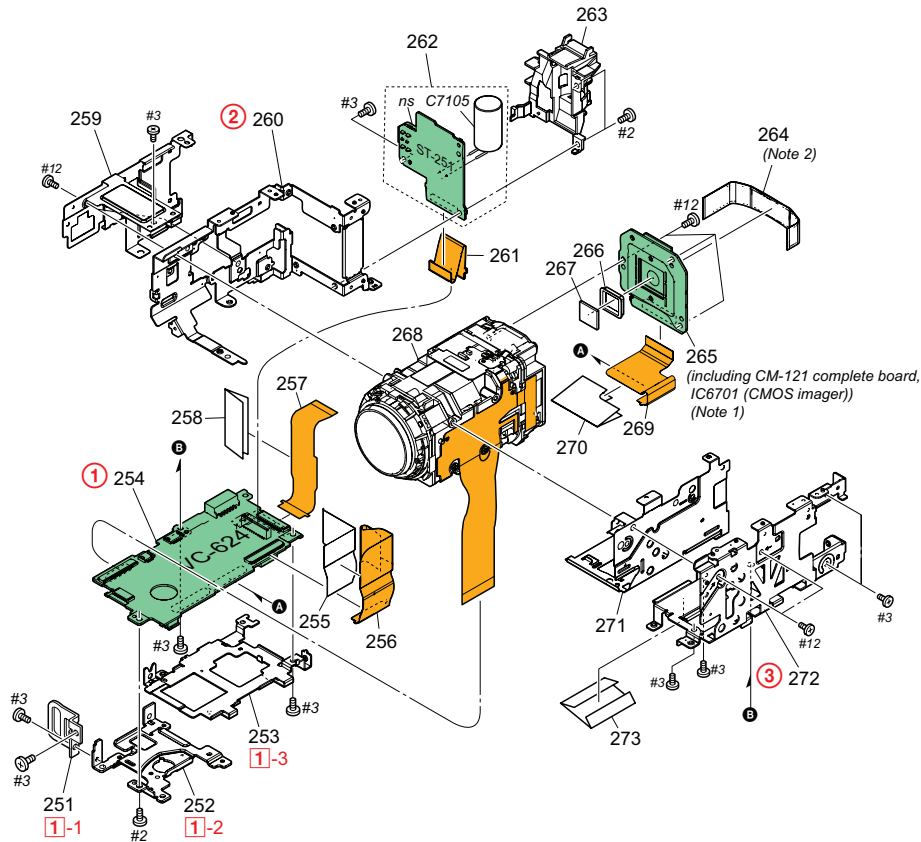


Ref. No.	Part No.	Description
251	4-209-758-01	SHEET METAL (FRONT), BELT
252	4-209-841-01	FRAME, TRIPOD
253	4-209-757-01	FRAME, BOTTOM
254	A-1810-363-A	VC-624 BOARD, COMPLETE (SERVICE) (EXCEPT CX560E/CX560VE)
254	A-1810-364-A	VC-624 BOARD, COMPLETE (SERVICE) (CX560E/CX560VE)
255	4-209-810-01	SHEET, HDMI RADIATION
256	1-882-964-11	FP-1345 FLEXIBLE BOARD
257	1-882-966-11	FP-1347 FLEXIBLE BOARD
258	4-268-511-01	SHEET, MS RADIATION
259	4-209-763-01	HEAT SINK, CM
260	4-209-755-01	FRAME, LENS
261	1-880-225-11	FP-1174 FLEXIBLE BOARD
262	A-1807-073-A	ST-251 BOARD, COMPLETE
263	4-209-765-01	HOLDER, ST CAPACITOR
264	4-209-769-01	SHEET, CMOS GRAPHITE (Note 2)

Ref. No.	Part No.	Description
265	A-1785-655-A	CMOS BLOCK ASSY (including CM-121 complete board, IC6701 (CMOS imager)) (Note 1)
266	3-216-044-01	RUBBER (1270), SEAL
267	1-866-033-21	OPTICAL FILTER BLOCK (OFB-03-52)
268	A-1733-302-A	LSV-1390A (SERVICE)
269	1-882-961-11	FP-1342 FLEXIBLE BOARD
270	4-268-510-01	SHEET, CM RADIATION
271	4-209-762-01	HEAT SINK, R
272	4-209-754-01	FRAME, MAIN
273	4-278-143-01	SHEET, TN RADIATION
△ C7105	1-116-814-11	CAP, ELECT 37uF 315V
#2	2-635-562-31	SCREW (M1.7)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#12	3-080-204-21	SCREW, TAPPING, P2


DISASSEMBLY

1. Remove to numerical order (① to ③) in the left figure.


① #3 X 2 → Belt Sheet Metal (Front) (①-1) → #2 X 1 → Tripod Frame (①-2) → Bottom Frame (①-3) → #3 X 2

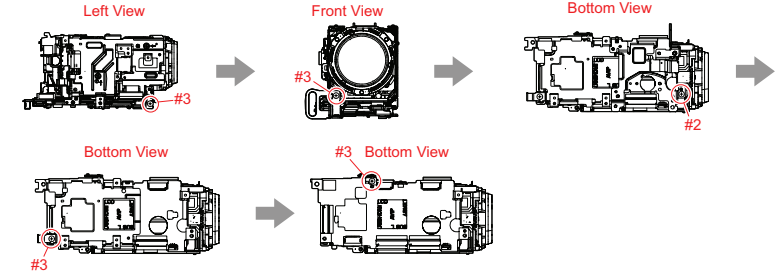


② #3 X 5 → #12 X 2

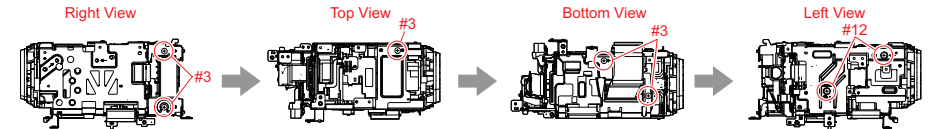

③ #12 X 2

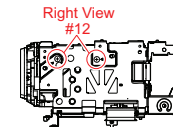

Screw

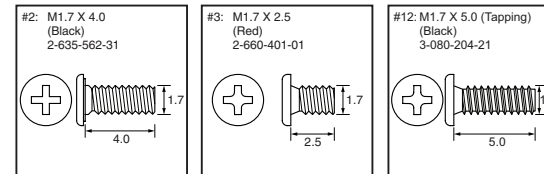

Note

Note 1: Be sure to read "Precautions for Replacement of Imager" on page 6-1 of Level3 when changing the imager.


Note 1: イメージャの交換時はLevel3の6-1ページ、「イメージャ交換時の注意」を必ずお読みください。

Note 2: The CMOS Graphite Sheet when peeling off once, so that it cannot be reused.

Note 2: CMOS Graphite Sheetは一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-7. EVF/BT PANEL SECTION


ns : not supplied

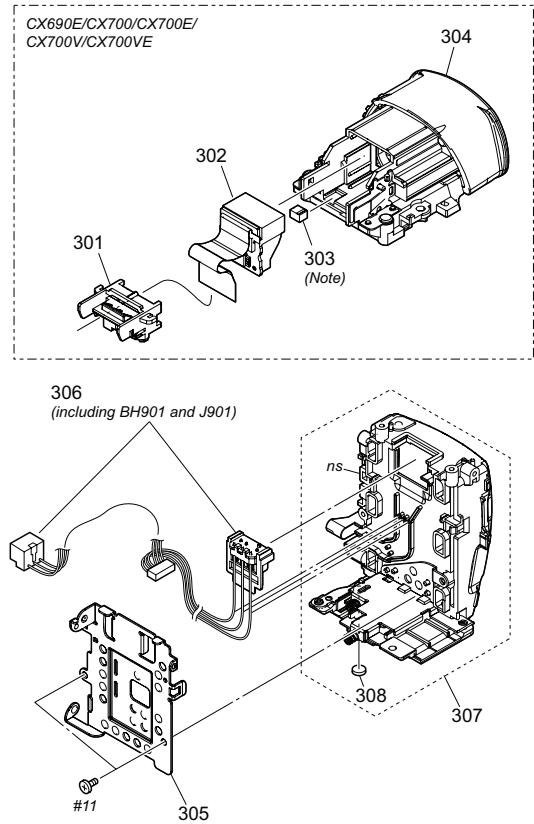

Ref. No.	Part No.	Description
301	4-209-790-01	RETAINER, VF MODULE (CX690E/CX700/CX700E/CX700V/CX700VE)
302	1-811-013-11	LCD MODULE (FL0906) (CX690E/CX700/CX700E/CX700V/CX700VE)
303	1-471-577-11	MAGNET (HOLE SENSOR) (CX690E/CX700/CX700E/CX700V/CX700VE) (Note)
304	X-2560-816-1	EYE CUP ASSY (CX690E/CX700/CX700E/CX700V/CX700VE)
305	4-209-777-01	FRAME, BT


Ref. No.	Part No.	Description
306	1-842-658-21	JACK, DC (including BH901 and J901)
307	X-2560-815-1	PANEL ASSY, BT
308	2-589-376-01	FOOT (395), RUBBER
#11	3-078-890-11	SCREW, TAPPING

Screw

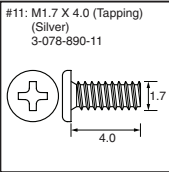


Note

Note: Put the marking side together on the position of figure when you install the magnet.

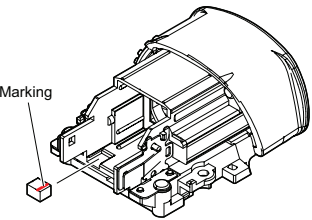


Note: マグネットを取付ける際は、マーキング面を図の位置にあわせてください。

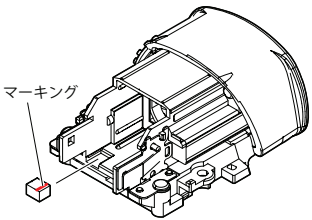

2-1-8. CABINET (R) SECTION


ns : not supplied

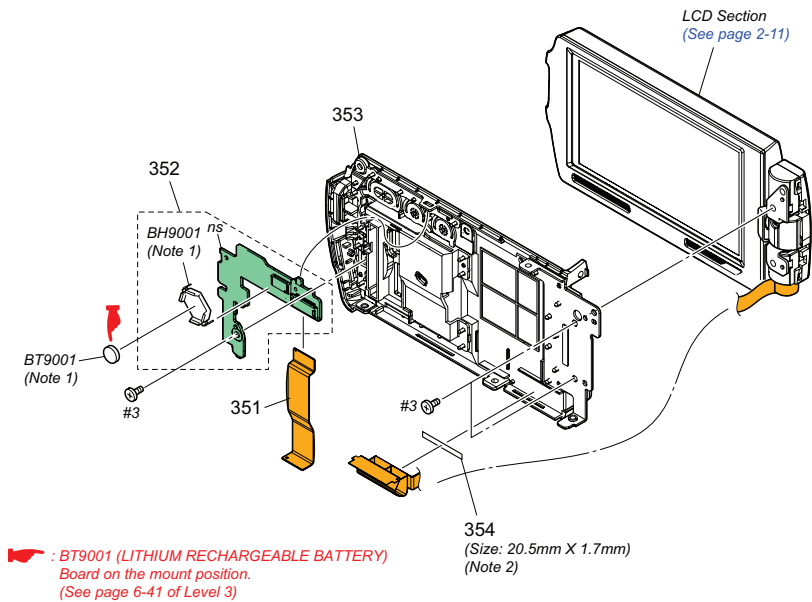

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
351	1-882-968-11	FP-1349 FLEXIBLE BOARD			
352	A-1807-069-A	CK-231 BOARD, COMPLETE			
353	X-2560-817-1	CABINET (R) ASSY			
354	2-649-300-01	SHEET, ADHESIVE (Note 2)			
△ BH9001	1-251-928-21	SOCKET, BATTERY (Note 1)			
△ BT9001	1-756-134-12	BATTERY, LITHIUM (SECONDARY) (Note 1)			
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2			

HDR-CX560/CX560E/CX560V/CX560VE/CX690E/CX700/CX700E/CX700V/CX700VE_L2

Screw

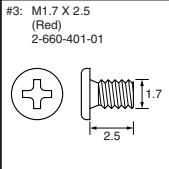

Note


Caution:
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

注意:
電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。


Note 1: Replace the battery holder (BH9001) together when replacing the lithium storage battery (BT9001) on the CK-231 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium storage battery next.

Note 1: CK-231基板のリチウム蓄電池 (BT9001) を交換する場合はバッテリーホルダ (BH9001) も同時に新品に交換してください。
(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム蓄電池を装着してください。


Note 2: Cut SHEET, ADHESIVE (2-649-300-01) into the desired length and use it.

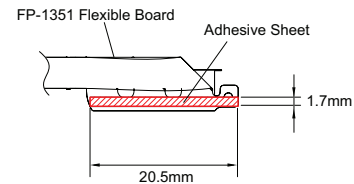

Note 2: SHEET, ADHESIVE (2-649-300-01) is specified size to be used.

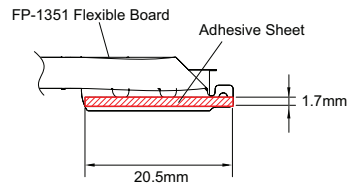


2-1-9. LCD SECTION

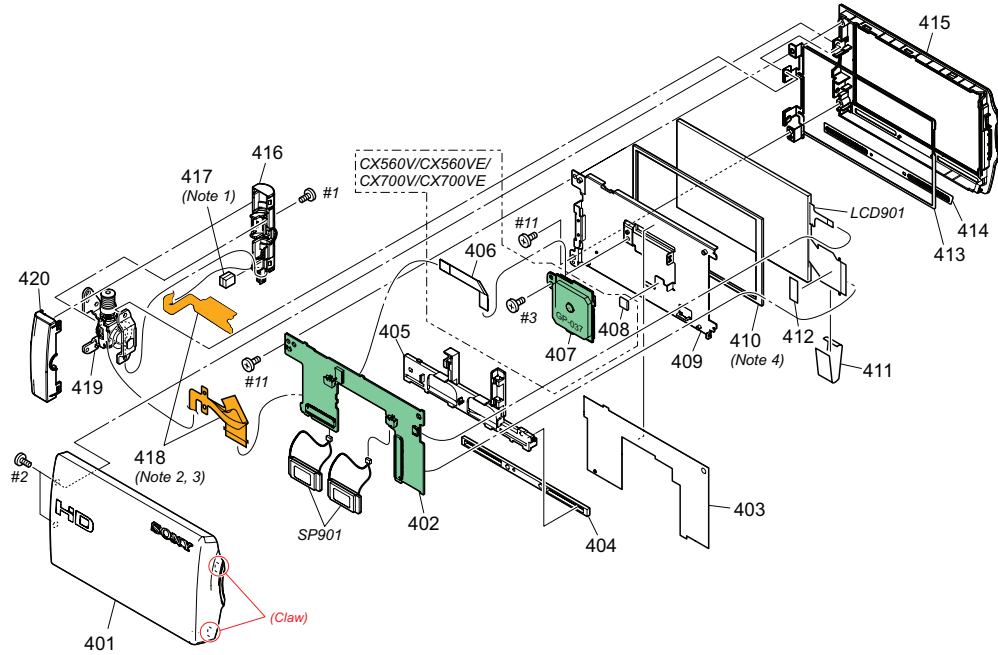

Ref. No.	Part No.	Description
401	X-2560-818-1	CABINET (C) ASSY (B), P (CX560/CX560E/CX560V (BLACK)/CX560VE)
401	X-2580-242-1	CABINET (C) ASSY (S), P (CX560V (SILVER))
401	X-2580-243-1	CABINET (C) ASSY (T), P (CX560V (BROWN))
401	X-2580-244-1	CABINET (C) ASSY (P), P (CX700/CX700E/CX700V/CX700VE)
401	X-2581-013-1	CABINET (C) ASSY (BZ), P (CX690E)
402	A-1807-064-A	PD-433 BOARD, COMPLETE (CX560V/CX560VE/CX700V/CX700VE)
402	A-1807-065-A	PD-433 BOARD, COMPLETE (CX560/CX560E/CX690E/CX700/CX700E)
403	4-209-807-01	INSULATING SHEET
404	4-209-808-01	CUSHION, SPEAKER
405	4-209-804-01	HOLDER, SPEAKER
406	1-838-558-21	CABLE, FLEXIBLE FLAT (FFC-254) (CX560V/CX560VE/CX700V/CX700VE)
407	A-1808-076-A	GP392ASSY (CX560V/CX560VE/CX700V/CX700VE)
* 408	4-180-347-01	GASKET (HS) (CX560V/CX560VE/CX700V/CX700VE)
409	4-209-801-01	FRAME, LCD
410	4-209-805-01	CUSHION, LCD (Note 4)


Ref. No.	Part No.	Description
411	4-209-845-01	SHEET, PANEL RADIATION (CX560V/CX560VE/CX700V/CX700VE)
* 412	4-178-006-01	SHEET (5X13)
413	4-209-806-01	PLATE, LCD GROUND
414	4-209-800-01	SHEET, P CABINET (M)
415	4-209-799-01	CABINET (M), P
416	4-209-803-01	COVER (M), HINGE
417	1-471-573-11	MAGNET (Note 1)
418	1-882-970-11	FP-1351 FLEXIBLE BOARD (Note 2, 3)
419	X-2560-826-1	HINGE M(A) ASSY, T STYLE
420	4-209-802-01	COVER (C), HINGE (CX560/CX560E/CX560V (BLACK)/CX560VE)
420	4-209-802-11	COVER (C), HINGE (CX560V (SILVER))
420	4-209-802-21	COVER (C), HINGE (CX560V (BROWN))
420	4-209-802-31	COVER (C), HINGE (CX690E/CX700/CX700E/CX700V/CX700VE)
LCD901	1-811-305-11	PANEL, TOUCH (TP-SZ814AMD1)
SP901	1-858-528-51	SPEAKER (2-1CM)
#1	2-635-562-11	SCREW (M1.7)
#2	2-635-562-31	SCREW (M1.7)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#11	3-078-890-11	SCREW, TAPPING

Screw

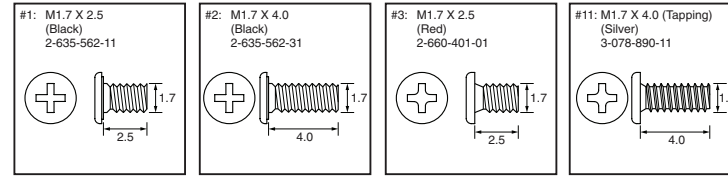


Note

Note 1: Put the marking side together on the position of figure when you install the magnet.

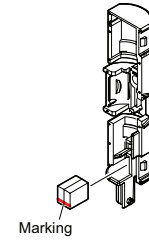

Note 1: マグネットを取付ける際は、マーキング面を図の位置にあわせてください。

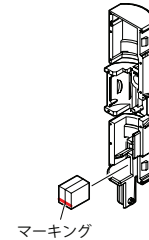

Note 2: Refer to "Assembly-3: The Method of attachment of FP-1351 Flexible Board-1."

Note 2: "Assembly-3: The Method of attachment of FP-1351 Flexible Board-1."を参照してください。


Note 3: Refer to "Assembly-3: The Method of attachment of FP-1351 Flexible Board-2."

Note 3: "Assembly-3: The Method of attachment of FP-1351 Flexible Board-2."を参照してください。

Note 4: Refer to "Assembly-5: Installation Cautions of LCD Cushion."

Note 4: "Assembly-5: Installation Cautions of LCD Cushion."を参照してください。

2-1-10. F PANEL SECTION

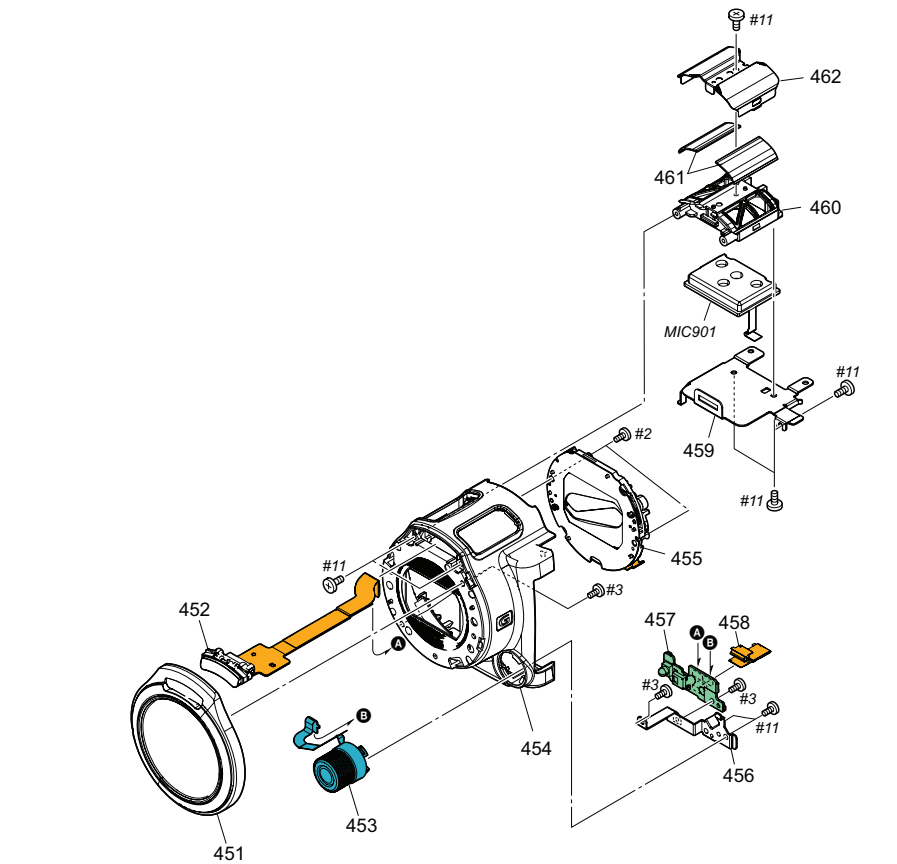


Ref. No.	Part No.	Description
451	4-209-815-01	RING, LENS
452	1-489-410-11	FLASH UNIT (FL39200)
453	1-489-386-11	SWITCH BLOCK, CONTROL (RS39200)
454	X-2560-819-1	PANEL ASSY (B), F (CX560/CX560E/CX560V (BLACK)/CX560VE)
454	X-2580-245-1	PANEL ASSY (S), F (CX560V (SILVER))
454	X-2580-246-1	PANEL ASSY (T), F (CX560V (BROWN))
454	X-2580-247-1	PANEL ASSY (P), F (CX690E/CX700/CX700E/CX700V/CX700VE)
455	A-1798-630-A	BARRIER UNIT, LENS
456	4-209-816-01	PLATE, F RING GROUND
457	A-1807-066-A	FR-314 BOARD, COMPLETE

Ref. No.	Part No.	Description
458	1-883-114-11	FP-1359 FLEXIBLE BOARD
459	4-209-822-01	SHEET METAL, RETAINER
460	4-209-821-01	HOLDER, MICROPHONE
461	4-209-820-01	SCREEN, WINDOW
462	4-209-819-01	GRILLE, MICROPHONE
MIC901	1-542-864-11	MICROPHONE UNIT
#2	2-635-562-31	SCREW (M1.7)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#11	3-078-890-11	SCREW, TAPPING

HDR-CX560/CX560E/CX560V/CX560VE/CX690E/CX700/CX700E/CX700V/CX700VE_L2


Screw

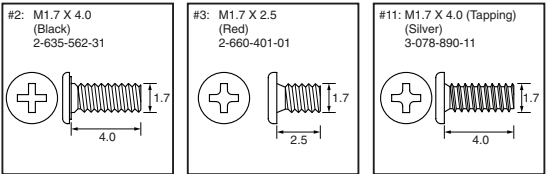

• EXCEPT J MODEL

Checking supplied accessories.

 Note: This item is supplied with the unit as an accessory, but is not prepared as a service part.



AC Adaptor
(AC-L200C/L200D)
* Compatible in
L200C and L200D.
△ 1-487-150-71



Power cord (Mains lead)
△ 1-832-121-31 (CH)
△ 1-832-169-41 (HK)
△ 1-837-428-51 (KR)
△ 1-834-482-21 (AEP, NE, E-PAL)
△ 1-834-484-31 (US, CND)
△ 1-834-852-11 (E-NTSC)
△ 1-835-983-11 (AUS)
△ 1-836-251-11 (JE)



Operating Guide
(Only for destination Japanese model)
日本語、韓国語のみ部品供給可能です。

 
- * 4-271-154-11 (ENGLISH, SPANISH)
- * 4-271-154-21 (ENGLISH, FRENCH)
- * 4-271-154-31 (PORTUGUESE)
- * 4-271-154-41 (TRADITIONAL CHINESE) (E-NTSC)
- * 4-271-154-51 (KOREAN)
- * 4-271-155-11 (ENGLISH)
- * 4-271-155-21 (FRENCH, GERMAN, ITALIAN, DUTCH)
- * 4-271-155-31 (SPANISH, PORTUGUESE, TURKISH, GREEK)
- * 4-271-155-41 (CZECH, HUNGARIAN, SLOVAK, POLISH)
- * 4-271-155-51 (SWEDISH, DANISH, FINNISH, ROMANIAN)
- * 4-271-155-61 (RUSSIAN, UKRAINIAN)
- * 4-271-155-71 (TRADITIONAL CHINESE) (HK)
- * 4-271-155-81 (SIMPLIFIED CHINESE) (E-PAL, JE)
- * 4-271-155-91 (ARABIC, PERSIAN)
- * 4-271-157-11 (SIMPLIFIED CHINESE) (CH)




Conversion (2P) Adaptor
△ 1-569-007-12 (E-NTSC, JE)



A/V connecting cable
1-838-205-11



Component A/V cable
1-834-646-11

 

Lens hood
(CX690E/CX700/CX700E/CX700V/CX700VE)
X-2560-825-1



Wireless Remote Commander
(RMT-835)
1-479-275-51



USB connection support cable
1-838-714-11



Rechargeable battery pack
(NP-FV50)
(Note)



CD-ROM "Handycam
Application Software"
— "PMB" (software) including
"PMB Help"
— "Handycam Handbook"
(PDF)
4-271-158-01

The CD-ROM supplied contains all of language version of the Instruction Manual in pdf (Handycam Handbook.pdf) for printing.

- The printed matter is not supplied. If required, please order it with the part number below.
- (Only for destination Japanese model)
日本国内については印刷での部品供給は行っておりません。


Handycam Handbook (PDF)

- * 4-271-159-01 (JAPANESE)
- * 4-271-159-11 (ENGLISH)
- * 4-271-159-21 (FRENCH)
- * 4-271-159-31 (SPANISH)
- * 4-271-159-41 (PORTUGUESE)
- * 4-271-159-51 (TRADITIONAL CHINESE)
- * 4-271-159-61 (KOREA)
- * 4-271-160-11 (ENGLISH)
- * 4-271-160-21 (FRENCH)
- * 4-271-160-31 (GERMAN)
- * 4-271-160-41 (ITALIAN)
- * 4-271-160-51 (DUTCH)
- * 4-271-160-61 (SPANISH)
- * 4-271-160-71 (PORTUGUESE)
- * 4-271-160-81 (TURKISH)
- * 4-271-160-91 (GREEK)
- * 4-271-161-11 (CZECH)
- * 4-271-161-21 (HUNGARIAN)
- * 4-271-161-31 (SLOVAK)
- * 4-271-161-41 (POLISH)
- * 4-271-161-51 (SWEDISH)
- * 4-271-161-61 (DANISH)
- * 4-271-161-71 (FINNISH)
- * 4-271-161-81 (ROMANIAN)
- * 4-271-161-91 (RUSSIAN)
- * 4-271-173-11 (UKRAINIAN)
- * 4-271-173-21 (TRADITIONAL CHINESE)
- * 4-271-173-31 (SIMPLIFIED CHINESE)
- * 4-271-173-41 (ARABIC)
- * 4-271-173-51 (PERSIAN)
- * 4-271-173-61 (MALAY)
- * 4-271-173-71 (INDONESIAN)
- * 4-271-173-81 (THAI)

• J MODEL

付属品

 Note 1: 当商品はアクセサリとして同梱されておりますがサービス用補修部品としては準備しておりません。



ACアダプター
(AC-L200C/L200D)
* L200CとL200Dには
互換性があります。
△ 1-487-150-71



 
電源コード
△ 1-836-251-11



取扱説明書
4-271-154-01 (日本語)




A/V接続ケーブル
1-838-205-11



D端子A/Vケーブル
1-834-646-21



 ワイヤレスリモコン
(RMT-835)
1-479-275-51




リチャージャブルバッテリーパック
(NP-FV50)
(Note 1)



USB接続サポートケーブル
1-838-714-11



 CD-ROM 「Handycam
Application Software」
— 「PMB」(ソフトウェア、「PMB ヘルプ」を含む)
— 「ハンディカムハンドブック」(PDF) (Note 2)
4-271-158-01




Lens hood
(CX700V)
X-2560-825-1

Note 2: 日本国内については印刷での部品供給は行っておりません。


3. ASSEMBLY

Assembly-1: Installation Cautions of the DC Jack Harness.

Pass the DC Jack harness (Blue, Red, Black) in the four libs of the DCIN Holder.

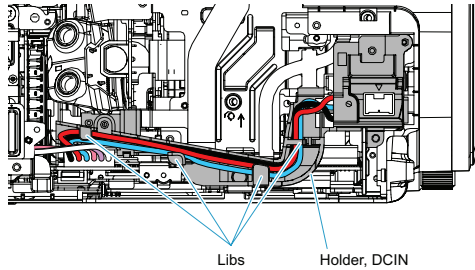


Assembly-2: Installation Cautions of the Shoe Cover Block.

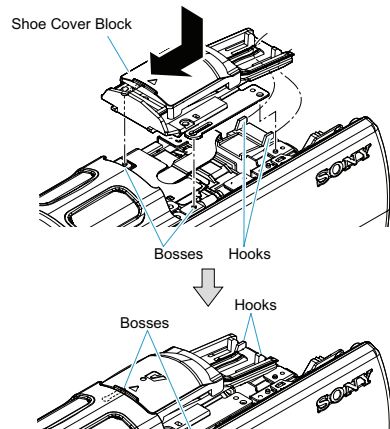


Assembly-3: The Method of attachment of FP-1351 Flexible Board-1.


- ① Fold dotted line parts of the FP-1351 flexible board as shown in figure.

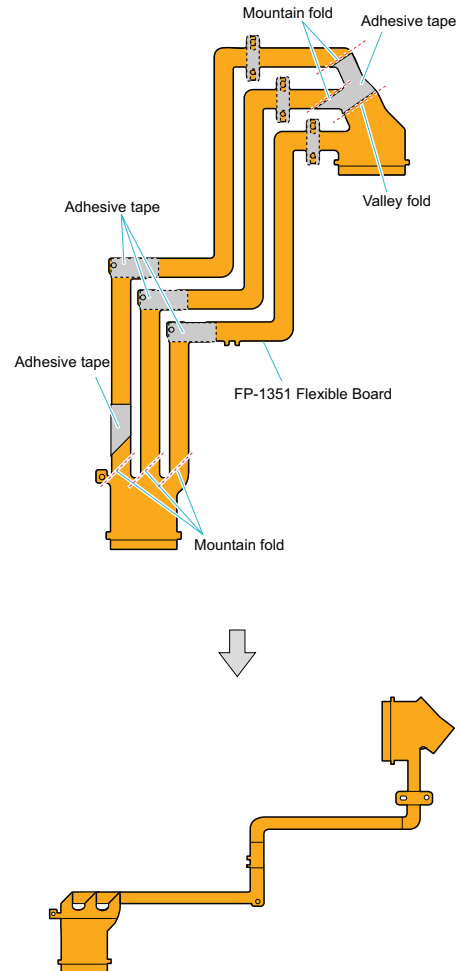


- ② Insert the FP-1351 Flexible Board to the Hinge Cover (M) as shown in figure.

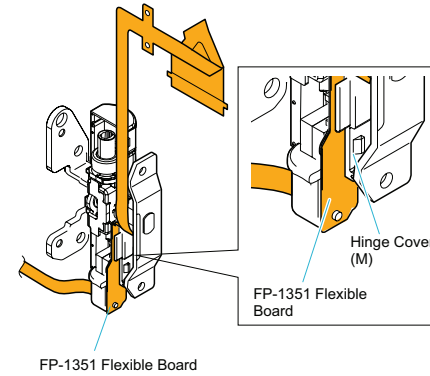

- ③ Roll the FP-1351 flexible board 2 times in the hinge assy as shown in figure.

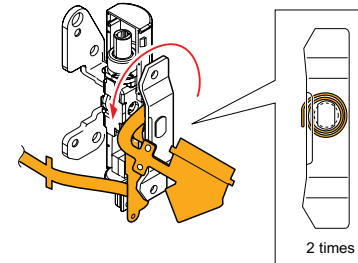


- ④ Insert the Hinge Cover (C) to as shown in figure.

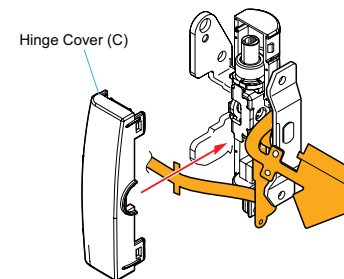

Assembly-4: The Method of attachment of FP-1351 Flexible Board-2.

Roll the FP-1351 flexible board 1 times in the Hinge Cover (M) as shown in figure.

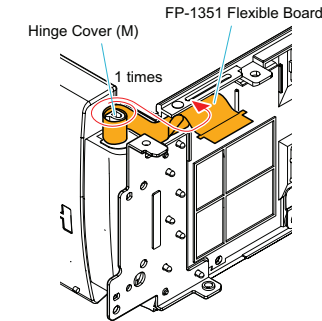

Assembly-5: Installation Cautions of LCD Cushion.

Apply LCD cushion.
And have the Tab of the Release Paper and peel it off.

