


2-1. EXPLODED VIEWS

2-1-1. OVERALL SECTION-1

ns: not supplied

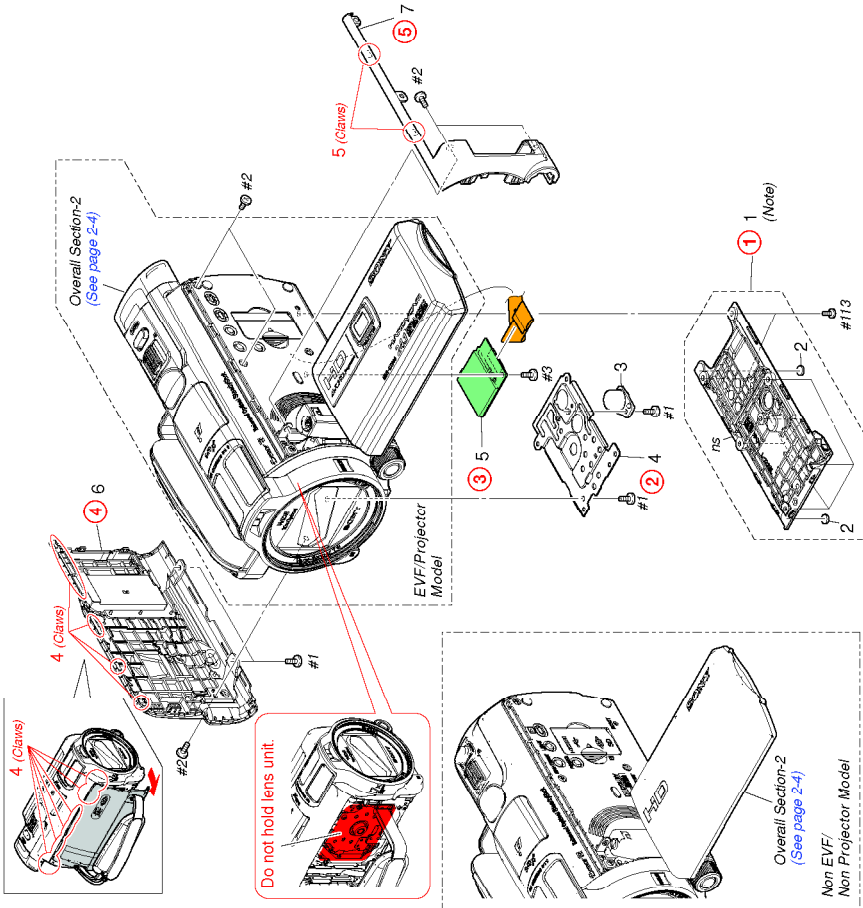

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	(Note)	CABINET (BOTTOM)	5	A-1878-201-A	MM-102 BOARD, COMPLETE (SERVICE) (64G) (PJ720E)
2	2-588-376-01	FOOT (395), RUBBER	5	A-1878-202-A	MM-102 BOARD, COMPLETE (SERVICE) (96G)
3	3-283-643-01	SCREW, TRIPOD			(CX760EP/J760P/J760E)
4	4-422-371-01	FRAME, CABINET (BM)	6	X-2584-155-1	CABINET (L) ASSY
5	A-1877-104-A	MM-102 BOARD, COMPLETE (96G)	7	4-422-363-01	COVER (R (369)), HINGE (Non Projector Model)
		(CX760V/PJ760V/PJ760E)	7	4-422-364-01	COVER (R (360)), HINGE (Projector Model)
5	A-1877-105-A	MM-102 BOARD, COMPLETE (SERVICE) (64G) (CX20V)			
5	A-1877-106-A	MM-102 BOARD, COMPLETE (SERVICE) (32G) (CX740E/CX740EP/J710V/PJ710V/PJ740V)	#1	2-635-582-11	SCREW (M1.7)
5	A-1878-200-A	MM-102 BOARD, COMPLETE (SERVICE) (32G) (PJ710)	#2	2-635-582-31	SCREW (M1.7)
			#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
			#113	2-635-582-41	SCREW (M1.7)

HDR-CX720V/CX730E/CX740E/CX740V/CX760E/CX760V/PJ710V/PJ710V/PJ720E/PJ740V/PJ760P/J760E/PJ760V/PJ760E_L2 2-3


DISASSEMBLY

1. Remove to numerical order (1) to (5) in the left figure.

1 #113 X 7


2 #1 X 1

3 #3 X 1

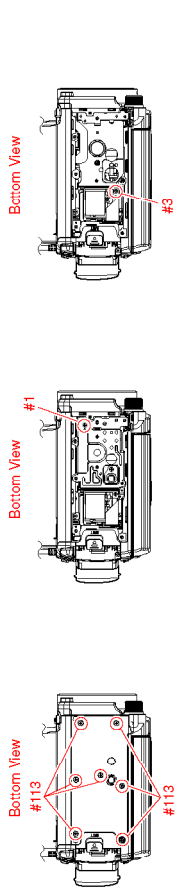

4 #1 X 2 → #2 X 1


5 Open the LCD (4-1) → #2 X 4 → Rotate the LCD (4-2)

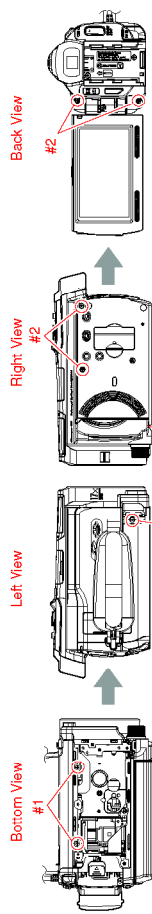

The shape may be different from the illustration depending on models.

機種によって形状がイラストと異なる場合があります。

Screw

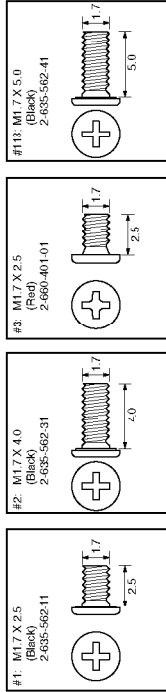


Note

Note: Refer to page 1-8 "Precaution on replacing the Cabinet (Bottom)" when changing the Cabinet (Bottom).

Note: キヤビネットボトム組立の交換時は、1-16ページの「キヤビネット(底)交換時の注意」を参照してください。

2-1-3. BT PANEL SECTION

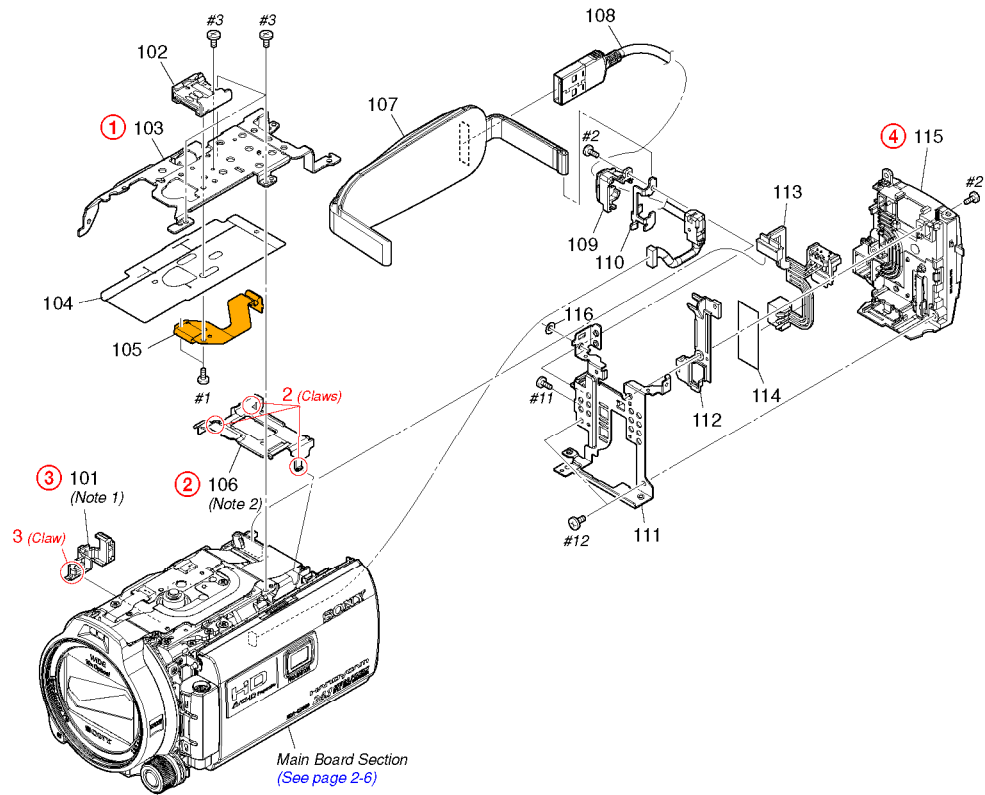


Ref. No.	Part No.	Description
101	4-422-368-01	RETAINER, USB ARM (Note 1)
102	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
103	4-422-360-01	FRAME, HS
104	4-422-369-01	SHEET, FLEXIBLE GUARD
105	1-885-106-11	FP-1523 FLEXIBLE BOARD
106	4-422-361-01	GUARD, VF FLEXIBLE (Note 2)
107	4-419-611-02	BELT (M), 12 TYPE GRIP
108	1-838-712-21	CABLE, BUILT-IN USB
109	4-422-339-01	GUARD, BELT
110	4-422-340-01	SHEET METAL (R), BELT

Ref. No.	Part No.	Description
111	4-422-337-01	FRAME, BT
112	4-422-338-01	RETAINER, DC
113	1-822-4/U-22	JACK, DC
114	2-590-635-01	TAPE (AS 1/2)
115	X-2584-160-1	PANEL ASSY, BT
116	4-273-783-11	WASHER (MS)
#1	2-635-562-11	SCREW (M1.7)
#2	2-635-562-31	SCREW (M1.7)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#11	3-078-890-11	SCREW, TAPPING
#12	3-080-204-21	SCREW, TAPPING, P2

HDR-CX720V/CX730E/CX740E/CX740VE/CX760E/CX760V/PJ710/PJ710V/PJ710VE/PJ720E/PJ740VE/PJ760/PJ760E/PJ760V/PJ760VE_L2

2-1-4. MAIN BOARD SECTION

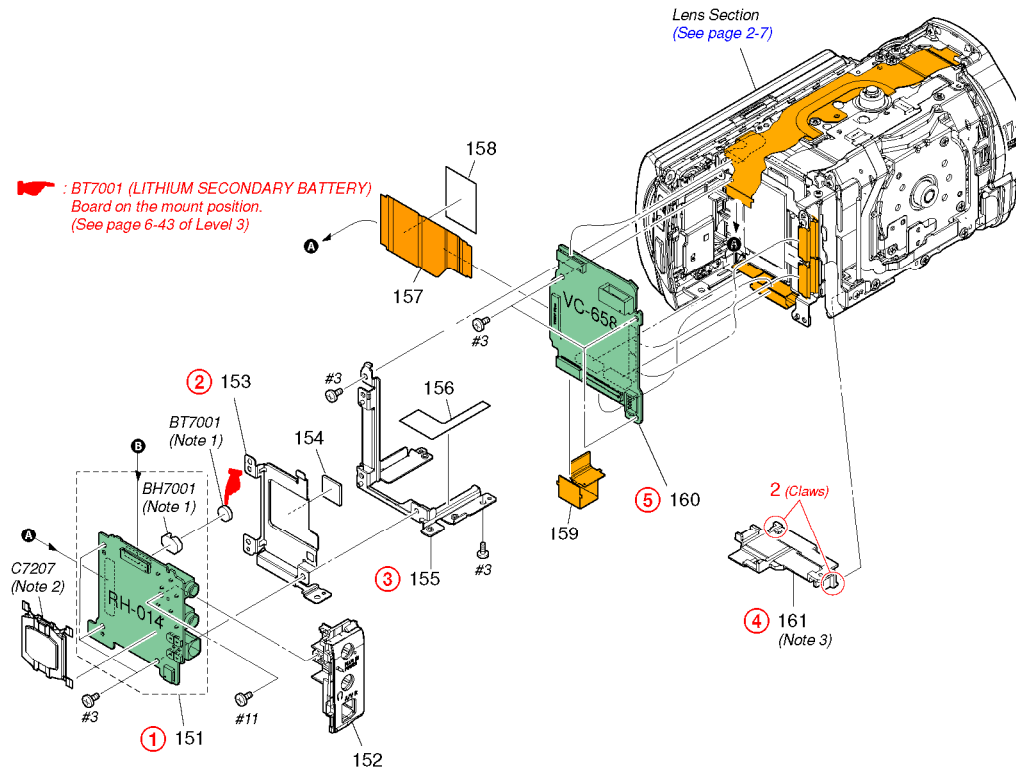


Ref. No.	Part No.	Description
151	A-1871-740-A	RH-014 BOARD, COMPLETE (Non EVF Model)
151	A-1871-741-A	RH-014 BOARD, COMPLETE (EVF Model)
152	4-422-365-01	HOLDER (L), JACK
153	4-422-359-01	HEAT SINK (B), VC
154	4-425-108-01	SHEET (A), RADIATION
155	4-422-357-01	FRAME, RH
156	4-422-370-01	SHEET, CM FLEXIBLE GUARD
157	1-895-105-11	FP-1522 FLEXIBLE BOARD
158	4-432-696-01	SHEET, RH FLEXIBLE GUARD
159	1-885-623-21	FP-1557 FLEXIBLE BOARD (EXCEPT CX730E)

Ref. No.	Part No.	Description
160	A-1872-115-A	VC-658 BOARD, COMPLETE (SERVICE)
161	4-422-362-01	GUARD, CM FLEXIBLE (Note 3)
△ BH7001	1-251-928-21	HOLDER, BATTERY (Note 1)
△ BT7001	1-756-134-15	BATTERY, LITHIUM SECONDARY (Note 1)
C7207	1-116-781-11	DOUBLE LAYERS 0.35F 20% 5.5V (Note 2)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#11	3-078-890-11	SCREW, TAPPING

HDR-CX720V/CX730E/CX740E/CX740VE/CX760E/CX760V/PJ710/PJ710V/PJ710VE/PJ720E/PJ740VE/PJ760/PJ760E/PJ760V/PJ760VE_L2


2-1-5. LENS SECTION

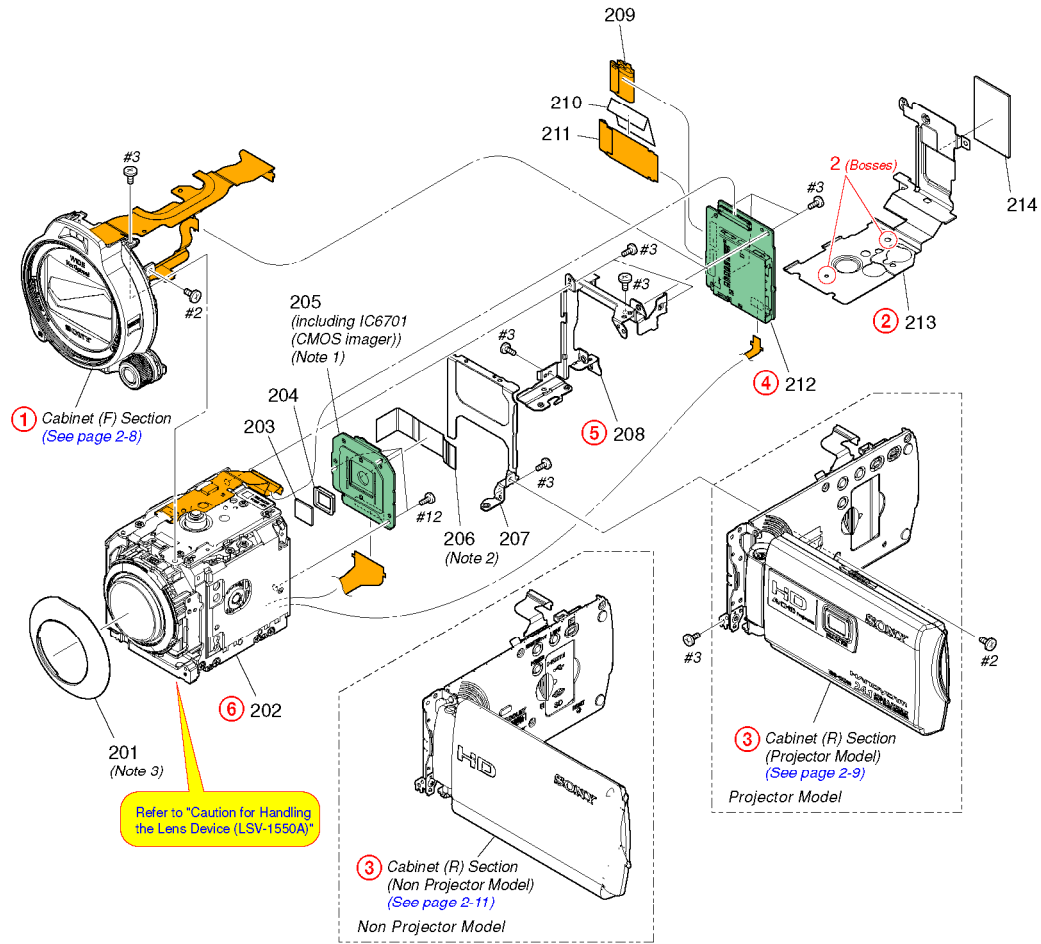

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
201	4-422-372-01	ORNAMENT, LENS (Note 3)	211	1-885-376-11	FP-1551 FLEXIBLE BOARD
202	A-1854-190-A	SERVICE, LSV-1550A (SERVICE)	212	A-1877-096-A	LD-297 BOARD, COMPLETE (SERVICE)
203	1-856-033-21	OPTICAL FILTERBLOCK (OFB-03-52)	213	4-422-358-01	HEAT SINK (A), VC
204	3-216-044-01	RUBBER (1270), SEAL	214	4-281-952-01	SHEET (B), VC RADIATION
205	A-1785-655-A	CMOS BLOCK ASSY (1390)-077 (including IC6701 (CMOS Imager)) (Note 1)	#2	2-635-562-31	SCREW (M1.7)
206	4-422-373-01	SHEET, CM RADIATION (Note 2)	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
207	4-422-356-01	FRAME, LD	#12	3-080-204-21	SCREW, TAPPING, P2
208	4-422-355-01	FRAME, VC			
209	1-885-375-11	FP-1550 FLEXIBLE BOARD			
210	4-425-581-01	SHEET (A), SHIELD			

HDR-CX720V/CX730E/CX740E/CX740VE/CX760E/CX760V/PJ710/PJ710V/PJ710VE/PJ720E/PJ740VE/PJ760/PJ760E/PJ760V/PJ760VE_L2

2-1-6. CABINET (F) SECTION

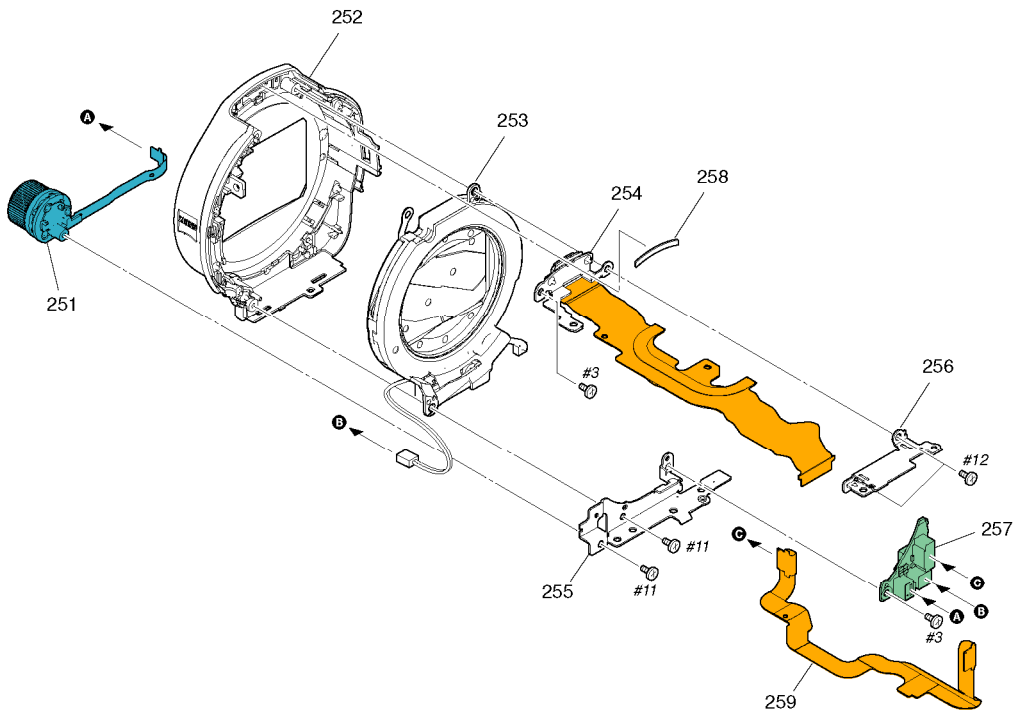

Ref. No.	Part No.	Description
251	1-489-963-11	SWITCH BLOCK, CONTROL (RS39900)
252	X-2584-148-1	CABINET (F) ASSY
253	A-1865-250-A	BARRIER UNIT, LENS
254	A-1872-023-A	LED BLOCK ASSY, ST
255	4-422-248-01	FRAME (LOWER), F

Ref. No.	Part No.	Description
256	4-422-247-01	FRAME (UPPER), F
257	A-1871-872-A	FR-319 BOARD, COMPLETE
258	4-424-924-01	CUSHION, ST
259	1-885-101-11	FP-1518 FLEXIBLE BOARD
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#11	3-078-890-11	SCREW, TAPPING
#12	3-080-204-21	SCREW, TAPPING, P2

HDR-CX720V/CX730E/CX740E/CX740VE/CX760E/CX760V/PJ710/PJ710V/PJ710VE/PJ720E/PJ740VE/PJ760/PJ760E/PJ760V/PJ760VE_L2


Refer to page 2-11 about Non Projector Model.

[illegible]

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
301	A-1876-985-A	CABINET (C (PJ710)), (P) (PJ710/PJ710V/PJ710VE)	314	A-1872-028-A	FP-1582 FLEXIBLE BOARD, COMPLETE
301	A-1876-986-A	CABINET (C (PJ720)), (P) (PJ720E)	315	A-1872-021-A	PJ-104 BOARD, COMPLETE
301	A-1876-987-A	CABINET (C (PJ740)), (P) (PJ740VE)	316	4-425-582-01	SHEET (GPS), SHIELD (GPS Model)
301	A-1876-988-A	CABINET (C (PJ670)), (P) (PJ760/PJ760E/PJ760V/PJ760VE)	317	X-2584-157-1	CABINET (R (390)) ASSY
302	4-272-357-01	GASKET (P (389))	318	A-1871-876-A	CK-244 BOARD, COMPLETE
303	4-422-327-01	HEAT SINK, P	319	1-885-104-11	FP-1521 FLEXIBLE BOARD
304	4-272-356-01	INSULATING SHEET (P (389))	320	A-1871-880-A	FP-1554 FLEXIBLE BOARD, COMPLETE
305	4-272-354-01	SHEET, P RADIATION	321	2-649-300-01	SHEET, ADHESIVE (Note 3)
306	A-1861-092-A	GP386 ASSY (GPS Model)	322	4-271-688-01	CUSHION (M)
307	1-838-558-11	CABLE, FLEXIBLE FLAT (FFC-254) (GPS Model)	#2	2-635-562-31	SCREW (M1.7)
309	4-272-358-01	CUSHION, P	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
310	A-1876-774-A	E2T 0.2 PICO OPTICAL ENGINE (Note 2)	#11	3-078-890-11	SCREW, TAPPING
311	X-2584-302-1	ASSY COVER MODULE E2T	#30	3-086-156-11	SCREW B1.2
312	4-411-285-01	FOCUS LEVER V2 FLT3	#211	2-187-345-01	SCREW (M1.7), P2 (Note 1)
313	4-411-284-01	SCREW CALD TAP BLACK			

HDR-CX720V/CX730F/CX740F/CX740VF/CX760F/CX760V/PJ710/PJ710V/PJ710VF/PJ720F/PJ740VF/PJ760/PJ760F/PJ760V/PJ760VF_1 2


2-1-8. LCD SECTION-2
(Projector Model)
Refer to page 2-12 about Non Projector Model.

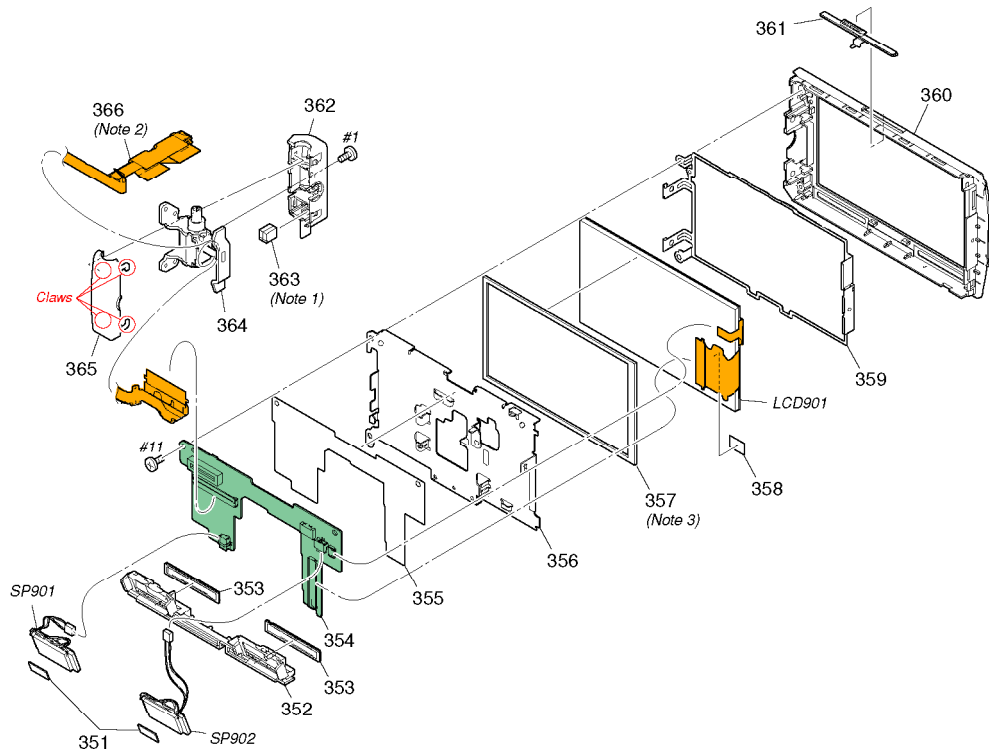

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
351	4-271-688-01	CUSHION (M)	363	1-471-573-11	MAGNET (Note 1)
352	4-422-321-01	HOLDER (390), SP	364	X-2582-799-1	HINGE Y (P) ASSY, T STYLE
353	4-422-328-01	CUSHION, SP HOLDER	365	4-422-323-01	COVER (O (390)), HINGE
354	A-1852-433-A	PD-465 BOARD, COMPLETE (PJ710V/PJ710VE/PJ740VE/PJ760V/PJ760VE)	366	1-885-102-11	FP-1519 FLEXIBLE BOARD (Note 2)
354	A-1852-434-A	PD-465 BOARD, COMPLETE (PJ710/PJ720E/PJ760/PJ760E)	LCD901	1-811-305-11	PANEL, TOUCH (TP-SZ814AMD1)
355	4-408-193-01	INSULATING SHEET (PD (385))	SP901	1-858-528-51	SPEAKER (2-1CM)
356	4-422-319-01	RETAINER (390), LCD	SP902	1-858-528-51	SPEAKER (2-1CM)
357	4-209-805-01	CUSHION, LCD (Note 3)	#1	2-635-562-11	SCREW (M1.7)
358	4-265-596-01	SHEET (BL)	#11	3-078-890-11	SCREW, TAPPING
359	4-422-317-01	PLATE (P (390)), GROUND			
360	4-422-315-01	CABINET (M (390)), P			
361	4-422-326-01	KNOB, FOCUS			
362	4-422-325-01	COVER (U (390)), HINGE			

Ver. 1.1 2012.05
The changed portions from
Ver. 1.0 are shown in blue.

2-1-9. LCD SECTION-1
(Non Projector Model)
Refer to page 2-9 about Projector Model.

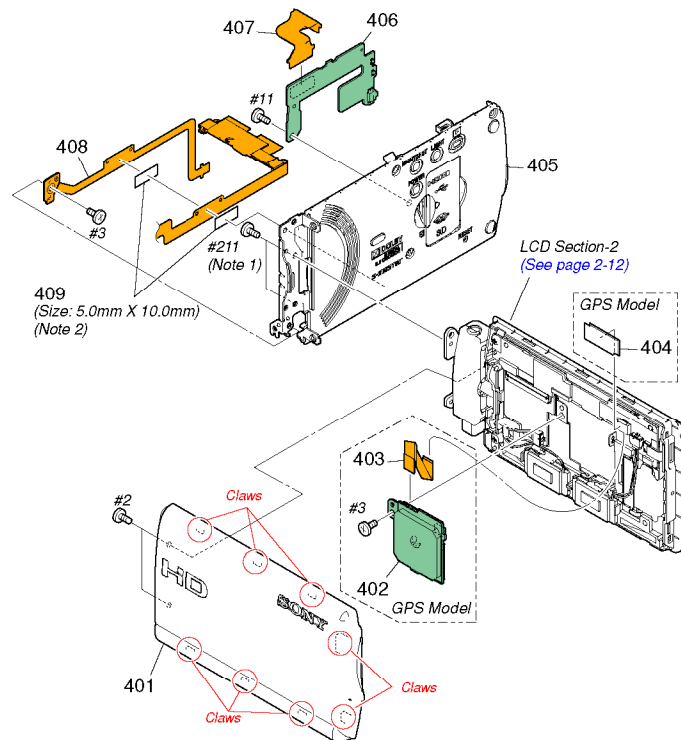


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
401	A-1876-981-A	CABINET (C (CX720)), (P) (CX720V)	408	A-1871-880-A	FP-1554 FLEXIBLE BOARD, COMPLETE
401	A-1876-982-A	CABINET (C (CX740)), (P) (CX740E/CX740VE)	409	2-649-300-01	SHEET, ADHESIVE (Note 2)
401	A-1876-983-A	CABINET (C (CX760)), (P) (CX760E/CX760V)	#2	2-635-562-31	SCREW (M1.7)
401	A-1876-984-A	CABINET (C (CX730)), (P) (CX730E)	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
402	A-1861-092-A	GP386 ASSY (GPS Model)	#11	3-078-890-11	SCREW, TAPPING
403	1-838-558-11	CABLE, FLEXIBLE FLAT (FFC-254) (GPS Model)	#211	2-187-345-01	SCREW (M1.7), P2 (Note 1)
404	4-425-582-01	SHEET (GPS), SHIELD (GPS Model)			
405	X-2584-156-1	CABINET (R (399)) ASSY			
406	A-1871-876-A	CK-244 BOARD, COMPLETE			
407	1-885-104-11	FP-1521 FLEXIBLE BOARD			

HDR-CX720V/CX730E/CX740E/CX740VE/CX760E/CX760V/PJ710/PJ710V/PJ710VE/PJ720E/PJ740VE/PJ760/PJ760E/PJ760V/PJ760VE_L2

Ver. 1.1 2012.05
The changed portions from
Ver. 1.0 are shown in blue.

2-1-10. LCD SECTION-2
(Non Projector Model)
Refer to page 2-10 about Projector Model.

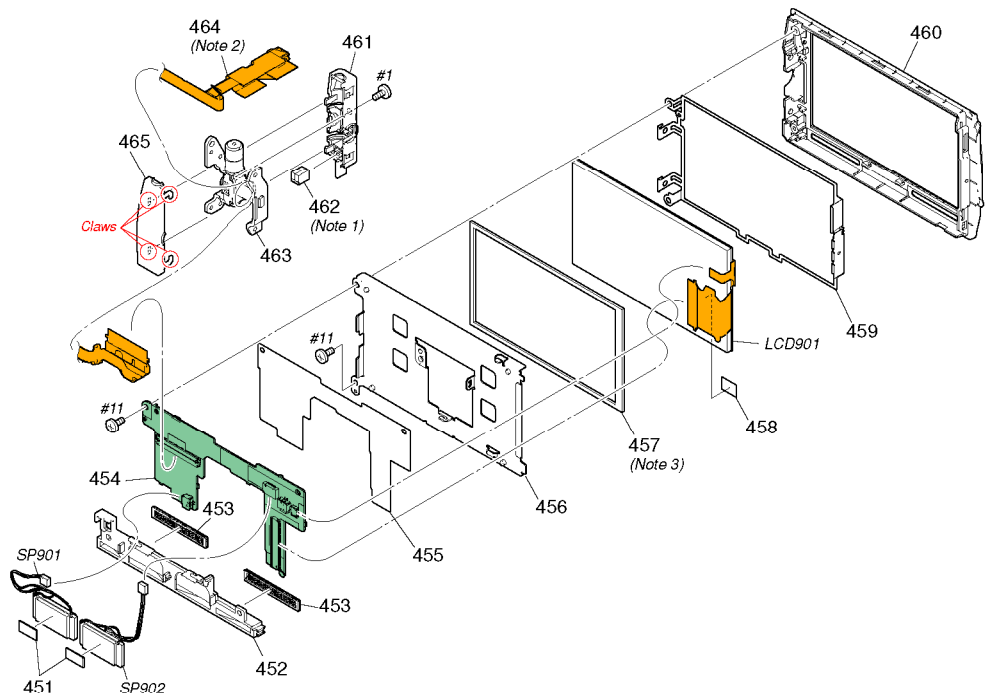


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
451	4-271-688-01	CUSHION (M)	460	4-422-314-01	CABINET (M (399)), P
452	4-422-320-01	HOLDER (399), SP	461	4-422-324-01	COVER (U (399)), HINGE
453	4-422-328-01	CUSHION, SP HOLDER	462	1-471-573-11	MAGNET (Note 1)
454	A-1852-435-A	PD-465 BOARD, COMPLETE	463	X-2560-826-1	HINGE M (A) ASSY, T STYLE
		(CX720V/CX740VE/CX760V)	464	1-885-698-11	FP-1580 FLEXIBLE BOARD (Note 2)
454	A-1852-436-A	PD-465 BOARD, COMPLETE (CX730E/CX740E/CX760E)			
455	4-408-193-01	INSULATING SHEET (PD (385))	465	4-422-322-01	COVER (O (399)), HINGE
456	4-422-318-01	RETAINER (399), LCD	LCD901	1-811-305-11	PANEL, TOUCH (TP-SZ814AMD1)
457	4-209-805-01	CUSHION, LCD (Note 3)	SP901	1-858-528-51	SPEAKER (2-1CM)
458	4-265-596-01	SHEET (BL)	SP902	1-858-528-51	SPEAKER (2-1CM)
459	4-422-316-01	PLATE (P (309)), GROUND			
			#1	2-635-562-11	SCREW (M1.7)
			#11	3-078-890-11	SCREW, TAPPING

HDR-CX720V/CX730E/CX740E/CX740VE/CX760E/CX760V/PJ710/PJ710V/PJ710VE/PJ720E/PJ740VE/PJ760/PJ760E/PJ760V/PJ760VE_L2

Ver. 1.2 2012.06

• EXCEPT J MODEL
ACCESSORIES

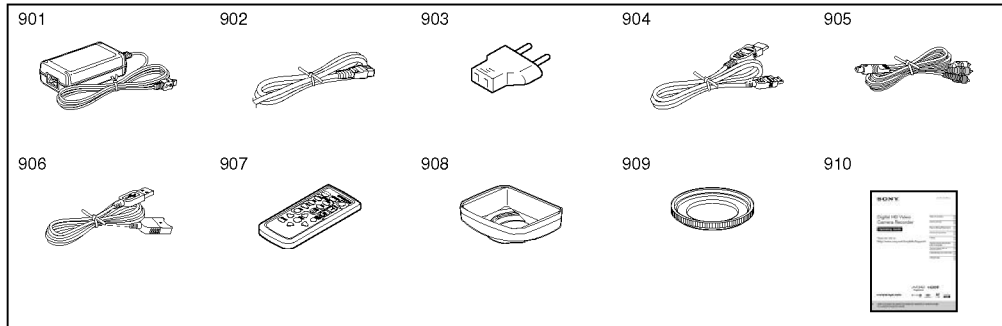

Ref. No.	Part No.	Description
△ 901	1-487-150-71	AC Adaptor
△ 902	1-832-121-31	Power cord (Mains lead) (CH)
△ 902	1-832-169-41	Power cord (Mains lead) (UK, HK)
△ 902	1-834-482-31	Power cord (Mains lead) (AEP, NE, E: PAL)
△ 902	1-834-852-11	Power cord (Mains lead) (E: NTSC)
△ 902	1-835-983-11	Power cord (Mains lead) (AUS)
△ 902	1-836-251-11	Power cord (Mains lead) (JE)
△ 902	1-838-955-11	Power cord (Mains lead) (US, CND)
△ 903	1-569-007-12	Conversion (2P) Adaptor (E: NTSC, JE)
904	1-839-080-21	HDMI cable
905	1-838-205-11	A/V connecting cable
906	1-838-714-31	USB connection support cable
907	1-479-275-51	Wireless Remote Commander
908	X-2584-166-2	Lens hood
909	X-2584-165-1	Step Down Ring
* 910	4-418-119-11	Operating Guide (ENGLISH, SPANISH)
* 910	4-418-119-21	Operating Guide (ENGLISH, FRENCH)
* 910	4-418-119-31	Operating Guide (PORTUGUESE)
* 910	4-418-119-41	Operating Guide (TRADITIONAL CHINESE) (E:NTSC)
910	4-418-119-51	Operating Guide (KOREAN)

Ref. No.	Part No.	Description
910	4-418-120-11	Operating Guide (ENGLISH)
* 910	4-418-120-21	Operating Guide (FRENCH, GERMAN, ITALIAN, DUTCH)
* 910	4-418-120-31	Operating Guide (SPANISH, PORTUGUESE, TURKISH, GREEK)
* 910	4-418-120-41	Operating Guide (CZECH, HUNGARIAN, SLOVAK, POLISH)
* 910	4-418-120-51	Operating Guide (SWEDISH, DANISH, FINNISH, ROMANIAN)
* 910	4-418-120-61	Operating Guide (RUSSIAN, UKRAINIAN)
* 910	4-418-120-71	Operating Guide (TRADITIONAL CHINESE) (HK)
910	4-418-120-81	Operating Guide (SIMPLIFIED CHINESE) (E:PAL)
* 910	4-418-120-91	Operating Guide (ARABIC, PERSIAN)
* 910	4-418-121-11	Operating Guide (MALAY)
* 910	4-418-121-21	Operating Guide (INDONESIAN)
* 910	4-418-121-31	Operating Guide (THAI)
910	4-418-122-11	Operating Guide (SIMPLIFIED CHINESE) (CH)

Note : This unit has no bundled CD-ROM.
Contents included in the CD-ROM will be supplied to customers as follows.

- User Guide (HTML)
 - You can access to the URL of support site described in the Instruction Manual.
- Application Software
 - By connecting this unit and Windows PC with the USB cable, the application software [PlayMemories Home Lite version] can be installed on the PC from the unit.
 - In case of using the extended version, install "Expanded Feature" via Internet.
 - If a customer requests the CD-ROM, consult with each Head Quarters.

This item is supplied with the unit as an accessory, but is not prepared as a service part.


931



Ref. No.	Part No.	Description
△ 931	(Not supplied)	Rechargeable battery pack (NP-FV50)

Ver. 1.1 2012.05
The changed portions from
Ver. 1.0 are shown in blue.

2-1-2. OVERALL SECTION-2

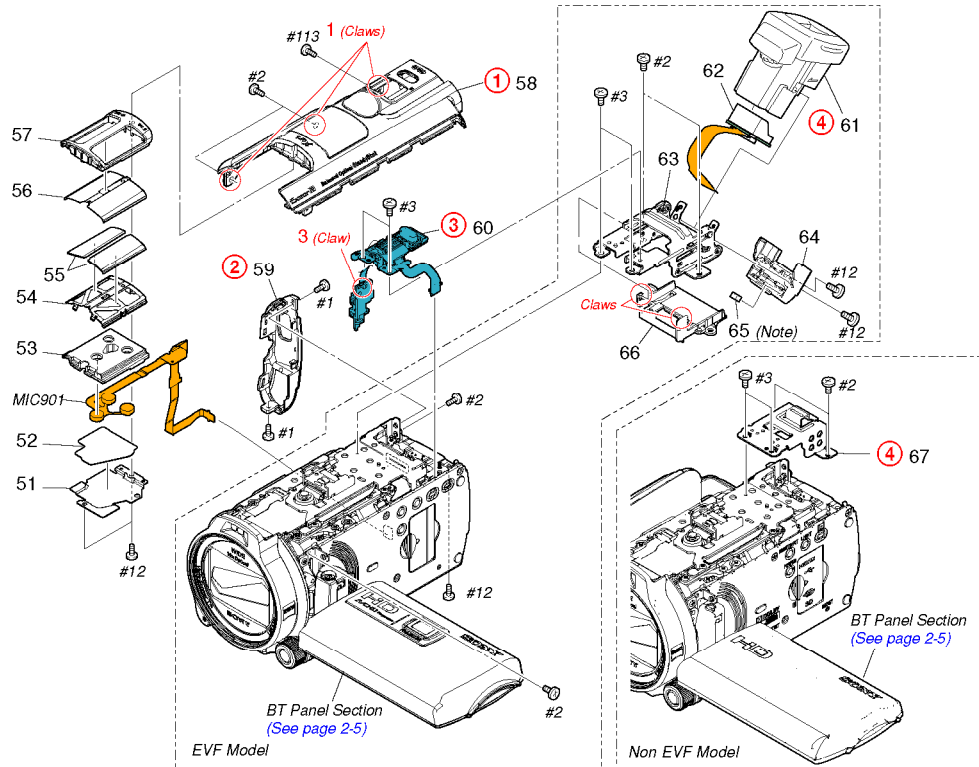

Ref. No.	Part No.	Description
51	4-422-281-01	FRAME, MICROPHONE
52	4-422-280-01	CUSHION, MICROPHONE
53	4-422-279-01	INSULATOR, MICROPHONE
54	4-422-282-01	RETAINER, GRILLE
55	4-422-278-01	SCREEN, WIND
56	4-422-277-01	GRILLE, MICROPHONE
57	4-422-276-01	CABINET, MICROPHONE
58	X-2584-149-1	CABINET (TOP (399)) ASSY (CX740VE/CX760V/PJ740VE/PJ760V/PJ760VE)
58	X-2584-150-1	CABINET (TOP (399N)) ASSY (CX730E/CX740E/CX760E/PJ760/PJ760E)
58	X-2584-151-1	CABINET (TOP (390)) ASSY (CX720V/PJ710V/PJ710VE)

Ref. No.	Part No.	Description
58	X-2584-152-1	CABINET (TOP (390N)) ASSY (PJ710/PJ720E)
59	X-2584-164-1	COVER ASSY, L
60	1-489-964-11	SWITCH BLOCK, CONTROL (PS39900)
61	X-2584-162-1	EYE CUP ASSY (EVF Model)
62	1-811-013-11	LCD MODULE (FL0906) (EVF Model)
63	X-2584-161-1	FRAME ASSY, VF (EVF Model)
64	4-422-351-01	RETAINER, VF HOLDER (EVF Model)
65	1-471-577-11	MAGNET (HOLE SENSOR) (EVF Model) (Note)
66	4-422-367-01	BASE, VF (EVF Model)
67	4-422-366-01	FRAME, PS (Non EVF Model)
MIC901	1-542-907-11	MICROPHONE UNIT
#1	2-635-562-11	SCREW (M1.7)
#2	2-635-562-31	SCREW (M1.7)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
#12	3-080-204-21	SCREW, TAPPING, P2
#113	2-635-562-41	SCREW (M1.7)