


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION-1

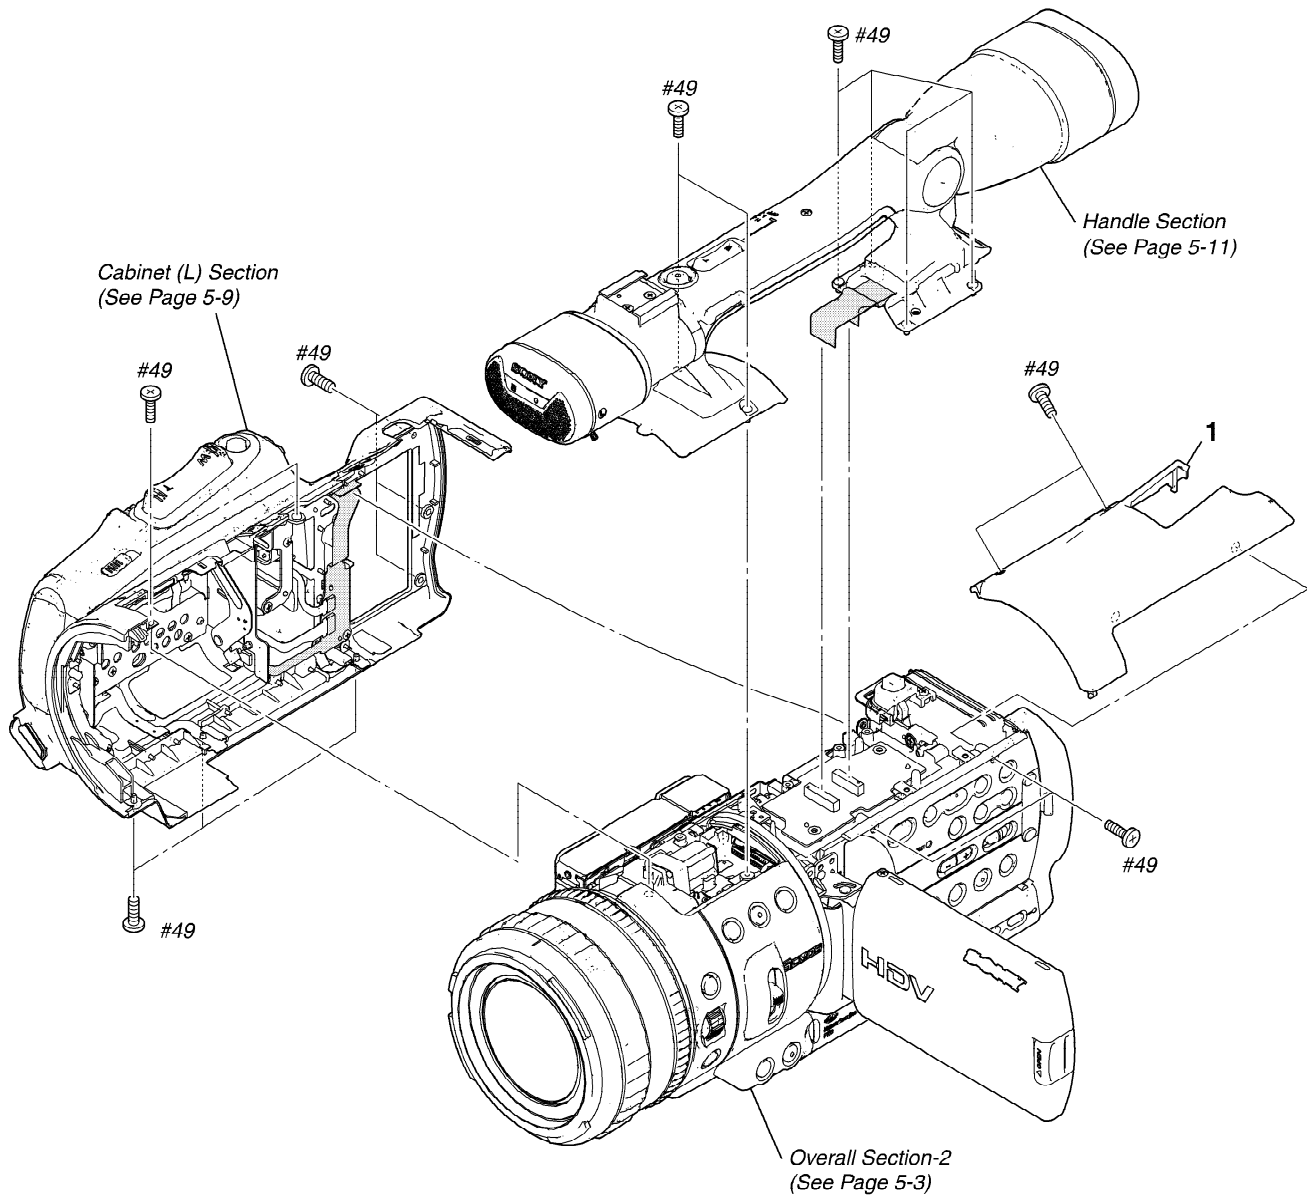

Ref. No.	Part No.	Description
1	2-891-978-01	CABINET, TOP


Ref. No.	Part No.	Description
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. OVERALL SECTION-2

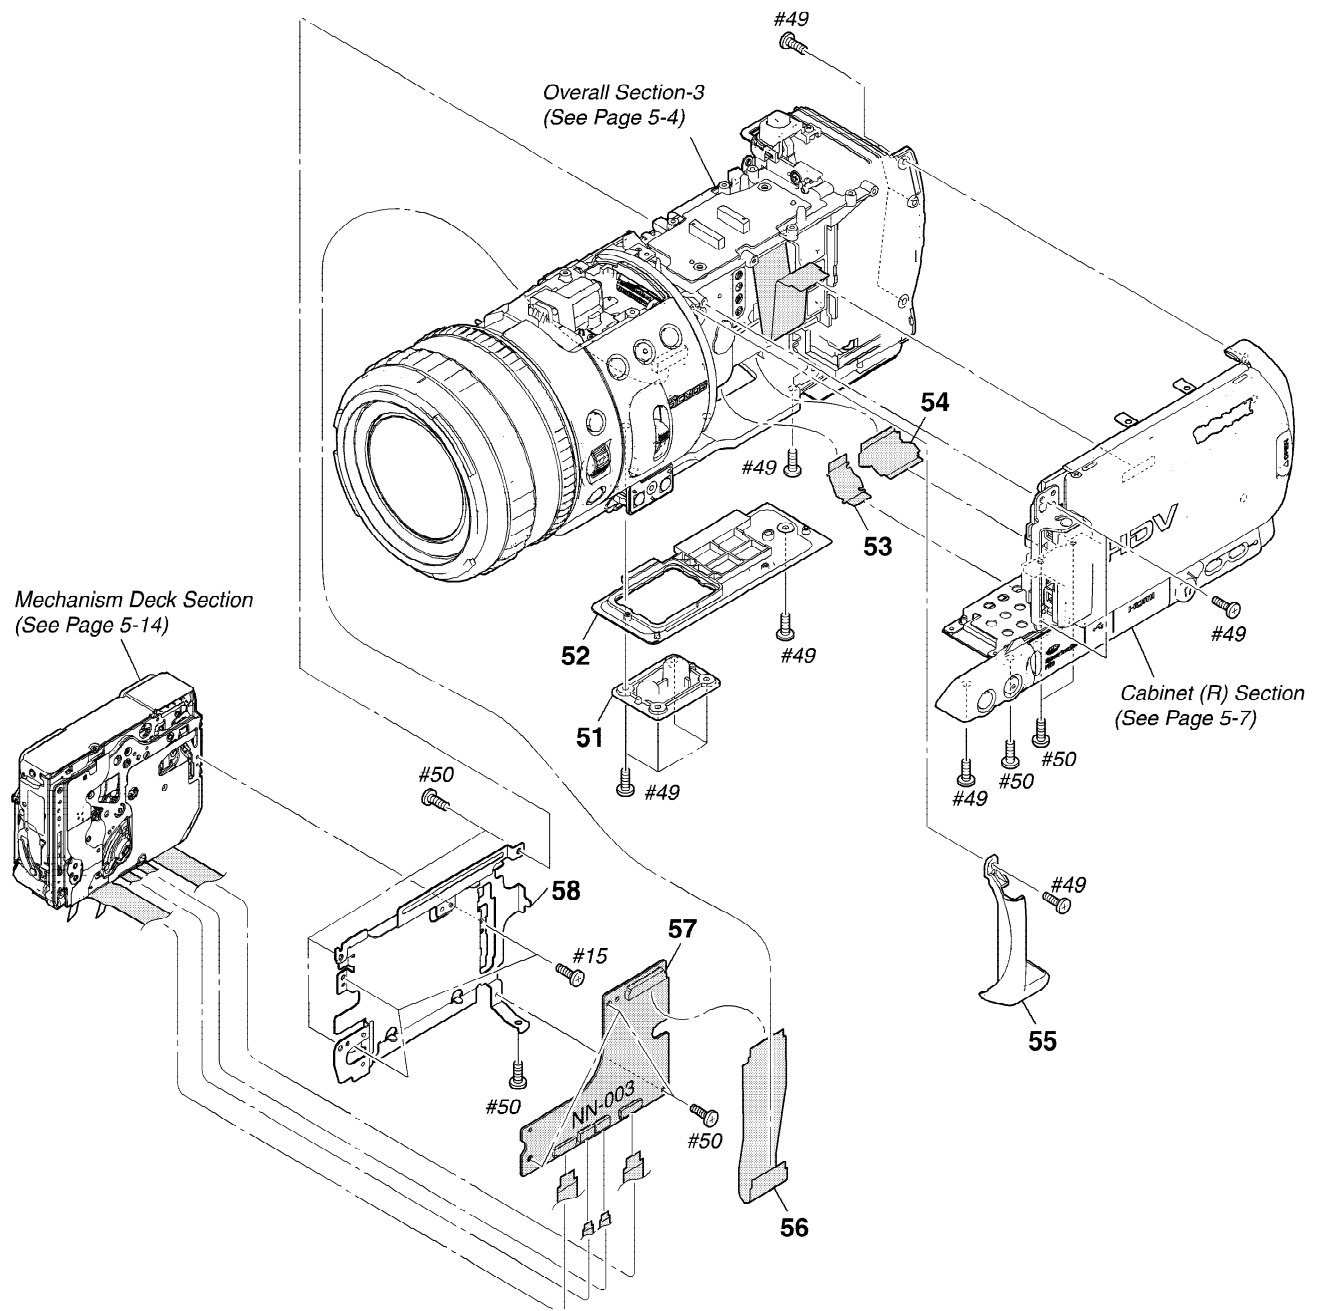

Ref. No.	Part No.	Description
51	2-178-793-01	BRACKET (TRIPOD)
52	2-891-980-01	PLATE, BOTTOM
53	1-870-118-11	FP-496 FLEXIBLE BOARD
54	1-870-115-11	FP-493 FLEXIBLE BOARD
55	2-892-031-01	COVER (F), HINGE
56	1-870-113-11	FP-491 FLEXIBLE BOARD

Ref. No.	Part No.	Description
57	A-1217-220-A	NN-003 BOARD, COMPLETE
* 58	X-2149-998-1	FRAME ASSY, MD
#15	3-062-214-01	SCREW (M1.4X1.5) (Silver)
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. OVERALL SECTION-3

ns: not supplied

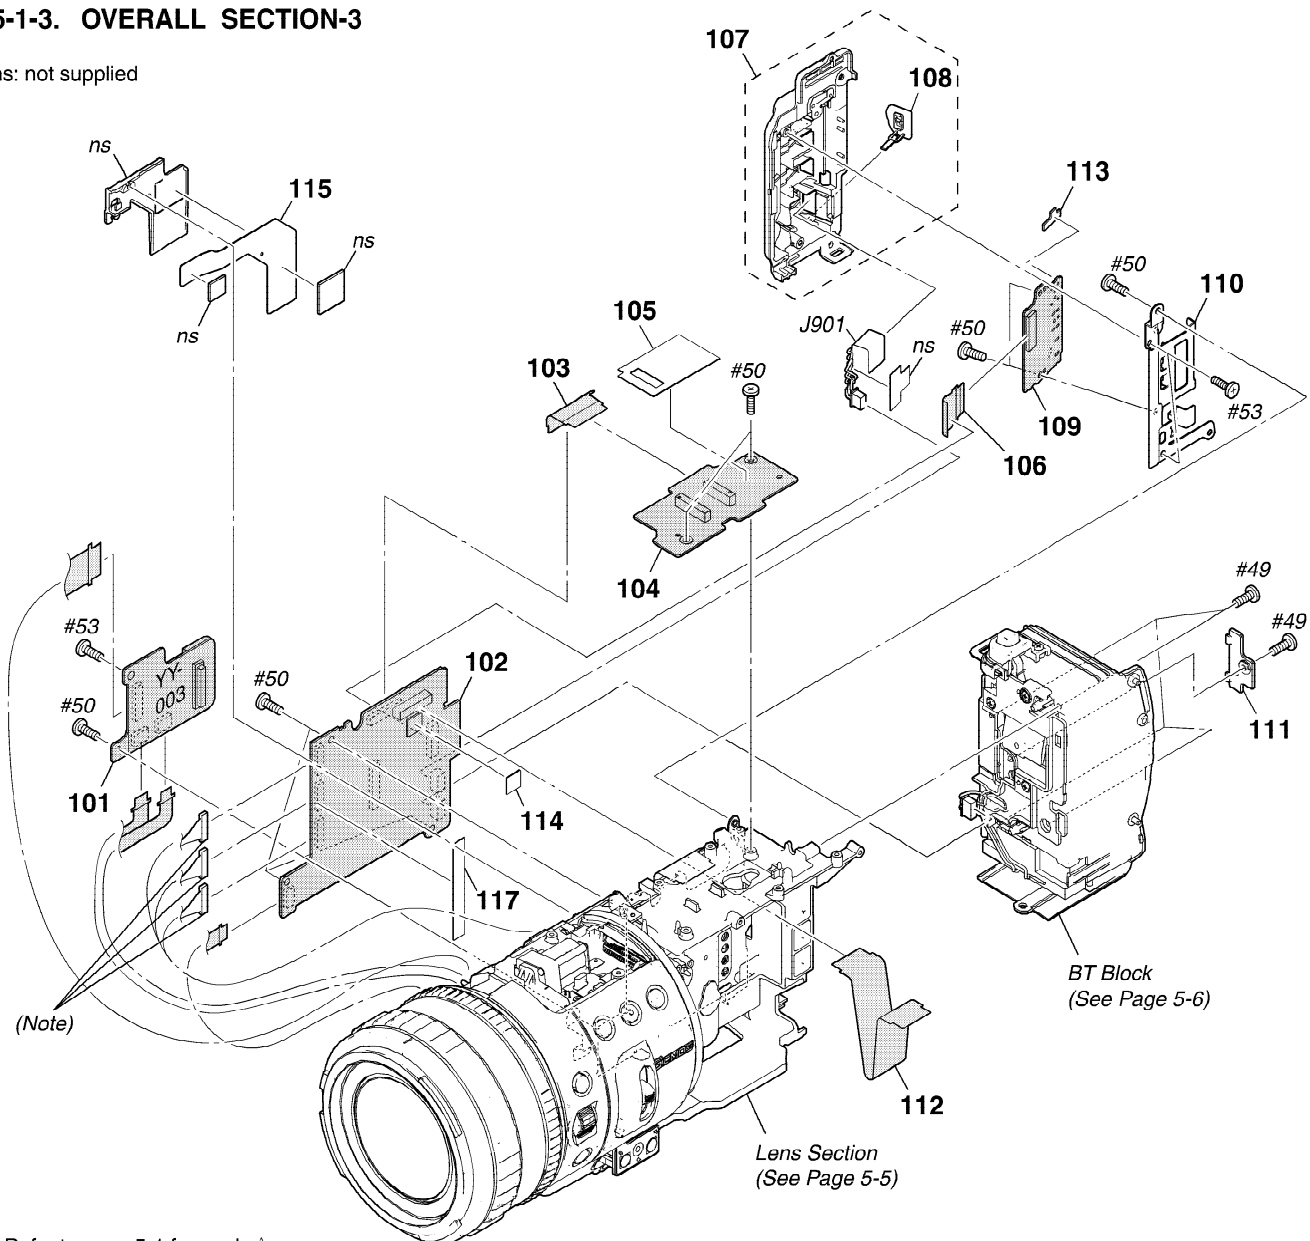

• Refer to page 5-1 for mark △.

Note: ハーネス (coaxial cable) を抜く時は2-1ページの "Note for disconnecting the harness (coaxial cable)" を参照してください。

Note: Refer to page 2-1 "Note for disconnecting the harness (coaxial cable)" when changing the harness (coaxial cable).

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
101	A-1217-225-A	YY-003 BOARD, COMPLETE	* 110	2-891-977-01	HOLDER, JACK PC BOARD (L)
102	A-1217-675-A	TT-003 BOARD, COMPLETE (SERVICE) (NTSC: FX7)	111	2-891-982-01	LID, CPC
102	A-1217-676-A	TT-003 BOARD, COMPLETE (SERVICE) (PAL: FX7E)	112	1-870-116-11	FP-494 FLEXIBLE BOARD
103	1-870-114-11	FP-492 FLEXIBLE BOARD	* 113	2-891-983-01	CUSHION, LIGHT INTERCEPTION
104	A-1217-222-A	OO-003 BOARD, COMPLETE	* 114	2-891-990-01	SPACER (DZ)
* 105	2-896-054-01	SHEET (TP)	* 115	2-891-985-01	SHEET (GF)
106	1-870-117-11	FP-495 FLEXIBLE BOARD	* 117	2-899-567-01	SHEET (TT)
107	X-2149-994-1	CABINET (L) ASSY, JACK	△ J901	1-815-005-11	CONNECTOR, DC-IN
108	2-891-959-01	DC, JACK LID	#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
109	A-1217-208-A	II-003 BOARD, COMPLETE	#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)
			#53	3-080-206-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. LENS SECTION

ns: not supplied

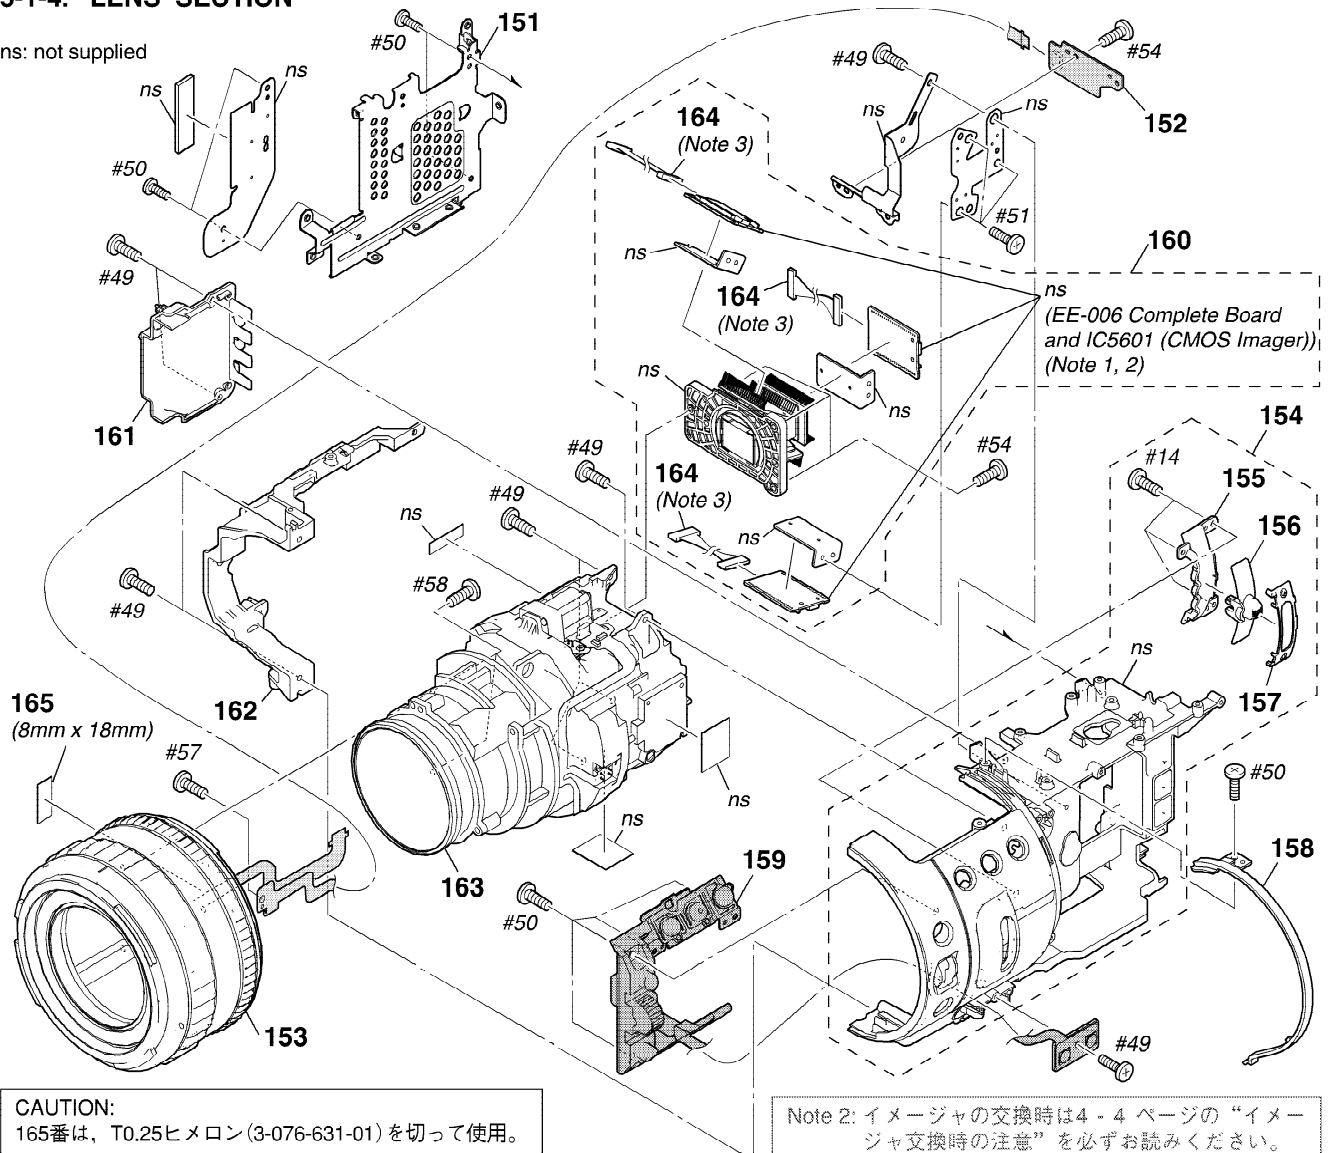

CAUTION:
165番は、T0.25ヒメロン(3-076-631-01)を切って使用。

CAUTION:
For the part of 165, cut WOVEN (T0.25), FABRIC NON (3-076-631-01) into the desired length and use it.

Note 1: マウント済EE-006基板とIC5601は交換対象ではありませんが、プリズム組立に含まれます。

Note 1: EE-006 complete board and IC5601 are not supplied, but they are included in prism assy.

Note 2: イメージャの交換時は4 - 4 ページの“イメージャ交換時の注意”を必ずお読みください。

Note 2: Be sure to read “Precautions for Replacement of Imager” on page 4-3 when changing the imager.

Note 3: ハーネス (coaxial cable) を抜く時は2-1ページの“Note for disconnecting the harness (coaxial cable)”を参照してください。

Note 3: Refer to page 2-1 “Note for disconnecting the harness (coaxial cable)” when changing the harness (coaxial cable).

Ref. No.	Part No.	Description
* 151	X-2159-300-1	BRACKET (VC) ASSY
152	A-1227-577-A	JJ-004 BOARD, COMPLETE (SERVICE)
153	2-898-190-01	RING UNIT (B187A (SERVICE))
154	X-2149-991-1	CHASSIS ASSY, CENTER (J)
154	X-2149-992-1	CHASSIS ASSY (E), CENTER (EXCEPT J)
* 155	2-891-955-01	RETAINER, ND KNOB
* 156	2-891-954-01	KNOB, ND
* 157	2-891-956-01	PLATE, ND CLICK
158	2-891-975-01	RING, ORNAMENTAL
159	1-479-812-11	SWITCH BLOCK, CONTROL (CK18500)
160	A-1223-596-A	PRISM ASSY (SERVICE) (Note 1, 2)
* 161	2-891-979-01	PLATE (CMOS), INTERCEPTION


Ref. No.	Part No.	Description
* 162	X-2149-999-1	BRACKET (CL) ASSY
163	A-1224-327-A	UNIT ASSY (B187A (SERVICE))
164	1-963-577-41	HARNESS (COAXIAL CABLE) (Note 3)
165	CAUTION	WOVEN (T0.25), FABRIC NON
#14	2-599-475-11	SCREW (M1.7) (Silver)
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)
#51	3-073-686-01	SCREW (M2X2.5) (Silver)
#54	3-318-203-11	SCREW, TAPPING, P3 (Black)
#57	7-627-852-18	SCREW, PRECISION +P 1.7X4 TYPE3 (Black)
#58	3-719-408-11	SCREW (B2), TAPPING, P3 (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. BT BLOCK

ns: not supplied

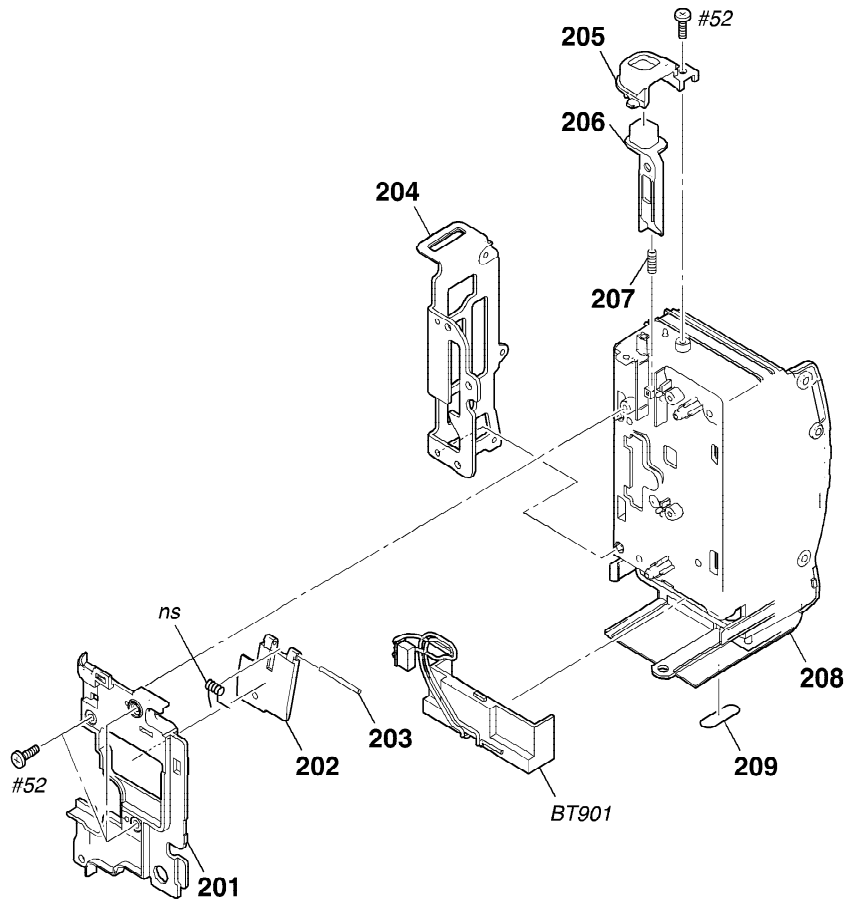

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
201	2-891-969-01	COVER, BT LOCK
202	3-060-595-01	CLAW, BT LOCK
203	3-968-770-01	SHAFT, BT
204	2-891-968-01	SHEET METAL (L), STRAP
205	2-891-970-01	COVER, BT RELEASE
206	2-891-967-01	RELEASE (SW)

Ref. No.	Part No.	Description
207	3-968-771-01	SPRING, COMPRESSION
208	2-891-966-01	PANEL, BATTERY
209	2-178-805-01	FOOT, RUBBER
△ BT901	1-694-411-31	TERMINAL BOARD, BATTERY
#52	3-080-206-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. CABINET (R) SECTION

ns: not supplied

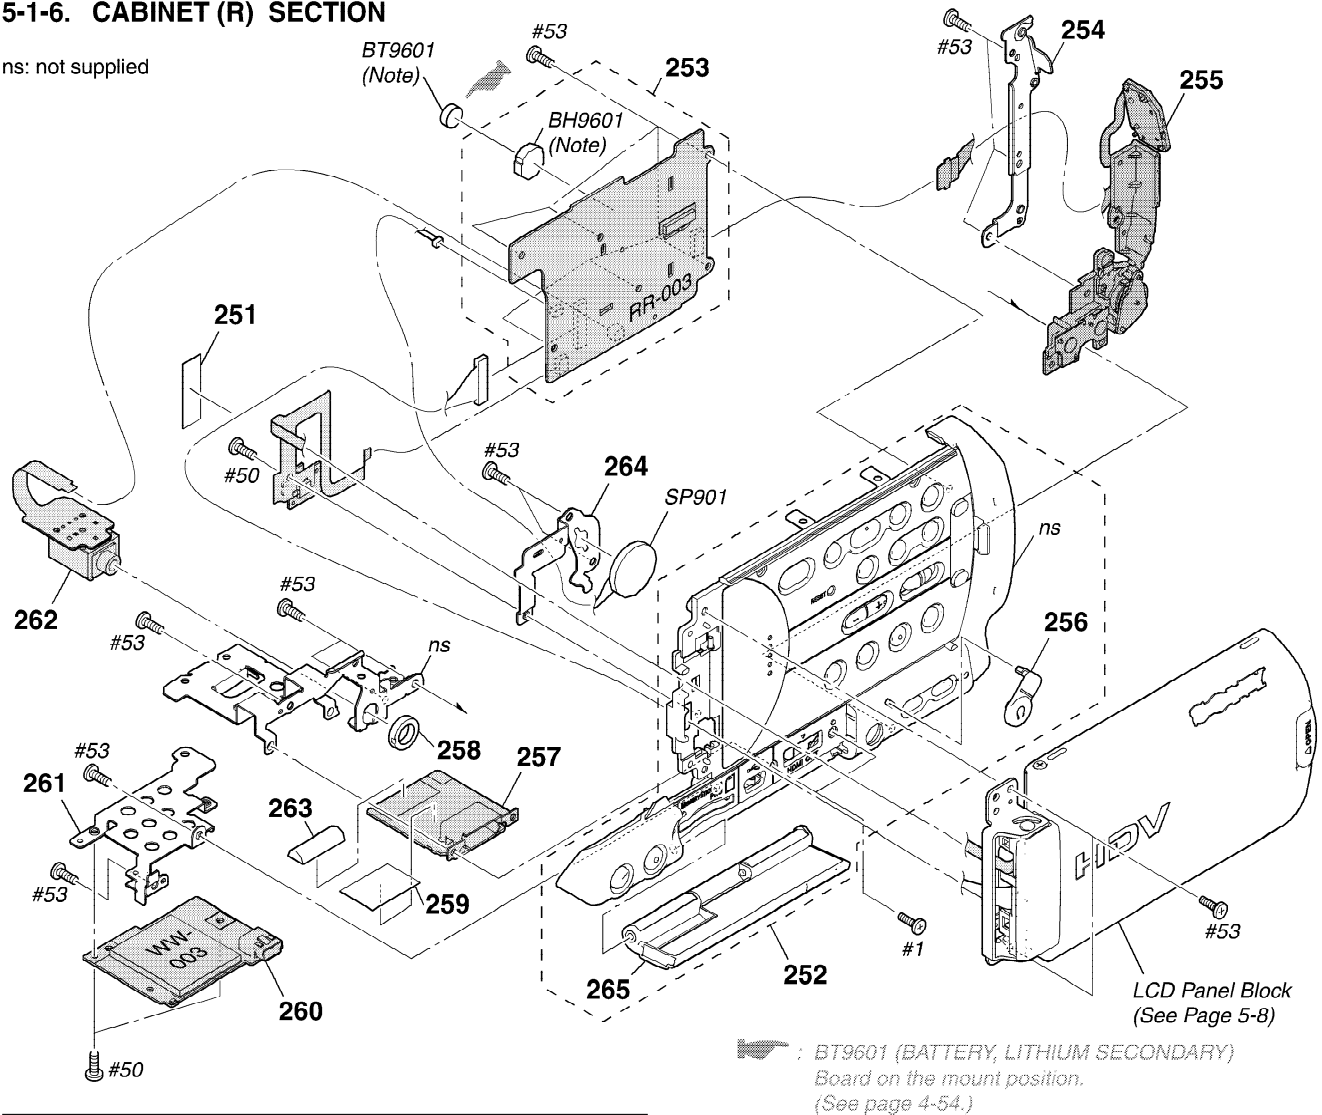

Note: Replace the battery holder (BH9601) together when replacing the lithium battery (BT9601) on the RR-003 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: RR-003基板のリチウム電池(BT9601)を交換する場合はバッテリーホルダ(BH9601)も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着して下さい。

BT9601 (BATTERY, LITHIUM SECONDARY)
Board on the mount position.
(See page 4-54.)

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意
電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

• Refer to page 5-1 for mark △.


Ref. No.	Part No.	Description
251	3-941-343-01	TAPE (A)
252	X-2159-306-1	CABINET (R) ASSY (J)
252	X-2159-307-1	CABINET (R) ASSY (E) (EXCEPT J)
253	A-1217-212-A	RR-003 BOARD, COMPLETE
* 254	2-892-033-01	PLATE, CF RETAINER
255	1-479-813-11	SWITCH BLOCK, CONTROL (CF18500)
256	2-892-026-01	LID, HEADPHONE
257	A-1217-219-A	HH-003 BOARD, COMPLETE
258	3-061-234-01	NUT (M6X0.5)
* 259	2-899-674-01	SHEET (HH), INSULATING
260	A-1217-214-A	WW-003 BOARD, COMPLETE

Ref. No.	Part No.	Description
* 261	2-892-030-01	FRAME, JACK FIXED
262	A-1217-231-A	FP-486 FLEXIBLE BOARD, COMPLETE
* 263	2-892-034-01	SHEET (HH)
* 264	X-2159-309-1	RETAINER ASSY, SP
265	X-2176-355-1	LID (R) ASSY, JACK
△ BH9601	1-756-615-41	HOLDER, BATTERY (Note)
△ BT9601	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
SP901	1-825-260-23	LOUD SPEAKER (1.6CM)
#1	2-635-562-11	SCREW (M1.7) (Black)
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)
#53	3-080-206-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-7. LCD PANEL BLOCK

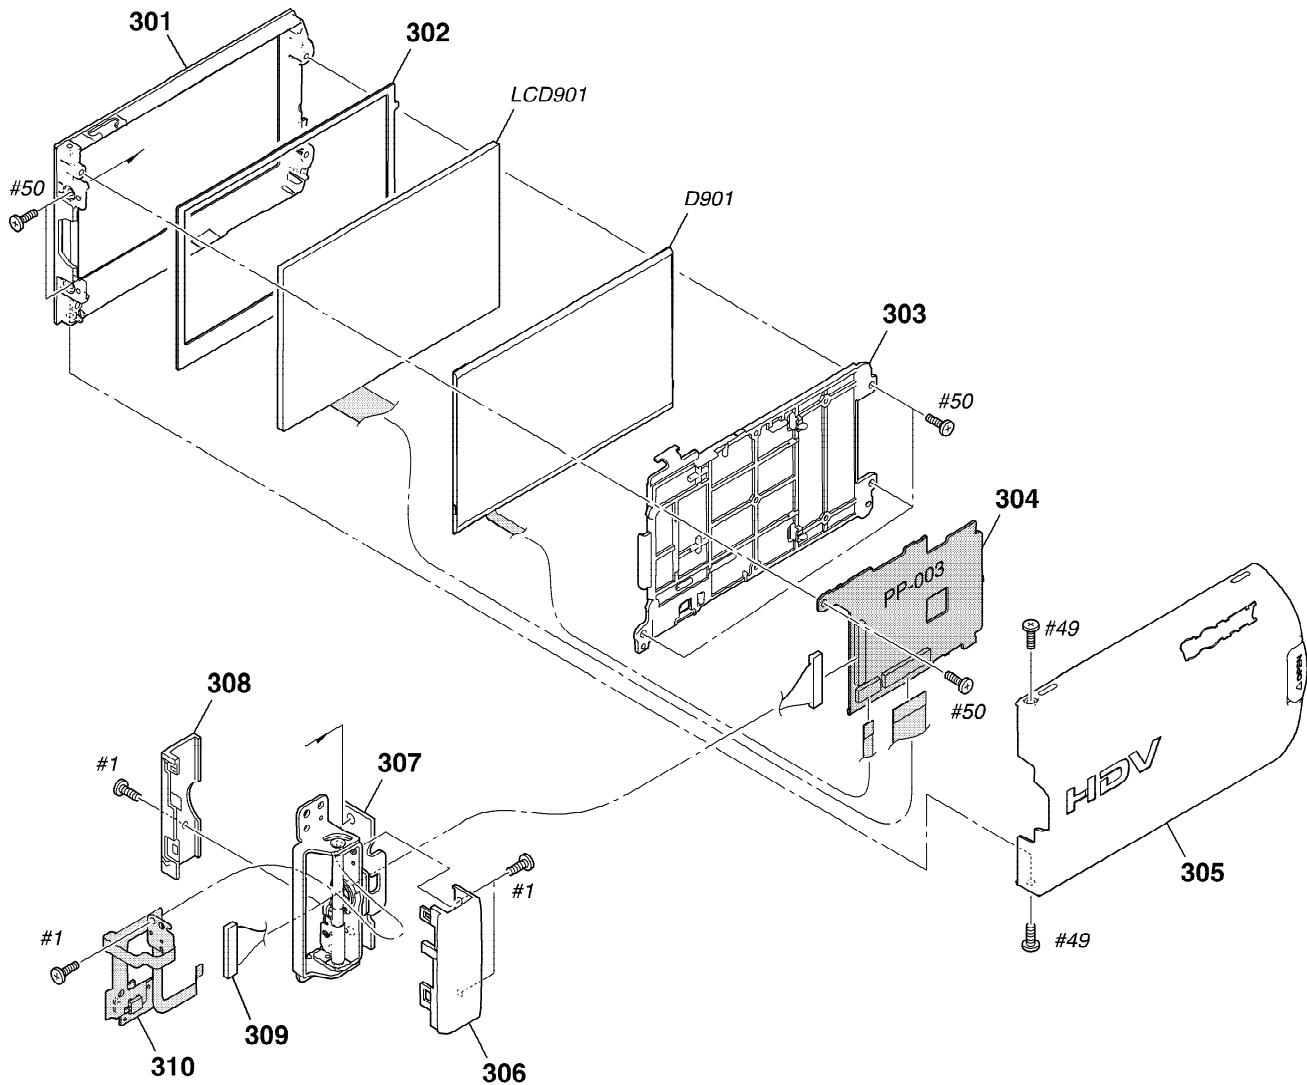

Ref. No.	Part No.	Description
301	2-892-044-01	CABINET (L), PANEL
* 302	2-892-045-01	CUSHION, LCD
303	X-2159-313-1	FRAME ASSY, PANEL
304	A-1217-211-A	PP-003 BOARD, COMPLETE
305	X-2159-311-1	CABINET (R) ASSY, PANEL
306	2-892-046-01	COVER (R), HINGE
307	X-2159-310-1	HINGE ASSY
308	3-090-382-21	COVER (REAR), HINGE


Ref. No.	Part No.	Description
309	1-964-790-11	HARNESS (PR-074)
310	A-1217-232-A	FP-487 FLEXIBLE BOARD, COMPLETE
D901	1-479-622-11	BLOCK, LIGHT GUIDE PLATE (3.5)
LCD901	8-753-270-54	ACX545AKA-1
#1	2-635-562-11	SCREW (M1.7) (Black)
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-8. CABINET (L) SECTION

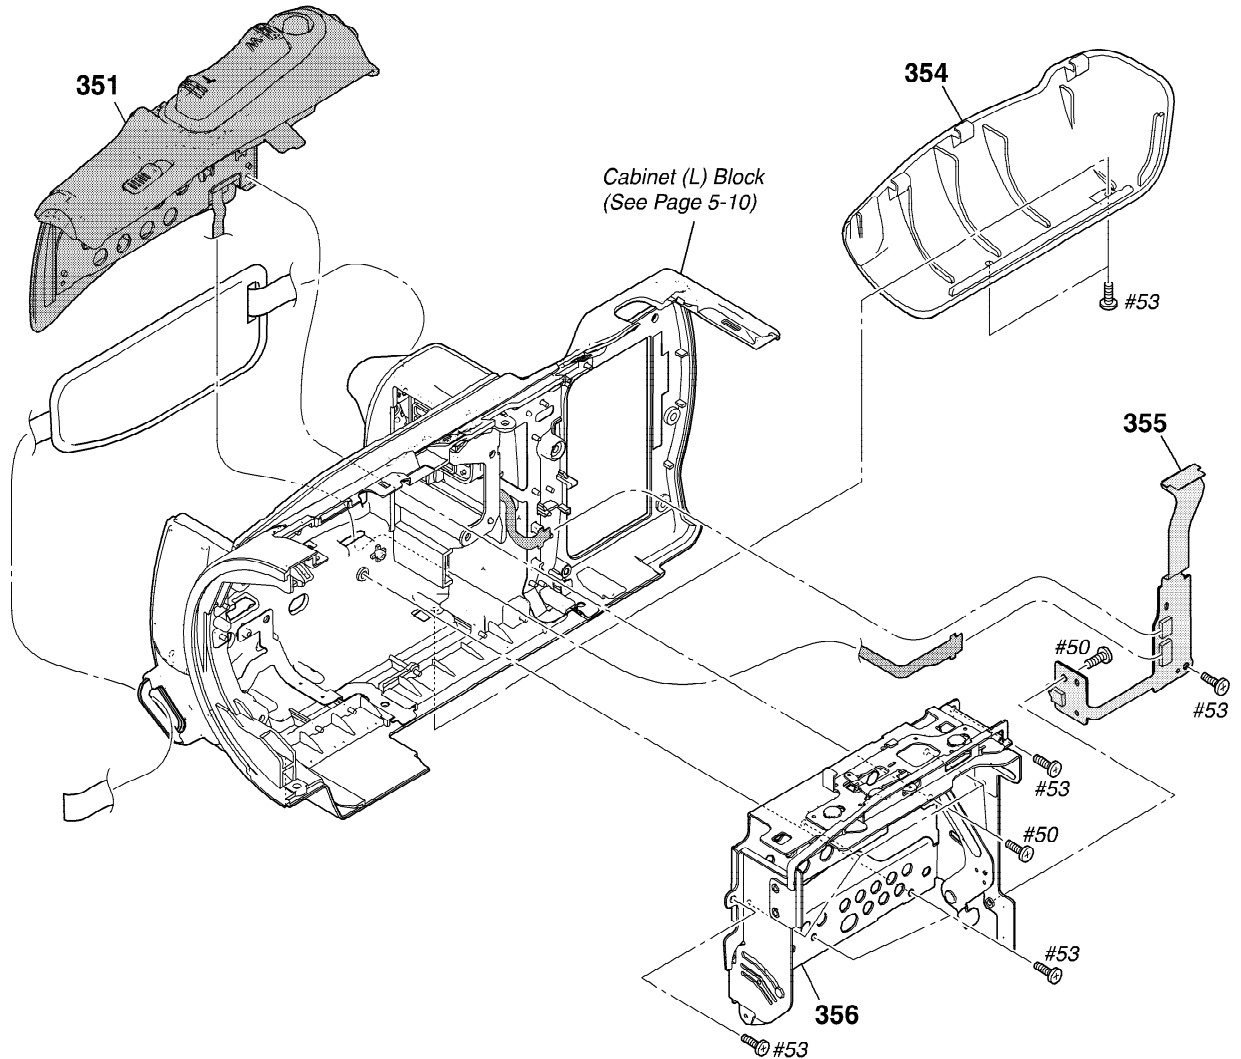

Ref. No.	Part No.	Description
351	1-479-814-11	SWITCH BLOCK, CONTROL (PL18500) (J)
351	1-479-814-21	SWITCH BLOCK, CONTROL (PL18500) (EXCEPT J)
354	2-891-976-01	COVER, GRIP
355	A-1217-230-A	FP-485 FLEXIBLE BOARD, COMPLETE


Ref. No.	Part No.	Description
* 356	X-2159-301-1	FRAME ASSY, CS
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)
#53	3-080-206-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-9. CABINET (L) BLOCK

ns: not supplied

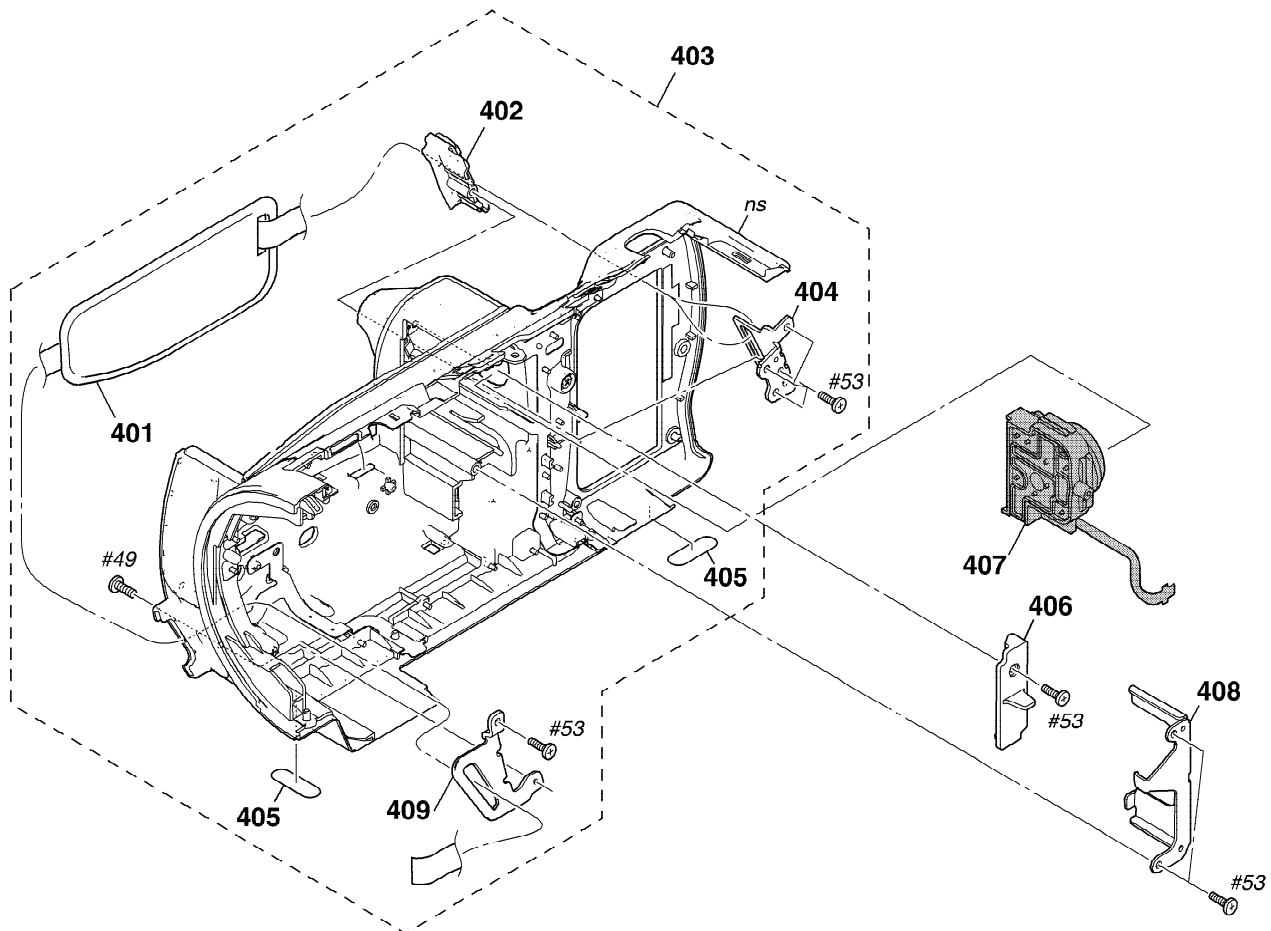

Ref. No.	Part No.	Description
401	2-892-004-01	BELT, GRIP
* 402	2-892-001-01	HOLDER, GRIP BELT
403	X-2159-302-1	CABINET (L) ASSY (J)
403	X-2159-303-1	CABINET (L) ASSY (E) (EXCEPT J)
* 404	2-892-003-01	BRACKET (R), GRIP BELT
405	2-178-805-01	FOOT, RUBBER

Ref. No.	Part No.	Description
* 406	2-892-005-01	RETAINER, PS
407	1-479-811-11	SWITCH BLOCK, CONTROL (PS18500)
* 408	2-891-981-01	PLATE, PS FIXED
* 409	2-892-002-01	BRACKET (F), GRIP BELT
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#53	3-080-206-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-10. HANDLE SECTION

ns: not supplied

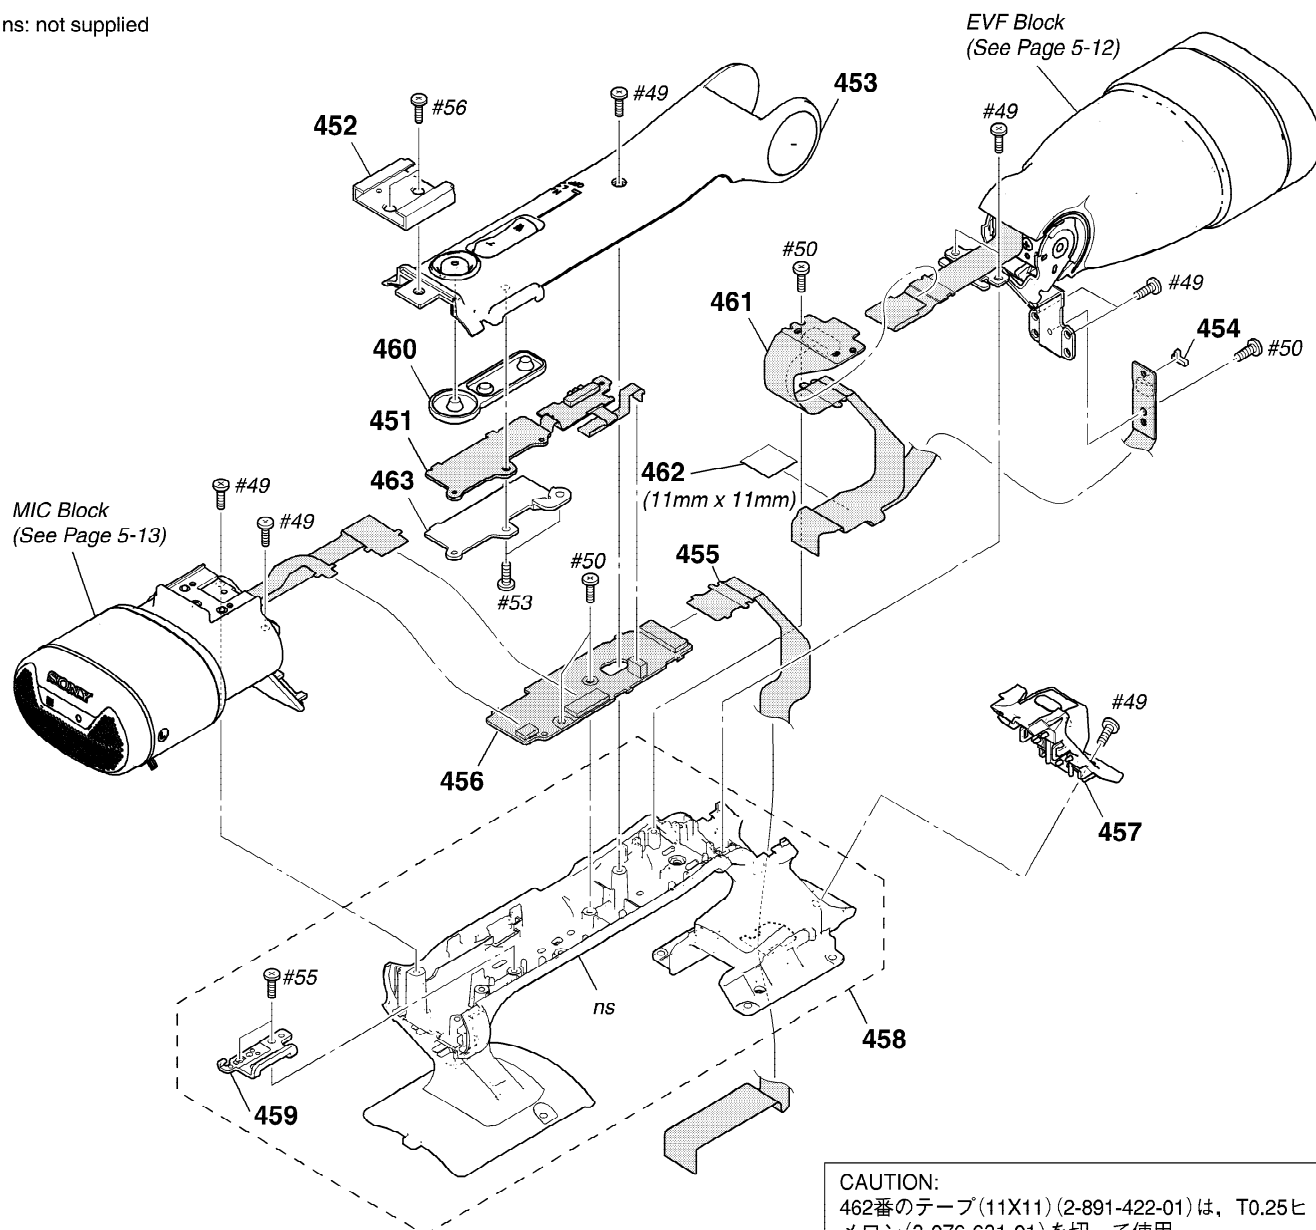

CAUTION:
462番のテープ(11X11) (2-891-422-01)は、T0.25ヒメロン(3-076-631-01)を切って使用。

CAUTION:
For the part of 462: TAPE (11X11) (2-891-422-01), cut WOVEN (T0.25), FABRIC NON (3-076-631-01) into the desired length and use it.


Ref. No.	Part No.	Description
451	A-1217-228-A	FP-483 FLEXIBLE BOARD, COMPLETE
452	3-067-469-11	SHOE, ACCESSORY
453	X-2159-319-1	HANDLE CABINET (UPPER) ASSY (J)
453	X-2159-320-1	CABINET (UPPER) ASSY (E), (EXCEPT J)
* 454	2-891-983-01	CUSHION, LIGHT INTERCEPTION
455	1-870-119-11	FP-497 FLEXIBLE BOARD
456	A-1217-217-A	GG-003 BOARD, COMPLETE
457	X-2159-322-1	BASE ASSY, REMOTE CONTROL
458	X-2159-317-1	HANDLE CABINET ASSY
* 459	2-892-063-01	SHEET METAL, BELT

Ref. No.	Part No.	Description
* 460	2-892-090-01	KEY, RUBBER TACT
461	A-1217-229-A	FP-484 FLEXIBLE BOARD, COMPLETE
462	CAUTION	TAPE (11X11)
463	2-898-108-01	BASE, 2ND KEY
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)
#53	3-080-206-21	SCREW, TAPPING, P2 (Black)
#55	2-655-582-11	SCREW 0+P2 M2 NEWTRU-STAR (Silver)
#56	3-067-187-11	ACE, PLATE SCREW (M2) LOCK (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-11. EVF BLOCK

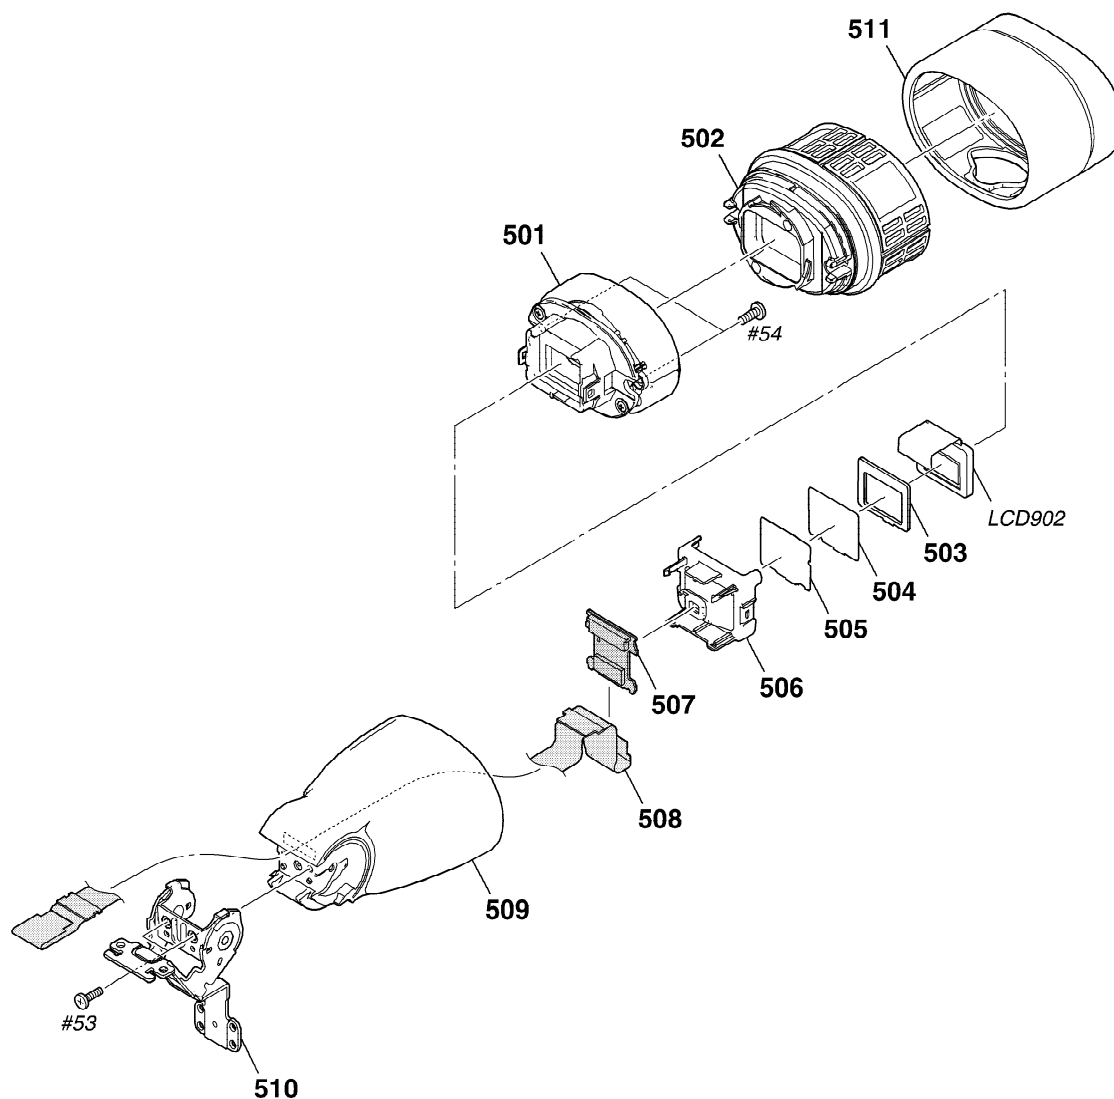

Ref. No.	Part No.	Description
501	X-2159-325-1	HOLDER ASSY, VF PANEL
502	X-2159-324-1	FINDER ASSY
503	2-892-122-01	CUSHION, VF PANEL
504	2-633-596-01	SHEET (1), VF PRISM
505	2-633-595-01	SHEET (2), VF DIFFUSION
506	2-892-120-01	LAMP, VF HOLDER,
507	A-1217-213-A	UU-003 BOARD, COMPLETE


Ref. No.	Part No.	Description
508	1-870-123-11	FP-501 FLEXIBLE BOARD
509	X-2159-327-1	CABINET ASSY, VF
510	X-2159-326-1	TILT ASSY, VF
511	2-892-123-01	EYE CUP
LCD902	8-753-210-99	LCX068AK-1
#53	3-080-206-21	SCREW, TAPPING, P2 (Black)
#54	3-318-203-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-12. MIC BLOCK

ns: not supplied

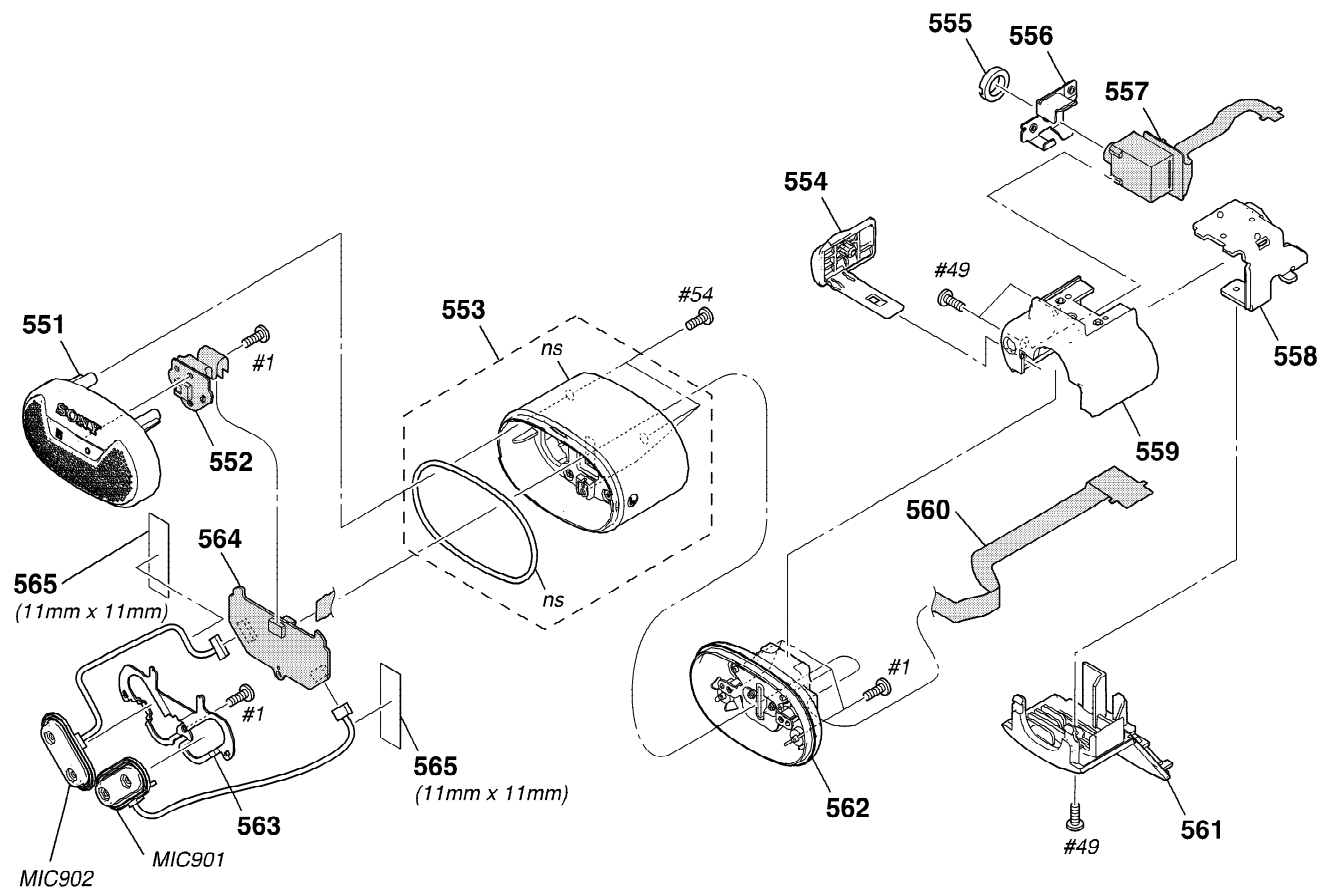

CAUTION:
565番のテープ(11X11) (2-891-422-01)は、T0.25ヒメロン(3-076-631-01)を切って使用。

CAUTION:
For the part of 565: TAPE (11X11) (2-891-422-01), cut WOVEN (T0.25), FABRIC NON (3-076-631-01) into the desired length and use it.


Ref. No.	Part No.	Description
551	X-2159-314-1	CABINET (FRONT) ASSY, MIC
552	A-1217-226-A	FP-481 FLEXIBLE BOARD, COMPLETE
553	X-2159-315-1	CABINET (CENTER) ASSY, MIC
554	2-892-088-01	COVER, PLUG
555	3-061-234-01	NUT (M6X0.5)
* 556	2-892-087-01	SHEET METAL, PLUG RETAINER
557	A-1217-227-A	FP-482 FLEXIBLE BOARD, COMPLETE
* 558	2-892-089-01	SHEET METAL, SHOE
559	2-892-085-01	HANDLE CABINET (FRONT (T))
560	1-870-120-11	FP-498 FLEXIBLE BOARD

Ref. No.	Part No.	Description
561	2-892-086-01	HANDLE CABINET (FRONT (B))
562	X-2159-316-1	CABINET (REAR) ASSY, MIC
* 563	2-892-060-01	SHEET METAL, RETAINER
564	A-1217-210-A	MM-061 BOARD, COMPLETE
565	CAUTION	TAPE (11X11)
MIC901	1-542-513-21	MICROPHONE R
MIC902	1-542-513-21	MICROPHONE L
#1	2-635-562-11	SCREW (M1.7) (Black)
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#54	3-318-203-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

5-1-13. MECHANISM DECK SECTION

ns: not supplied

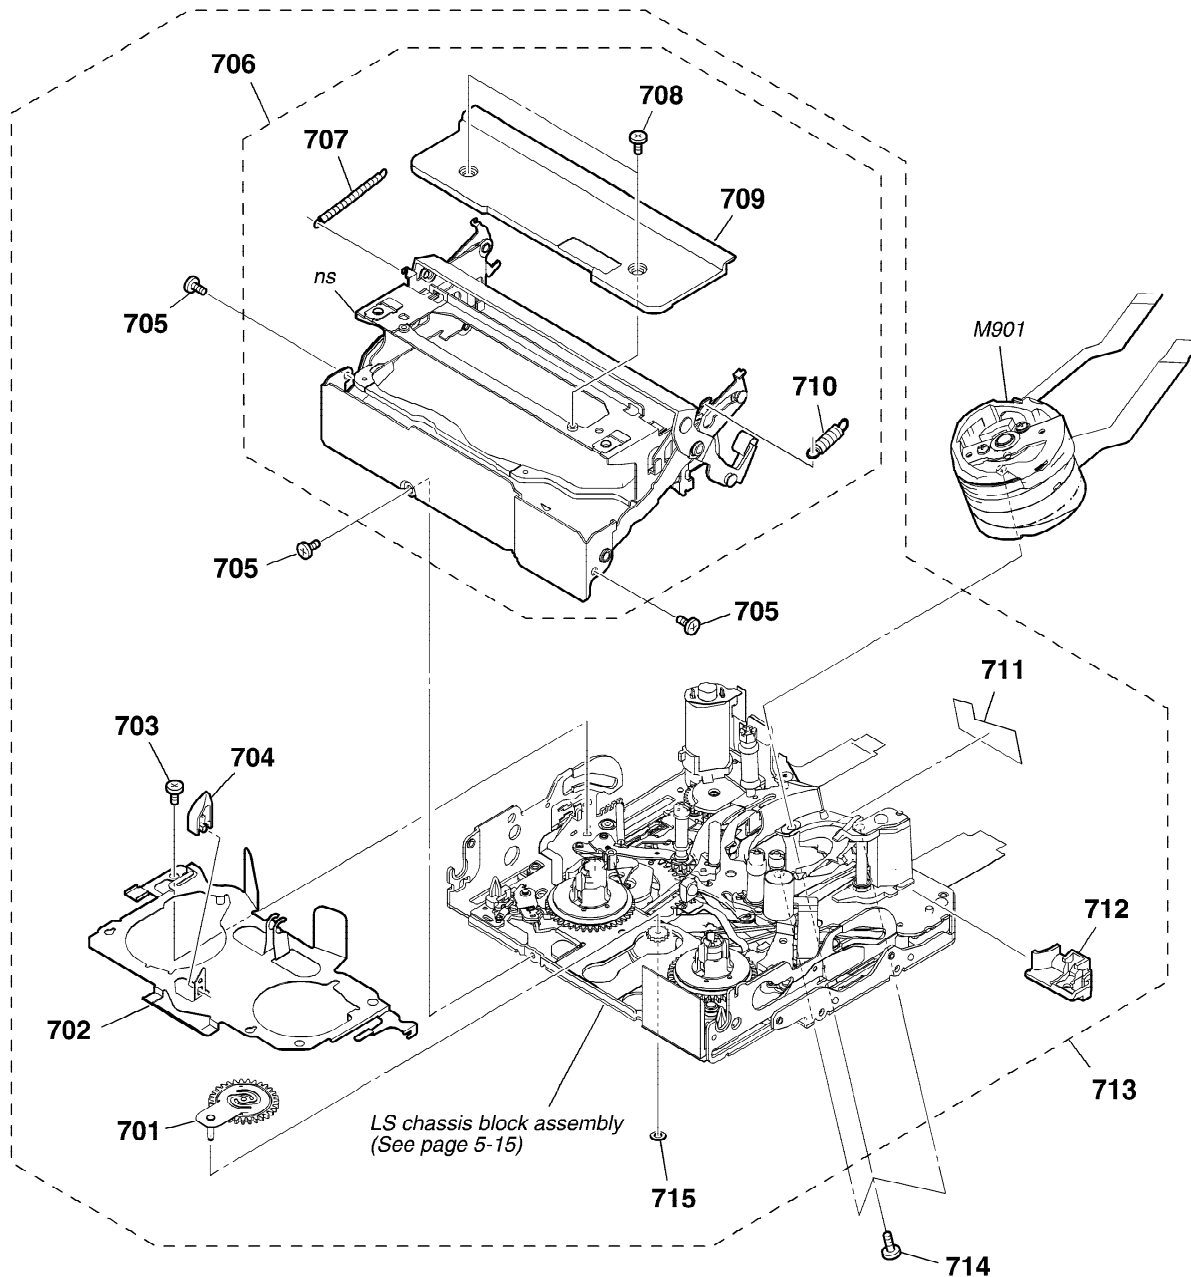


Ref. No.	Part No.	Description
701	X-2024-478-1	PENDULUM ASSY
702	2-342-917-02	LED BASE
703	7-627-850-77	SCREW, PRECISION +P 1.4X1.8
704	3-079-366-11	RELEASE, REEL LOCK
705	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD
706	X-2024-450-3	COMPARTMENT ASSY, CASSETTE
707	2-342-926-01	SPRING (ARM S), TENSION COIL
708	2-546-417-01	SCREW (M1.4)

Ref. No.	Part No.	Description
709	2-342-933-02	PLATE, TOP
710	2-342-927-01	SPRING (ARM T), TENSION COIL
711	2-637-905-01	SHEET, FLEXIBLE ADHESIVE
712	2-342-918-01	TG6 CATCHER
713	A-1080-997-A	MD (N100) SUB ASSY A
714	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
715	3-315-414-31	WASHER
M901	A-1154-545-A	DRUM (DEH-33E-R)

5. REPAIR PARTS LIST

5-1-14. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-1

ns: not supplied

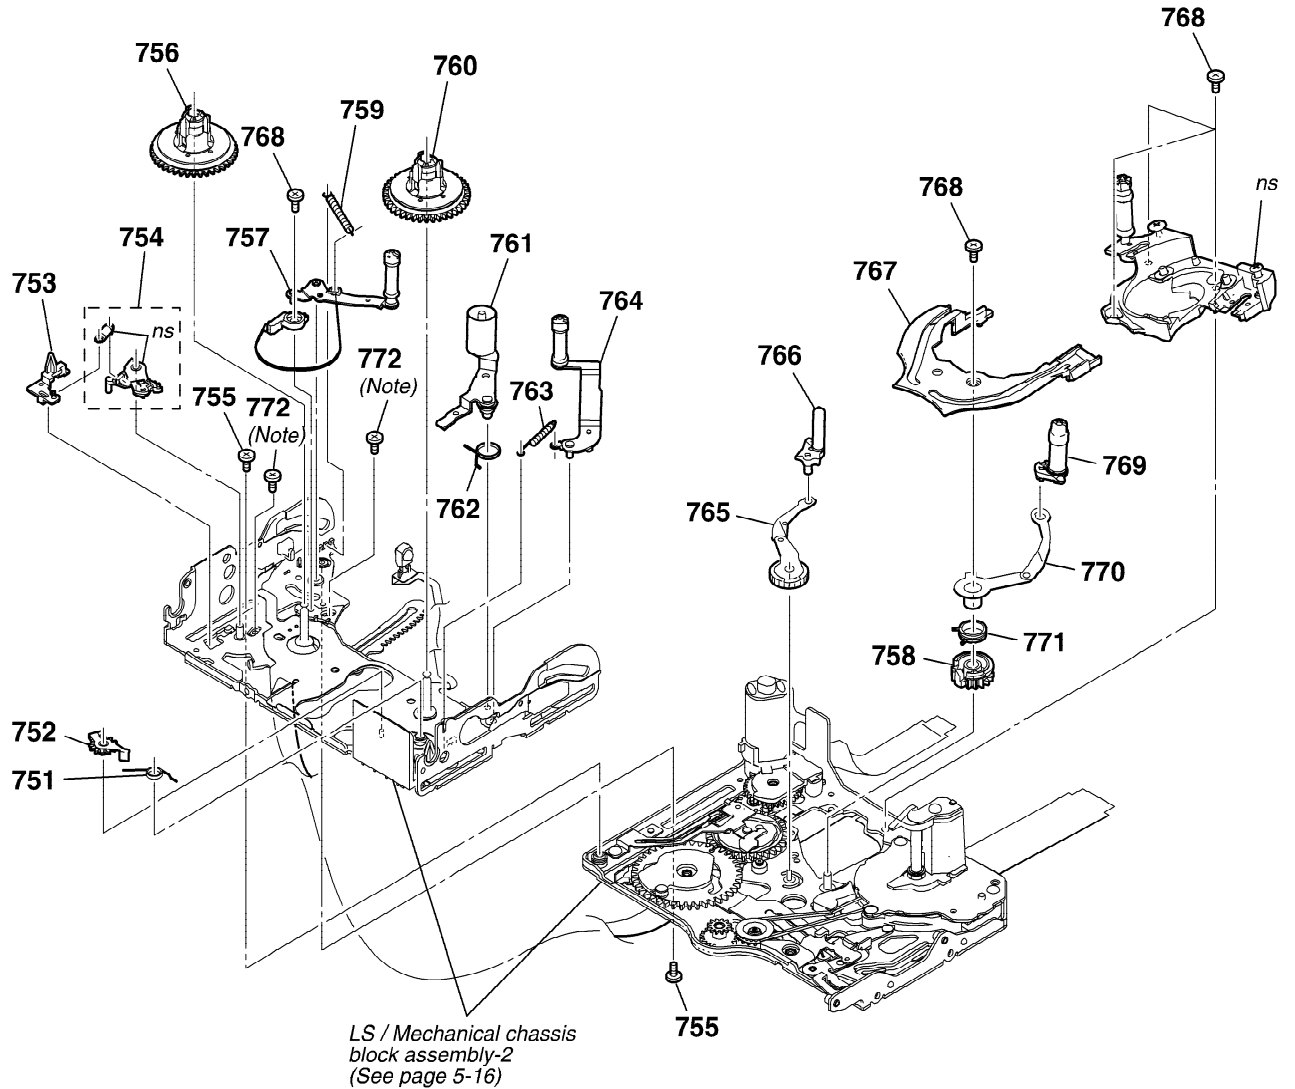

Note: These two screws are the fixing screws of the LS cam plate.
These two fixing screws are used for adjusting the LS cam plate position.
(refer to 4-2. LS cam adjustment of DV mechanical adjustment manual IX)


Ref. No.	Part No.	Description
751	2-342-759-01	SPRING, RVS BRAKE
752	A-1083-005-A	BLOCK ASSY, RVS BRAKE
753	2-342-731-01	POSITIONING, S
754	A-1083-006-A	BLOCK ASSY, S BRAKE
755	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD
756	X-2024-473-1	TABLE ASSY, S REEL
757	A-1083-007-B	BLOCK ASSY, TENSION REGULATOR
758	2-342-705-01	GEAR (T), GL
759	2-342-902-01	SPRING, TENSION REGULATOR
760	X-2024-474-1	TABLE ASSY, T REEL
761	X-2024-476-1	ARM ASSY, PINCH
762	2-342-906-01	SPRING (PINCH RETURN), TORSION

Ref. No.	Part No.	Description
763	2-342-626-01	SPRING (RETURN TG6), EXTENSION
764	A-1083-002-A	BLOCK ASSY, TG6
765	X-2024-468-3	ARM ASSY (S), GL
766	X-2024-465-1	COASTER (S) ASSY
767	2-342-612-01	RAIL
768	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
769	X-2024-466-1	COASTER (T) ASSY
770	X-2024-469-1	ARM (T) ASSY, GL
771	2-342-716-01	SPRING (T), TORSION COIL
772	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD (for adjustment)

5. REPAIR PARTS LIST

5-1-15. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-2

ns: not supplied

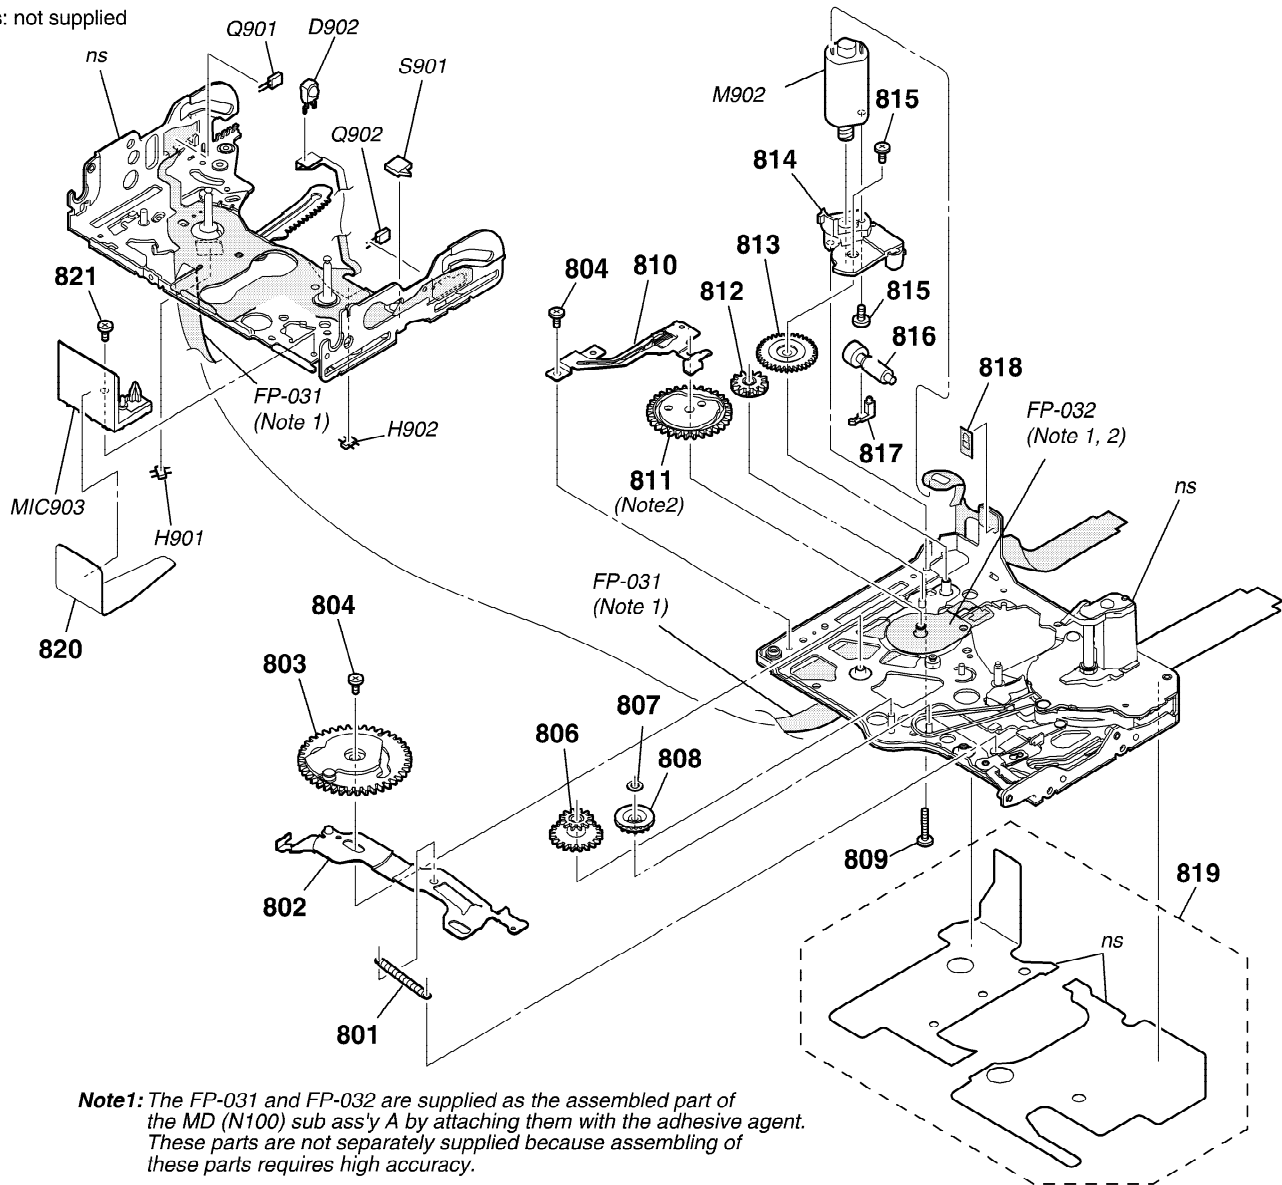

Note1: The FP-031 and FP-032 are supplied as the assembled part of the MD (N100) sub ass'y A by attaching them with the adhesive agent. These parts are not separately supplied because assembling of these parts requires high accuracy.

Note2: The mode switch (S903) function works when the contactor of the FP-032 contacts with the bottom surface of wiper of the mode gear ass'y.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
801	2-342-624-01	SPRING (PINCH LIMITTER), EXTENSION	816	2-342-689-01	WORM SHAFT (2J)
802	X-2024-463-2	SLIDER ASSY, MODE	817	2-342-690-02	BASE, MOTOR HOLDER
803	X-2024-462-1	GEAR ASSY, CAM	818	1-677-049-11	FP-228 FLEXIBLE BOARD (DEW SENSOR)
804	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD	819	2-342-686-01	COVER, CAPSTAN
806	2-342-621-01	GEAR, RELAY	820	2-541-984-01	MIC COVER
807	3-315-414-31	WASHER	821	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
808	2-342-620-01	GEAR, CONVERSION	D902	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
809	3-084-377-01	HEAD (SCREW M1.2)	H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL)
810	X-2024-460-1	BASE ASSY, CAM	H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL)
811	X-2024-461-1	GEAR ASSY, MODE	M902	X-2024-464-1	MOTOR ASSY (LOADING)
812	2-342-615-01	GEAR, NO.2	MIC903	1-818-576-11	PIN, CONNECTOR (WITH DETECTION SWITCH)
813	2-342-691-01	GEAR, NO.1	Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END)
814	2-637-945-01	MOTOR HOLDER	Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP)
815	3-895-822-71	SCREW (M1.2X2), SPECIAL, 0	S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1223-596-A	PRISM ASSY (SERVICE)
	(Not supplied)	EE-006 BOARD, COMPLETE

	(EE-006 complete board and IC5601 are not supplied, but they are included in prism assy.)	
	< CAPACITOR >	
C5601	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5602	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5603	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C5604	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5605	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5606	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5607	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5608	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5609	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5610	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5611	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5612	1-127-895-91	TANTAL. CHIP 22uF 20% 4V
C5613	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5614	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5615	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5616	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5617	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5618	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5619	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5620	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5621	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5622	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5623	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5624	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5625	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5626	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5627	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5628	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5629	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5630	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5631	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5632	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5633	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5634	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5635	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5636	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5637	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5638	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
	< CONNECTOR >	
* CN5601	1-820-806-21	CONNECTOR, COAXIAL (RECEPTACLE)
	< FERRITE BEAD >	
FB5601	1-400-331-11	FERRITE, EMI (SMD) (1005)
FB5602	1-400-331-11	FERRITE, EMI (SMD) (1005)
FB5603	1-400-331-11	FERRITE, EMI (SMD) (1005)
	< IC >	
IC5601	(Not supplied)	IMX013BLA-13 (CMOS IMAGER) (Note)

Ref. No.	Part No.	Description
		< COIL >
L5601	1-400-588-11	INDUCTOR 10uH
L5602	1-400-588-11	INDUCTOR 10uH
L5603	1-400-588-11	INDUCTOR 10uH
L5604	1-400-588-11	INDUCTOR 10uH
	< RESISTOR >	
R5601	1-218-953-11	RES-CHIP 1K 5% 1/16W
R5609	1-218-941-81	RES-CHIP 100 5% 1/16W
	(Not supplied) FP-031 FLEXIBLE BOARD	

	(This flexible board is included in MD (N100) sub assy A (A-1080-997-A).)	
	< DIODE >	
D902	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
	< HOLE ELEMENT >	
H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL)
H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL)
	< CONNECTOR >	
MIC903	1-818-576-11	PIN, CONNECTOR (WITH DETECTION)
	< TRANSISTOR >	
Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END)
Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP)
	< SWITCH >	
S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)
	(Not supplied) FP-032 FLEXIBLE BOARD	

	(This flexible board with S903 is included in MD (N100) sub assy A (A-1080-997-A).)	
	1-677-049-11 FP-228 FLEXIBLE BOARD (DEW SENSOR)	

	A-1217-226-A FP-481 FLEXIBLE BOARD, COMPLETE	

	< CAPACITOR >	
C101	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
	< DIODE >	
D101	8-719-064-07	DIODE SML-310LTT86 (REC LAMP (FRONT))
D102	8-719-073-01	DIODE MA111-(K8).S0
	< IC >	
IC101	6-600-163-01	IC RS-770

Note: イメージャの交換時は4-4ページの“イメージャ交換時の注意”を必ずお読みください。

Note: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

FP-481

FP-482

FP-483

FP-484

FP-485

FP-486

FP-487

Ref. No.	Part No.	Description				
< RESISTOR >						
R101	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R102	1-216-805-11	METAL CHIP	47	5%	1/10W	
A-1217-227-A		FP-482 FLEXIBLE BOARD, COMPLETE				

< FERRITE BEAD >						
FB201	1-414-760-21	FERRITE, EMI (SMD) (1608)				
FB202	1-414-760-21	FERRITE, EMI (SMD) (1608)				
< JACK >						
J201	1-794-525-12	JACK, MIC (MIC (PLUG IN POWER))				
A-1217-228-A		FP-483 FLEXIBLE BOARD, COMPLETE				

< RESISTOR >						
R301	1-216-822-11	METAL CHIP	1.2K	5%	1/10W	
R302	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	
< SWITCH >						
S303	1-771-487-21	SWITCH, SLIDE (HANDLE ZOOM (H/L/OFF))				
A-1217-229-A		FP-484 FLEXIBLE BOARD, COMPLETE				

< CAPACITOR >						
C4001	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	
< CONNECTOR >						
CN4001	1-817-543-51	CONNECTOR, FPC (ZIF) 27P				
< DIODE >						
D4001	8-719-073-01	DIODE MA111-(K8).S0				
D4002	8-719-064-07	DIODE SML-310LTT86 (REC LAMP (BACK))				
< IC >						
IC4001	6-600-163-01	IC RS-770				
< RESISTOR >						
R001	1-216-805-11	METAL CHIP	47	5%	1/10W	
R002	1-216-821-11	METAL CHIP	1K	5%	1/10W	
A-1217-230-A		FP-485 FLEXIBLE BOARD, COMPLETE				

< CONNECTOR >						
* CN501	1-816-643-51	FFC/FPC CONNECTOR (LIF) 10P				
* CN502	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P				
< RESISTOR >						
R501	1-216-295-91	SHORT CHIP 0				

Ref. No.	Part No.	Description
< SWITCH >		
S001	1-786-180-31	SWITCH, PUSH (1KEY) (EJECT)
A-1217-231-A FP-486 FLEXIBLE BOARD, COMPLETE		

< FERRITE BEAD >		
FB601	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB602	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB603	1-414-760-21	FERRITE, EMI (SMD) (1608)
< JACK >		
J601	1-794-525-12	JACK, MIC (🎧 (HEADPHONES))
< RESISTOR >		
R602	1-216-295-91	SHORT CHIP 0
R603	1-216-864-11	SHORT CHIP 0
A-1217-232-A FP-487 FLEXIBLE BOARD, COMPLETE		

< SWITCH >		
S701	1-771-039-31	SWITCH, PUSH (PANEL REVERSE)
S702	1-786-148-11	SWITCH, PUSH (1 KEY) (PANEL OPEN/CLOSE)

Electrical parts list of the GG-003 and HH-003 boards are not shown.
Pages 5-19 and 5-20 are not shown.

Ref. No.	Part No.	Description
	A-1217-208-A	II-003 BOARD, COMPLETE *****
		< CONNECTOR >
CN9201	1-817-544-51	CONNECTOR, FPC (ZIF) 39P
* CN9202	1-794-276-21	CONNECTOR, SQUARE TYPE 4P (HDV/DV)
CN9203	1-815-794-13	CONNECTOR (MULTIPLE) (A/V OUT)
CN9204	1-818-607-12	CONNECTOR, SQUARE TYPE 10P (COMPONENT OUT)
		< DIODE >
D9201	6-500-252-01	DIODE SML-512WWT86 (CHARGE)
D9203	8-719-056-85	DIODE UDZ-TE-17-8.2B
D9204	8-719-056-85	DIODE UDZ-TE-17-8.2B
D9205	8-719-056-85	DIODE UDZ-TE-17-8.2B
D9206	6-500-750-01	DIODE NSAD500H-T1-A
		< FERRITE BEAD >
FB9201	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB9202	1-414-760-21	FERRITE, EMI (SMD) (1608)
		< THERMISTOR >
TH9201	1-805-726-11	THERMISTOR, POSITIVE
TH9202	1-805-726-11	THERMISTOR, POSITIVE
TH9203	1-805-726-11	THERMISTOR, POSITIVE
TH9204	1-805-726-11	THERMISTOR, POSITIVE
		< VARISTOR >
VDR921	1-803-974-21	VARISTOR, CHIP (1608)
VDR922	1-803-974-21	VARISTOR, CHIP (1608)
VDR924	1-803-974-21	VARISTOR, CHIP (1608)

	A-1227-577-A	JJ-004 BOARD, COMPLETE (SERVICE) *****
		< CAPACITOR >
C8001	1-100-507-91	CERAMIC CHIP 4.7uF 20% 6.3V
C8002	1-100-507-91	CERAMIC CHIP 4.7uF 20% 6.3V
C8005	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8006	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8007	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C8008	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C8009	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C8010	1-137-710-91	CERAMIC CHIP 10uF 20% 6.3V
C8011	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C8012	1-137-710-91	CERAMIC CHIP 10uF 20% 6.3V
C8013	1-137-710-91	CERAMIC CHIP 10uF 20% 6.3V
C8014	1-137-710-91	CERAMIC CHIP 10uF 20% 6.3V
C8017	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8018	1-127-895-91	TANTAL. CHIP 22uF 20% 4V
		< CONNECTOR >
* CN8001	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P
		< IC >
IC8001	8-759-489-19	IC uPC6756GR-8JG-E2

Ref. No.	Part No.	Description
		< RESISTOR >
R8001	1-218-969-11	RES-CHIP 22K 5% 1/16W
R8002	1-218-969-11	RES-CHIP 22K 5% 1/16W
R8003	1-218-969-11	RES-CHIP 22K 5% 1/16W
R8004	1-218-969-11	RES-CHIP 22K 5% 1/16W
R8005	1-218-989-11	RES-CHIP 1M 5% 1/16W
R8007	1-218-965-11	RES-CHIP 10K 5% 1/16W
R8008	1-218-965-11	RES-CHIP 10K 5% 1/16W
R8009	1-218-989-11	RES-CHIP 1M 5% 1/16W
		< SENSOR >
* SE8001	1-479-022-51	SENSOR, ANGULAR VELOCITY (PITCH)
* SE8002	1-479-022-61	SENSOR, ANGULAR VELOCITY (YAW)

	A-1217-210-A	MM-061 BOARD, COMPLETE *****
	1-870-215-11	MM-061 BOARD
		< CAPACITOR >
C8301	1-164-874-11	CERAMIC CHIP 100PF 5% 50V
C8302	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8303	1-164-874-11	CERAMIC CHIP 100PF 5% 50V
C8304	1-164-874-11	CERAMIC CHIP 100PF 5% 50V
C8305	1-164-874-11	CERAMIC CHIP 100PF 5% 50V
C8306	1-137-710-91	CERAMIC CHIP 10uF 20% 6.3V
C8307	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8308	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8309	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8310	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C8311	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C8312	1-164-882-11	CERAMIC CHIP 220PF 5% 16V
C8313	1-164-882-11	CERAMIC CHIP 220PF 5% 16V
C8314	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C8315	1-164-882-11	CERAMIC CHIP 220PF 5% 16V
C8316	1-164-882-11	CERAMIC CHIP 220PF 5% 16V
C8317	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C8320	1-100-611-91	CERAMIC CHIP 22uF 20% 6.3V
C8321	1-100-611-91	CERAMIC CHIP 22uF 20% 6.3V
C8322	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8323	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8324	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8325	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8326	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8327	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
		< CONNECTOR >
CN8301	1-778-507-21	PIN, CONNECTOR (PC BOARD) 4P
CN8302	1-778-507-21	PIN, CONNECTOR (PC BOARD) 4P
* CN8303	1-819-873-51	CONNECTOR, FPC (ZIF) 21P
* CN8304	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P
		< IC >
IC8301	6-707-702-01	IC NJM2746RB1 (TE2)
IC8302	6-707-702-01	IC NJM2746RB1 (TE2)
IC8303	6-707-702-01	IC NJM2746RB1 (TE2)
IC8304	6-707-702-01	IC NJM2746RB1 (TE2)

MM-061

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			
< COIL >					
L8301	1-414-771-91	INDUCTOR	10uH		
< RESISTOR >					
R8301	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R8302	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R8303	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R8304	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R8305	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8306	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R8307	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8308	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R8309	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8310	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R8311	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8312	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R8313	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R8314	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R8315	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R8316	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R8317	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R8318	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R8319	1-219-602-11	METAL CHIP	68K	0.5%	1/16W
R8320	1-219-601-81	METAL CHIP	62K	0.5%	1/16W
R8321	1-219-601-81	METAL CHIP	62K	0.5%	1/16W
R8322	1-219-602-11	METAL CHIP	68K	0.5%	1/16W

Electrical parts list of the NN-003 board is not shown.
Pages 5-23 and 5-24 are not shown.

Ref. No.	Part No.	Description
	A-1217-222-A	OO-003 BOARD, COMPLETE *****
< CAPACITOR >		
C6601	1-100-661-11	TANTAL. CHIP 100uF 20% 4V
C6602	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6605	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V
C6606	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C6607	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6608	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6609	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6610	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6611	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6612	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C6613	1-125-838-11	CERAMIC CHIP 2.2uF 10% 6.3V
C6614	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6615	1-113-987-11	TANTAL. CHIP 4.7uF 20% 25V
C6616	1-164-357-11	CERAMIC CHIP 0.001uF 5% 50V
C6617	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6618	1-164-866-11	CERAMIC CHIP 47PF 5% 50V
C6619	1-125-838-11	CERAMIC CHIP 2.2uF 10% 6.3V
C6620	1-125-838-11	CERAMIC CHIP 2.2uF 10% 6.3V
C6621	1-125-838-11	CERAMIC CHIP 2.2uF 10% 6.3V
C6622	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C6625	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6626	1-137-710-91	CERAMIC CHIP 10uF 20% 6.3V
C6627	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6630	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6631	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6632	1-100-611-91	CERAMIC CHIP 22uF 20% 6.3V
C6633	1-100-611-91	CERAMIC CHIP 22uF 20% 6.3V
C6634	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6635	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6636	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6637	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6638	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C6639	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
< CONNECTOR >		
* CN6601	1-819-934-51	CONNECTOR, FPC (ZIF) 39P
CN6602	1-817-920-11	CONNECTOR, FPC (ZIF) 80P
* CN6603	1-819-778-51	CONNECTOR, FPC (ZIF) 33P
< DIODE >		
D6601	8-719-084-47	DIODE 1SV290 (TPL3)
< IC >		
IC6601	8-759-660-93	IC RB5P004AM2
IC6602	8-753-229-41	IC CXD3537R-T4
IC6603	6-701-112-01	IC DS1801E-02V+T/R
IC6604	6-707-702-01	IC NJM2746RB1 (TE2)
IC6605	6-707-702-01	IC NJM2746RB1 (TE2)
< COIL >		
L6602	1-414-771-91	INDUCTOR 10uH
L6603	1-414-771-91	INDUCTOR 10uH
L6604	1-414-248-11	INDUCTOR 2.2uH
L6605	1-414-771-91	INDUCTOR 10uH

Ref. No.	Part No.	Description
< TRANSISTOR >		
Q6601	6-550-119-01	TRANSISTOR DTC144EMT2L
Q6602	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q6603	8-729-037-74	TRANSISTOR UN9213J-(TX).SO
Q6604	8-729-037-74	TRANSISTOR UN9213J-(TX).SO
Q6605	8-729-427-74	TRANSISTOR XP4601
Q6606	8-729-427-74	TRANSISTOR XP4601
< RESISTOR >		
R6603	1-218-973-11	RES-CHIP 47K 5% 1/16W
R6604	1-218-953-11	RES-CHIP 1K 5% 1/16W
R6607	1-218-967-11	RES-CHIP 15K 5% 1/16W
R6608	1-218-958-11	RES-CHIP 2.7K 5% 1/16W
R6609	1-218-973-11	RES-CHIP 47K 5% 1/16W
R6610	1-218-975-11	RES-CHIP 68K 5% 1/16W
R6611	1-218-969-11	RES-CHIP 22K 5% 1/16W
R6612	1-218-975-11	RES-CHIP 68K 5% 1/16W
R6613	1-218-989-11	RES-CHIP 1M 5% 1/16W
R6614	1-218-977-11	RES-CHIP 100K 5% 1/16W
R6615	1-218-973-11	RES-CHIP 47K 5% 1/16W
R6616	1-218-963-11	RES-CHIP 6.8K 5% 1/16W
R6617	1-218-941-81	RES-CHIP 100 5% 1/16W
R6618	1-218-967-11	RES-CHIP 15K 5% 1/16W
R6619	1-218-941-81	RES-CHIP 100 5% 1/16W
R6620	1-218-941-81	RES-CHIP 100 5% 1/16W
R6621	1-218-941-81	RES-CHIP 100 5% 1/16W
R6622	1-218-967-11	RES-CHIP 15K 5% 1/16W
R6624	1-218-977-11	RES-CHIP 100K 5% 1/16W
R6625	1-218-977-11	RES-CHIP 100K 5% 1/16W
R6628	1-208-707-11	METAL CHIP 10K 0.5% 1/16W
R6629	1-208-707-11	METAL CHIP 10K 0.5% 1/16W
R6630	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W
R6631	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W
R6632	1-219-606-11	METAL CHIP 100K 0.5% 1/16W
R6633	1-219-601-81	METAL CHIP 62K 0.5% 1/16W
R6634	1-219-601-81	METAL CHIP 62K 0.5% 1/16W
R6635	1-219-602-11	METAL CHIP 68K 0.5% 1/16W
R6642	1-218-990-81	SHORT CHIP 0
R6645	1-244-161-81	RES-CHIP 2.2 5% 1/16W
R6646	1-208-911-11	METAL CHIP 10K 0.5% 1/16W
R6647	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W
R6648	1-208-911-11	METAL CHIP 10K 0.5% 1/16W
R6649	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W

A-1217-211-A PP-003 BOARD, COMPLETE

< CAPACITOR >		
C9002	1-127-895-91	TANTAL. CHIP 22uF 20% 4V
C9004	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C9006	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9008	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9009	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C9010	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C9011	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C9012	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V

PP-003

RR-003

Ref. No.	Part No.	Description			
C9013	1-137-700-11	TANTAL. CHIP	10uF	20%	6.3V
C9015	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C9016	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C9017	1-112-300-91	CERAMIC CHIP	4.7uF	10%	10V
C9018	1-112-300-91	CERAMIC CHIP	4.7uF	10%	10V
C9020	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C9021	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C9023	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C9024	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C9025	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C9026	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
< CONNECTOR >					
* CN9003	1-785-905-51	CONNECTOR, FFC/FPC (ZIF) 24P			
* CN9004	1-794-322-51	CONNECTOR, FFC/FPC (ZIF) 6P			
CN9005	1-816-928-11	PIN, CONNECTOR 22P			
< DIODE >					
D9001	8-719-074-67	DIODE EDZ-TE61-5.6B			
< FERRITE BEAD >					
FB9001	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)			
< IC >					
IC9002	8-753-229-98	IC CXM3006CR-T4			
< COIL >					
* L9001	1-400-411-21	INDUCTOR	4.7uH		
* L9002	1-400-411-21	INDUCTOR	4.7uH		
* L9003	1-400-411-21	INDUCTOR	4.7uH		
< TRANSISTOR >					
Q9003	6-550-239-01	TRANSISTOR	DTA144EMT2L		
Q9004	8-729-054-48	TRANSISTOR	UP04601008S0		
Q9005	8-729-054-48	TRANSISTOR	UP04601008S0		
Q9006	6-550-232-01	TRANSISTOR	2SA2029T2LQ/R		
Q9007	6-550-234-01	TRANSISTOR	UNR32A300LS0		
Q9008	6-550-232-01	TRANSISTOR	2SA2029T2LQ/R		
Q9009	6-551-184-01	TRANSISTOR	MCH6305-TL-E-S		
< RESISTOR >					
R9010	1-218-975-11	RES-CHIP	68K	5%	1/16W
R9012	1-218-949-11	RES-CHIP	470	5%	1/16W
R9014	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R9015	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R9017	1-218-975-11	RES-CHIP	68K	5%	1/16W
R9018	1-208-934-11	METAL CHIP	91K	0.5%	1/16W
R9019	1-208-643-11	METAL CHIP	22	0.5%	1/16W
R9020	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R9021	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9022	1-218-969-11	RES-CHIP	22K	5%	1/16W
R9023	1-218-950-11	RES-CHIP	560	5%	1/16W
R9025	1-218-969-11	RES-CHIP	22K	5%	1/16W
R9028	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R9029	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R9031	1-218-953-11	RES-CHIP	1K	5%	1/16W

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description			
R9032	1-218-977-11	RES-CHIP	100K	5%	1/16W
R9033	1-218-978-11	RES-CHIP	120K	5%	1/16W
R9034	1-218-989-11	RES-CHIP	1M	5%	1/16W

A-1217-212-A RR-003 BOARD, COMPLETE

(BT9601 (lithium battery) is not included in RR-003 complete board.)

< BATTERY HOLDER >

△ BH9601 1-756-615-41 HOLDER, BATTERY (Note)

< BATTERY >

△ BT9601 1-756-134-12 BATTERY, STORAGE, LITHIUM (Note)

< CONNECTOR >

* CN9601 1-819-781-51 CONNECTOR, FPC (ZIF) 45P
 * CN9602 1-816-654-51 FFC/FPC CONNECTOR (LIF) 6P
 * CN9603 1-816-645-51 FFC/FPC CONNECTOR (LIF) 14P
 CN9604 1-794-057-21 PIN, CONNECTOR (PC BOARD) 2P
 CN9606 1-816-928-11 PIN, CONNECTOR 22P

CN9607 1-779-327-51 CONNECTOR, FFC/FPC 6P

< DIODE >

D9601 8-719-422-64 DIODE MA8062-M
 D9602 8-719-422-64 DIODE MA8062-M
 D9603 8-719-422-64 DIODE MA8062-M
 D9604 8-719-422-64 DIODE MA8062-M
 D9605 8-719-422-64 DIODE MA8062-M

D9606 8-719-422-64 DIODE MA8062-M
 D9607 8-719-422-64 DIODE MA8062-M
 D9608 6-500-289-01 DIODE MAZW082H0LS0

< COIL >

L9601 1-414-406-11 INDUCTOR 220uH
 L9602 1-414-406-11 INDUCTOR 220uH

< RESISTOR >

R9608 1-218-954-11 RES-CHIP 1.2K 5% 1/16W
 R9609 1-218-954-11 RES-CHIP 1.2K 5% 1/16W
 R9610 1-218-954-11 RES-CHIP 1.2K 5% 1/16W
 R9611 1-218-955-11 RES-CHIP 1.5K 5% 1/16W
 R9612 1-218-957-11 RES-CHIP 2.2K 5% 1/16W

CAUTION

Danger of explosion if battery is incorrectly replaced.
 Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Note: Replace the battery holder (BH9601) together when replacing the lithium battery (BT9601) on the RR-003 board. (The battery holder removed once cannot be used again.)
 When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: RR-003基板のリチウム電池 (BT9601) を交換する場合はバッテリーホルダ (BH9601) も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
 部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着して下さい。

Ref. No.	Part No.	Description			
R9613	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R9614	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R9615	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R9616	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R9617	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R9618	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R9619	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R9620	1-218-970-11	RES-CHIP	27K	5%	1/16W
R9621	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R9622	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R9623	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R9624	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R9625	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R9626	1-218-970-11	RES-CHIP	27K	5%	1/16W
R9627	1-218-970-11	RES-CHIP	27K	5%	1/16W
R9628	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R9629	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R9630	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R9631	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R9632	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R9633	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R9634	1-218-970-11	RES-CHIP	27K	5%	1/16W

< SWITCH >

S9601	1-786-157-31	TACTILE SWITCH (RESET)
S9602	1-786-157-31	TACTILE SWITCH (DISPLAY/BATT INFO)
S9603	1-786-157-31	TACTILE SWITCH (STOP ■)
S9604	1-786-157-31	TACTILE SWITCH (PAUSE ■■)
S9605	1-786-157-31	TACTILE SWITCH (VOLUME/MEMORY +)
S9606	1-786-157-31	TACTILE SWITCH (REW ◀◀)
S9607	1-786-157-31	TACTILE SWITCH (VOLUME/MEMORY -)
S9608	1-786-157-31	TACTILE SWITCH (ASSIGN (CAMERA)_4/ MEMORY (VCR)_PLAY)
S9609	1-786-157-31	TACTILE SWITCH (REC ●)
S9610	1-786-157-31	TACTILE SWITCH (ASSIGN (CAMERA)_5/ MEMORY (VCR)_INDEX)
S9611	1-786-157-31	TACTILE SWITCH (REC)
S9612	1-786-157-31	TACTILE SWITCH (ASSIGN (CAMERA)_6/ MEMORY (VCR)_DELETE)
S9613	1-786-157-31	TACTILE SWITCH (PLAY ▶▶)
S9614	1-771-487-21	SWITCH, SLIDE (ZEBRA (OFF/70/100))
S9615	1-786-157-31	TACTILE SWITCH (FF ▶▶▶)
S9616	1-786-157-31	TACTILE SWITCH (SLOW ▶▶)

< VARISTOR >

VDR961	1-801-862-11	VARISTOR, CHIP (1608)
VDR962	1-801-862-11	VARISTOR, CHIP (1608)
VDR963	1-801-862-11	VARISTOR, CHIP (1608)
VDR964	1-801-862-11	VARISTOR, CHIP (1608)

Electrical parts list of the TT-003 board is not shown.
Pages 5-28 to 5-37 are not shown.

UU-003

WW-003

Ref. No.	Part No.	Description
	A-1217-213-A	UU-003 BOARD, COMPLETE *****
		< CAPACITOR >
C8601	1-104-851-11	TANTAL. CHIP 10uF 20% 10V
C8602	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8603	1-164-505-11	CERAMIC CHIP 2.2uF 16V
		< CONNECTOR >
CN8601	1-817-543-51	CONNECTOR, FPC (ZIF) 27P
CN8602	1-691-356-51	CONNECTOR, FFC/FPC (ZIF) 18P
		< DIODE >
* D8601	6-501-690-01	DIODE NESW007AT-T141 (EVF BACKLIGHT)
		< COIL >
L8601	1-414-771-91	INDUCTOR 10uH
		< TRANSISTOR >
Q8601	8-729-054-48	TRANSISTOR UP04601008S0
Q8602	8-729-054-48	TRANSISTOR UP04601008S0
		< RESISTOR >
R8602	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W
R8603	1-208-687-11	METAL CHIP 1.5K 0.5% 1/16W
R8604	1-218-956-11	RES-CHIP 1.8K 5% 1/16W
R8606	1-211-991-11	METAL CHIP 82 0.5% 1/10W

	A-1217-214-A	WW-003 BOARD, COMPLETE *****
		< CAPACITOR >
C9401	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9403	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
		< CONNECTOR >
CN9401	1-817-543-51	CONNECTOR, FPC (ZIF) 27P
CN9402	1-817-913-41	MEMORY STICK DUO CONNECTOR
CN9403	1-819-436-11	CONNECTOR (SQUARE TYPE) (USB) 5P
		< DIODE >
D9401	6-500-604-01	DIODE CL-270HR-C-TSL (MS ACCESS)
D9402	8-719-078-02	DIODE 1SS357 (T3SONY1)
D9403	8-719-056-61	DIODE MAZS082008S0
D9404	8-719-056-61	DIODE MAZS082008S0
		< FERRITE BEAD >
FB9401	1-469-581-21	INDUCTOR, FERRITE BEAD (1005)
		< IC >
* IC9401	6-708-445-01	IC R1114Q291D-TR-FA
		< RESISTOR >
R9401	1-218-941-81	RES-CHIP 100 5% 1/16W
R9402	1-218-953-11	RES-CHIP 1K 5% 1/16W
R9404	1-218-965-11	RES-CHIP 10K 5% 1/16W

Ref. No.	Part No.	Description	10K	5%	1/16W
R9405	1-218-965-11	RES-CHIP			


Electrical parts list of the YY-003 board is not shown.
Pages 5-39 and 5-40 are not shown.

• EXCEPT J MODEL


Checking supplied accessories.

to J MODEL

Note: This item is supplied with the unit as an accessory, but is not prepared as a service part.

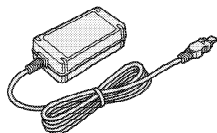


AC Adaptor
(AC-L15A)
△ 1-479-283-13

 


Power Cord
△ 1-782-476-51 (CH)
△ 1-783-374-11 (HK)
△ 1-792-549-12 (JE)
△ 1-790-107-42 (US, CND)
△ 1-823-946-12 (AEP, E: PAL)
△ 1-776-985-11 (KR)
△ 1-827-945-11 (AUS)
△ 1-827-946-21 (UK)
△ 1-830-518-11 (E: NTSC)



 
Conversion (2P) Adaptor
△ 1-569-007-12 (E: NTSC, JE)



 
Conversion (2P) Adaptor
△ 1-569-008-12 (HK)




USB Cable
1-829-579-41

 


A/V Connection Cable
1-823-156-51

 

 Rechargeable Battery Pack
NP-F570
(Note)




Component Video Cable
1-829-414-61

 

Wireless Remote Commander
RMT-831
1-478-495-41



Large Eyecup
2-892-124-01

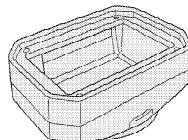

Lens Hood with Lens Cover
2-892-688-01

 
Other accessories

- 2-887-514-11 MANUAL, INSTRUCTION (ENGLISH)
(FX7: US, CND, E, JE)
- 2-887-514-21 MANUAL, INSTRUCTION (FRENCH) (FX7: CND)
- 2-887-514-31 MANUAL, INSTRUCTION (SPANISH, PORTUGUESE)
(FX7: E, JE)
- 2-887-514-41 MANUAL, INSTRUCTION (TRADITIONAL CHINESE)
(FX7: E)
- 2-887-514-51 MANUAL, INSTRUCTION (KOREAN) (FX7: KR, JE)
- 2-887-515-11 MANUAL, INSTRUCTION (ENGLISH)
(FX7E: AEP, UK, E, HK, AUS, JE)
- 2-887-515-21 MANUAL, INSTRUCTION (RUSSIAN) (FX7E: AEP, JE)
- 2-887-515-31 MANUAL, INSTRUCTION (FRENCH, ITALIAN)
(FX7E: AEP)
- 2-887-515-41 MANUAL, INSTRUCTION (GERMAN, DUTCH)
(FX7E: AEP)
- 2-887-515-51 MANUAL, INSTRUCTION (SPANISH, PORTUGUESE)
(FX7E: AEP)
- 2-887-515-61 MANUAL, INSTRUCTION (TRADITIONAL CHINESE)
(FX7E: HK)
- 2-887-515-71 MANUAL, INSTRUCTION (SIMPLIFIED CHINESE)
(FX7E: E, CH, JE)


• Refer to page 5-1 for mark △.

● J MODEL

付属品




USB ケーブル
1-829-579-41

 


A/V 接続ケーブル
1-823-156-51

その他の付属品

 
2-887-514-01 取扱説明書




ワイヤレスリモコン
RMT-831
1-478-495-31

 

D端子コンポーネント
ビデオケーブル
1-829-414-11

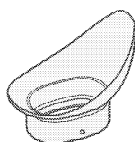

大型アイカップ
2-892-124-01

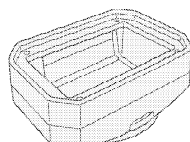

レンズカバー付フード
2-892-688-01

● △マークについては、5-1ページを参照して下さい。