

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION

ns: not supplied

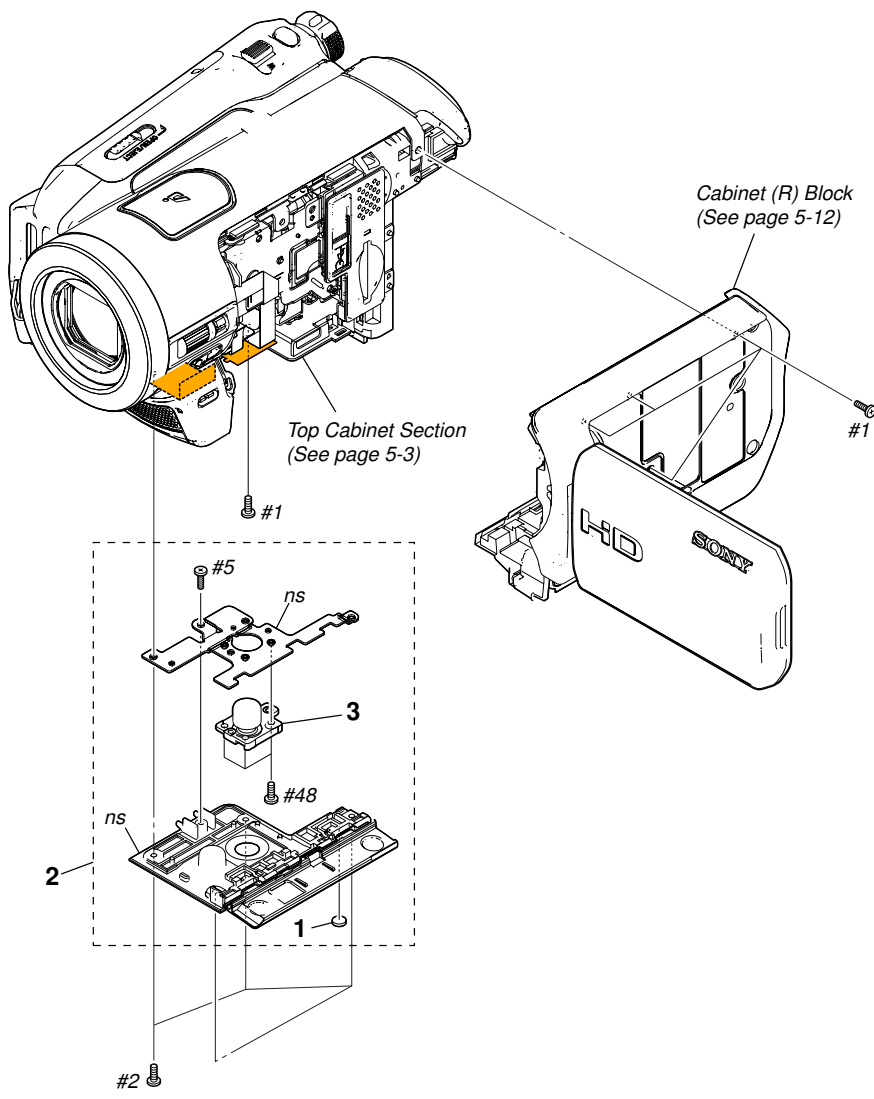

Ref. No.	Part No.	Description
1	2-589-376-01	FOOT (395), RUBBER
2	X-2176-768-1	CABINET ASSY, BOTTOM
3	3-095-744-01	TRIPOD
#1	2-635-562-11	SCREW (M1.7) (Black)


Ref. No.	Part No.	Description
#2	2-635-562-31	SCREW (M1.7) (Black)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#48	3-973-497-91	SCREW (M1.7), 0-NO. +P 2 (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. TOP CABINET SECTION

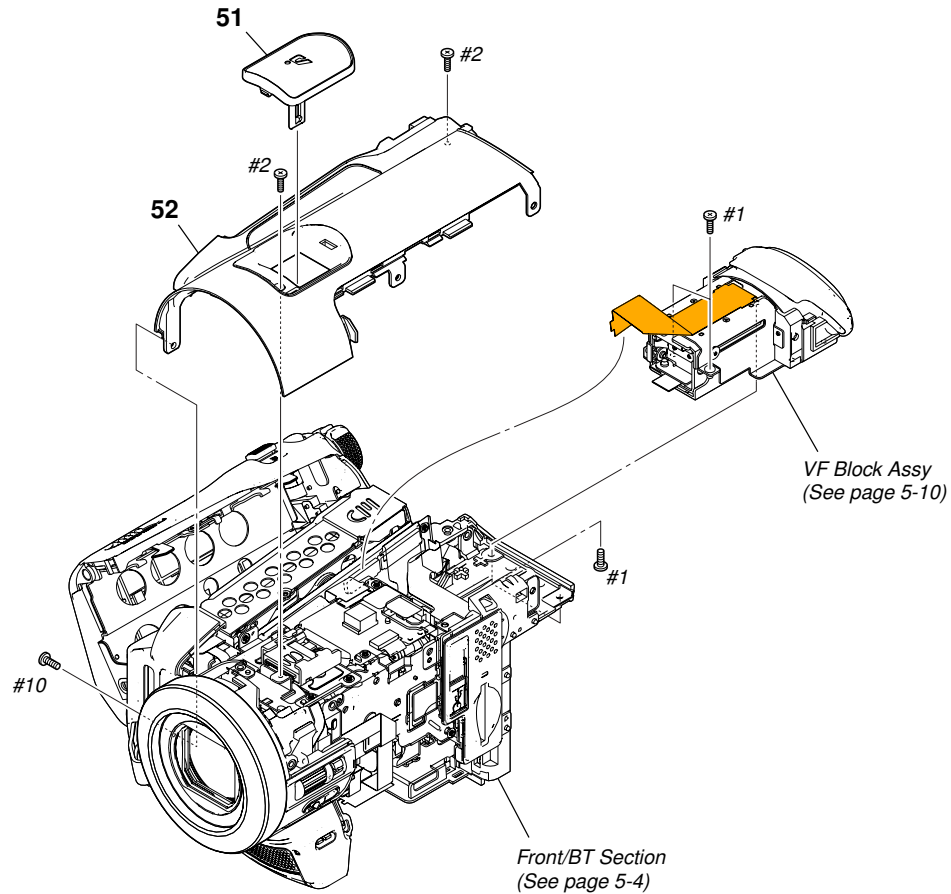

Ref. No.	Part No.	Description
51	X-2176-763-1	COVER ASSY, SHOE (HC7/HC7E)
51	X-2176-764-1	COVER ASSY (241), SHOE (HC5/HC5E)
52	X-2176-766-1	CABINET ASSY, TOP (HC7/HC7E)
52	X-2176-767-1	CABINET ASSY TOP (241) (HC5/HC5E)

Ref. No.	Part No.	Description
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#10	2-599-475-31	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. FRONT/BT SECTION

ns: not supplied

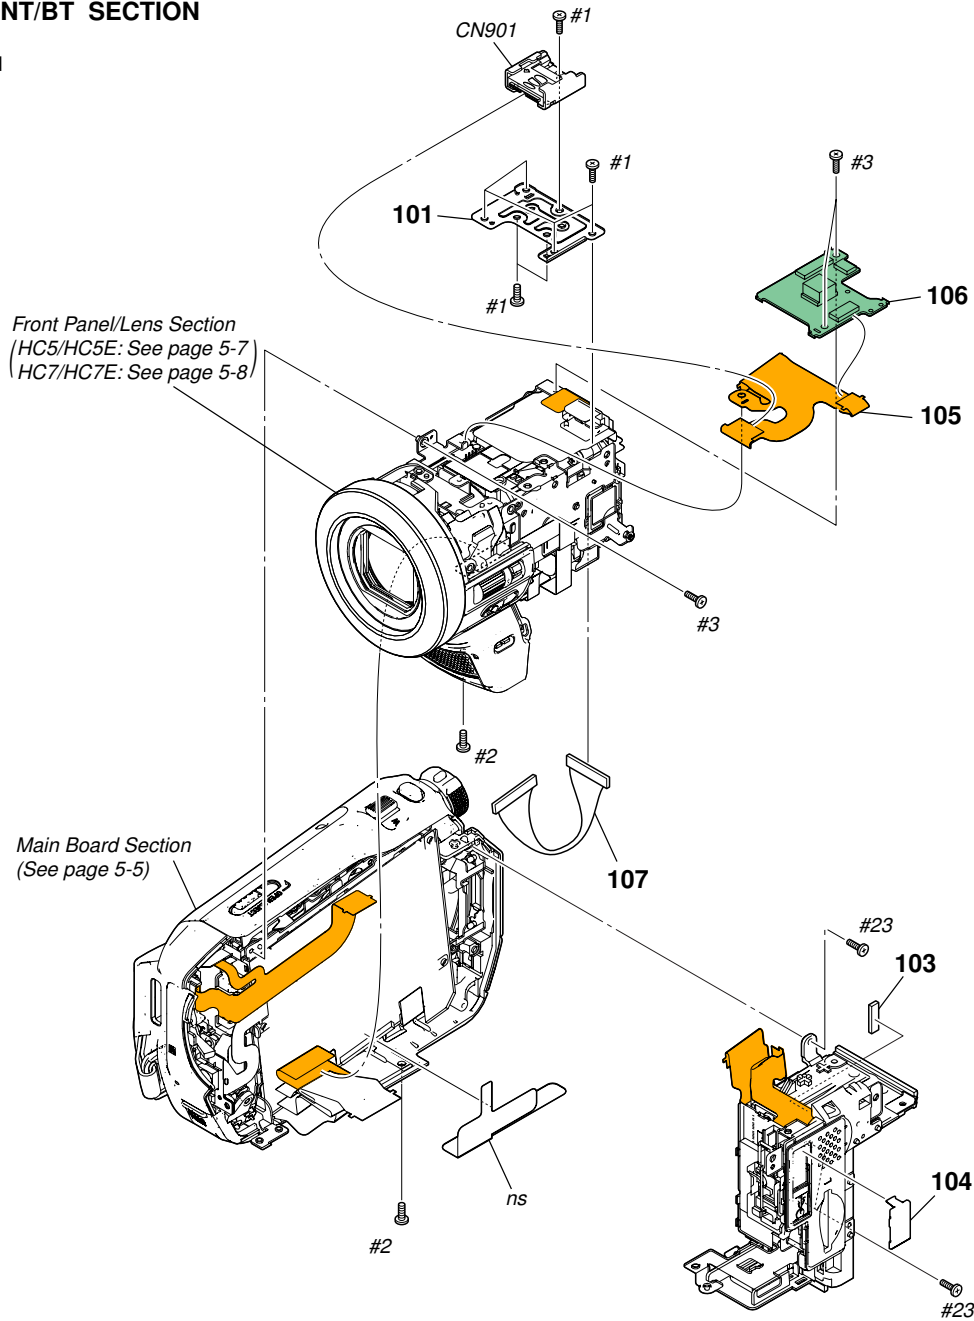

Note : ハネズ HN-045/HN-046) のページの
“Note for disconnecting the harness (HN-045/HN-046)”
を参照してください

Note : Refer to page 2-1 “Note for disconnecting the harness
(HN-045/HN-046)” when changing the harness (HN-045/
HN-046).

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
* 101	3-095-795-01	BRACKET (242), SHOE (HC7/HC7E)
* 101	3-095-796-01	BRACKET (241), SHOE (HC5/HC5E)
* 103	3-098-451-01	GASKET (HDMI)
104	3-095-749-01	LID, CPC
105	1-871-767-11	FP-652 FLEXIBLE BOARD
△ 106	A-1234-567-A	ST-164 BOARD, COMPLETE
107	1-965-256-31	HARNESS (HN-045) (HC7/HC7E)

Ref. No.	Part No.	Description
107	1-965-258-51	HARNESS (HN-046) (HC5/HC5E)
CN901	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. MAIN BOARD SECTION

ns: not supplied

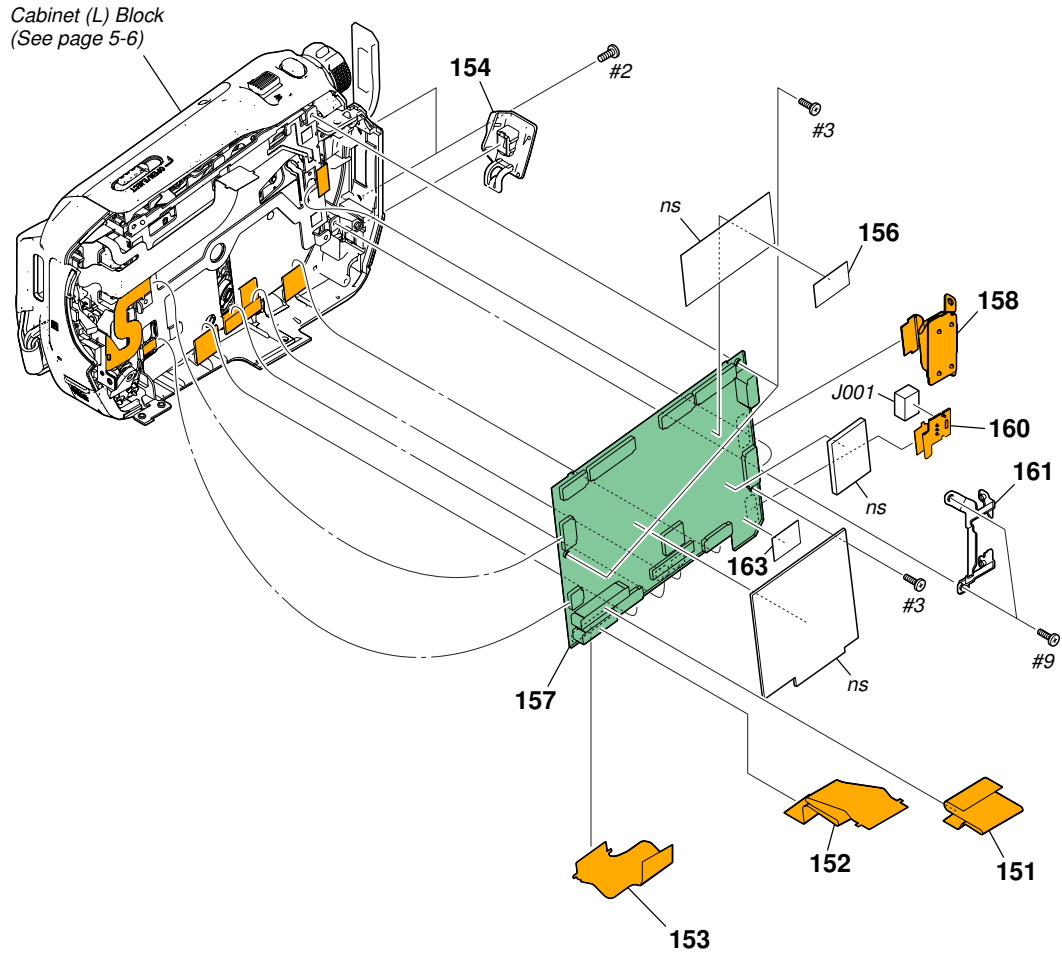

• Refer to page 5-1 for mark Δ .

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
* 151	1-871-763-11	FP-648 FLEXIBLE BOARD	158	A-1231-941-A	FP-645 FLEXIBLE BOARD, COMPLETE
152	1-871-766-11	FP-651 FLEXIBLE BOARD	160	1-871-772-11	FP-657 FLEXIBLE BOARD
153	1-871-765-11	FP-650 FLEXIBLE BOARD	* 161	3-095-752-01	FRAME, HDMI
154	3-095-747-01	COVER (DCIN), JACK	163	2-590-635-01	TAPE (AS 1/2)
* 156	3-098-734-01	SHEET (VC1), ELECTROSTATIC	Δ J001	1-815-792-11	CONNECTOR, DC-IN (7.2V) (DC IN)
157	A-1237-526-A	VC-500 BOARD, COMPLETE (SERVICE) (HC7)	#2	2-635-562-31	SCREW (M1.7) (Black)
157	A-1237-527-A	VC-500 BOARD, COMPLETE (SERVICE) (HC7E)	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
157	A-1237-528-A	VC-500 BOARD, COMPLETE (SERVICE) (HC5)	#9	3-078-890-21	SCREW, TAPPING (Silver)
157	A-1237-529-A	VC-500 BOARD, COMPLETE (SERVICE) (HC5E)			


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. CABINET (L) BLOCK

ns: not supplied

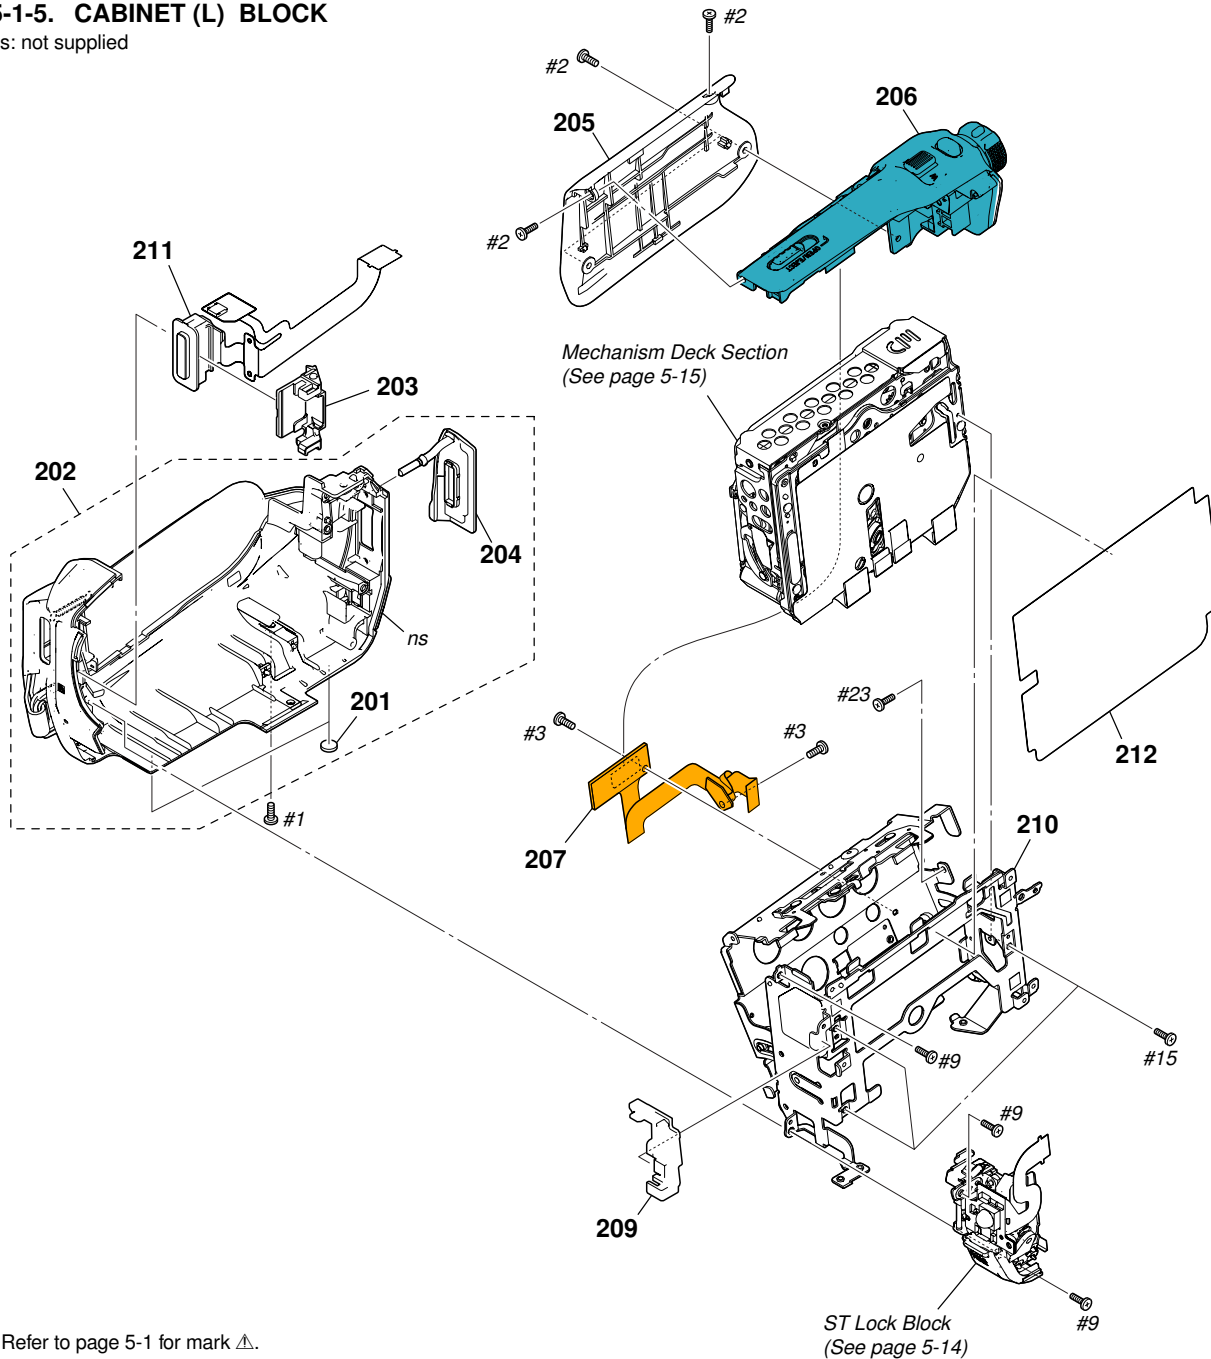

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
201	2-589-376-01	FOOT (395), RUBBER
202	X-2176-769-1	CABINET (L) ASSY (242) (HC7/HC7E)
202	X-2176-770-1	CABINET (L) ASSY (241) (HC5/HC5E)
203	3-095-779-01	RETAINER, ST
204	3-095-770-01	COVER (HDMI), JACK
205	3-095-755-01	CABINET (G)
206	1-479-895-11	SWITCH BLOCK, CONTROL (PS24200) (J)
206	1-479-895-21	SWITCH BLOCK, CONTROL (PS24200)
		(EXCEPT J)
207	A-1231-942-A	FP-646 FLEXIBLE BOARD, COMPLETE
* 209	3-095-754-01	CLAMP (ST), FLEXIBLE

Ref. No.	Part No.	Description
210	X-2176-765-1	FRAME ASSY, MD
△ 211	1-479-888-11	FLASH UNIT
212	3-095-751-01	SHEET (VC), INSULATING
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#9	3-078-890-21	SCREW, TAPPING (Silver)
#15	3-062-214-01	SCREW (M1.4 X 1.5) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. FRONT PANEL/LENS SECTION (HC5/HC5E)

ns: not supplied

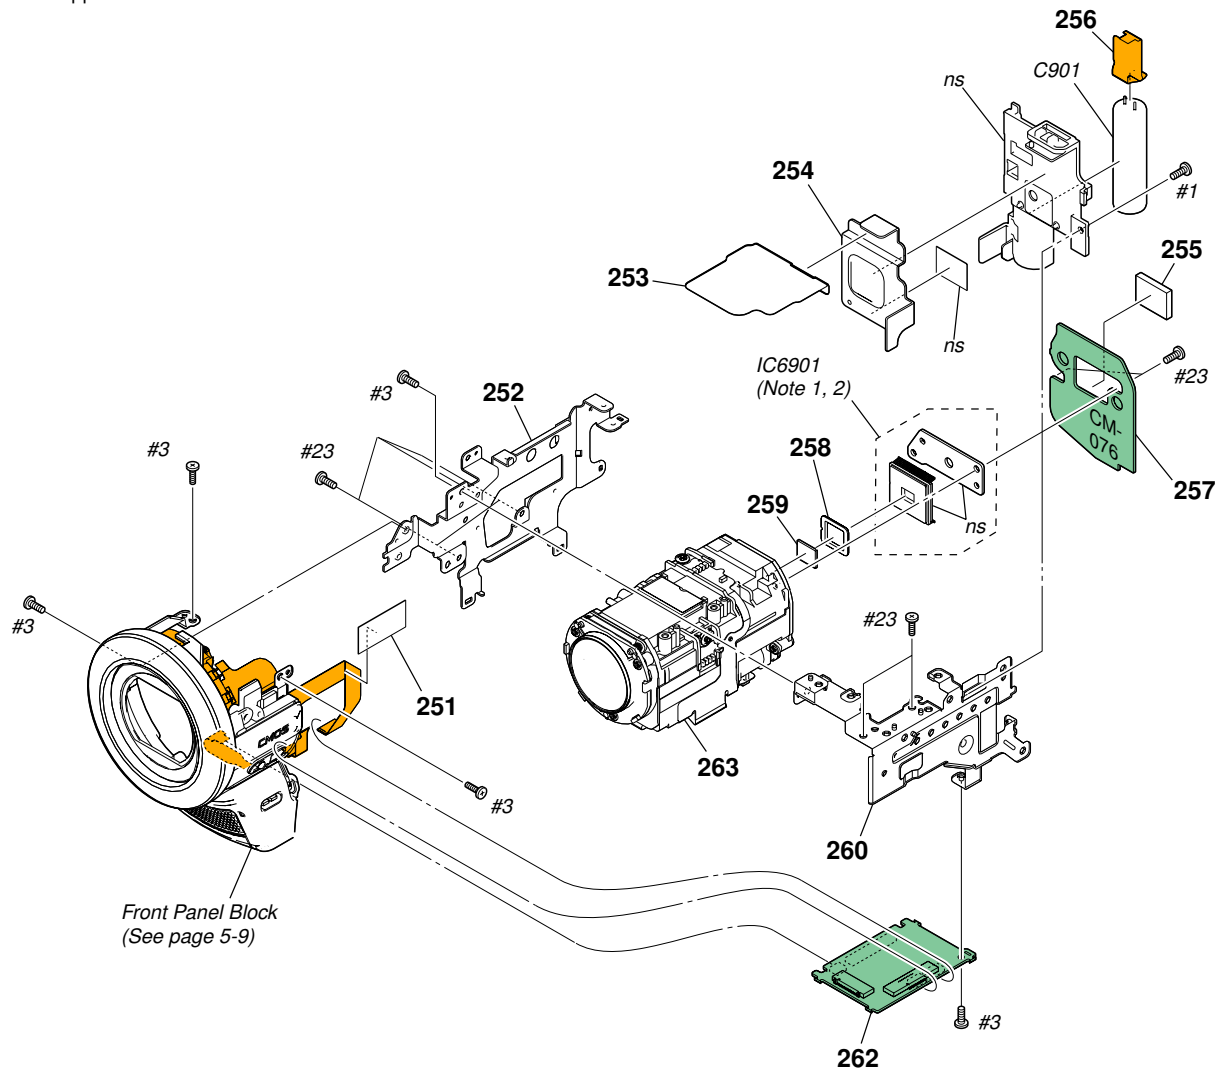

Note 1: IC6901はCM-076に付属品です。

Note 2: イメージャの交換の際は、必ず「イメージャの交換時の注意」をご覧ください。

Note 1: IC6901 is not included in CM-076 complete board.

Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

• Refer to page 5-1 for mark ▲.

Ref. No.	Part No.	Description
* 251	3-941-343-01	TAPE (A)
252	X-2176-773-1	FRAME (L) ASSY (241), LENS
* 253	3-095-797-01	SHEET (CMOS), SHIELD
* 254	3-095-787-01	HEAT SINK (CMOS) (241)
* 255	3-095-788-01	SHEET (CMOS) (C), RADIATION
* 256	1-871-773-11	FP-658 FLEXIBLE BOARD
257	A-1231-932-A	CM-076 BOARD, COMPLETE
258	2-629-086-01	RUBBER (871), SEAL
259	1-788-382-11	OPTICAL FILTERBLOCK (OFB-03-26)
260	X-2176-775-1	FRAME (R) ASSY (241), LENS

Ref. No.	Part No.	Description
262	A-1231-929-A	LD-221 BOARD, COMPLETE
263	8-848-825-01	DEVICE, LENS LSV-942C
▲ C901	1-112-766-11	CAP, ELECT 70uF 330V
IC6901	A-1172-742-A	CMOS BLOCK ASSY (CMOS IMAGER) (Note 1, 2)
#1	2-635-562-11	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. FRONT PANEL/LENS SECTION (HC7/HC7E)

ns: not supplied

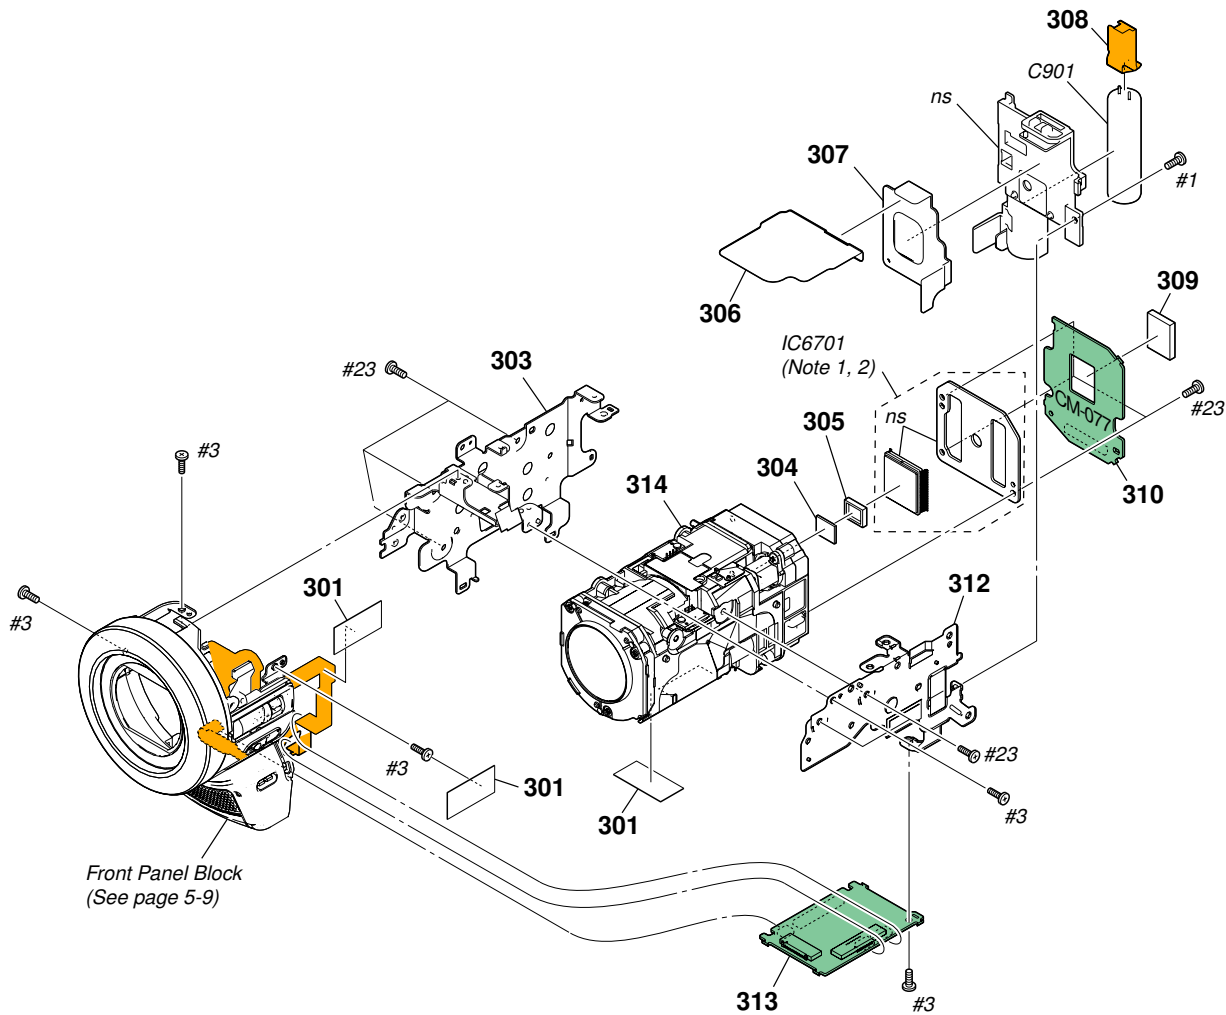

Note 1: IC6701はCM-077に付属していません。

Note 2: イメージャの交換の際は、必ず「イメージャの交換時の注意」を参照してください。

Note 1: IC6701 is not included in CM-077 complete board.

Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
* 301	3-941-343-01	TAPE (A)
303	X-2176-772-1	FRAME (L) ASSY (242), LENS
304	1-788-558-11	FILTER BLOCK, OPTICAL
305	2-698-010-01	RUBBER (1190), SEAL
* 306	3-095-797-01	SHEET (CMOS), SHIELD
* 307	3-095-786-01	HEAT SINK (CMOS) (242)
* 308	1-871-773-11	FP-658 FLEXIBLE BOARD
* 309	3-095-788-01	SHEET (CMOS) (C), RADIATION
310	A-1237-309-A	CM-077 BOARD, COMPLETE (SERVICE)
312	X-2176-774-1	FRAME (R) ASSY (242), LENS


Ref. No.	Part No.	Description
313	A-1231-928-A	LD-221 BOARD, COMPLETE
314	A-1227-735-A	DEVICE, LENS LSV-1190A (SERVICE)
△ C901	1-112-766-11	CAP, ELECT 70uF 330V
IC6701	A-1209-688-A	CMOS BLOCK ASSY (CMOS IMAGER) (Note 1, 2)
#1	2-635-562-11	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-8. FRONT PANEL BLOCK

ns: not supplied

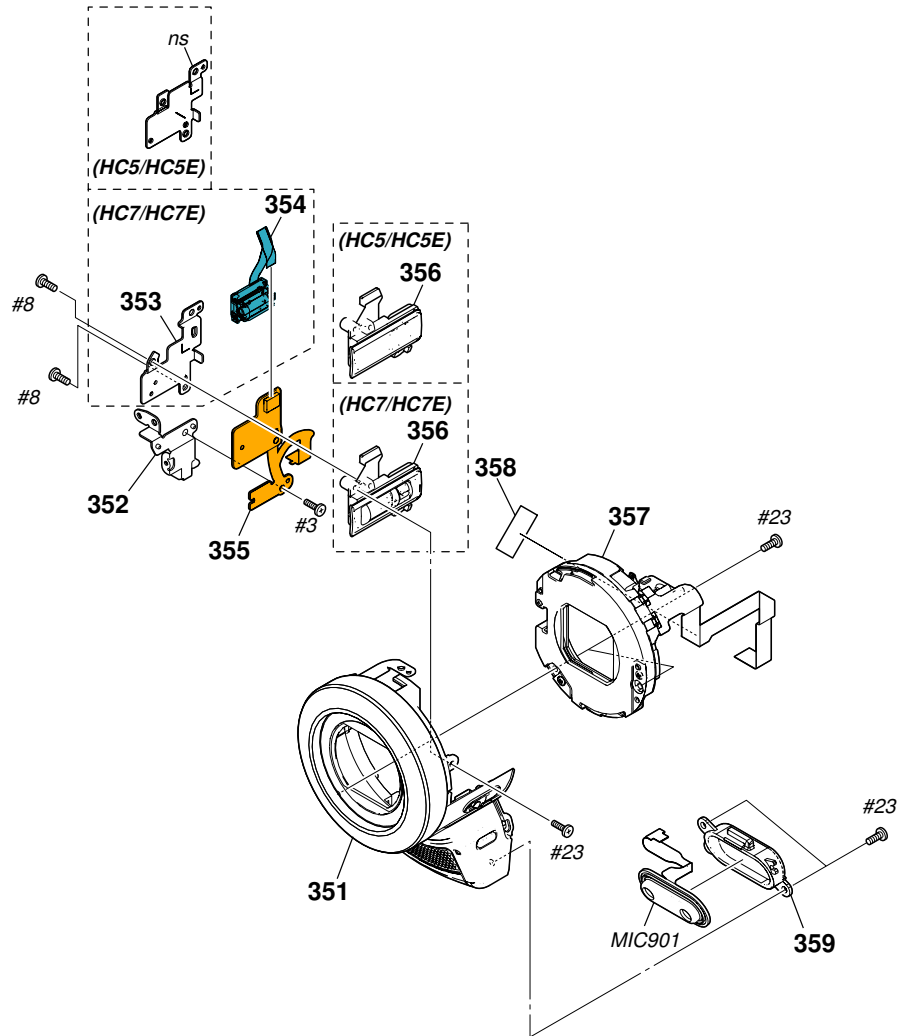


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
351	X-2176-776-1	PANEL ASSY (242), F (HC7: J)	356	X-2176-779-2	BUTTON ASSY, AD (HC7/HC7E)
351	X-2176-777-1	PANEL ASSY (241), F (HC5/HC5E)	356	3-095-821-02	BASE (241), AD (HC5/HC5E)
351	X-2176-778-1	PANEL ASSY (242E), F (HC7: US, CND, E, KR, JE/HC7E)	357	A-1217-971-A	LENS BARRIER UNIT
* 352	3-095-825-01	BRACKET, BL	* 358	3-941-343-01	TAPE (A)
* 353	3-095-822-01	BRACKET (242), AD (HC7/HC7E)	* 359	3-095-824-01	RETAINER, MICROPHONE
354	1-479-004-31	SWITCH BLOCK, CONTROL (AD11800) (HC7/HC7E)	MIC901	1-542-658-11	MIC UNIT
355	A-1231-943-A	FP-644 FLEXIBLE BOARD, COMPLETE (HC7/HC7E)	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
355	A-1231-944-A	FP-644 FLEXIBLE BOARD, COMPLETE (HC5/HC5E)	#8	3-078-890-01	SCREW, TAPPING (Silver)
			#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-9. VF BLOCK ASSY

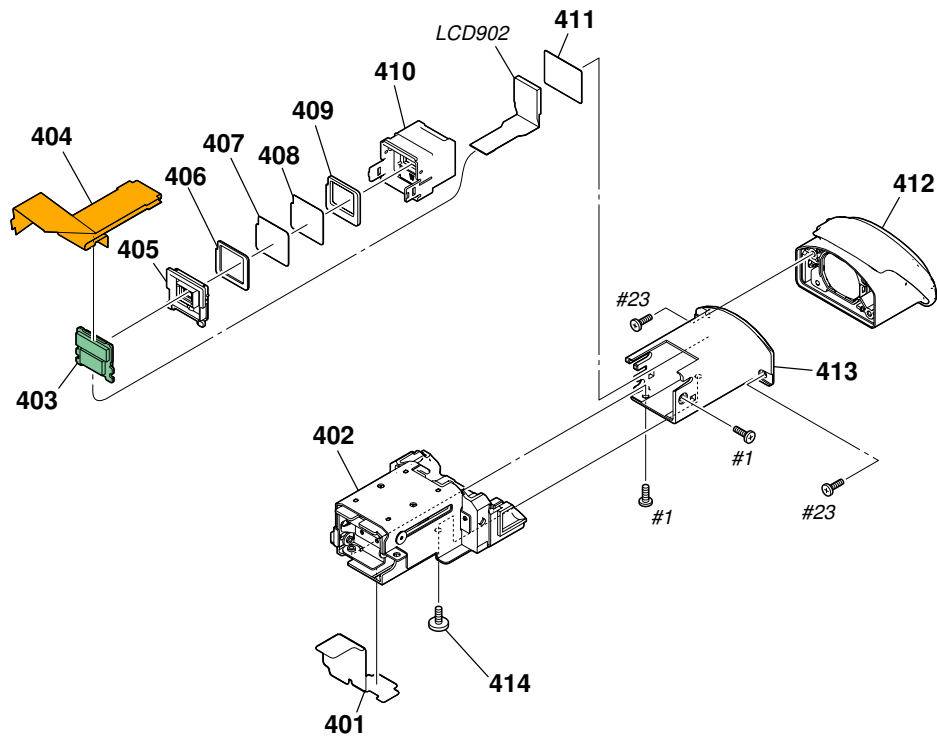

Ref. No.	Part No.	Description
* 401	3-095-859-01	SHEET (CAPACITOR), INSULATING
402	X-2176-782-1	BASE ASSY, SLIDE
403	A-1231-935-A	BL-007 BOARD, COMPLETE
404	1-871-770-11	FP-655 FLEXIBLE BOARD
405	2-664-672-01	GUIDE, LAMP
* 406	2-638-819-01	CUSHION, LCD
* 407	2-638-818-01	ILLUMINATOR
* 408	2-638-816-01	PLATE (TFT), DEFLECTION
409	2-664-671-01	SPACER, LCD


Ref. No.	Part No.	Description
* 410	2-699-236-01	CABINET (222), INNER
* 411	2-668-134-01	PANEL (CF), POLARIZATION
412	X-2176-781-1	EYE CUP ASSY
413	3-095-855-01	CABINET, VF
414	3-095-854-01	SHAFT, VF GUIDE
LCD902	8-753-241-14	LCX076AKE-1
#1	2-635-562-11	SCREW (M1.7) (Black)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-10. BT PANEL BLOCK

ns: not supplied

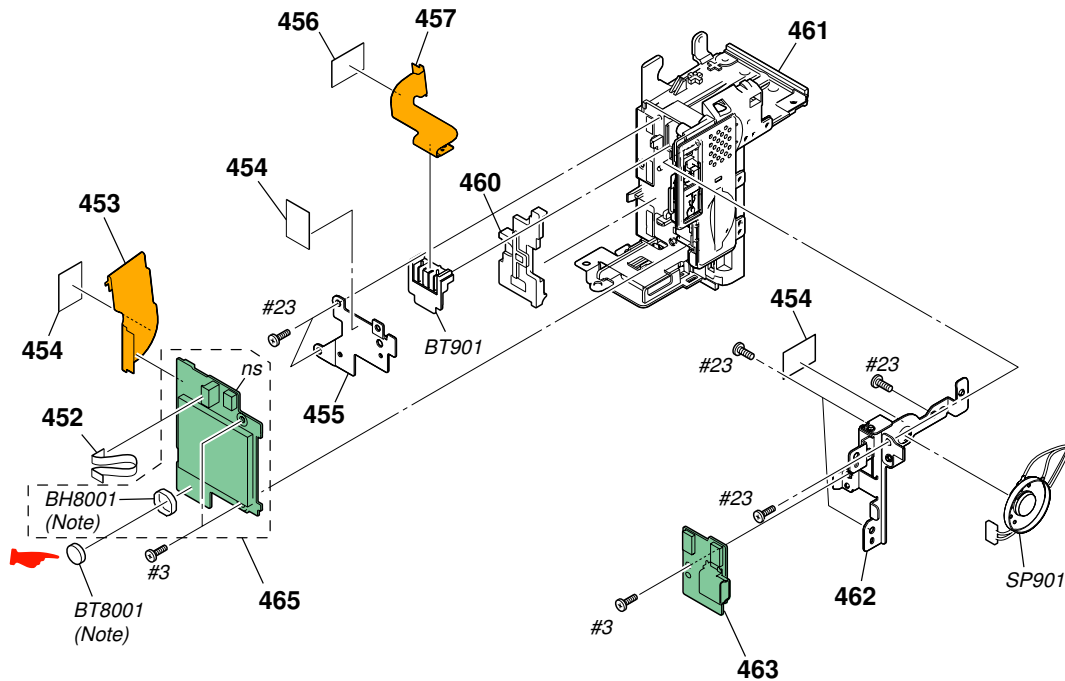

 : BT8001 (BATTERY, LITHIUM SECONDARY)
Board on the mount position.
(See page 4-51.)

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の取替は、
必ず正しい方法で
行ってください。

Note: Replace the battery holder (BH8001) together when replacing the lithium battery (BT8001) on the MS-361 board. (The battery holder removed once cannot be used again.) When mounting these parts, mount new battery holder first and attach new lithium battery next.

※ MS-361基板リチウム電池(BT8001)の取替は、必ず新しい電池ホルダー(BH8001)も一緒に交換してください。一度取り外した電池ホルダーは再利用できません。部品交換の際は、まず新しい電池ホルダーを基板に取り付け、次に新しいリチウム電池を取り付けます。

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
452	1-833-788-11	CABLE, FLEXIBLE FLAT (FFC-107)
* 453	1-871-764-11	FP-649 FLEXIBLE BOARD
454	2-590-635-01	TAPE (AS 1/2)
* 455	3-095-837-01	RETAINER, BT TERMINAL
* 456	3-098-733-01	SEET (BT), ELECTROSTATIC
* 457	1-871-771-11	FP-656 FLEXIBLE BOARD
* 460	3-097-852-01	RETAINER, USB TERMINAL
461	X-2176-780-1	PANEL ASSY, BT
462	X-2177-013-1	BRACKET ASSY, MS

Ref. No.	Part No.	Description
463	A-1231-933-A	US-013 BOARD, COMPLETE
465	A-1231-934-A	MS-361 BOARD, COMPLETE
△ BH8001	1-756-615-41	HOLDER, BATTERY (Note)
△ BT8001	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
△ BT901	1-780-064-21	BATTERY TERMINAL BOARD
SP901	1-825-260-23	LOUD SPEAKER (1.6CM)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-11. CABINET (R) BLOCK

ns: not supplied

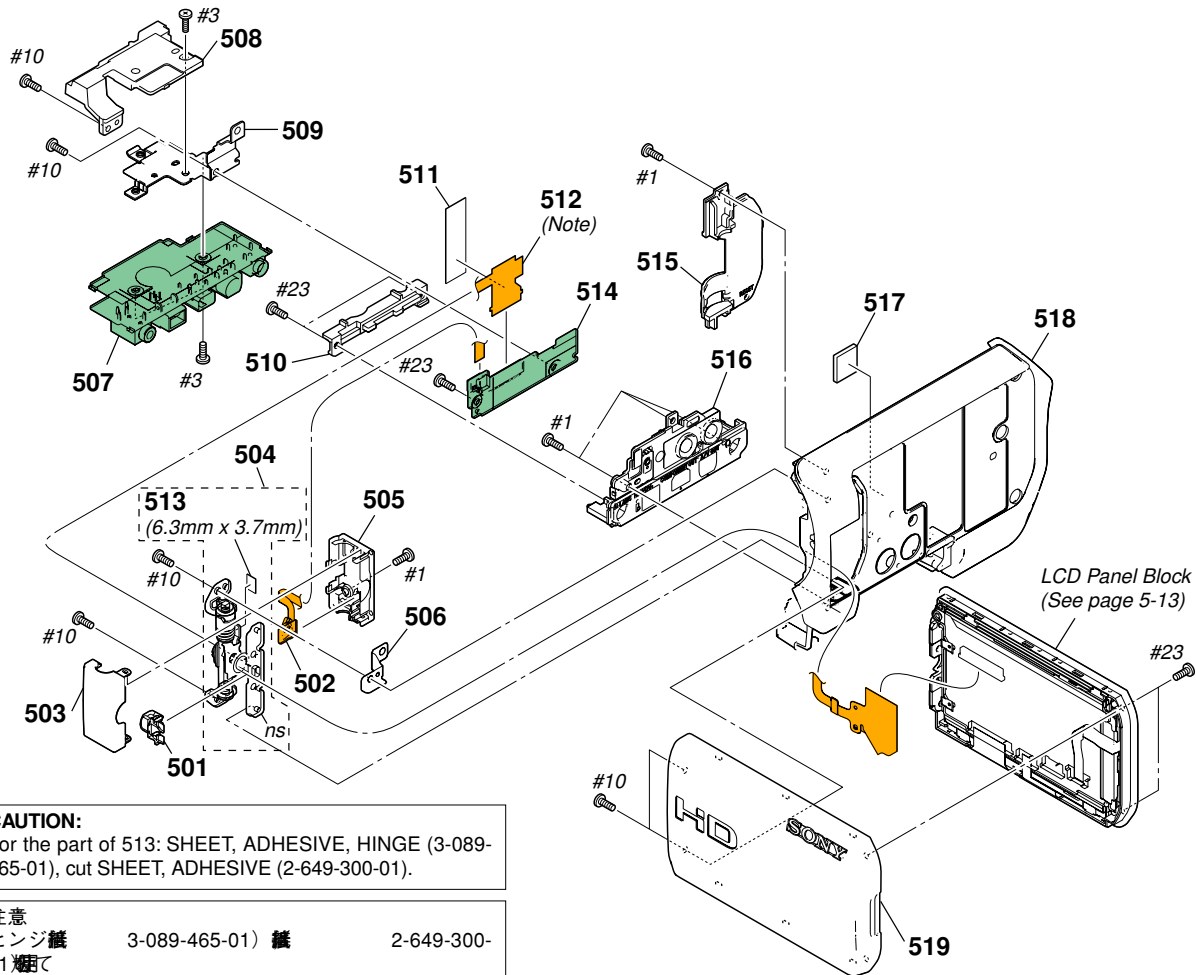

CAUTION:

For the part of 513: SHEET, ADHESIVE, HINGE (3-089-465-01), cut SHEET, ADHESIVE (2-649-300-01).

注意
ヒンジ 3-089-465-01) 2-649-300-01
01

Note: FP-659
さい。

Note: Be sure to read "HELP" when you install the FP-659 flexible board.

Ref. No.	Part No.	Description
501	2-668-087-01	CLAMP, FLEXIBLE
502	A-1174-647-A	FP-372 FLEXIBLE BOARD, COMPLETE
503	3-095-878-01	COVER (FRONT), HINGE (HC7/HC7E)
503	3-095-878-11	COVER (FRONT), HINGE (HC5/HC5E)
504	X-2108-475-1	HINGE ASSY
505	3-095-879-01	COVER (REAR), HINGE
* 506	3-095-871-01	PLATE (HINGE), GROUND
507	A-1231-937-A	JK-333 BOARD, COMPLETE (HC7/HC7E)
507	A-1231-938-A	JK-333 BOARD, COMPLETE (HC5/HC5E)
* 508	3-095-873-01	GUARD, JK
* 509	3-095-872-01	PLATE, JK RETAINER
* 510	3-095-874-01	RETAINER, JK TERMINAL
511	2-590-635-01	TAPE (AS 1/2)
512	1-871-774-11	FP-659 FLEXIBLE BOARD
513	CAUTION	SHEET, ADHESIVE, HINGE


Ref. No.	Part No.	Description
514	A-1231-936-A	CK-177 BOARD, COMPLETE
515	3-095-875-01	BLIND, HINGE
516	X-2176-786-1	CABINET ASSY (242), TERMINAL (HC7/HC7E)
516	X-2176-787-1	CABINET ASSY (241), TERMINAL (HC5/HC5E)
* 517	3-095-789-01	SHEET (CMOS) (R), RADIATION
518	X-2176-783-1	CABINET (R) ASSY (HC7: J)
518	X-2176-784-1	CABINET (R) ASSY (241) (HC5/HC5E)
518	X-2176-785-1	CABINET (R) ASSY (E) (HC7: US, CND, E, KR, JE/HC7E)
519	X-2176-788-1	CABINET (C) ASSY, P (HC7/HC7E)
519	X-2176-789-1	CABINET (C) ASSY (241), P (HC5/HC5E)
#1	2-635-562-11	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-12. LCD PANEL BLOCK

ns: not supplied

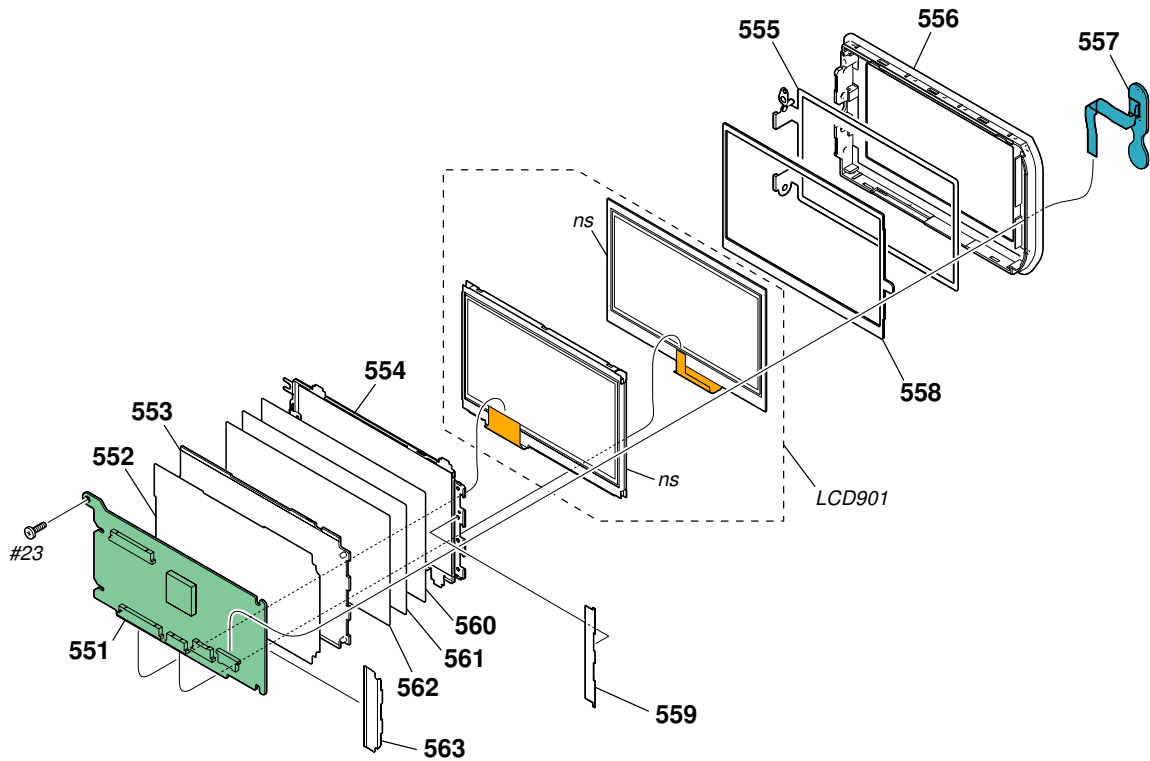

Ref. No.	Part No.	Description
551	A-1231-939-A	PD-325 BOARD, COMPLETE
552	2-894-347-01	REFLECTION SHEET (2.7J)
553	2-666-801-01	LIGHT GUIDE (2.7)
554	2-887-999-01	FRONT FRAME (2.7J)
* 555	3-095-876-01	PLATE (P), GROUND
556	3-095-877-01	CABINET (M), P (J)
556	3-095-877-11	CABINET (M), P (EXCEPT J)
557	1-479-063-21	KEY BLOCK, CONTROL (SB9000)
* 558	2-672-277-01	CUSHION, TP


Ref. No.	Part No.	Description
559	2-666-807-02	AG SHEET (2.7)
560	2-666-802-01	PRISM SHEET V (2.7)
561	2-666-803-01	PRISM SHEET H (2.7)
562	2-666-804-01	DIFFUSION SHEET (2.7)
* 563	2-638-780-01	CLIP
LCD901	A-1228-786-A	TP BLOCK ASSY (27ESHGU07)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-13. ST LOCK BLOCK

ns: not supplied

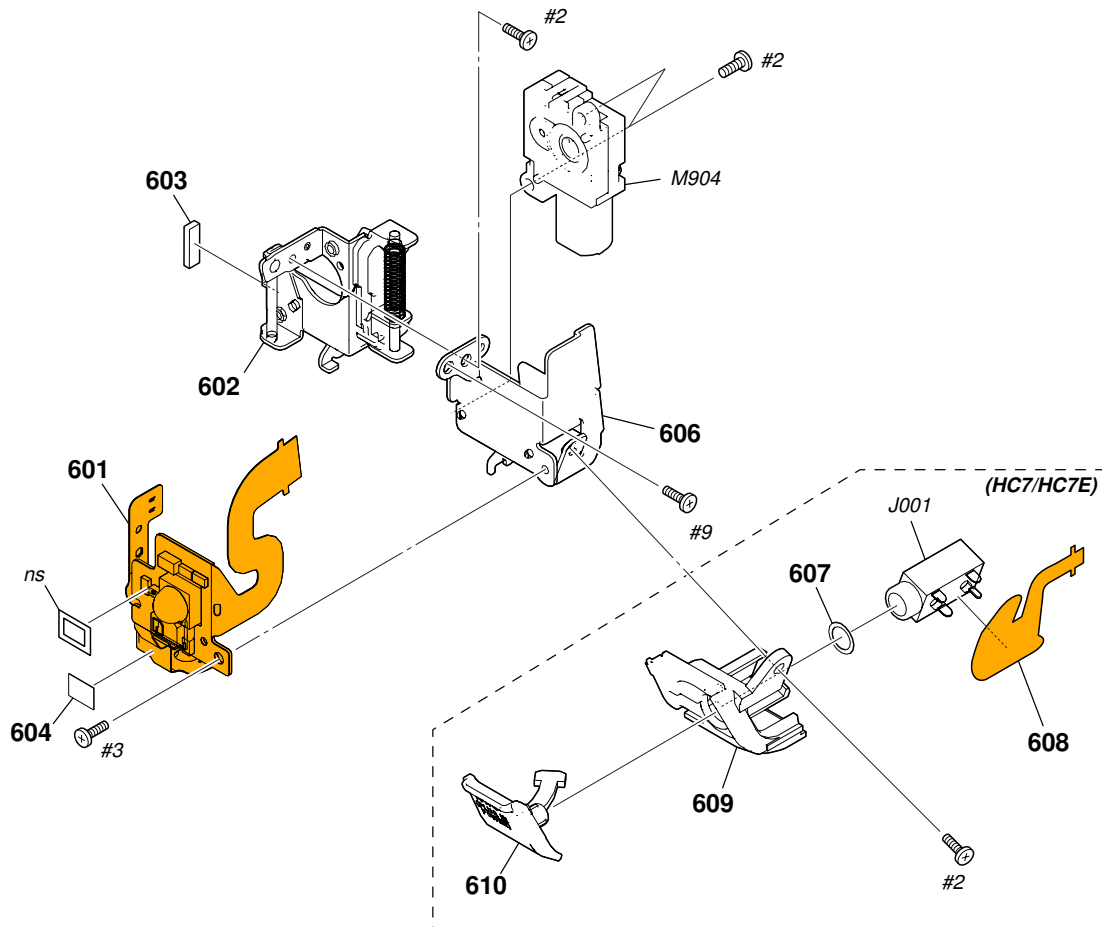


Ref. No.	Part No.	Description
601	A-1231-940-A	FP-643 FLEXIBLE BOARD, COMPLETE
602	X-2176-771-1	LOCK ASSY, ST
* 603	3-196-455-01	GASKET (ST)
604	2-319-256-01	TAPE AS (0409)
* 606	3-095-778-01	BRACKET, IR CHASSIS
607	3-098-924-01	SHEET, MICROPHONE RETAINER (HC7/HC7E)
608	1-871-762-11	FP-647 FLEXIBLE BOARD (HC7/HC7E)
* 609	3-095-753-01	ESCUTCHEON, MICROPHONE (HC7/HC7E)

Ref. No.	Part No.	Description
610	3-095-748-01	COVER (MIC), JACK (HC7/HC7E)
J001	1-691-737-41	JACK (SMALL TYPE) (MIC (PLUG IN POWER)) (HC7/HC7E)
M904	1-787-561-11	MOTOR UNIT (GEARD MOTOR)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#9	3-078-890-21	SCREW, TAPPING (Silver)

5. REPAIR PARTS LIST

5-1-14. MECHANISM DECK SECTION

ns: not supplied

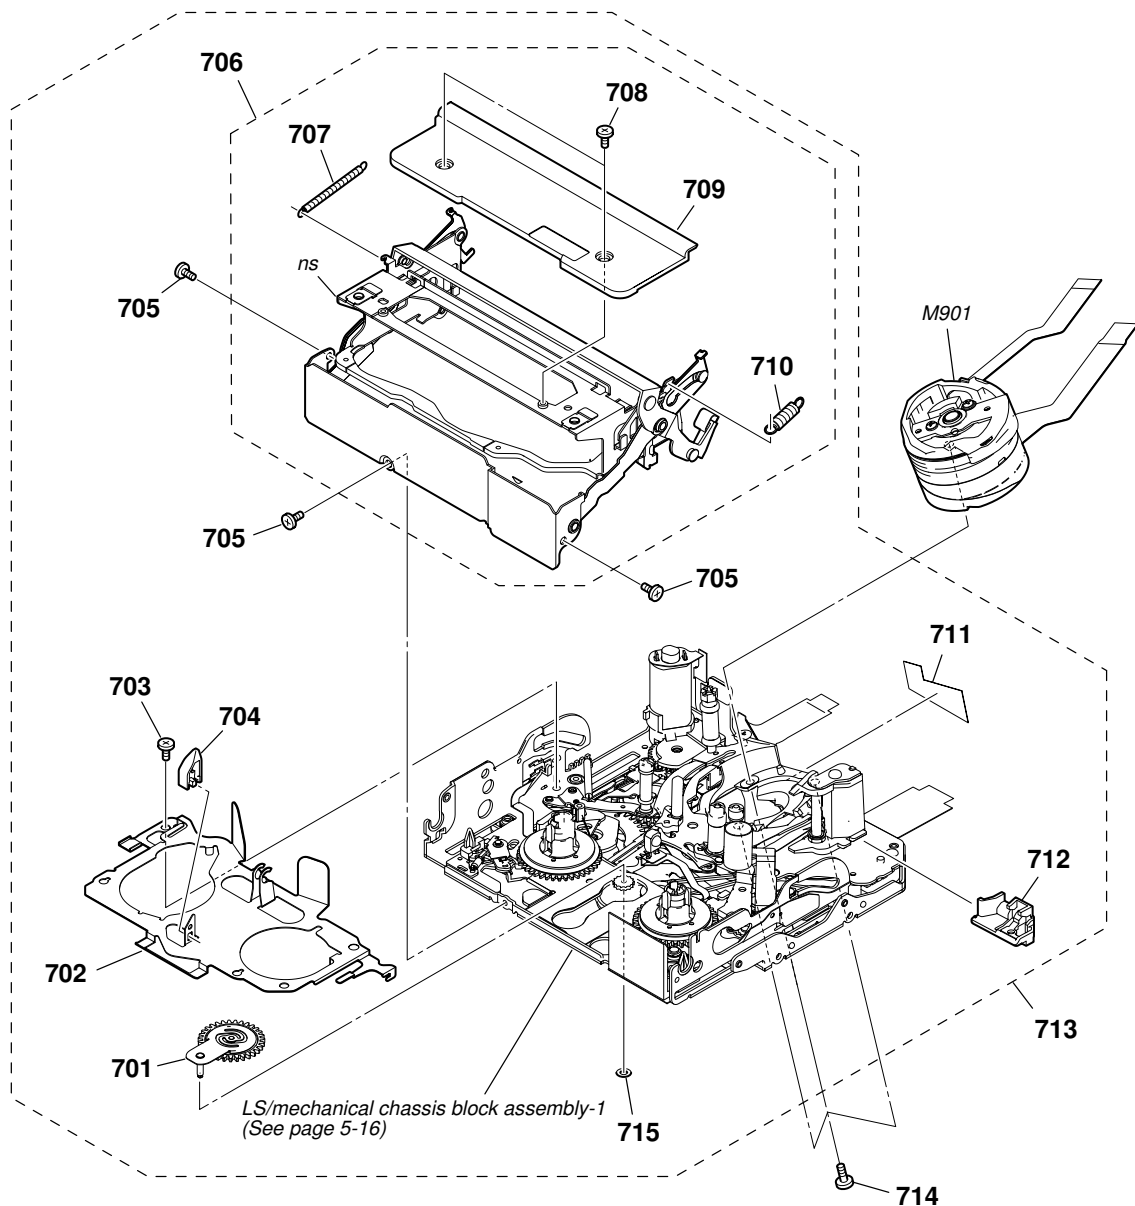


Ref. No.	Part No.	Description
701	X-2024-478-1	PENDULUM ASSY
702	2-342-917-02	LED BASE
703	7-627-850-77	SCREW, PRECISION +P 1.4X1.8
704	3-079-366-11	RELEASE, REEL LOCK
705	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD
706	X-2024-450-3	COMPARTMENT ASSY, CASSETTE
707	2-342-926-01	SPRING (ARM S), TENSION COIL
708	2-546-417-01	SCREW (M1.4)

Ref. No.	Part No.	Description
709	2-342-933-02	PLATE, TOP
710	2-342-927-01	SPRING (ARM T), TENSION COIL
711	2-637-905-01	SHEET, FLEXIBLE ADHESIVE
712	2-342-918-01	TG6 CATCHER
713	A-1080-997-A	MD (N100) SUB ASSY A
714	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
715	3-315-414-31	WASHER
M901	A-1154-545-A	DRUM (DEH-33E-R)

5. REPAIR PARTS LIST

5-1-15. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-1

ns: not supplied

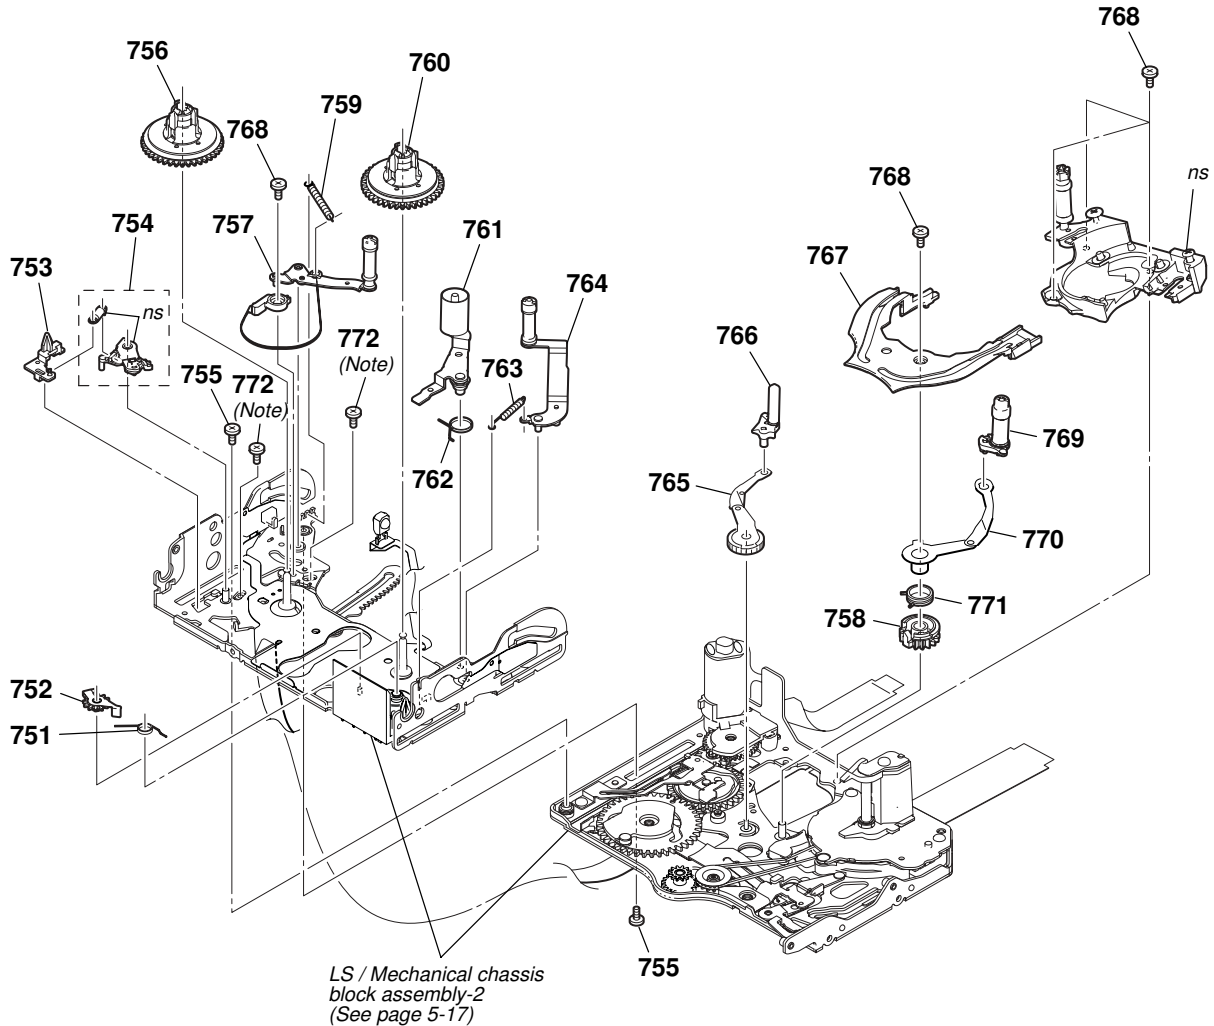


Note: These two screws are the fixing screws of the LS cam plate.
These two fixing screws are used for adjusting the LS cam plate position.
(refer to 4-2. LS cam adjustment of DV mechanical adjustment manual IX)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
751	2-342-759-01	SPRING, RVS BRAKE	763	2-342-626-01	SPRING (RETURN TG6), EXTENSION
752	A-1083-005-A	BLOCK ASSY, RVS BRAKE	764	A-1083-002-A	BLOCK ASSY, TG6
753	2-342-731-01	POSITIONING, S	765	X-2024-468-3	ARM ASSY (S), GL
754	A-1083-006-A	BLOCK ASSY, S BRAKE	766	X-2024-465-1	COASTER (S) ASSY
755	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD	767	2-342-612-01	RAIL
756	X-2024-473-1	TABLE ASSY, S REEL	768	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
757	A-1083-007-B	BLOCK ASSY, TENSION REGULATOR	769	X-2024-466-1	COASTER (T) ASSY
758	2-342-705-01	GEAR (T), GL	770	X-2024-469-1	ARM (T) ASSY, GL
759	2-342-902-01	SPRING, TENSION REGULATOR	771	2-342-716-01	SPRING (T), TORSION COIL
760	X-2024-474-1	TABLE ASSY, T REEL	772	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD
761	X-2024-476-1	ARM ASSY, PINCH			(for adjustment)
762	2-342-906-01	SPRING (PINCH RETURN), TORSION			

5. REPAIR PARTS LIST

5-1-16. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-2

ns: not supplied

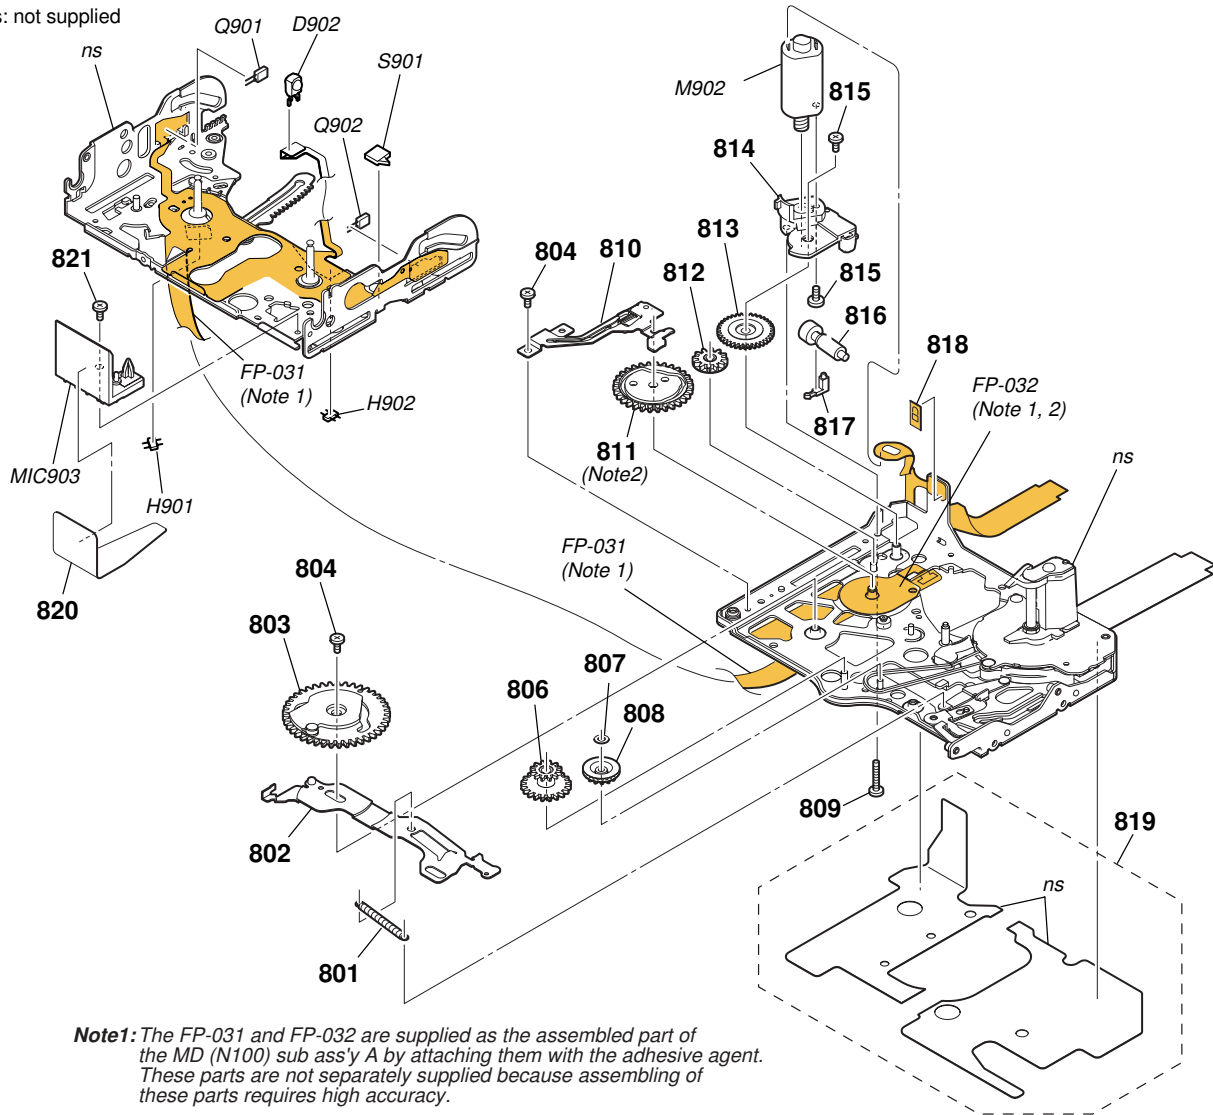

Note1: The FP-031 and FP-032 are supplied as the assembled part of the MD (N100) sub ass'y A by attaching them with the adhesive agent. These parts are not separately supplied because assembling of these parts requires high accuracy.

Note2: The mode switch (S903) function works when the contactor of the FP-032 contacts with the bottom surface of wiper of the mode gear ass'y.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
801	2-342-624-01	SPRING (PINCH LIMITTER), EXTENSION	816	2-342-689-01	WORM SHAFT (2J)
802	X-2024-463-2	SLIDER ASSY, MODE	817	2-637-947-01	BASE, MOTOR HOLDER
803	X-2024-462-1	GEAR ASSY, CAM	818	1-677-049-11	FP-228 FLEXIBLE BOARD (DEW SENSOR)
804	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD	819	2-342-686-01	COVER, CAPSTAN
806	2-342-621-01	GEAR, RELAY	820	2-541-984-01	MIC COVER
807	3-315-414-31	WASHER	821	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
808	2-342-620-01	GEAR, CONVERSION	D902	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
809	3-084-377-01	HEAD (SCREW M1.2)	H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL)
810	X-2024-460-1	BASE ASSY, CAM	H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL)
811	X-2024-461-1	GEAR ASSY, MODE	M902	X-2024-464-1	MOTOR ASSY (LOADING)
812	2-342-615-01	GEAR, NO.2	MIC903	1-818-576-11	PIN, CONNECTOR (WITH DETECTION)
813	2-342-691-01	GEAR, NO.1	Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END)
814	2-637-945-01	MOTOR HOLDER	Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP)
815	3-895-822-71	SCREW (M1.2X2), SPECIAL, 0	S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)