

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION

ns: not supplied

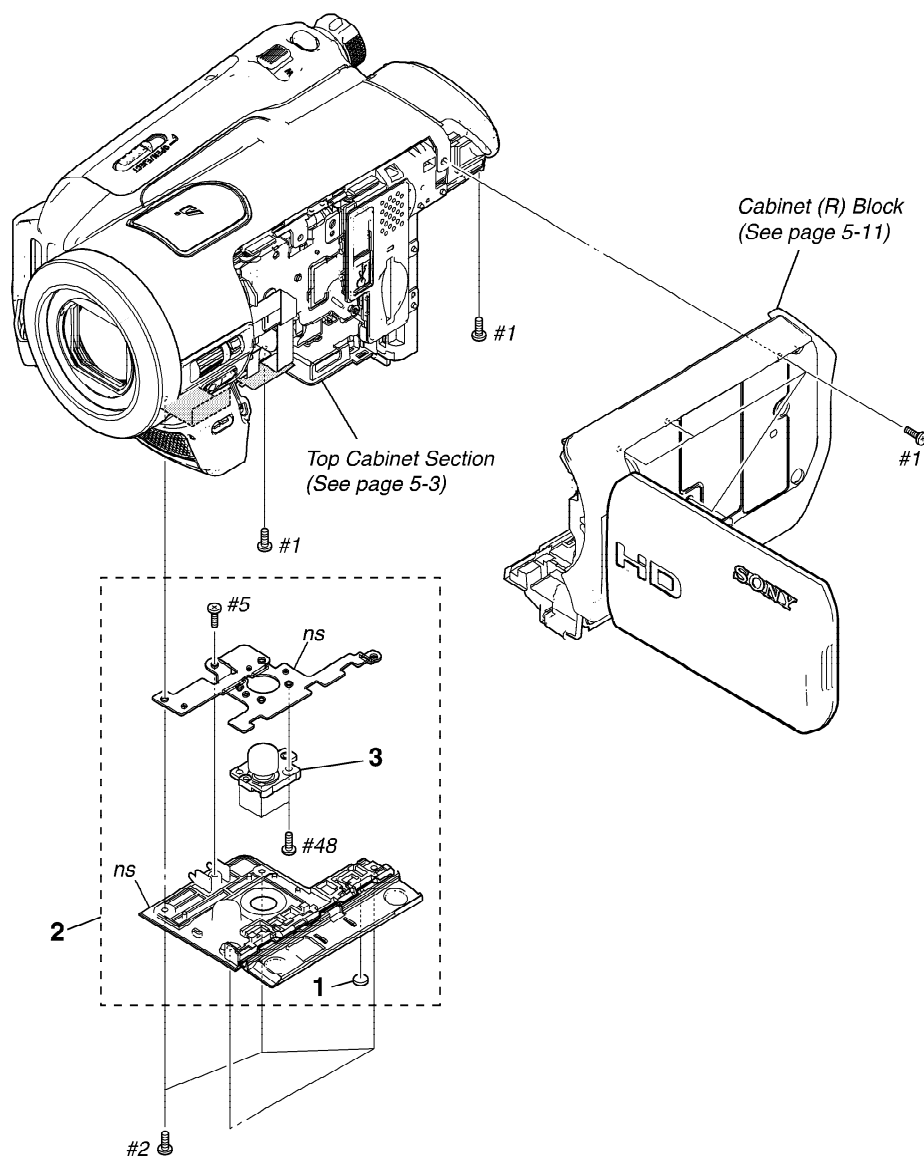

Ref. No.	Part No.	Description
1	2-589-376-01	FOOT (395), RUBBER
2	X-2187-137-1	CABINET ASSY, BOTTOM
3	3-095-744-01	TRIPOD


Ref. No.	Part No.	Description
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#48	3-973-497-91	SCREW (M1.7), 0-NO. +P 2 (Silver)

5. REPAIR PARTS LIST

5-1-2. TOP CABINET SECTION

DISASSEMBLY

HARDWARE LIST

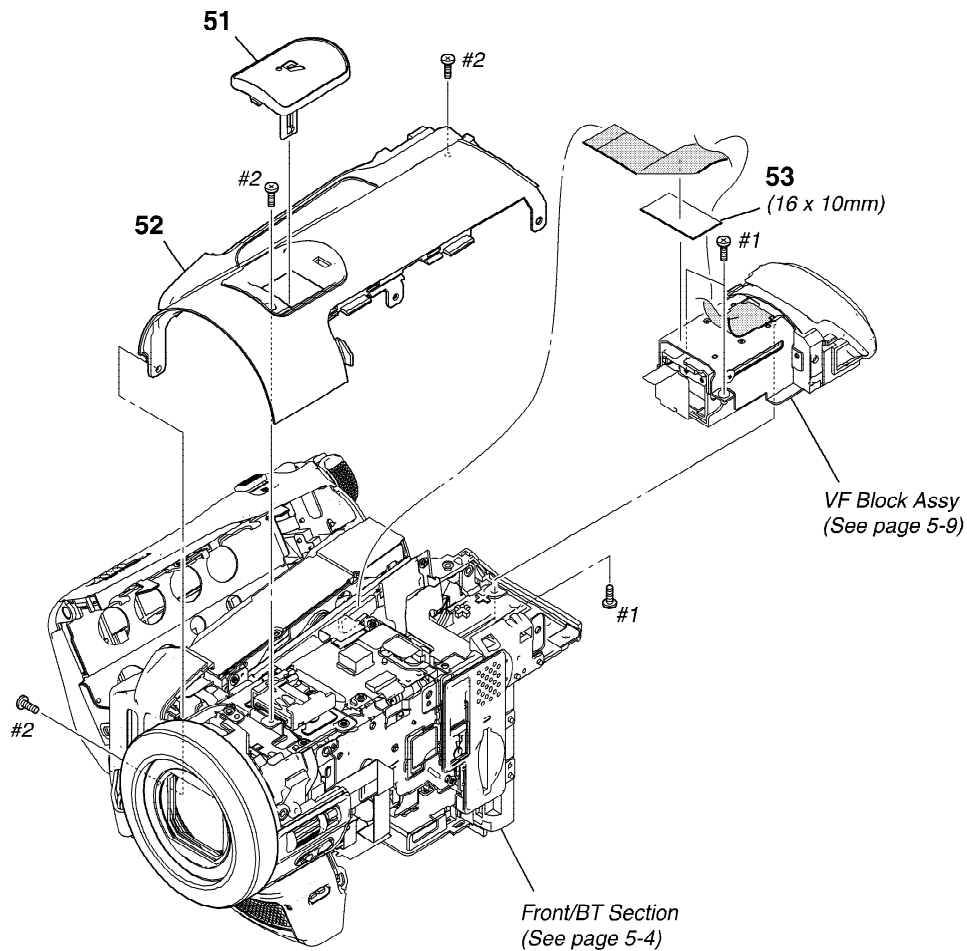

注意: 53 : TAPE VF (3-287-500-01) は、接着紙(2-649-300-01)を切って使用してください。

CAUTION: For the part of 53 : TAPE VF (3-287-500-01), cut SHEET, ADHESIVE (2-649-300-01) into the desired length and use it.

Ref. No.	Part No.	Description
51	X-2187-138-1	COVER ASSY, SHOE
52	X-2187-187-1	CABINET ASSY, TOP
53	CAUTION	TAPE VF

Ref. No.	Part No.	Description
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)


5. REPAIR PARTS LIST

5-1-3. FRONT/BT SECTION

ns: not supplied

DISASSEMBLY

HARDWARE LIST

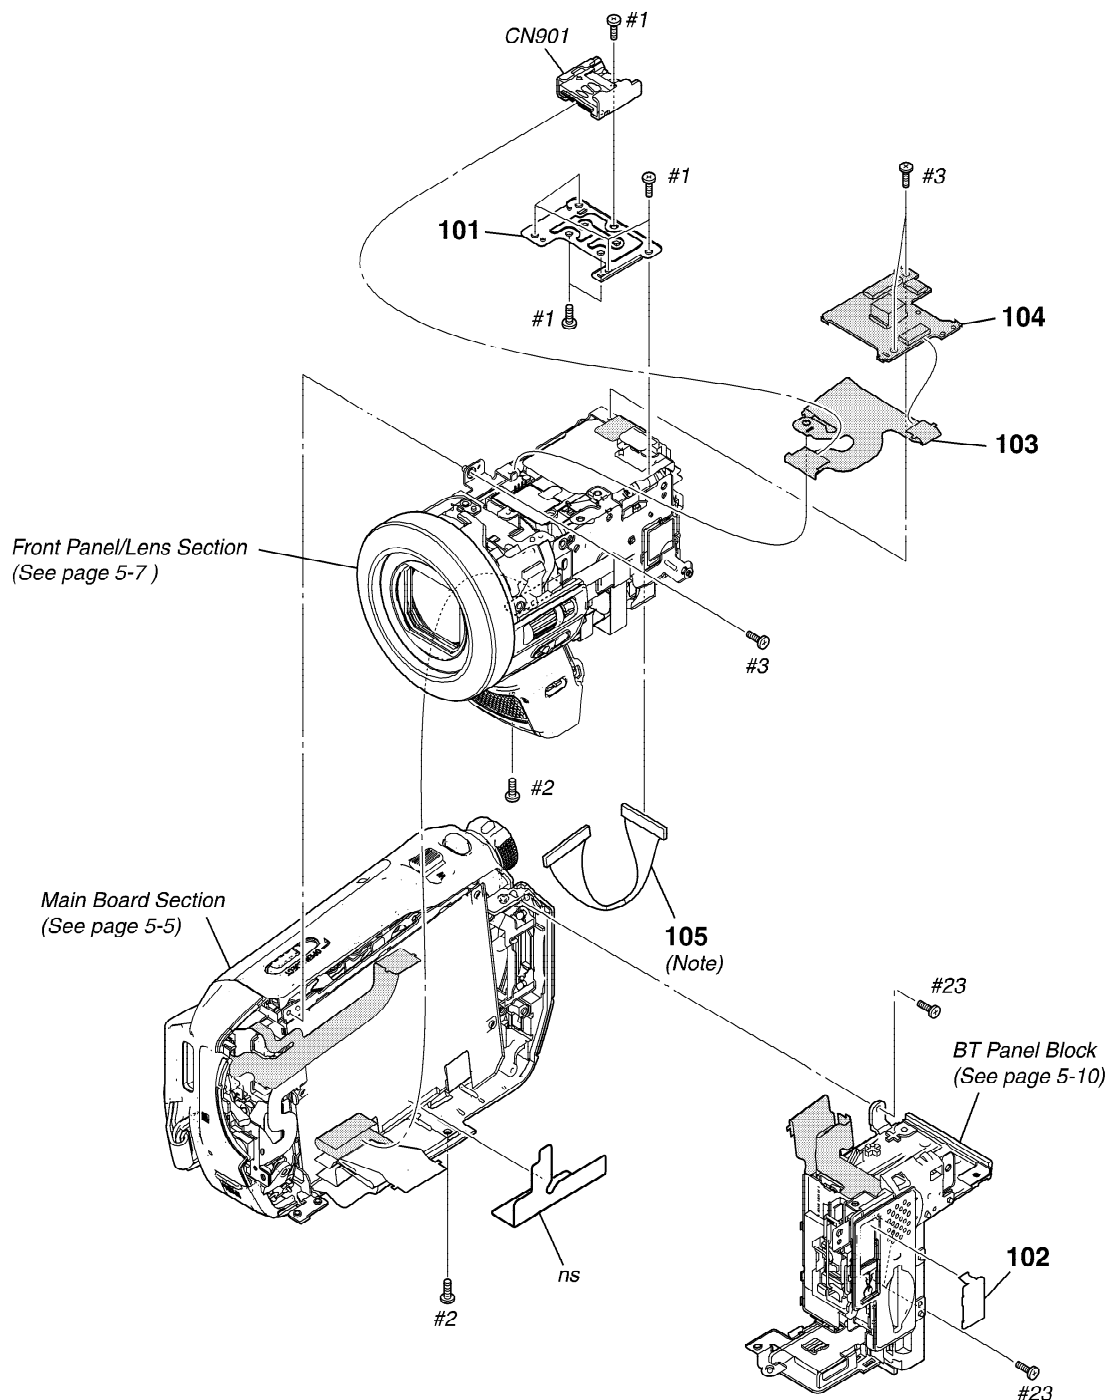

Note : ハーネス（同軸ケーブル）の交換時は2-1ページの
“Note for disconnecting the harness (coaxial cable)”
を参照してください。

Note : Refer to page 2-1 “Note for disconnecting the harness
(coaxial cable)” when changing the harness (coaxial
cable).

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
* 101	3-095-795-01	BRACKET (242), SHOE
102	3-095-749-01	LID, CPC
103	1-871-767-11	FP-652 FLEXIBLE BOARD
104	A-1234-567-A	ST-164 BOARD, COMPLETE
105	1-965-256-31	HARNESS (COAXIAL CABLE) (Note)
△ CN901	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)

Ref. No.	Part No.	Description
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

5-1-4. MAIN BOARD SECTION

DISASSEMBLY

HARDWARE LIST

ns: not supplied

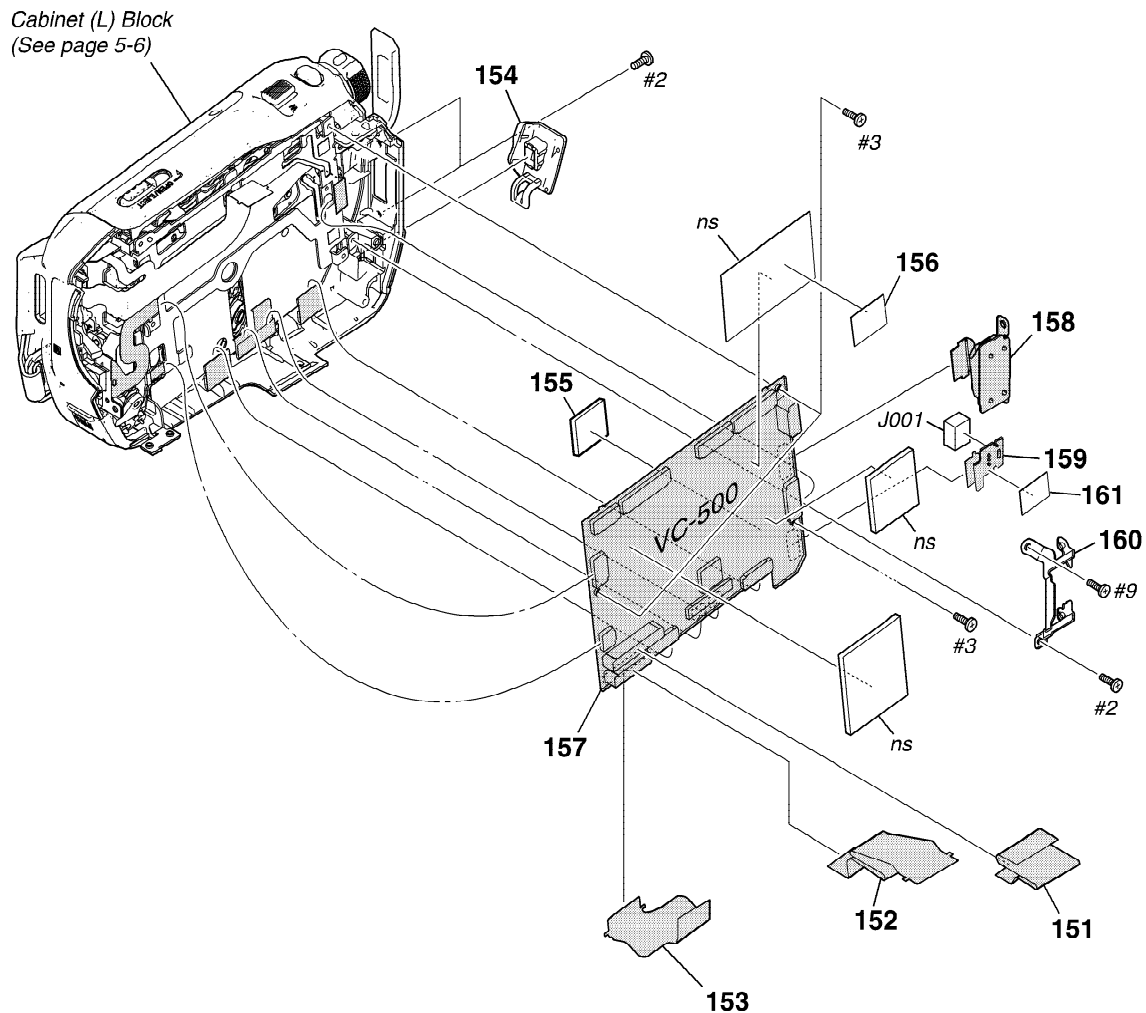

• Refer to page 5-1 for mark Δ .

Ref. No.	Part No.	Description
151	1-871-763-21	FP-648 FLEXIBLE BOARD
152	1-871-766-11	FP-651 FLEXIBLE BOARD
153	1-871-765-21	FP-650 FLEXIBLE BOARD
154	3-095-747-01	COVER (DCIN), JACK
* 155	3-095-789-01	SHEET (CMOS) (R), RADIATION
* 156	3-288-872-01	SHEET (VC1), ELECTROSTATIC
157	A-1454-386-A	VC-500 BOARD, COMPLETE (SERVICE) (HC9E)
157	A-1454-387-A	VC-500 BOARD, COMPLETE (SERVICE) (HC9)
158	A-1231-941-A	FP-645 FLEXIBLE BOARD, COMPLETE

Ref. No.	Part No.	Description
159	1-871-772-21	FP-657 FLEXIBLE BOARD
* 160	3-095-752-01	FRAME, HDMI
161	2-590-635-01	TAPE (AS 1/2)
Δ J001	1-815-792-11	CONNECTOR, DC-IN (7.2V) (DC IN)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#9	3-078-890-21	SCREW, TAPPING (Silver)


5. REPAIR PARTS LIST

5-1-5. CABINET (L) BLOCK

ns: not supplied

DISASSEMBLY

HARDWARE LIST

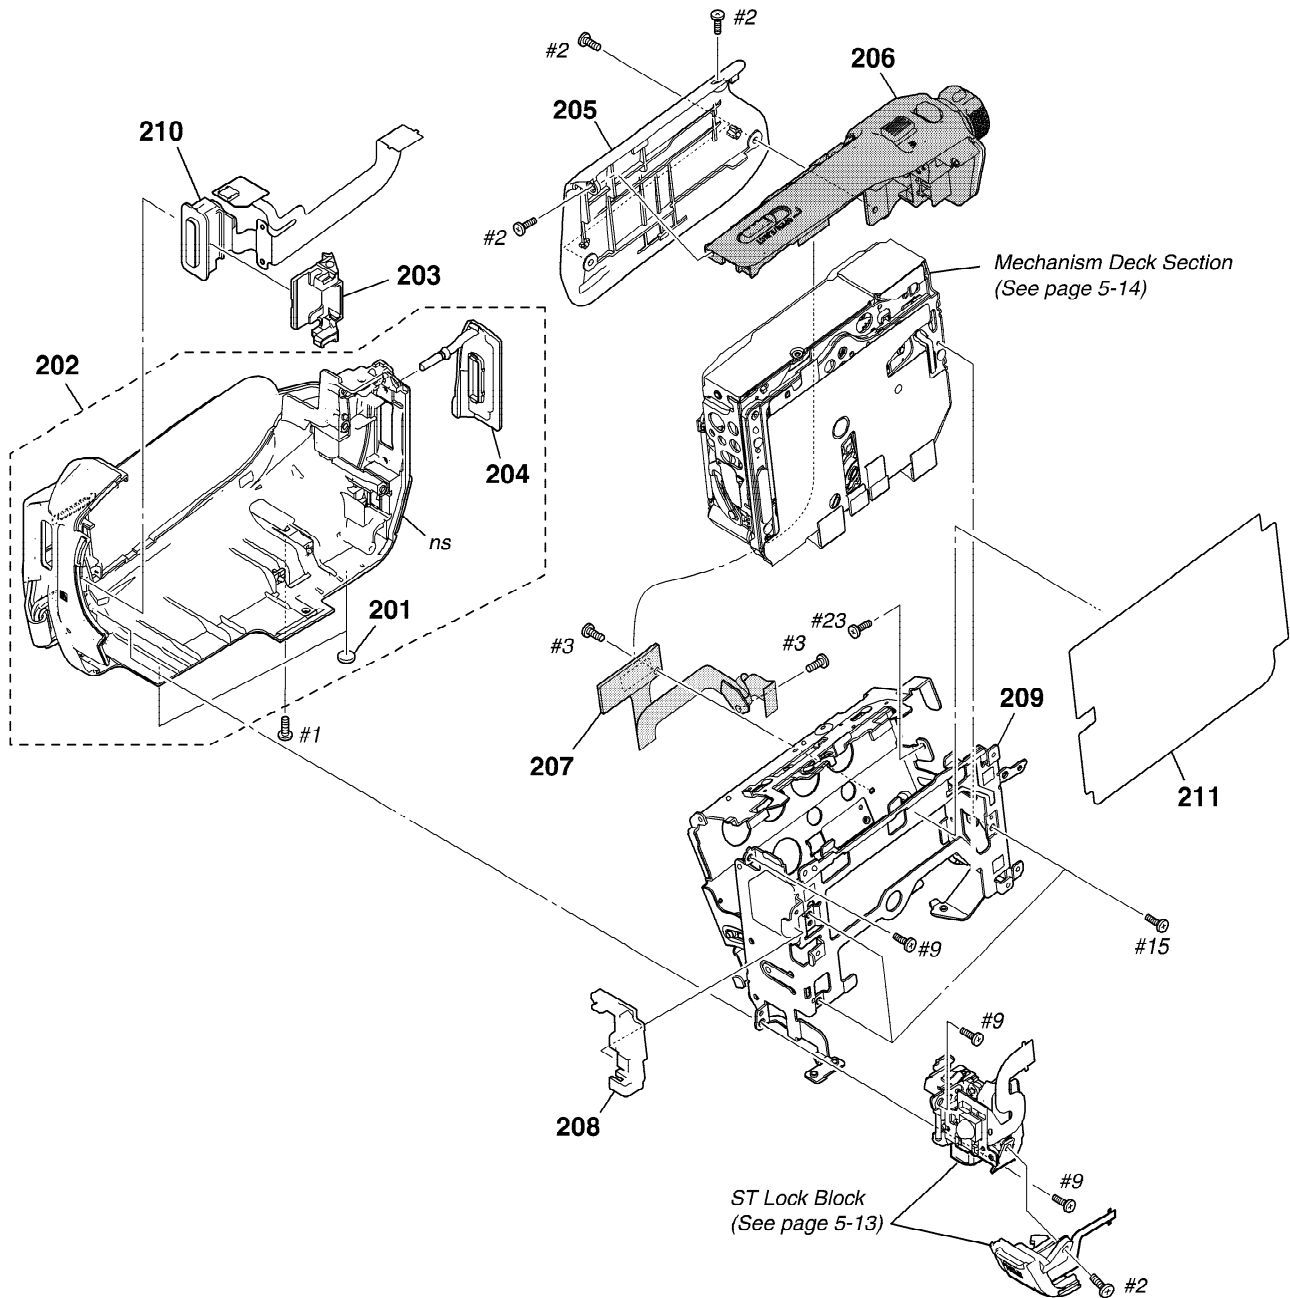

• Refer to page 5-1 for mark Δ .

Ref. No.	Part No.	Description
201	2-589-376-01	FOOT (395), RUBBER
202	X-2176-769-1	CABINET (L) ASSY (242)
203	3-095-779-01	RETAINER, ST
204	3-095-770-01	COVER (HDMI), JACK
205	3-095-755-01	CABINET (G)
206	1-479-895-31	SWITCH BLOCK, CONTROL (PS24200)
207	A-1231-942-A	FP-646 FLEXIBLE BOARD, COMPLETE
* 208	3-095-754-01	CLAMP (ST), FLEXIBLE
209	X-2176-765-1	FRAME ASSY, MD

Ref. No.	Part No.	Description
Δ 210	1-479-888-11	FLASH UNIT
* 211	3-095-751-11	SHEET (VC), INSULATING
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#9	3-078-890-21	SCREW, TAPPING (Silver)
#15	3-062-214-01	SCREW (M1.4X1.5) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

5-1-6. FRONT PANEL/LENS SECTION

ns: not supplied

DISASSEMBLY

HARDWARE LIST

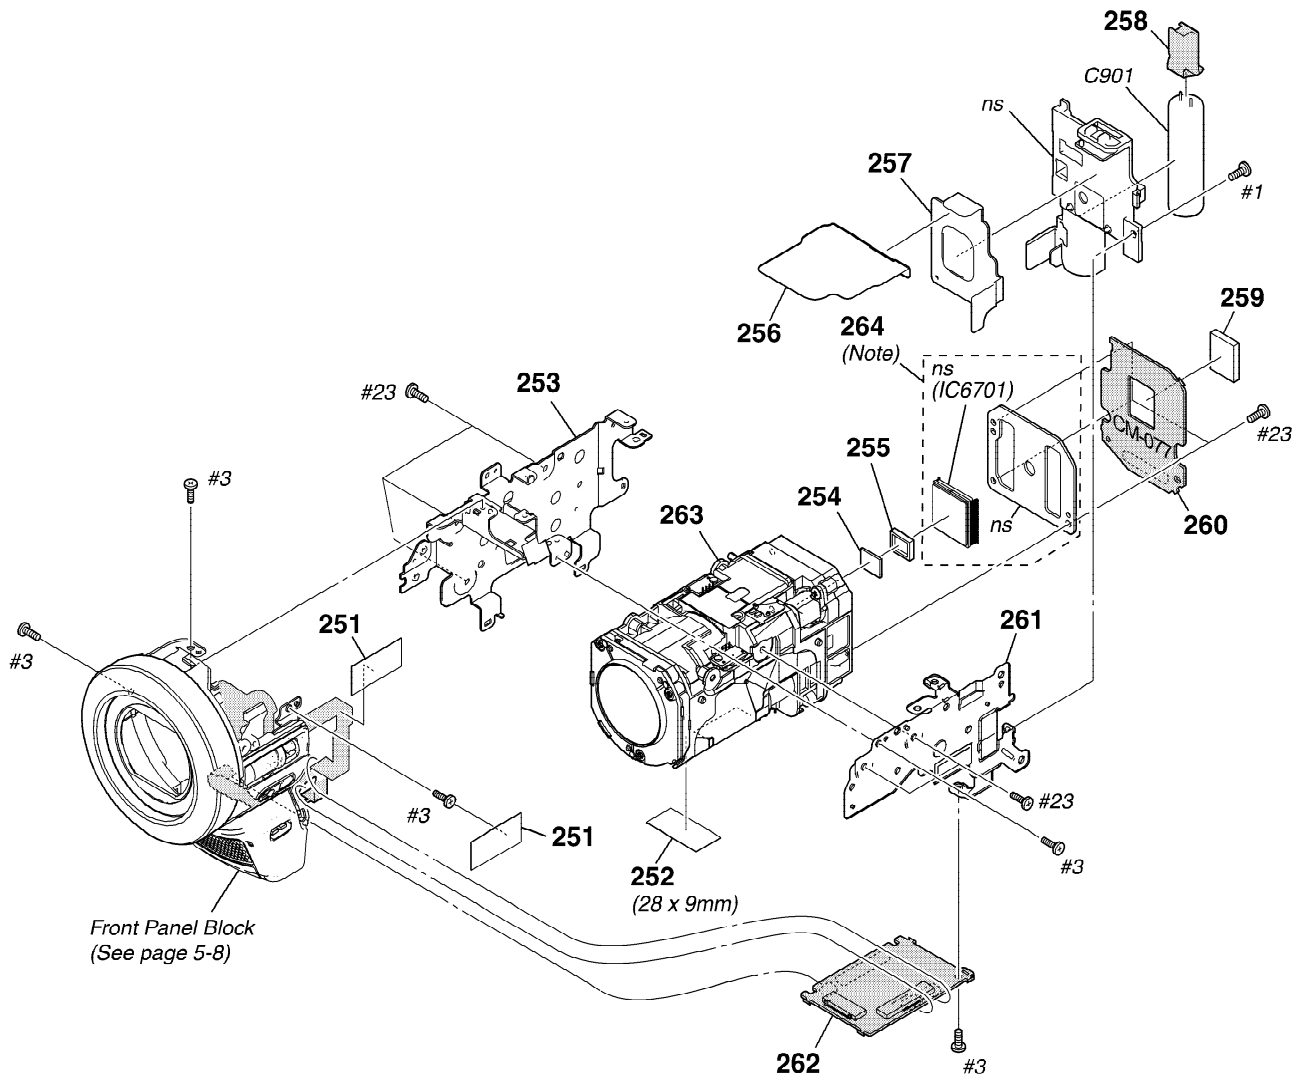

Note: イメージャの交換時は4-4ページの“イメージャ交換時の注意”を必ずお読みください。

Note: Be sure to read “Precautions for Replacement of Imager” on page 4-3 when changing the imager.

注意: 252 : TAPE AS (3-079-115-01) は、レンズフレキシシート (3-052-196-01) を切って使用してください。

CAUTION: For the part of 252 : TAPE AS (3-079-115-01), cut SHEET, LENS FLEXIBLE (3-052-196-01) into the desired length and use it.

• Refer to page 5-1 for mark △.


Ref. No.	Part No.	Description
* 251	3-941-343-01	TAPE (A)
* 252	CAUTION	TAPE AS
253	X-2176-772-1	FRAME (L) ASSY (242), LENS
254	1-788-558-11	FILTER BLOCK, OPTICAL
255	2-698-010-01	RUBBER (1190), SEAL
* 256	3-095-797-11	SHEET (CMOS), SHIELD
* 257	3-095-786-01	HEAT SINK (CMOS) (242)
	1-871-773-21	FP-658 FLEXIBLE BOARD
* 259	3-095-788-01	SHEET (CMOS) (C), RADIATION
260	A-1237-309-A	CM-077 BOARD, COMPLETE (SERVICE)

Ref. No.	Part No.	Description
261	X-2176-774-1	FRAME (R) ASSY (242), LENS
262	A-1449-753-A	LD-221 BOARD, COMPLETE
263	A-1227-735-A	DEVICE, LENS LSV-1190A (SERVICE)
264	A-1209-688-A	CMOS BLOCK ASSY (CMOS IMAGER) (Note)
△ C901	1-112-766-11	CAP, ELECT 70uF 330V
#1	2-635-562-11	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

5-1-7. FRONT PANEL BLOCK

HARDWARE LIST

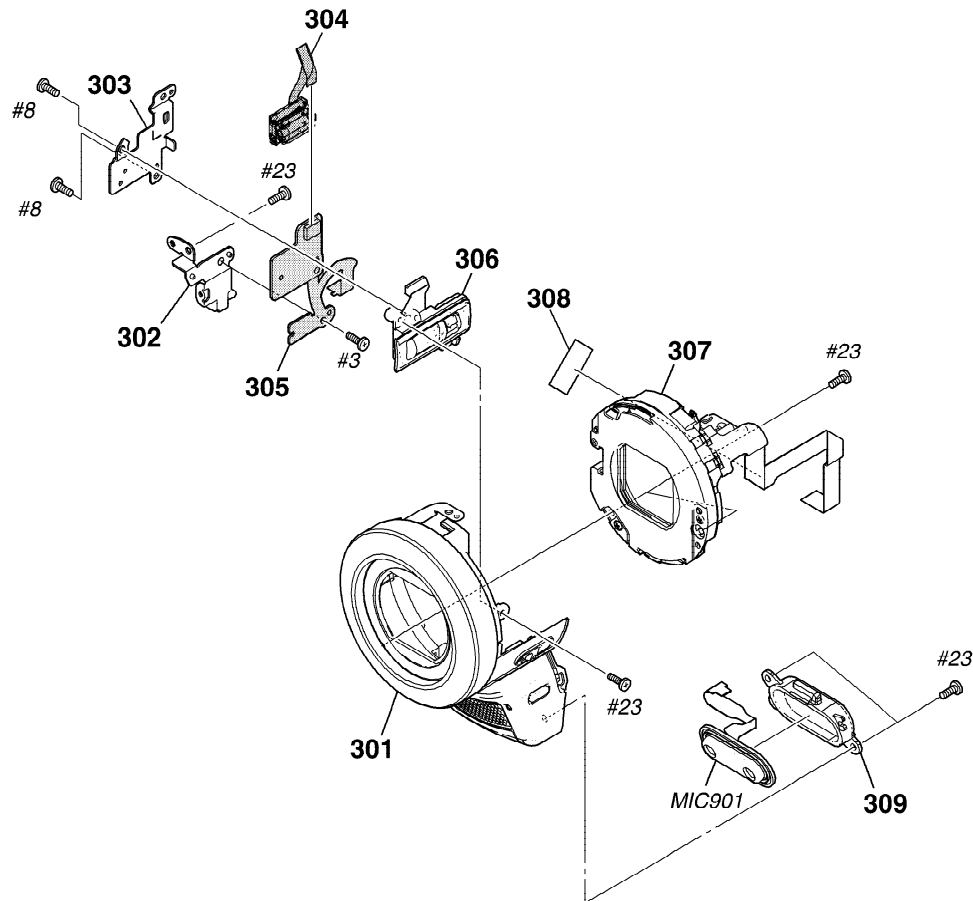


Ref. No.	Part No.	Description
301	X-2187-188-1	PANEL ASSY (2422), F
* 302	3-095-825-01	BRACKET, BL
* 303	3-095-822-01	BRACKET (242), AD
304	1-479-004-31	SWITCH BLOCK, CONTROL (AD11800)
305	A-1231-943-A	FP-644 FLEXIBLE BOARD, COMPLETE
306	X-2187-189-1	BUTTON ASSY, AD
307	A-1217-971-A	LENS BARRIER UNIT

Ref. No.	Part No.	Description
* 308	3-941-343-01	TAPE (A)
* 309	3-095-824-01	RETAINER, MICROPHONE
MIC901	1-542-658-11	MIC UNIT
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#8	3-078-890-01	SCREW, TAPPING (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

5-1-8. VF BLOCK ASSY

HARDWARE LIST

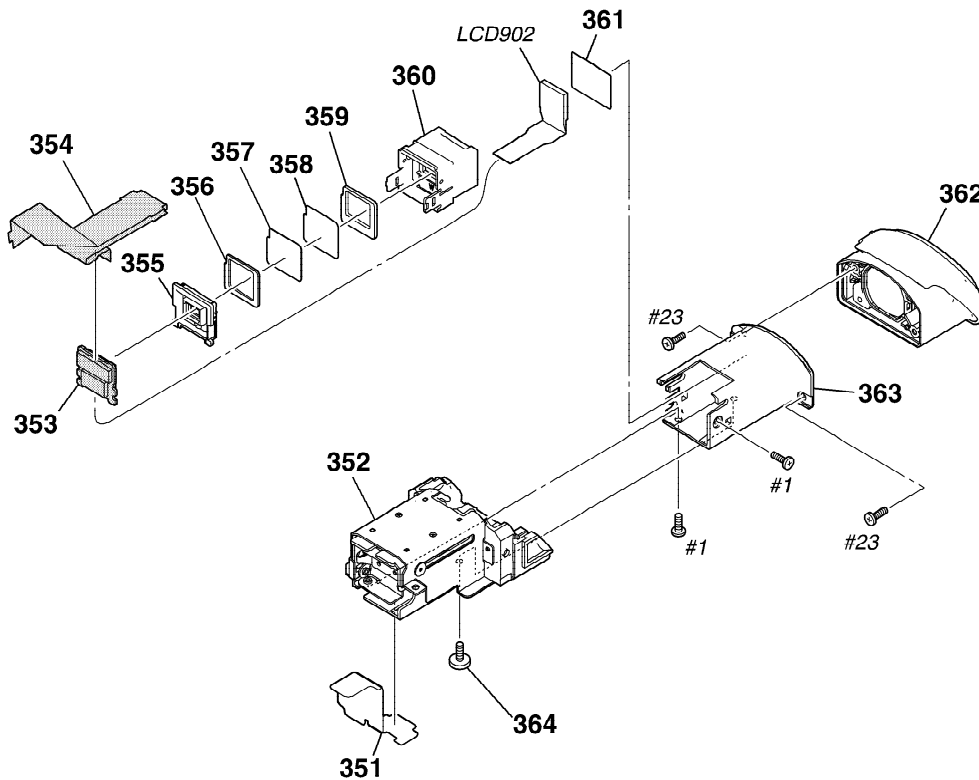

Ref. No.	Part No.	Description
* 351	3-095-859-01	SHEET (CAPACITOR), INSULATING
352	X-2176-782-1	BASE ASSY, SLIDE
353	A-1231-935-A	BL-007 BOARD, COMPLETE
354	1-871-770-11	FP-655 FLEXIBLE BOARD
355	2-664-672-01	GUIDE, LAMP
* 356	2-638-819-01	CUSHION, LCD
* 357	2-638-818-01	ILLUMINATOR
* 358	2-638-816-01	PLATE (TFT), DEFLECTION
359	2-664-671-01	SPACER, LCD
* 360	2-699-236-01	CABINET (222), INNER


Ref. No.	Part No.	Description
* 361	2-668-134-01	PANEL (CF), POLARIZATION
362	X-2176-781-1	EYE CUP ASSY
363	3-095-855-01	CABINET, VF
364	3-095-854-01	SHAFT, VF GUIDE
LCD902	8-753-241-14	LCX076AKE-1
#1	2-635-562-11	SCREW (M1.7) (Black)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

5-1-9. BT PANEL BLOCK

HARDWARE LIST

ns: not supplied

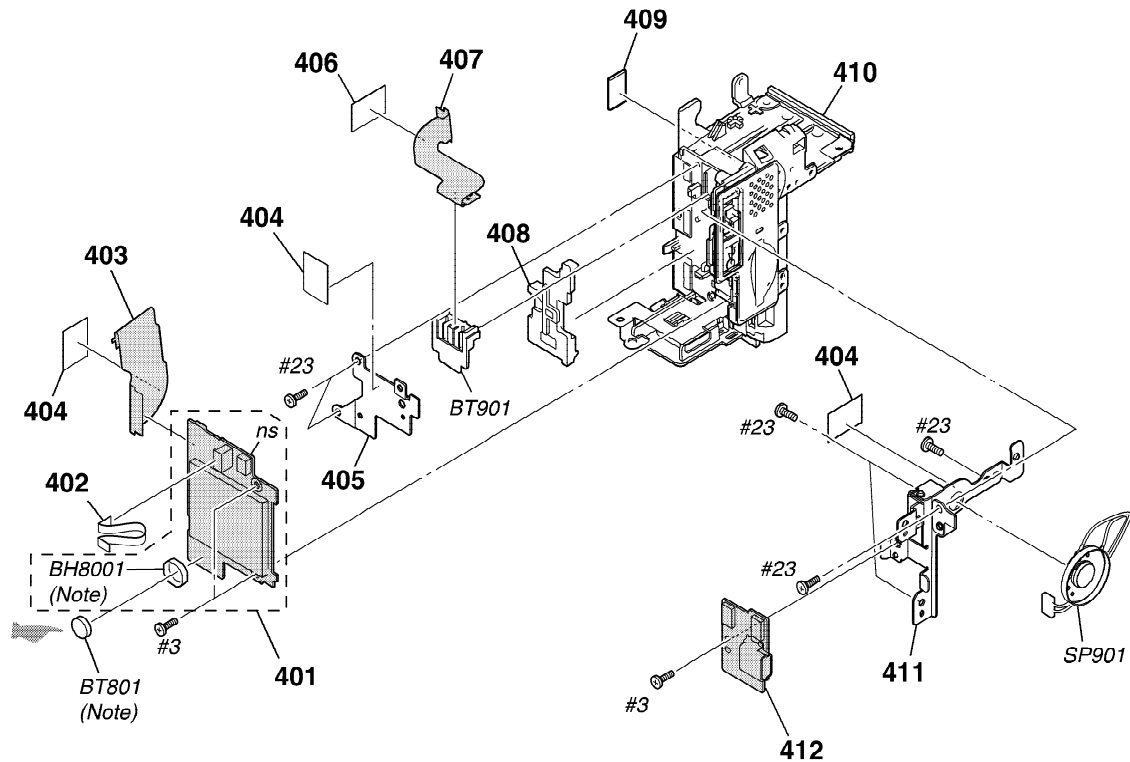

 : BT801 (LITHIUM STORAGE BATTERY)
Board on the mount position.
(See page 4-59.)

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Note: Replace the battery holder (BH8001) together when replacing the lithium storage battery (BT801) on the MS-361 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

ノート: MS-361基板のリチウム蓄電池 (BT801) を交換する場合はバッテリーホルダ (BH8001) も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着して下さい。

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
401	A-1231-934-A	MS-361 BOARD, COMPLETE
402	1-833-788-11	CABLE, FLEXIBLE FLAT (FFC-107)
* 403	1-871-764-11	FP-649 FLEXIBLE BOARD
404	2-590-635-01	TAPE (AS 1/2)
* 405	3-095-837-01	RETAINER, BT TERMINAL
* 406	3-288-871-01	SHEET (BT), ELECTROSTATIC
* 407	1-871-771-11	FP-656 FLEXIBLE BOARD
* 408	3-097-852-01	RETAINER, USB TERMINAL
* 409	3-288-870-01	GASKET (4-1.5)
410	X-2176-780-3	PANEL ASSY, BT

Ref. No.	Part No.	Description
411	X-2177-013-1	BRACKET ASSY, MS
412	A-1231-933-A	US-013 BOARD, COMPLETE
△ BH8001	1-756-615-41	HOLDER, BATTERY (Note)
△ BT801	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
△ BT901	1-780-064-21	BATTERY TERMINAL BOARD
SP901	1-825-262-82	LOUD SPEAKER (1.6CM)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

5-1-10. CABINET (R) BLOCK

ns: not supplied

DISASSEMBLY

HARDWARE LIST

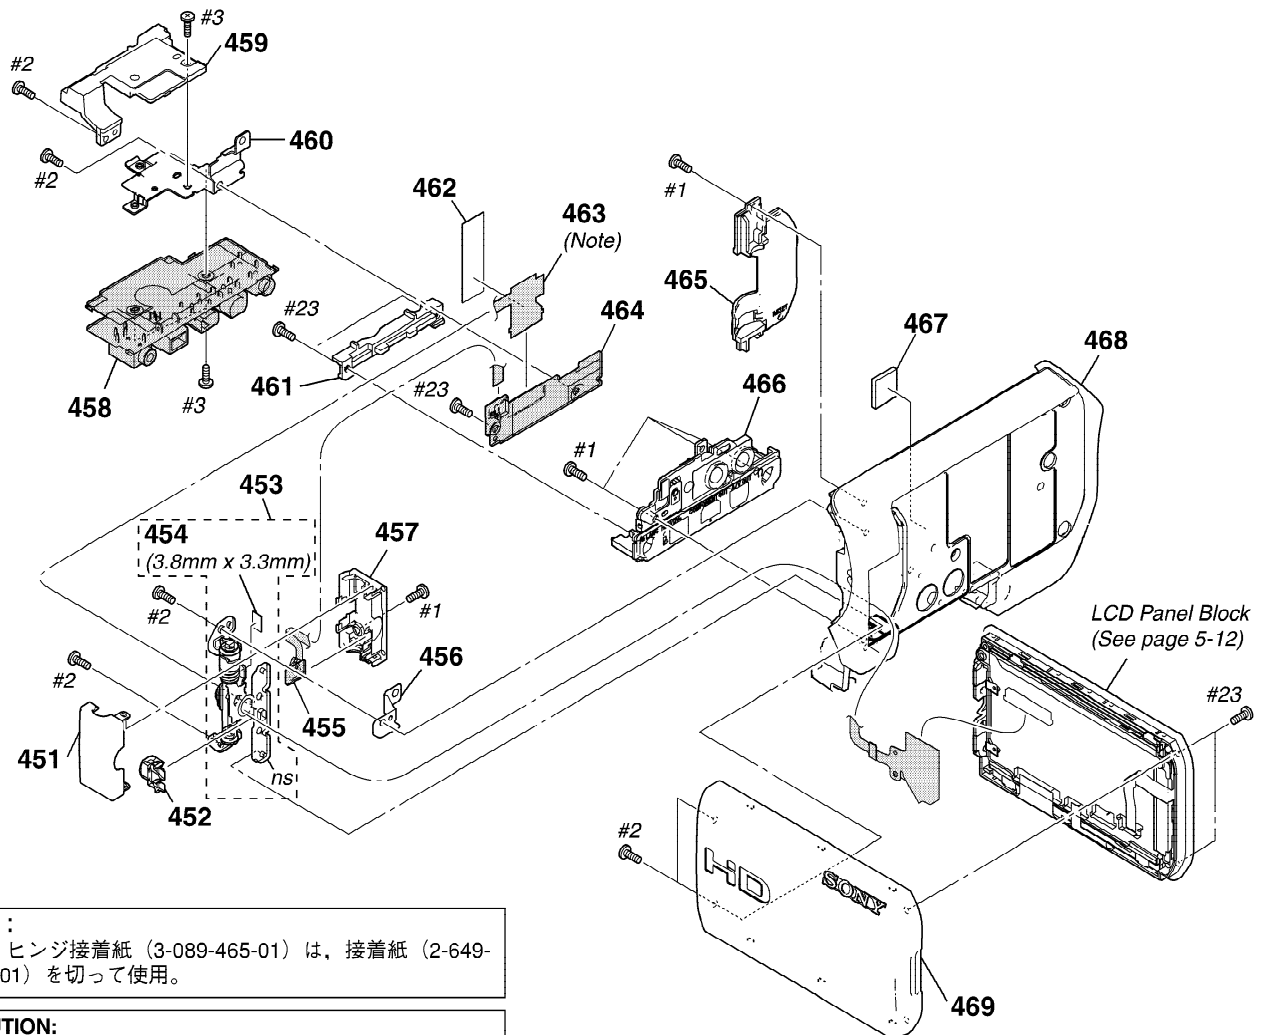

注意:

454: ヒンジ接着紙 (3-089-465-01) は、接着紙 (2-649-300-01) を切って使用。

CAUTION:

For the part of 454: SHEET, ADHESIVE, HINGE (3-089-465-01), cut SHEET, ADHESIVE (2-649-300-01) into the desired length and use it.

Note: FP-659フレキシブル基板取付時は「HELP07」を必ずお読みください。

Note: Be sure to read "HELP07" when you install the FP-659 flexible board.

Ref. No.	Part No.	Description
451	3-095-878-21	COVER (FRONT), HINGE
452	2-668-087-01	CLAMP, FLEXIBLE
453	X-2108-475-1	HINGE ASSY
454	CAUTION	SHEET, ADHESIVE, HINGE
455	A-1174-647-A	FP-372 FLEXIBLE BOARD, COMPLETE
* 456	3-095-871-01	PLATE (HINGE), GROUND
457	3-095-879-01	COVER (REAR), HINGE
	A-1449-754-A	JK-333 BOARD, COMPLETE
* 459	3-095-873-01	GUARD, JK
* 460	3-095-872-01	PLATE, JK RETAINER
* 461	3-095-874-01	RETAINER, JK TERMINAL
462	2-590-635-01	TAPE (AS 1/2)


Ref. No.	Part No.	Description
463	1-871-774-11	FP-659 FLEXIBLE BOARD (Note)
464	A-1449-755-A	CK-177 BOARD, COMPLETE
465	3-095-875-01	BLIND, HINGE
466	X-2176-786-1	CABINET ASSY (242), TERMINAL
* 467	3-095-789-01	SHEET (CMOS) (R), RADIATION
468	X-2187-181-1	CABINET (R) ASSY
469	X-2187-182-1	CABINET (C) ASSY, P
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

5-1-11. LCD PANEL BLOCK

HARDWARE LIST

ns: not supplied

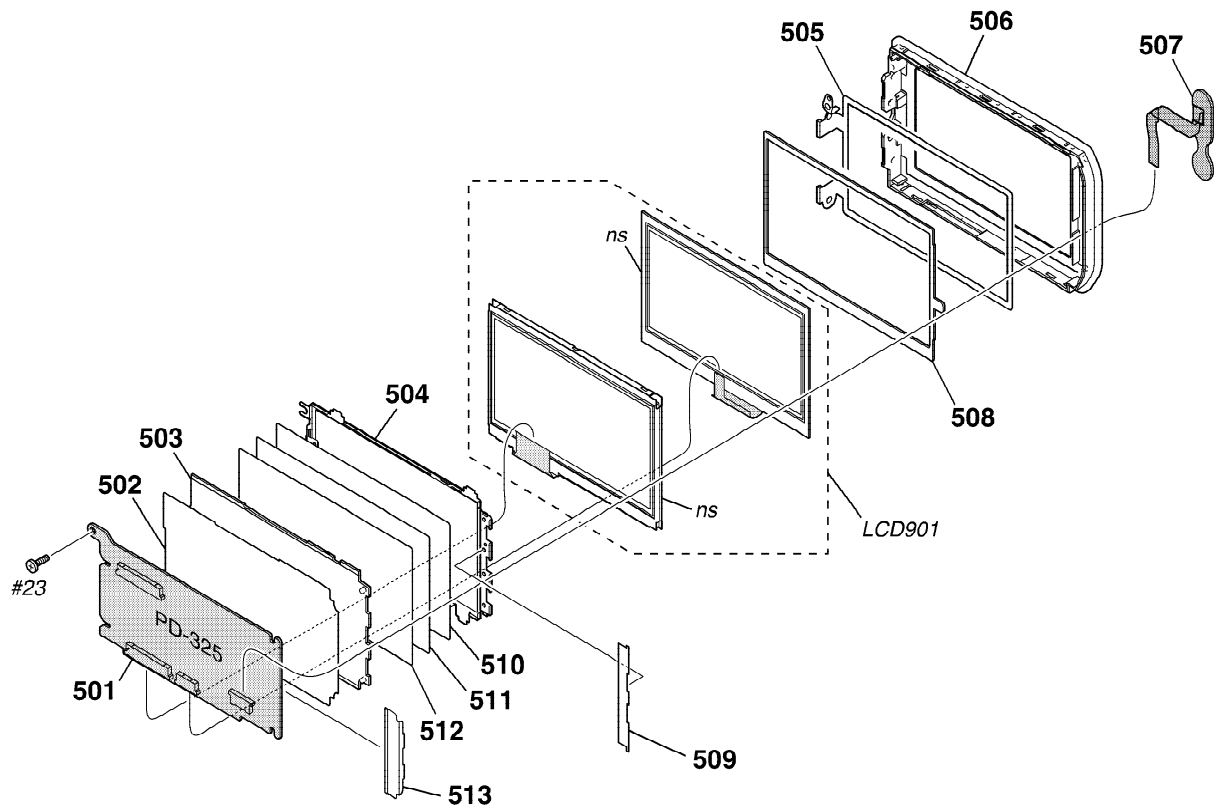

Ref. No.	Part No.	Description
501	A-1449-756-A	PD-325 BOARD, COMPLETE
502	2-894-347-01	REFLECTION SHEET (2.7J)
503	2-666-801-01	LIGHT GUIDE (2.7)
504	2-887-999-01	FRONT FRAME (2.7J)
* 505	3-095-876-01	PLATE (P), GROUND
506	3-095-877-21	CABINET (M), P
507	1-479-063-21	KEY BLOCK, CONTROL (SB9000)
* 508	2-672-277-01	CUSHION, TP
509	2-666-807-21	AG SHEET (2.7)


Ref. No.	Part No.	Description
510	2-666-802-01	PRISM SHEET V (2.7)
511	2-666-803-01	PRISM SHEET H (2.7)
512	2-666-804-01	DIFFUSION SHEET (2.7)
* 513	2-638-780-01	CLIP
LCD901	A-1228-786-A	TP BLOCK ASSY (27ESHGU07)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

5-1-12. ST LOCK BLOCK

ns: not supplied

HARDWARE LIST

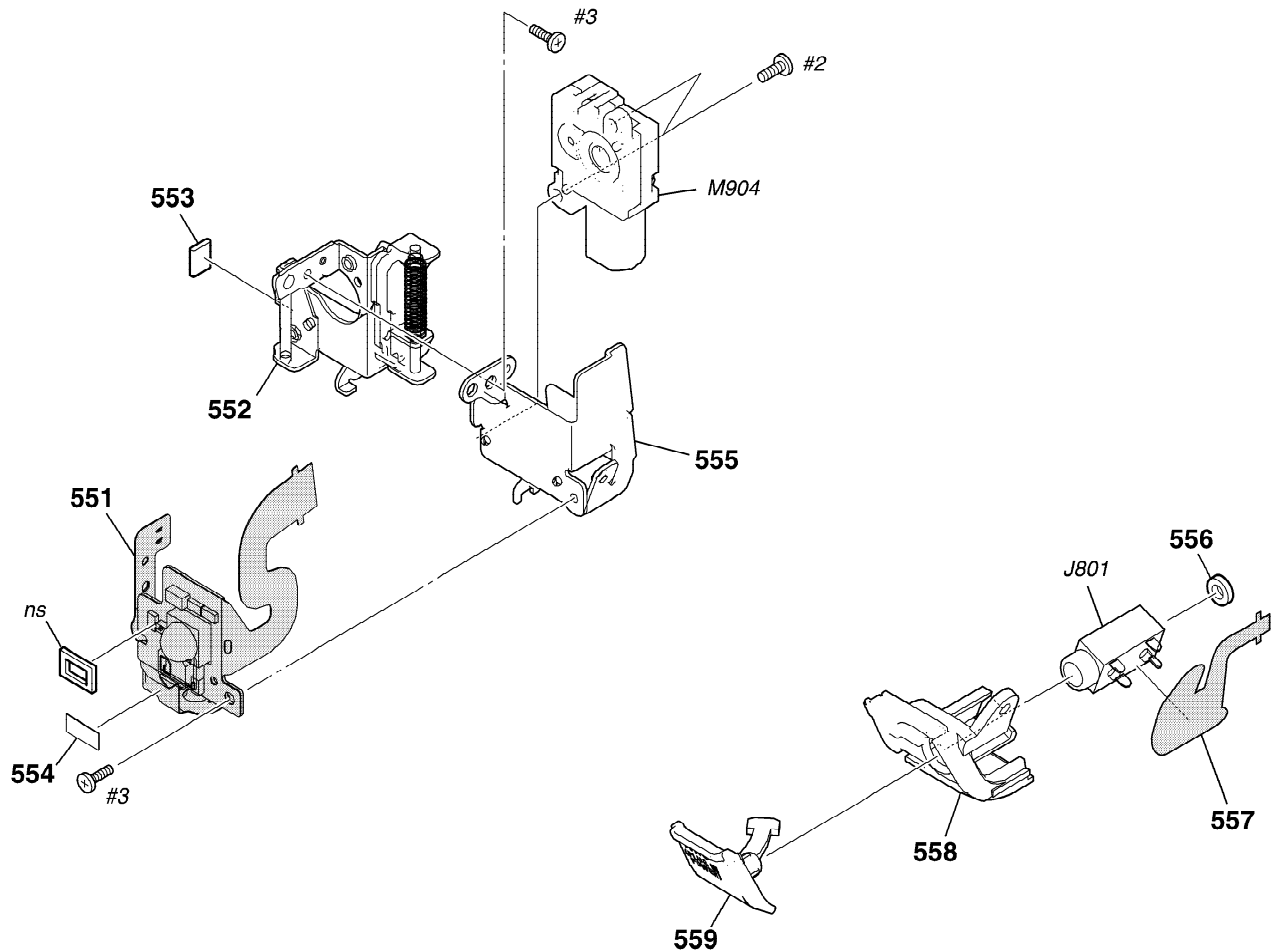


Ref. No.	Part No.	Description
551	A-1231-940-A	FP-643 FLEXIBLE BOARD, COMPLETE
552	X-2176-771-1	LOCK ASSY, ST
* 553	3-288-870-01	GASKET (4-1.5)
554	2-319-256-01	TAPE AS (0409)
* 555	3-095-778-01	BRACKET, IR CHASSIS
556	3-098-924-01	SHEET, MICROPHONE RETAINER
557	1-871-762-21	FP-647 FLEXIBLE BOARD

Ref. No.	Part No.	Description
* 558	3-095-753-01	ESCUTCHEON, MICROPHONE
559	3-095-748-01	COVER (MIC), JACK
J801	1-691-737-41	JACK (SMALL TYPE) (MIC (PLUG IN POWER))
M904	1-787-561-11	MOTOR UNIT (GEARED MOTOR)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)

5. REPAIR PARTS LIST

5-1-13. MECHANISM DECK SECTION

ns: not supplied

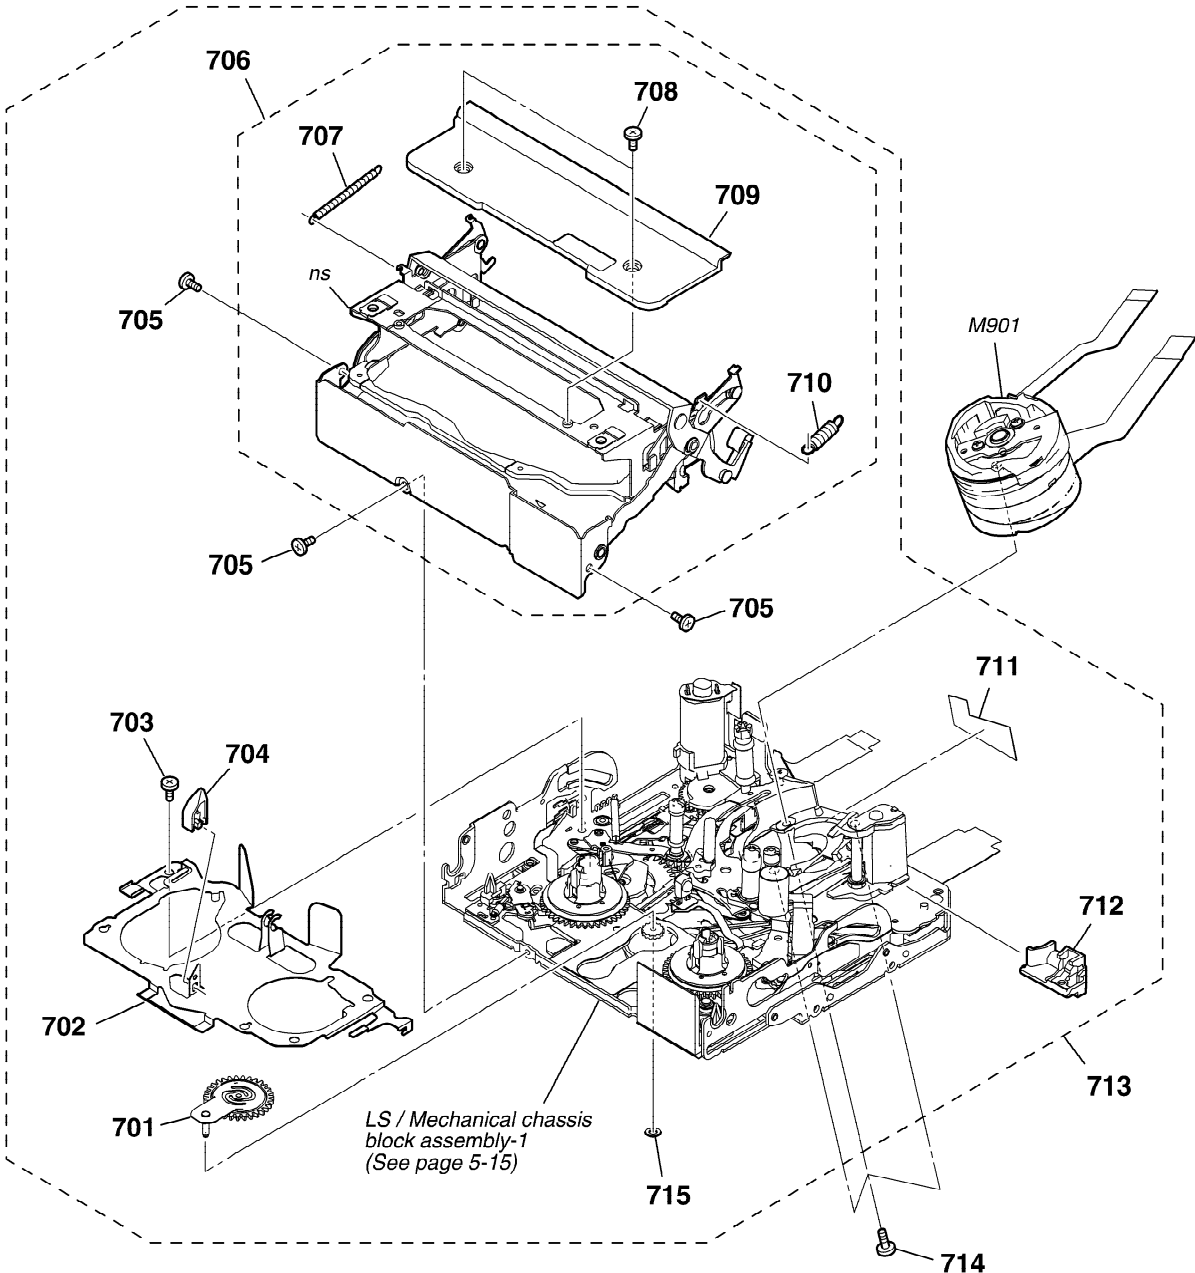


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
701	X-2024-478-1	PENDULUM ASSY
702	2-342-917-02	BASE, LED
703	7-627-850-77	SCREW, PRECISION +P 1.4X1.8
704	3-079-366-11	RELEASE, REEL LOCK
705	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD
706	X-2024-450-3	CASSETTE COMPARTMENT ASSY
707	2-342-926-01	SPRING (ARM S), TENSION COIL
708	2-546-417-01	SCREW (M1.4X1.0)
709	2-342-933-02	PLATE, TOP

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
710	2-342-927-01	SPRING (ARM T), TENSION COIL
711	2-541-585-01	SHEET, FLEXIBLE ADHESIVE
712	2-342-918-01	TG6 CATCHER
713	A-1437-006-A	MD (N220) SUB ASSY (S) A
714	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
715	3-315-414-31	WASHER
M901	A-1154-545-A	DRUM (DEH-33E-R)

5. REPAIR PARTS LIST

5-1-14. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-1

ns: not supplied

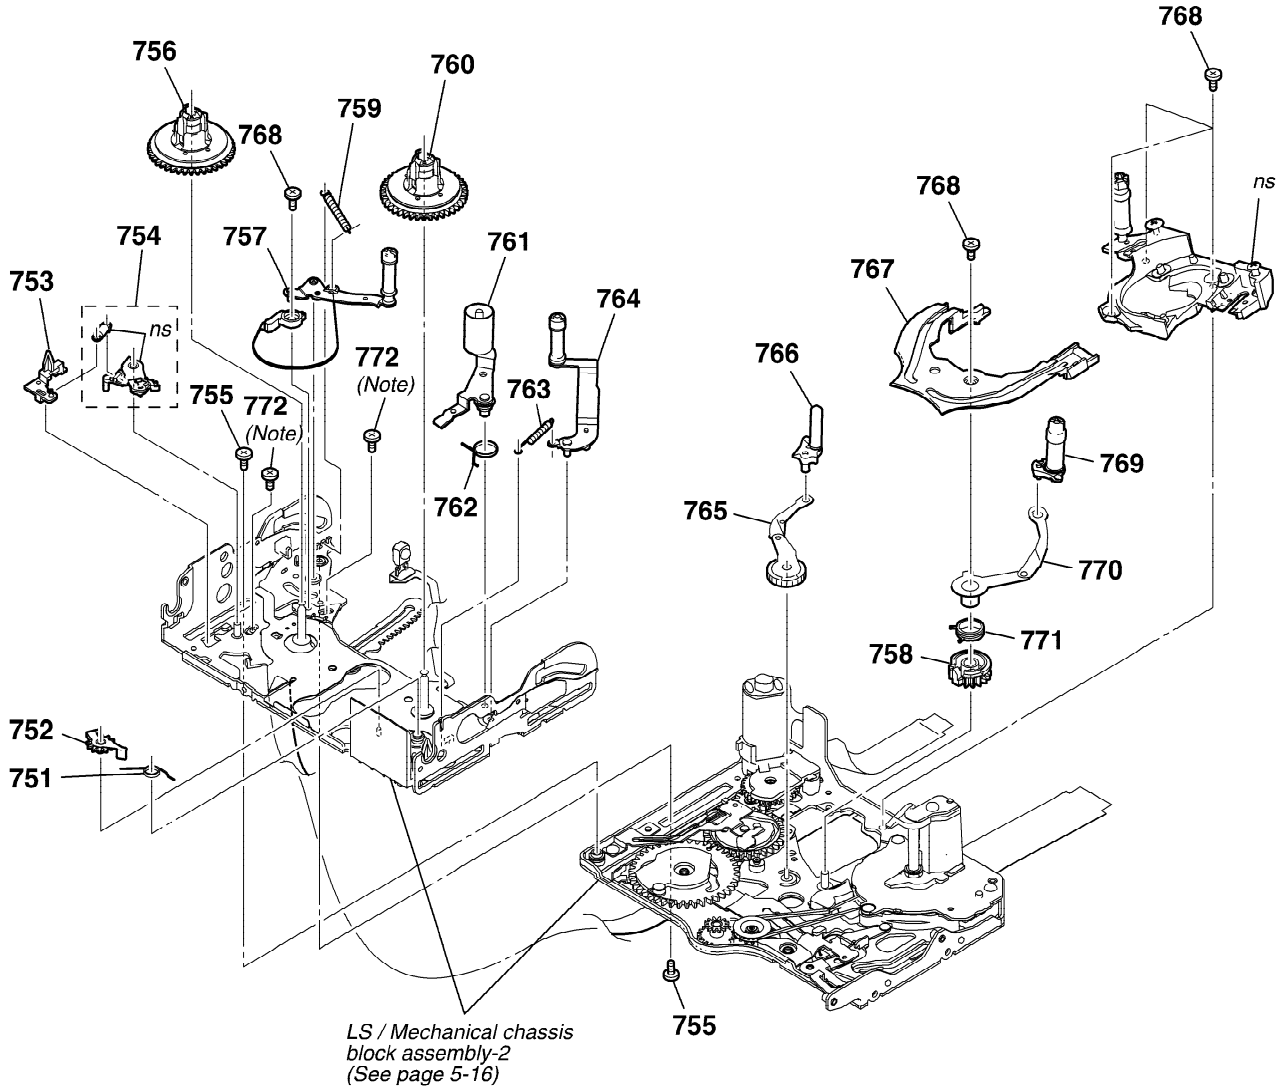


Note: These two screws are the fixing screws of the LS cam plate.
These two fixing screws are used for adjusting the LS cam plate position.
(refer to 4-2. LS cam adjustment of DV mechanical adjustment manual IX)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
751	2-342-759-01	SPRING, RVS BRAKE	763	2-342-626-01	SPRING (RETURN TG6), EXTENSION
752	A-1083-005-A	BRAKE BLOCK ASSY, RVS	764	A-1083-002-A	BLOCK ASSY, TG6
753	2-342-731-01	POSITIONING, S	765	X-2024-468-1	ARM ASSY (S), GL
754	A-1083-006-A	BLOCK ASSY, S BRAKE			
755	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD	766	X-2024-465-1	COASTER (S) ASSY
			767	2-342-612-01	RAIL
756	X-2067-290-1	TABLE ASSY, S REEL	768	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
757	A-1132-279-A	REGULATOR BLOCK ASSY, TENSION	769	X-2024-466-1	COASTER (T) ASSY
758	2-342-705-01	GEAR (T), GL	770	X-2024-469-1	ARM (T) ASSY, GL
759	2-342-902-01	SPRING, TENSION REGULATOR			
760	X-2067-291-1	TABLE ASSY, T REEL	771	2-342-716-01	SPRING (T), TORSION COIL
			772	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD
761	X-2067-295-4	ARM ASSY, PINCH			(for adjustment) (Note)
762	2-342-906-01	SPRING (PINCH RETURN), TORSION			

5. REPAIR PARTS LIST

5-1-15. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-2

ns: not supplied

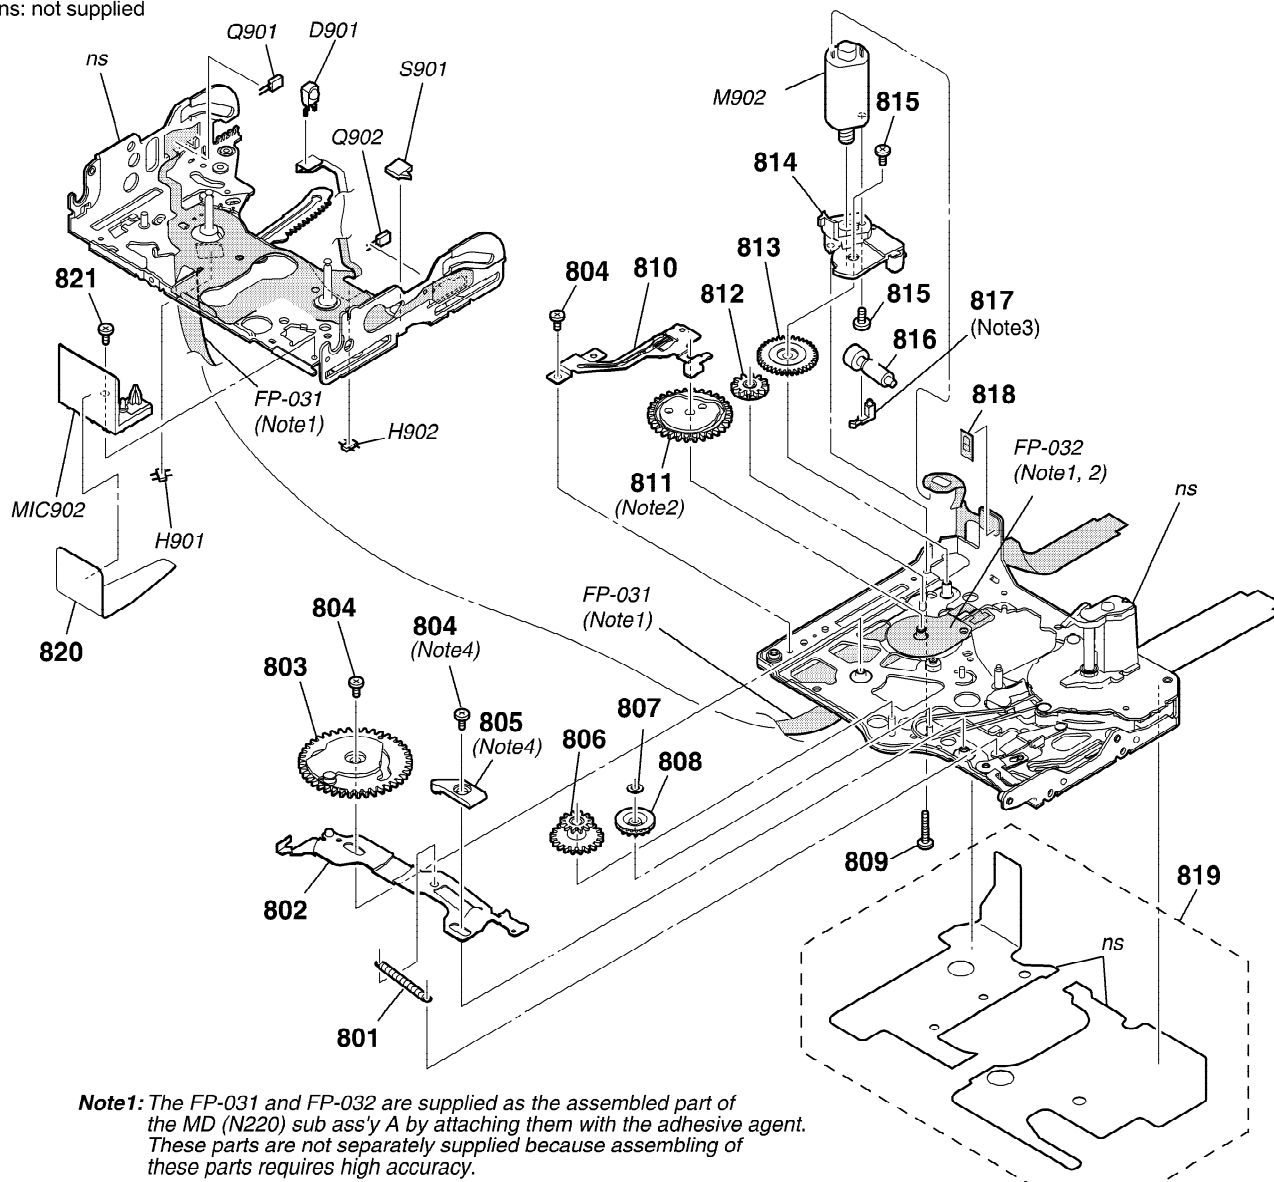

Note1: The FP-031 and FP-032 are supplied as the assembled part of the MD (N220) sub ass'y A by attaching them with the adhesive agent. These parts are not separately supplied because assembling of these parts requires high accuracy.

Note2: The mode switch (S903) function works when the contactor of the FP-032 contacts with the bottom surface of wiper of the mode gear ass'y.

Note3: When replacing the motor holder or the motor holder base, be sure to replace them together as a pair.

Note4: Some sets do not have this screw or the EJ lever retainer. For the sets that have them, follow the installation procedure (3-30-2. Attachment procedure (page 40) of DV mechanical adjustment manual IX) for installation.

Ref. No.	Part No.	Description
801	2-342-624-01	SPRING (PINCH LIMITTER), EXTEN
802	X-2024-463-2	SLIDER ASSY, MODE
803	X-2024-462-3	GEAR ASSY, CAM
804	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD (Note 4)
805	2-342-625-01	RETAINER, LEVER EJ (Note 4)
806	2-342-621-01	GEAR, RELAY
807	3-315-414-31	WASHER
808	2-342-620-01	GEAR, CONVERSION
809	3-084-377-01	HEAD (SCREW M1.2)
810	X-2024-460-1	BASE ASSY, CAM
811	X-2024-461-1	GEAR ASSY, MODE (Note 2)
812	2-342-615-01	GEAR, NO.2
813	2-342-691-01	GEAR, NO.1
814	2-637-945-01	HOLDER, MOTOR
815	3-895-822-71	SCREW (M1.2X2), SPECIAL, 0
816	2-342-689-01	WORM SHAFT (2J)
817	2-637-947-01	BASE, MOTOR HOLDER (Note 3)

Ref. No.	Part No.	Description
818	1-677-049-11	FP-228 FLEXIBLE BOARD (DEW SENSOR)
819	2-342-686-01	COVER, CAPSTAN
820	2-541-984-01	MIC COVER
821	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
D901	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL SENSOR)
H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL SENSOR)
M902	X-2024-464-1	MOTOR ASSY (LOADING MOTOR)
MIC902	1-818-576-11	PIN, CONNECTOR (WITH DETECTION) (4 PIN CONNECTOR)
Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END SENSOR)
Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP SENSOR)
S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1231-935-A	BL-007 BOARD, COMPLETE *****

(LCD902 is not included in BL-007 complete board.)

< LIQUID CRYSTAL DISPLAY >

LCD902	8-753-241-14	LCX076AKE-1
--------	--------------	-------------

< CAPACITOR >

C5901	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5902	1-165-908-11	CERAMIC CHIP	1uF	10%	10V

< CONNECTOR >

* CN5901	1-816-648-51	FFC/FPC CONNECTOR (LIF) 20P
* CN5902	1-817-560-71	CONNECTOR, FPC (ZIP) 21P

< DIODE >

* D5901	6-501-591-01	DIODE NESW007AT-T099
D5902	8-719-074-67	DIODE EDZ-TE61-5.6B

	A-1449-755-A	CK-177 BOARD, COMPLETE *****
--	--------------	---------------------------------

< CONNECTOR >

* CN6701	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P
* CN6702	1-816-650-51	FFC/FPC CONNECTOR (LIF) 24P
CN6703	1-779-339-51	CONNECTOR, FFC/FPC 30P

< RESISTOR >

R6701	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R6702	1-218-953-11	RES-CHIP	1K	5%	1/16W

< SWITCH >

S6701	1-786-148-11	SWITCH, PUSH (1 KEY) (PANEL OPEN/CLOSE)
S6702	1-771-138-21	SWITCH, KEY BOARD (RESET)
S6703	1-771-138-21	SWITCH, KEY BOARD (DISPLAY/BATT INFO)
S6704	1-771-138-21	SWITCH, KEY BOARD (EASY)

Electrical parts list of the CM-077 is not shown.
Pages 5-18 is not shown.

Ref. No.	Part No.	Description
	(Not supplied)	FP-031 FLEXIBLE BOARD *****
(This flexible board is included in MD (N220) sub assy (S) A (A-1437-006-A).)		
< DIODE >		
D901	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
< HOLE ELEMENT >		
H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL SENSOR)
H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL SENSOR)
< CONNECTOR >		
MIC902	1-818-576-11	PIN, CONNECTOR (WITH DETECTION) (4 PIN CONNECTOR)
< TRANSISTOR >		
Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END SENSOR)
Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP SENSOR)
< SWITCH >		
S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)
	(Not supplied)	FP-032 FLEXIBLE BOARD *****
(This flexible board with S903 is included in MD (N220) sub assy (S) A (A-1437-006-A).)		
	1-677-049-11	FP-228 FLEXIBLE BOARD (DEW SENSOR) *****
(This flexible board is included in MD (N220) sub assy (S) A (A-1437-006-A).)		
	A-1174-647-A	FP-372 FLEXIBLE BOARD, COMPLETE *****
< SWITCH >		
S301	1-786-680-21	SWITCH, DETECTION (SMD) (PANEL REVERSE)
	A-1231-940-A	FP-643 FLEXIBLE BOARD, COMPLETE *****
(M904 is not included in FP-643 flexible board.)		
< CAPACITOR >		
C001	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
< DIODE >		
D001	6-500-512-01	DIODE CL-330IRS-X-TU (NIGHTSHOT)
D003	8-719-064-07	DIODE SML-310LTT86 (CAMERA RECORDING)
< IC >		
IC001	6-600-163-01	IC RS-770
< MOTOR >		
M904	1-787-561-11	MOTOR UNIT (GEARED MOTOR)

Ref. No.	Part No.	Description
< RESISTOR >		
R001	1-216-801-11	METAL CHIP
R002	1-216-801-11	METAL CHIP
R004	1-216-819-11	METAL CHIP
A-1231-943-A		FP-644 FLEXIBLE BOARD, COMPLETE

< CONNECTOR >		
* CN001	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P
< SWITCH >		
S001	1-786-157-31	TACTILE SWITCH (MANUAL)
S004	1-786-157-31	TACTILE SWITCH (BACKLIGHT)
S005	1-786-148-11	SWITCH, PUSH (1 KEY) (NIGHTSHOT)
A-1231-941-A		FP-645 FLEXIBLE BOARD, COMPLETE

< CONNECTOR >		
* CN001	1-819-696-21	CONNECTOR, HDMI (HDMI OUT)
A-1231-942-A		FP-646 FLEXIBLE BOARD, COMPLETE

< CONNECTOR >		
* CN001	1-816-649-51	FFC/FPC CONNECTOR (LIF) 22P
< SWITCH >		
S001	1-786-180-31	SWITCH, PUSH (1KEY) (EJECT)
1-871-762-21		FP-647 FLEXIBLE BOARD

(J801 is not included in FP-647 flexible board.)		
< JACK >		
J801	1-691-737-41	JACK (SMALL TYPE) (MIC (PLUG IN POWER))
1-871-763-21		FP-648 FLEXIBLE BOARD

(There isn't mounted electrical parts in FP-648 flexible board.)		
*	1-871-764-11	FP-649 FLEXIBLE BOARD

(There isn't mounted electrical parts in FP-649 flexible board.)		
1-871-765-21		FP-650 FLEXIBLE BOARD

(There isn't mounted electrical parts in FP-650 flexible board.)		
1-871-766-11		FP-651 FLEXIBLE BOARD

(There isn't mounted electrical parts in FP-651 flexible board.)		

FP-652

FP-655

FP-656

FP-657

FP-658

FP-659

JK-333

Ref. No.	Part No.	Description
	1-871-767-11	FP-652 FLEXIBLE BOARD *****
< CONNECTOR >		
△ CN901	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
	1-871-770-11	FP-655 FLEXIBLE BOARD *****
(There isn't mounted electrical parts in FP-655 flexible board.)		
*	1-871-771-11	FP-656 FLEXIBLE BOARD *****
(BT901 is not included in FP-656 flexible board.)		
< BATTERY TERMINAL >		
△ BT901	1-780-064-21	BATTERY TERMINAL BOARD
	1-871-772-21	FP-657 FLEXIBLE BOARD *****
(J001 is not included in FP-657 flexible board.)		
< JACK >		
△ J001	1-815-792-11	CONNECTOR, DC-IN (7.2V) (DC IN)
	1-871-773-21	FP-658 FLEXIBLE BOARD *****
(C901 is not included in FP-658 flexible board.)		
< CAPACITOR >		
△ C901	1-112-766-11	CAP, ELECT 70uF 330V
	1-871-774-11	FP-659 FLEXIBLE BOARD *****
(There isn't mounted electrical parts in FP-659 flexible board.)		
A-1449-754-A	JK-333 BOARD, COMPLETE *****	
< CAPACITOR >		
C8301	1-162-961-11	CERAMIC CHIP 330PF 10% 50V
C8302	1-162-961-11	CERAMIC CHIP 330PF 10% 50V
< CONNECTOR >		
* CN8301	1-794-276-21	CONNECTOR, SQUARE TYPE 4P (HDV/DV)
CN8302	1-818-607-12	CONNECTOR, SQUARE TYPE 10P (COMPONENT OUT)
CN8303	1-815-794-11	CONNECTOR (MULTIPLE) (A/V OUT)
CN8304	1-819-934-61	CONNECTOR, FPC (ZIF) 39P
< DIODE >		
D8301	6-500-750-01	DIODE NSAD500H-T1-A
D8303	6-500-044-01	DIODE DF6A6.8FU (TE85R)
< FERRITE BEAD >		
FB8301	1-400-927-31	BEAD, FERRITE (1005)

Ref. No.	Part No.	Description
FB8302	1-400-927-31	BEAD, FERRITE (1005)
FB8303	1-400-927-31	BEAD, FERRITE (1005)
FB8304	1-400-927-31	BEAD, FERRITE (1005)
< JACK >		
J8301	1-793-995-31	JACK, SUPER SMALL TYPE (LANC)
J8302	1-818-055-21	JACK (HEADPHONES)
< COIL >		
L8301	1-414-406-11	INDUCTOR 220uH
L8302	1-414-406-11	INDUCTOR 220uH
< THERMISTOR >		
TH8301	1-805-726-11	THERMISTOR, POSITIVE
TH8302	1-805-726-11	THERMISTOR, POSITIVE
TH8303	1-805-726-11	THERMISTOR, POSITIVE
TH8304	1-805-726-11	THERMISTOR, POSITIVE
< VARISTOR >		
VDR831	1-162-960-11	CERAMIC CHIP 220PF 10% 50V
VDR833	1-162-960-11	CERAMIC CHIP 220PF 10% 50V
VDR837	1-803-974-11	VARISTOR, CHIP (1608)

Electrical parts list of the LD-221 board is not shown.
Pages 5-21 and 5-22 are not shown.

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
	A-1231-934-A	MS-361 BOARD, COMPLETE *****
(BT801 and SP901 are not included in MS-361 complete board.)		
< SPEAKER >		
SP901	1-825-262-82	LOUD SPEAKER (1.6CM)
< BATTERY >		
△BT801	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
< BATTERY HOLDER >		
△BH8001	1-756-615-41	HOLDER, BATTERY (Note)
< CONNECTOR >		
* CN8001	1-818-087-51	CONNECTOR, FFC/FPC (LIF) 26P
CN8002	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
CN8003	1-779-328-51	CONNECTOR, FFC/FPC 8P
CN8004	1-817-913-41	MEMORY STICK DUO CONNECTOR 10P
< DIODE >		
D8003	6-501-216-01	DIODE CL-271HR-C-TS (MS ACCESS)
< RESISTOR >		
R8001	1-218-947-11	RES-CHIP 330 5% 1/16W

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Note: Replace the battery holder (BH8001) together when replacing the lithium storage battery (BT801) on the MS-361 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

ノート: MS-361基板のリチウム蓄電池 (BT801) を交換する場合はバッテリーホルダ (BH8001) も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着して下さい。

Ref. No.	Part No.	Description
	A-1449-756-A	PD-325 BOARD, COMPLETE *****
(LCD901 is not included in PD-325 complete board.)		
< LIQUID CRYSTAL DISPLAY >		
LCD901	A-1228-786-A	TP BLOCK ASSY (27ESHGU07)
< CAPACITOR >		
C6201	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6202	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6203	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6204	1-127-895-91	TANTAL. CHIP 22uF 20% 4V
C6205	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C6206	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6208	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6209	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6210	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6211	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6212	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6213	1-100-786-91	TANTAL. CHIP 22uF 20% 6.3V
C6214	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6215	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6216	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6217	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6218	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6219	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C6220	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C6221	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6225	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6226	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6227	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6228	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
< CONNECTOR >		
* CN6201	1-794-322-51	FFC/CONNECTOR, FPC (ZIF) 6P
* CN6202	1-819-913-71	CONNECTOR, FPC (ZIF) 24P
CN6203	1-816-180-71	CONNECTOR, FPC (ZIF) 6P
* CN6205	1-819-913-71	CONNECTOR, FPC (ZIF) 24P
< DIODE >		
D6204	8-719-071-34	DIODE RB521S-30-TE61
D6205	8-719-071-34	DIODE RB521S-30-TE61
* D6206	6-501-597-01	DIODE NSSW008DT-T108 (LCD BACKLIGHT)
* D6207	6-501-597-01	DIODE NSSW008DT-T108 (LCD BACKLIGHT)
* D6208	6-501-597-01	DIODE NSSW008DT-T108 (LCD BACKLIGHT)
< FERRITE BEAD >		
FB6201	1-400-331-11	FERRITE, EMI (SMD) (1005)
< IC >		
* IC6201	6-710-240-01	IC IR3Y65M4
IC6202	8-759-693-13	IC NJM12904V (TE2)
< COIL >		
L6201	1-400-588-11	INDUCTOR 10uH
L6202	1-400-588-11	INDUCTOR 10uH
L6203	1-400-588-11	INDUCTOR 10uH

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description				
< TRANSISTOR >						
Q6201	8-729-427-37	TRANSISTOR	XP411F-TXE			
Q6202	8-729-427-67	TRANSISTOR	XP421F-TXE			
* Q6203	6-551-847-01	TR UP04501G08S0				
Q6204	8-729-425-50	TRANSISTOR	2SB1462-Q			
Q6205	8-729-425-50	TRANSISTOR	2SB1462-Q			
Q6206	8-729-425-50	TRANSISTOR	2SB1462-Q			
Q6207	6-550-150-01	TRANSISTOR	SSM3J09FU (TE85L)			
Q6208	6-550-119-01	TRANSISTOR	DTC144EMFS6T2L			
Q6210	8-729-053-84	TRANSISTOR	SSM3K09FU (T5LSONY1)			
Q6211	6-551-184-01	TRANSISTOR	MCH6305-TL-E-S			
Q6212	6-551-184-01	TRANSISTOR	MCH6305-TL-E-S			
< RESISTOR >						
R6201	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	
R6202	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	
R6203	1-218-990-11	SHORT CHIP	0			
R6205	1-218-990-11	SHORT CHIP	0			
R6206	1-218-990-11	SHORT CHIP	0			
R6208	1-218-949-11	RES-CHIP	470	5%	1/16W	
R6211	1-208-649-11	RES-CHIP	39	5%	1/16W	
R6212	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R6213	1-208-922-11	METAL CHIP	30K	0.5%	1/16W	
R6214	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	
R6215	1-208-931-11	RES-CHIP	68K	0.50%	1/16W	
R6216	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R6217	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R6218	1-218-953-11	RES-CHIP	1K	5%	1/16W	
R6219	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	
R6220	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	
R6221	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	
R6222	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	
R6227	1-220-876-11	METAL CHIP	18	0.5%	1/16W	
R6231	1-220-876-11	METAL CHIP	18	0.5%	1/16W	
R6232	1-220-876-11	METAL CHIP	18	0.5%	1/16W	
R6235	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R6236	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R6237	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R6241	1-218-981-91	RES-CHIP	220K	5%	1/16W	
R6249	1-218-990-11	SHORT CHIP	0			
R6250	1-218-990-11	SHORT CHIP	0			
R6251	1-218-990-11	SHORT CHIP	0			
R6252	1-218-990-11	SHORT CHIP	0			
R6253	1-218-990-11	SHORT CHIP	0			
R6254	1-218-990-11	SHORT CHIP	0			

A-1234-567-A ST-164 BOARD, COMPLETE

< CAPACITOR >

C8801	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8802	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C8803	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C8804	1-164-933-11	CERAMIC CHIP	220PF	10%	50V

Ref. No.	Part No.	Description				
< CONNECTOR >						
* CN8801	1-816-647-51	FFC/FPC CONNECTOR (LIF) 18P				
* CN8802	1-816-644-51	FFC/FPC CONNECTOR (LIF) 12P				
* CN8803	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P				
< DIODE >						
D8801	6-501-096-01	DIODE CRF02 (TE85R)				
△ D8802	6-501-096-01	DIODE CRF02 (TE85R)				
< IC >						
△ IC8801	6-707-554-01	IC TPS65552DGQR				
< COIL >						
L8801	1-412-027-11	INDUCTOR	2.2uH			
< TRANSISTOR >						
* △ Q8801	6-551-447-01	TRANSISTOR	TIG022TS-S-TL-E			
< RESISTOR >						
R8801	1-208-947-11	METAL CHIP	330K	0.5%	1/16W	
R8802	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	
R8803	1-216-864-11	SHORT CHIP	0			
R8804	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R8805	1-218-941-81	RES-CHIP	100	5%	1/16W	
R8806	1-218-989-11	RES-CHIP	1M	5%	1/16W	
< TRANSFORMER >						
△ T8801	1-443-568-21	TRANSFORMER, D.C.-D.C.CONVERTER				
A-1231-933-A US-013 BOARD, COMPLETE						


< CONNECTOR >						
* CN8101	1-816-655-51	FFC/FPC CONNECTOR (LIF) 8P				
CN8102	1-819-436-11	CONNECTOR (SQUARE TYPE) (USB) 5P (USB)				
* CN8103	1-816-655-51	FFC/FPC CONNECTOR (LIF) 8P (CPC)				
< DIODE >						
D8101	8-719-078-02	DIODE 1SS357 (T3SONY1)				
< RESISTOR >						
R8101	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R8102	1-218-965-11	RES-CHIP	10K	5%	1/16W	

Electrical parts list of the VC-500 board is not shown.
Pages 5-25 to 5-34 are not shown.

• EXCEPT J MODEL

Checking supplied accessories.

 to J MODEL



AC Adaptor
(AC-L200/L200B)
* Compatible in
L200 and L200B.
▲ 1-479-285-21



Power cord
▲ 1-555-074-91 (AUS)
▲ 1-790-107-61 (US, CND)
▲ 1-792-549-41 (JE)
▲ 1-824-910-71 (AEP, NE, E:PAL)
▲ 1-827-269-12 (UK, HK)
▲ 1-832-121-31 (CH)
▲ 1-833-892-21 (KR)
▲ 1-834-852-11 (E:NTSC)



 
Conversion (2P) Adaptor
▲ 1-569-007-12
(JE, E: NTSC)



A/V connecting cable
1-823-156-51




Wireless Remote Commander
(RMT-831)
1-478-495-41



CD-ROM
"Handycam Application Software"
3-287-511-01



 
i.LINK cable
1-757-541-12



USB cable
1-829-868-31



 
Operating Guide
(HDR-HC9)
3-278-987-11 (ENGLISH) (US, CND, JE, E:NTSC)
3-278-987-21 (FRENCH) (CND)
3-278-987-31 (SPANISH) (JE, E:NTSC)
3-278-987-41 (PORTUGUESE) (JE)
3-278-987-51 (TRADITIONAL CHINESE) (E:NTSC)
3-278-987-61 (KOREAN) (KR, JE)




Rechargeable battery pack
(NP-FH60)
▲ A-1201-666-A (US, CND)
▲ A-1201-667-A
(EXCEPT US, CND, CH)
▲ A-1201-668-A (CH)



 Component video cable
1-829-414-61



Lens hood
3-063-515-41

 


DVD-ROM
"ENJOY HANDYCAM"
3-282-264-01 (KR)
ENGLISH/KOREA/JAPANESE
3-282-264-11 (US, CND)
ENGLISH/FRENCH/SPANISH/PORTUGUESE
3-282-264-21 (UK, NE)
ENGLISH/RUSSIAN/GERMAN/TURKISH
3-282-264-31 (AEP)
ENGLISH / SPANISH / PORTUGUESE / ITALIAN
3-282-264-41 (AEP)
ENGLISH / FRENCH / GERMAN / DUTCH
3-282-264-61 (E, HK, AUS, CH)
ENGLISH / FRENCH / SIMPLIFIED CHINESE / TRADITIONAL CHINESE
3-282-264-71 (E)
ENGLISH / TRADITIONAL CHINESE / SPANISH / PORTUGUESE

Operating Guide
(HDR-HC9E)
3-278-989-11 (ENGLISH) (AEP, UK, HK, AUS, JE, E:PAL)
3-278-989-21 (FRENCH) (AEP)
3-278-989-31 (GERMAN) (AEP)
3-278-989-41 (DUTCH) (AEP)
3-278-989-51 (SPANISH) (AEP)
3-278-989-61 (PORTUGUESE) (AEP)
3-278-989-71 (ITALIAN) (AEP)
3-278-989-81 (GREEK) (AEP)
3-278-989-91 (RUSSIAN) (NE, JE)
3-286-465-11 (SWEDISH) (NE)
3-286-465-21 (DANISH) (NE)
3-286-465-31 (FINNISH) (NE)
3-286-465-41 (UKRAINIAN) (NE)
3-286-465-51 (SIMPLIFIED CHINESE) (CH, JE, E:PAL)
3-286-465-91 (ARABIC) (E:PAL)
3-286-466-11 (PERSIAN) (E:PAL)
3-286-466-21 (TRADITIONAL CHINESE) (HK)


• Refer to page 5-1 for mark ▲.

• J MODEL


付属品

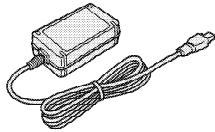

 
ACアダプター
(AC-L200/L200B)
* L200とL200Bには
互換性があります。
△ 1-479-285-21




電源コード
△ 1-792-549-41

 


レンズフード
3-063-515-41

 


A/V 接続ケーブル
1-823-156-51

 


ワイヤレスリモコン
(RMT-831)
1-478-495-41

 

 CD-ROM
"Handycam Application Software"
3-287-511-01




i.LINKケーブル
1-757-541-12

 


USB ケーブル
1-829-868-31




取扱説明書
3-278-987-01 (日本語)

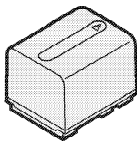

 リチャージブルバッテリーパック
(NP-FH60)
△ A-1201-665-A



D端子コンポーネント
ビデオケーブル
1-829-414-11

 


DVD-ROM
"エンジョイハンディーカム"
3-282-264-01
英語/韓国語/日本語


• △マークについては、5-1ページを参照して下さい。

HARDWARE LIST (1/7)


#1: M1.7 X 2.5
(Black)
2-635-562-11

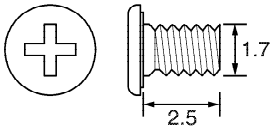


#2: M1.7 X 4.0
(Black)
2-635-562-31

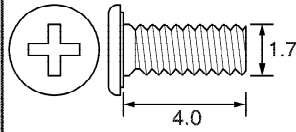


#3: M1.7 X 2.5
(Red)
2-660-401-01

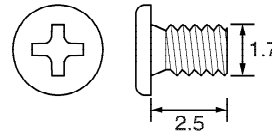


#4: M1.4 X 2.5 (Tapping)
(Dark Silver)
3-348-998-81

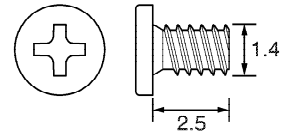


#5: M1.7 X 3.5 (Tapping)
(Black)
3-080-204-01

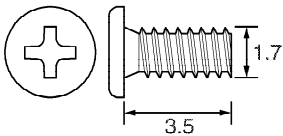


#6: M1.4 X 1.7
(Silver)
2-598-474-01

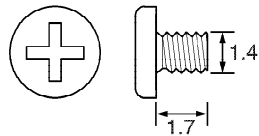


#7: M1.7 X 1.6
(Black)
7-627-552-18

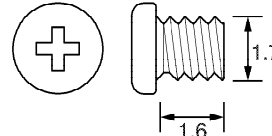


#8: M1.7 X 3.5 (Tapping)
(Silver)
3-078-890-01

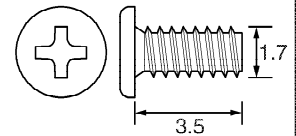


#9: M1.7 X 5.0 (Tapping)
(Silver)
3-078-890-21

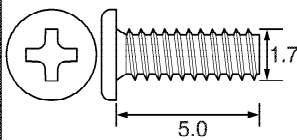


#10: M1.7 X 4.0
(Silver)
2-599-475-31

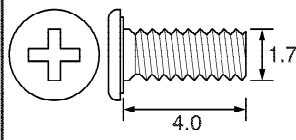


#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

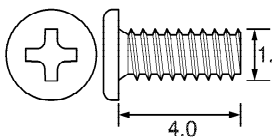


#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21

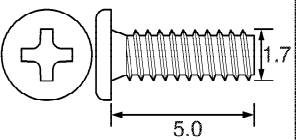


#13: M1.7 X 2.5 (Tapping)
(Silver)
3-085-397-01

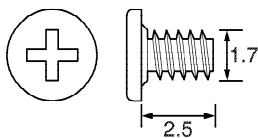


#14: M1.7 X 2.5
(Silver)
2-599-475-11

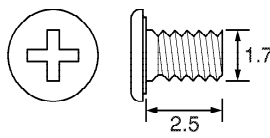


#15: M1.4 X 1.5
(Silver)
3-062-214-01

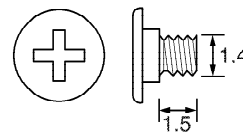


#16: M1.4 X 2.5
(Silver)
2-586-337-01

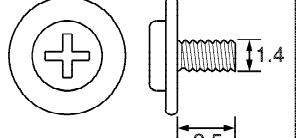


#17: M1.7 X 1.5
(Silver)
2-586-389-01

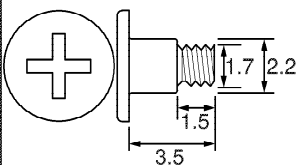


#18: M1.4 X 2.5
(Silver)
2-635-591-21

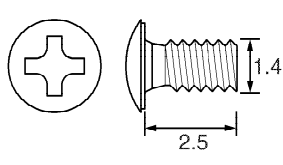

#19: M1.2 X 4.0 (Tapping)
(Red)
3-086-156-21

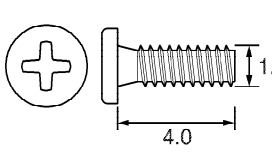


#20: M1.4 X 3.0
(Silver)
2-635-591-31

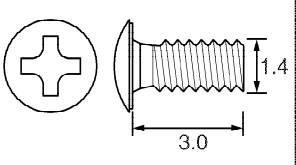


HARDWARE LIST (2/7)


#21: M1.4 X 3.0
(Black)
2-662-396-21

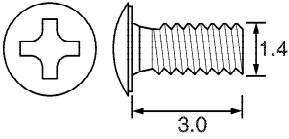


#22: M1.7 X 5.0 (Tapping)
(Silver)
3-083-261-01

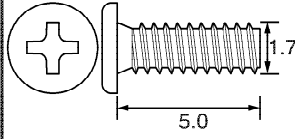


#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11

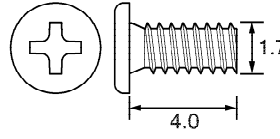


#24: B1.7 X 5.5 (Tapping)
(Black)
4-679-805-11

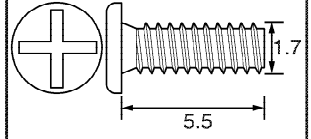


#25: M1.7 X 3.0
(Black)
2-635-562-21

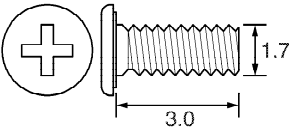


#26: M1.4 X 2.0
(Silver)
2-635-591-11

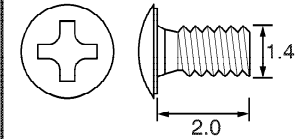


#27: M1.4 X 2.0
(Black)
2-662-396-11

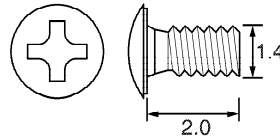


#28: M1.4 X 4.0 (Tapping)
(Silver)
3-348-998-61

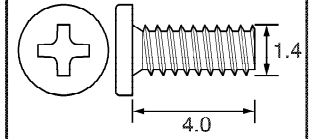


#29: M1.4 X 2.5
(Black)
2-662-396-01

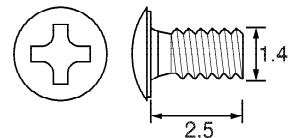


#30: M1.2 X 4.0 (Tapping)
(White)
3-086-156-11

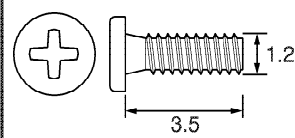


#31: M3.0 X 4.0
(Silver)
2-102-434-01

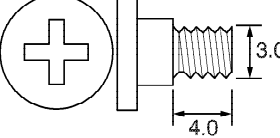


#32: M2.0 X 4.5 (Tapping)
(Silver)
2-102-498-01

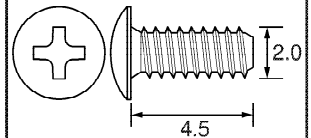


#33: M3.0 X 6.0
(Silver)
3-077-331-21

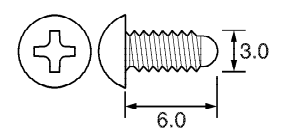


#34: M3.0 X 8.0
(Black)
3-077-331-41

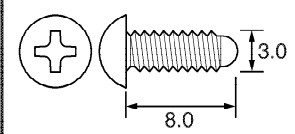


#35: M4.0 X 6.0 (Tapping)
(Silver)
3-975-291-02

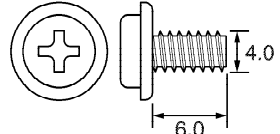


#36: M3.0 X 6.0
(Silver)
4-886-821-11

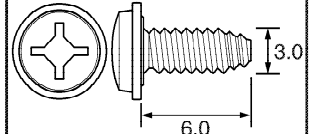


#37: M2.0 X 6.0 (Tapping)
(Black)
3-080-206-31

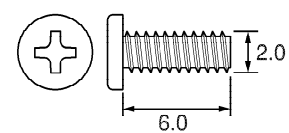


#38: M3.0 X 20.0 (Tapping)
(Silver)
7-685-651-79

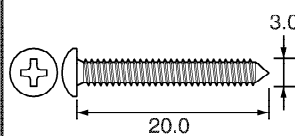

#39: M2.6 X 5.0 (Tapping)
(Black)
7-685-791-09

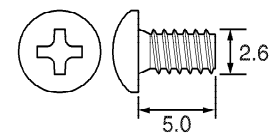


#40: M2.0 X 4.0 (Tapping)
(Silver)
7-685-851-04

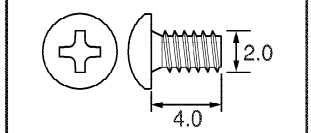


HARDWARE LIST (3/7)


#41: M3.0 X 8.0 (Tapping)
(Silver)
3-065-748-01

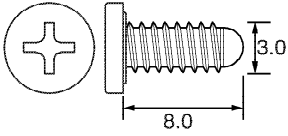


#42: M2.0 X 4.0 (Tapping)
(Silver)
7-628-253-00

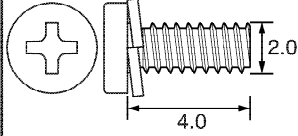


#43: M1.7 X 4.0
(Red)
2-660-401-31

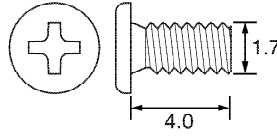


#44: M1.7 X 3.0 (Tapping)
(Silver)
3-078-890-61

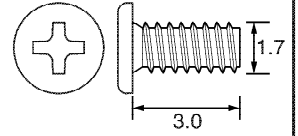


#45: M1.4 X 2.5
(Silver)
2-587-151-01

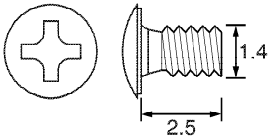


#46: M1.7 X 3.0
(Red)
2-660-401-11

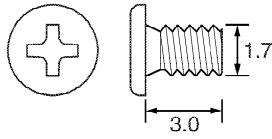


#47: M1.4 X 3.0 (Tapping)
(Silver)
2-665-774-01

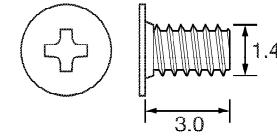


#48: M1.7 X 2.5
(Silver)
3-973-497-91

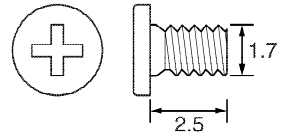


#49: M2.0 X 4.0
(Black)
2-630-005-31

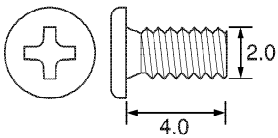


#50: M2.0 X 3.0
(Red)
2-891-494-11

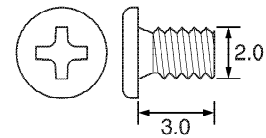


#51: M2.0 X 2.5
(Silver)
3-073-686-01

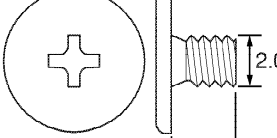


#52: M2.0 X 4.0 (Tapping)
(Black)
3-080-206-11

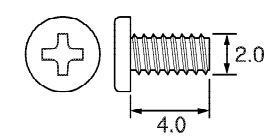


#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

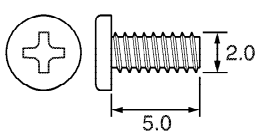


#54: M1.75 X 6.0 (Tapping)
(Black)
3-318-203-11

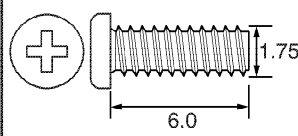


#55: M2.0 X 4.0
(Silver)
2-655-582-11

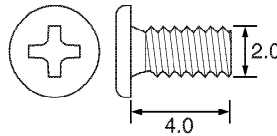


#56: M2.0 X 3.5
(Silver)
3-067-187-11

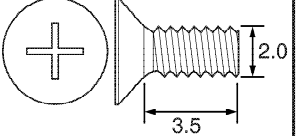


#57: M1.7 X 4.0
(Black)
7-627-852-18

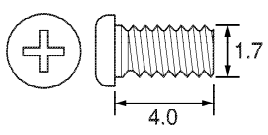


#58: M2.0 X 6.0 (Tapping)
(Silver)
3-719-408-11

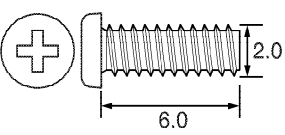

#59: M2.0 X 5.0 (Tapping)
(Silver)
3-080-205-21

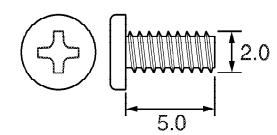


#60: M2.6 X 5.0
(Black)
3-061-062-11

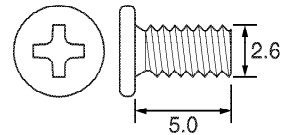


HARDWARE LIST (4/7)


#61: M3.0 X 10.0
(Black)
7-682-549-09

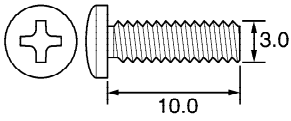


#62: M2.0 X 3.0
(Silver)
3-080-202-21

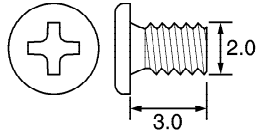


#63: M5.0 X 12.5
(Black)
3-060-811-21

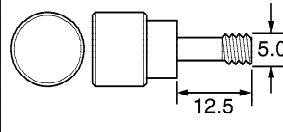


#64: M1.7 X 5.0 (Tapping)
(Silver)
2-666-551-21

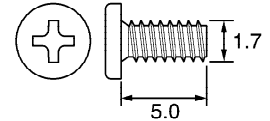


#65: M1.4 X 3.5
(Silver)
2-635-591-01

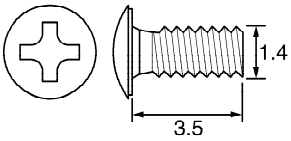


#66: M1.4 X 1.4
(Silver)
2-635-591-41

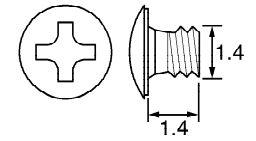


#67: M1.4 X 2.0
(Silver)
3-389-523-16

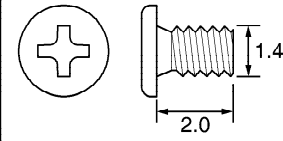


#68: M1.7 X 4.0
(Silver)
2-655-581-01

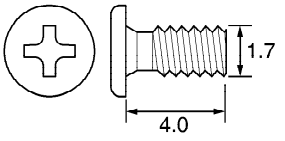


#69: M1.7 X 3.0
(Silver)
2-599-475-21

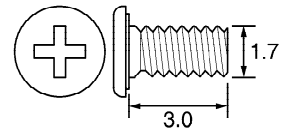


#70: M1.7 X 5.0
(Silver)
2-599-475-41

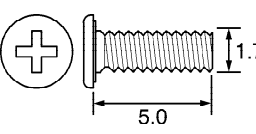


#71: M1.4 X 2.0
(Red)
3-208-537-01

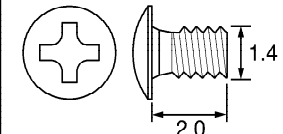


#72: M1.4 X 2.0
(Silver)
4-663-621-41

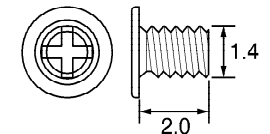


#73: M1.2 X 4.0 (Tapping)
(Black)
3-086-156-61

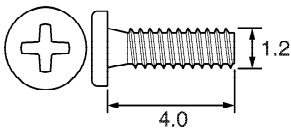


#74: M1.7 X 6.0 (Tapping)
(Silver)
2-666-551-31

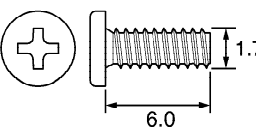


#75: M1.7 X 3.5 (Tapping)
(Silver)
2-666-551-01

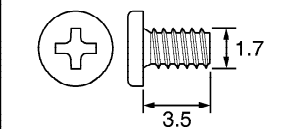


#76: M1.7 X 4.0 (Tapping)
(Silver)
2-666-551-11

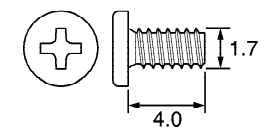


#77: M1.2 X 5.0 (Tapping)
(Silver)
3-086-156-31

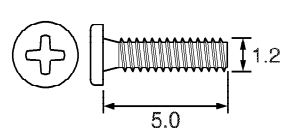


#78: M1.4 X 3.5
(Red)
3-208-537-11

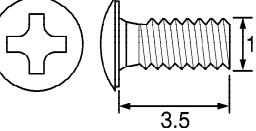

#79: M1.4 X 2.0
(Silver)
2-587-151-11

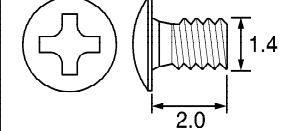


#80: M1.4 X 2.0
(Black)
3-279-411-01

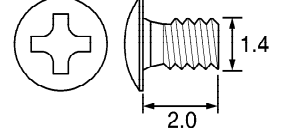


HARDWARE LIST (5/7)


#81: M1.7 X 2.5
(Silver)
2-515-756-01

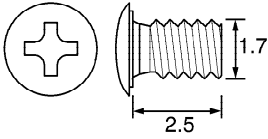


#82: M1.4 X 1.4
(Silver)
3-272-251-01

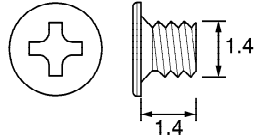


#83: M1.7 X 7.0 (Tapping)
(Black)
3-080-204-41

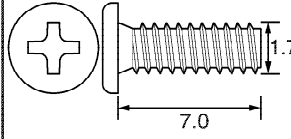


#84: M2.0 X 3.0
(Silver)
3-072-453-11

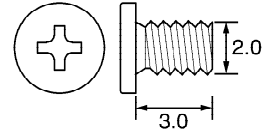


#85: M1.7 X 2.5
(Black)
2-515-483-11

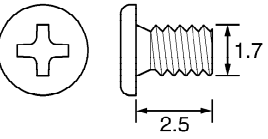


#86: M1.7 X 4.0 (Tapping)
(Silver)
2-695-434-21

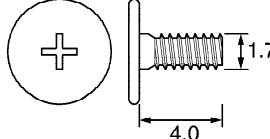


#87: M1.6 X 5.3
(Black)
2-689-328-01

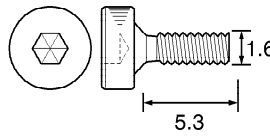


#88: M1.6 X 5.9 (Tapping)
(Silver)
2-689-015-01

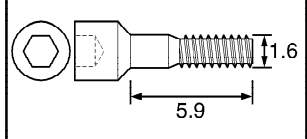


#89: M2.0 X 5.5 (Tapping)
(Silver)
2-695-575-01

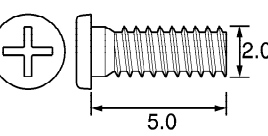


#90: M1.7 X 3.0
(Silver)
3-271-395-01

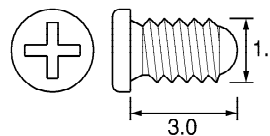


#91: M1.7 X 3.0 (Tapping)
(Silver)
2-695-434-11

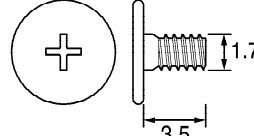


#92: M2.0 X 3.9
(Black)
3-268-954-01

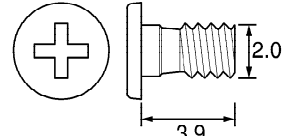


#93: M1.7 X 3.5 (Tapping)
(Silver)
3-254-082-01

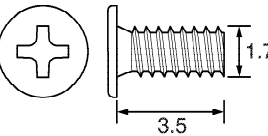


#94: M1.7 X 4.0
(Black)
2-515-483-31

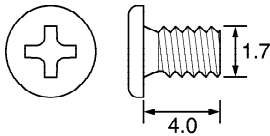


#95: M3.0 X 8.0 (Tapping)
(Black)
7-685-646-79

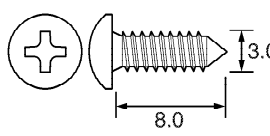


#96: M1.4 X 2.5
(Silver)
2-587-151-21

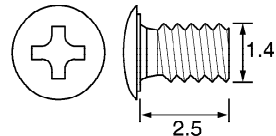


#97: M1.4 X 2.5
(Black)
2-662-396-31

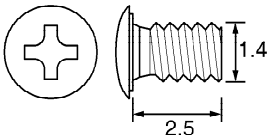


#98: M3.0 X 8.0
(Silver)
3-077-331-01

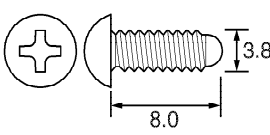

#99: M2.5 X 6.0 (Tapping)
(Silver)
3-776-750-02

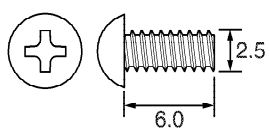


#100: M2.0 X 6.0
(Black)
3-080-203-51

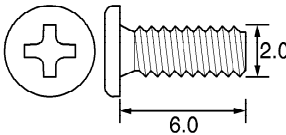


HARDWARE LIST (6/7)


#101: M2.0 X 5.0
(Silver)
7-621-555-39

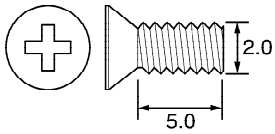


#102: M2.6 X 8.0
(Black)
7-621-284-30

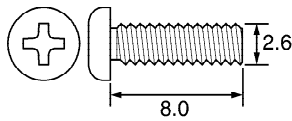


#103: M2.6 X 10.0
(Silver)
7-685-794-09

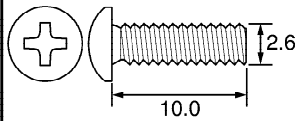


#104: M3.0 X 8.0
(Black)
7-682-548-09

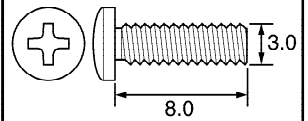


#105: M2.0 X 4.0
(Red)
2-891-494-31

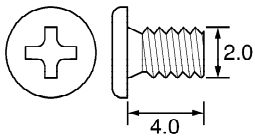


#106: M2.0 X 6.0
(Black)
3-713-786-11

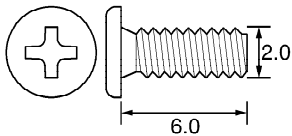


#107: M2.0 X 5.0
(Silver)
3-032-750-01

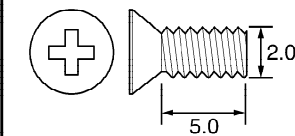


#108: M1.7 X 3.0 (Tapping)
(Black)
2-695-430-01

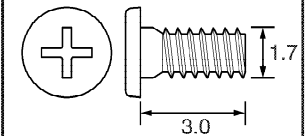


#109: M1.7 X 3.0
(Black)
2-515-483-21

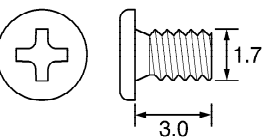


#110: M2.0 X 3.0
(Black)
2-630-005-21

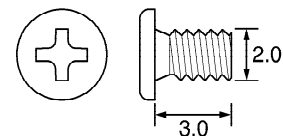


#111: M1.7 X 4.0 (Tapping)
(Black)
2-887-124-01

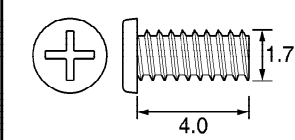


#112: M1.4 X 5.0
(Black)
2-178-410-11

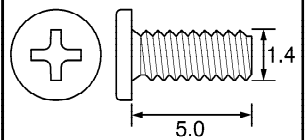


#113: M1.7 X 5.0
(Black)
2-635-562-41

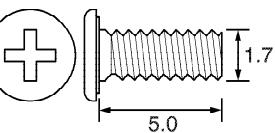


#114: M2.0 X 5.5 (Tapping)
(Silver)
2-698-464-01

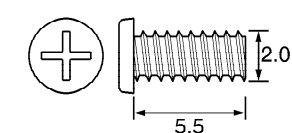


#115: M1.4 X 3.5 (Tapping)
(Silver)
3-348-998-51

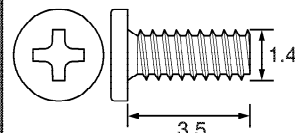


#116: M2.0 X 3.5 (Tapping)
(Silver)
2-695-435-01

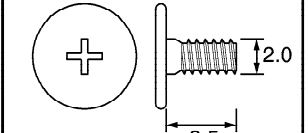


#117: M1.7 X 4.5 (Tapping)
(Silver)
2-695-429-31

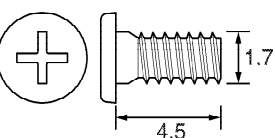


#118: M1.4 X 2.0
(Black)
2-655-580-01

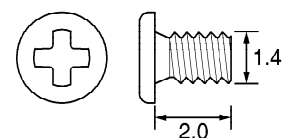

#119: M2.6 X 5.0
(Black)
7-627-556-58

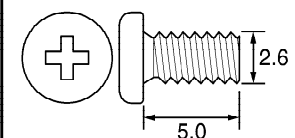


#120: M2.6 X 6.0
(Silver)
7-621-770-67

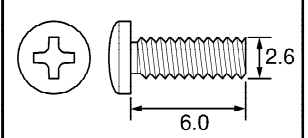


HARDWARE LIST (7/7)


#121: M2.0 X 4.0 (Tapping)
(Silver)
3-080-205-11

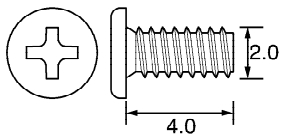


#122: M3.0 X 6.0
(Black)
7-682-547-09

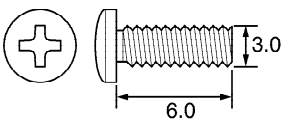

#123: M4.0 X 8.0
(Black)
7-682-561-09

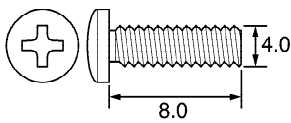

#124: M1.7 X 2.0
(Silver)
2-599-475-01

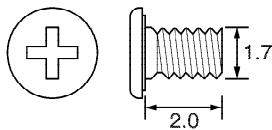

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2008.01	Official Release	—	—