


5. REPAIR PARTS LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION-1

ns: not supplied

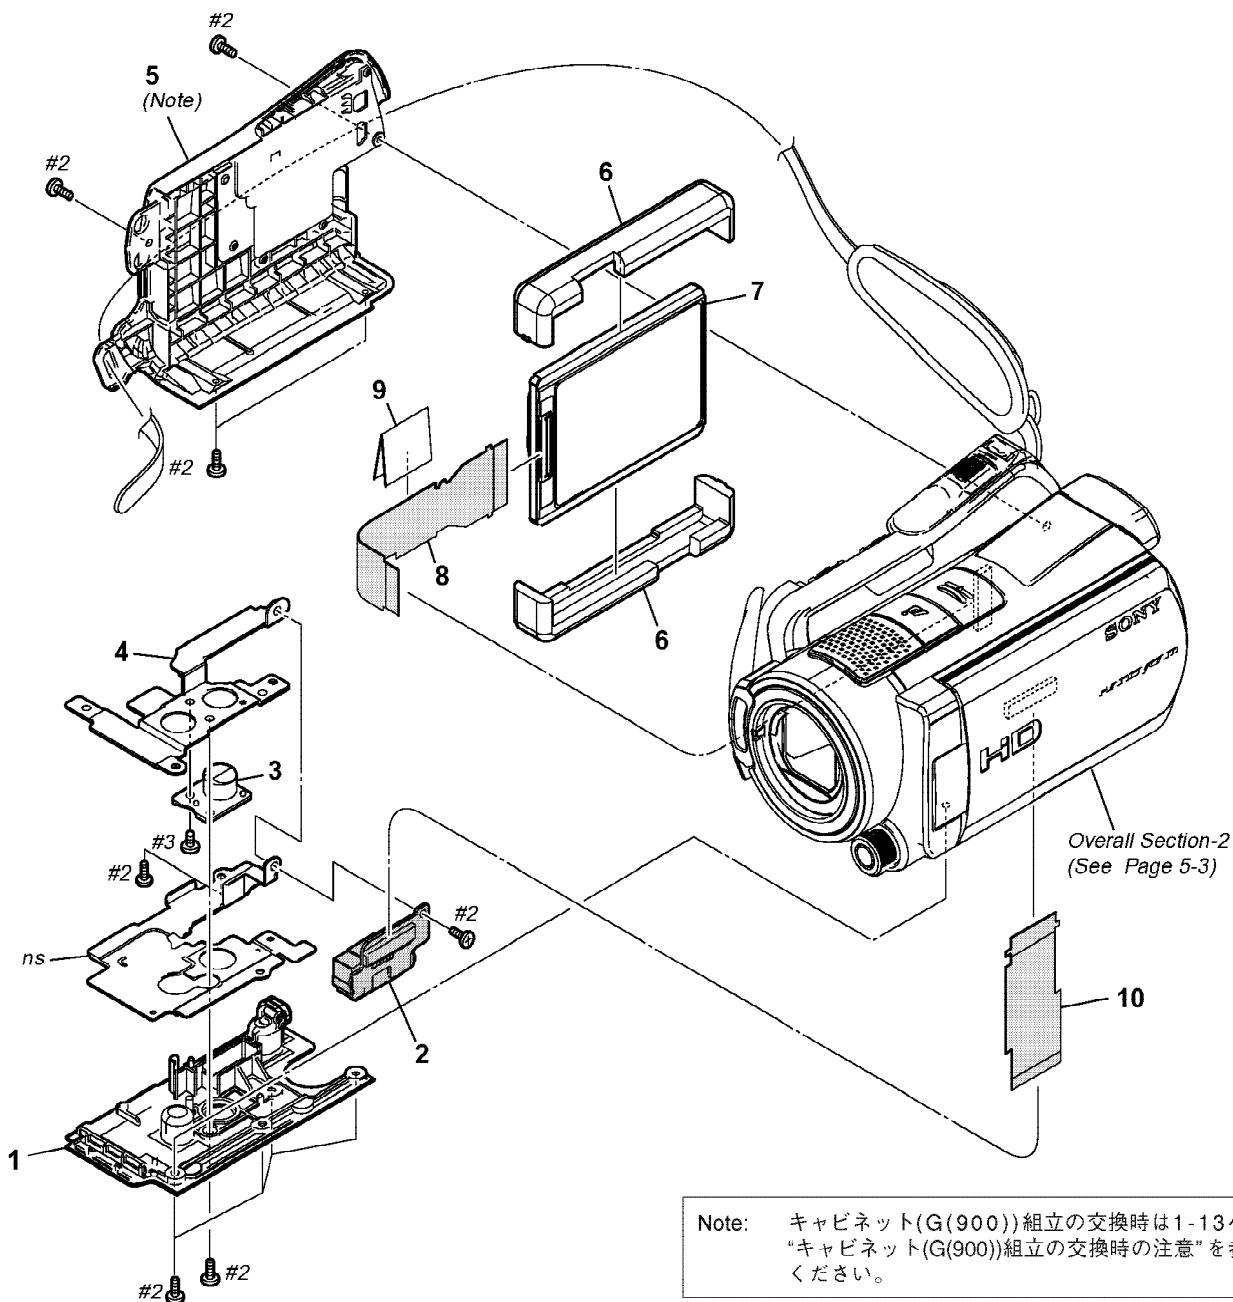

Note: キャビネット(G(900))組立の交換時は1-13ページの“キャビネット(G(900))組立の交換時の注意”を参照してください。

Note: Refer to page 1-13 “Precaution on replacing the Cabinet (G(900)) Assy” when changing the Cabinet (G(900)) Assy.

Ref. No.	Part No.	Description
1	X-2188-804-1	CABINET (700) ASSY, BOTTOM
2	A-1494-362-A	CR-089 BOARD, COMPLETE
3	2-664-982-01	SCREW, TRIPOD
* 4	3-290-644-01	FRAME, BOTTOM CABINET
5	(Note)	CABINET (G(900)) ASSY
6	3-294-308-01	DAMPER (1), 08STYLE (SR11/SR11E)
6	3-298-143-01	DAMPER (2), 08STYLE (SR12/SR12E)


Ref. No.	Part No.	Description
7	1-797-994-21	HDD (MK6014GAL-60GB) (SR11/SR11E)
7	1-797-995-21	HDD (MK1214GAH-120GB) (SR12/SR12E)
8	1-874-808-11	FP-809 FLEXIBLE BOARD
* 9	2-890-813-01	SHEET (CK), SHIELD
10	1-874-805-11	FP-806 FLEXIBLE BOARD
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)

5. REPAIR PARTS LIST

5-1-2. OVERALL SECTION-2

DISASSEMBLY

HARDWARE LIST

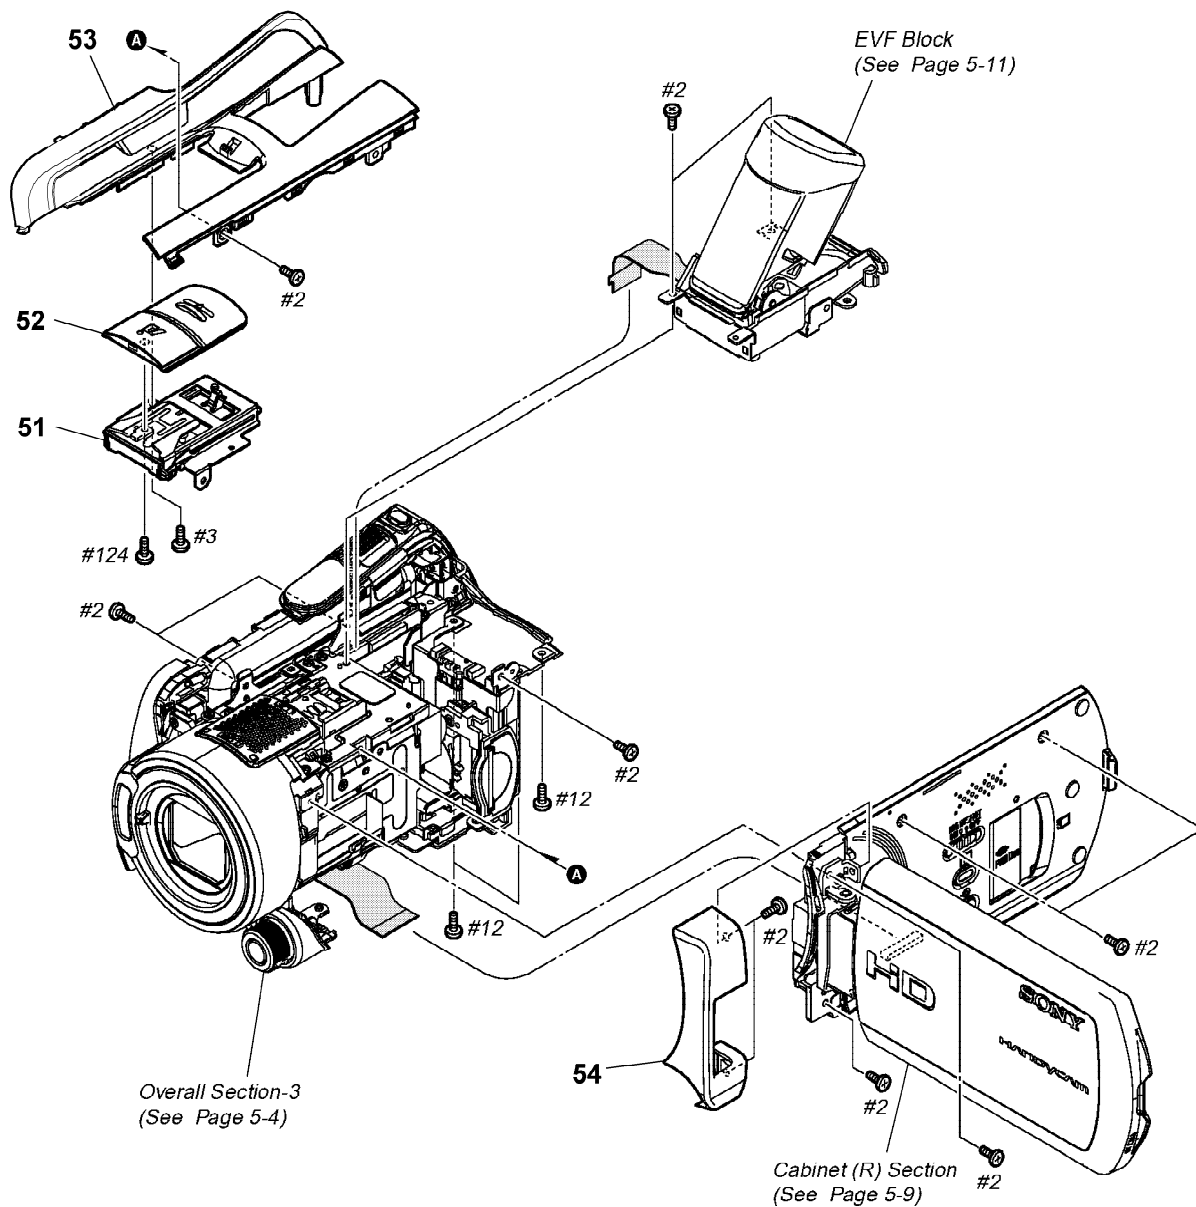

Ref. No.	Part No.	Description
51	X-2189-073-1	BASE (900) ASSY, SHOE COVER
52	X-2189-071-1	COVER (900S) ASSY, SHOE (SR11: J)
52	X-2189-072-1	COVER (900B) ASSY, SHOE (EXCEPT SR11: J)
53	X-2189-068-1	TOP (900S) ASSY (SR11: J)
53	X-2189-069-1	TOP (900B2) ASSY (SR12/SR12E)
53	X-2189-070-1	TOP (900B) ASSY (SR11: EXCEPT J/SR11E)


Ref. No.	Part No.	Description
54	3-292-369-01	COVER (R (900)), HINGE (SR11: J)
54	3-292-369-11	COVER (R (900)), HINGE (EXCEPT SR11: J)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#124	2-599-475-01	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

5-1-3. OVERALL SECTION-3

DISASSEMBLY

HARDWARE LIST

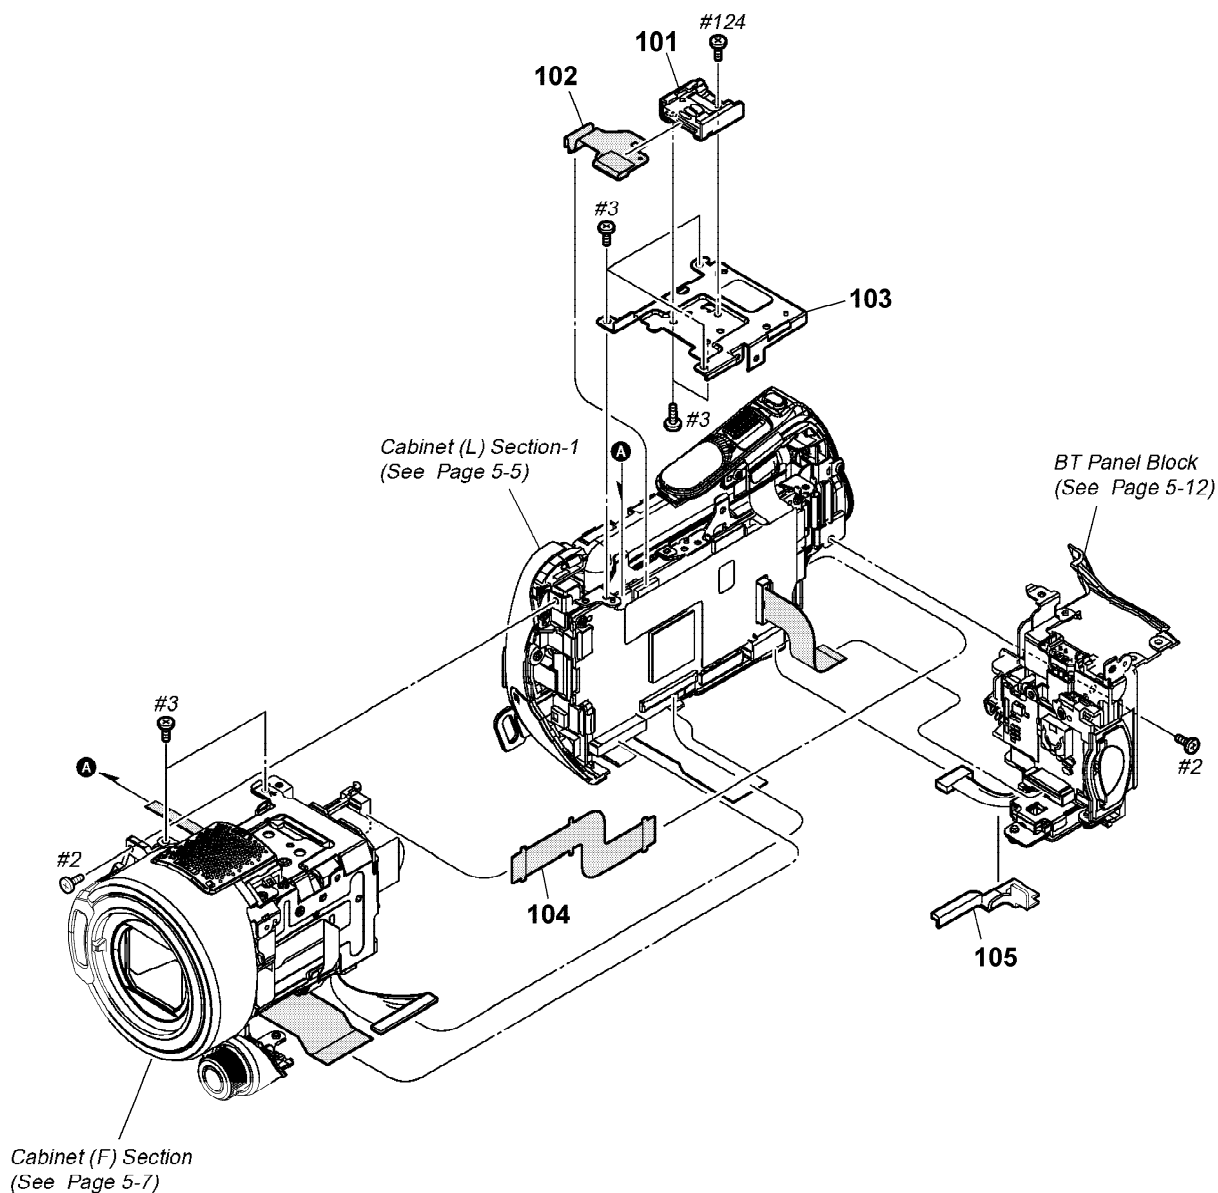

Ref. No.	Part No.	Description
101	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
102	1-874-801-11	FP-802 FLEXIBLE BOARD
103	3-292-296-01	FRAME (900), SHOE
104	1-874-802-11	FP-803 FLEXIBLE BOARD
* 105	3-290-652-01	RETAINER, BT HARNESS


Ref. No.	Part No.	Description
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#124	2-599-475-01	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

5-1-4. CABINET (L) SECTION-1

DISASSEMBLY

HARDWARE LIST

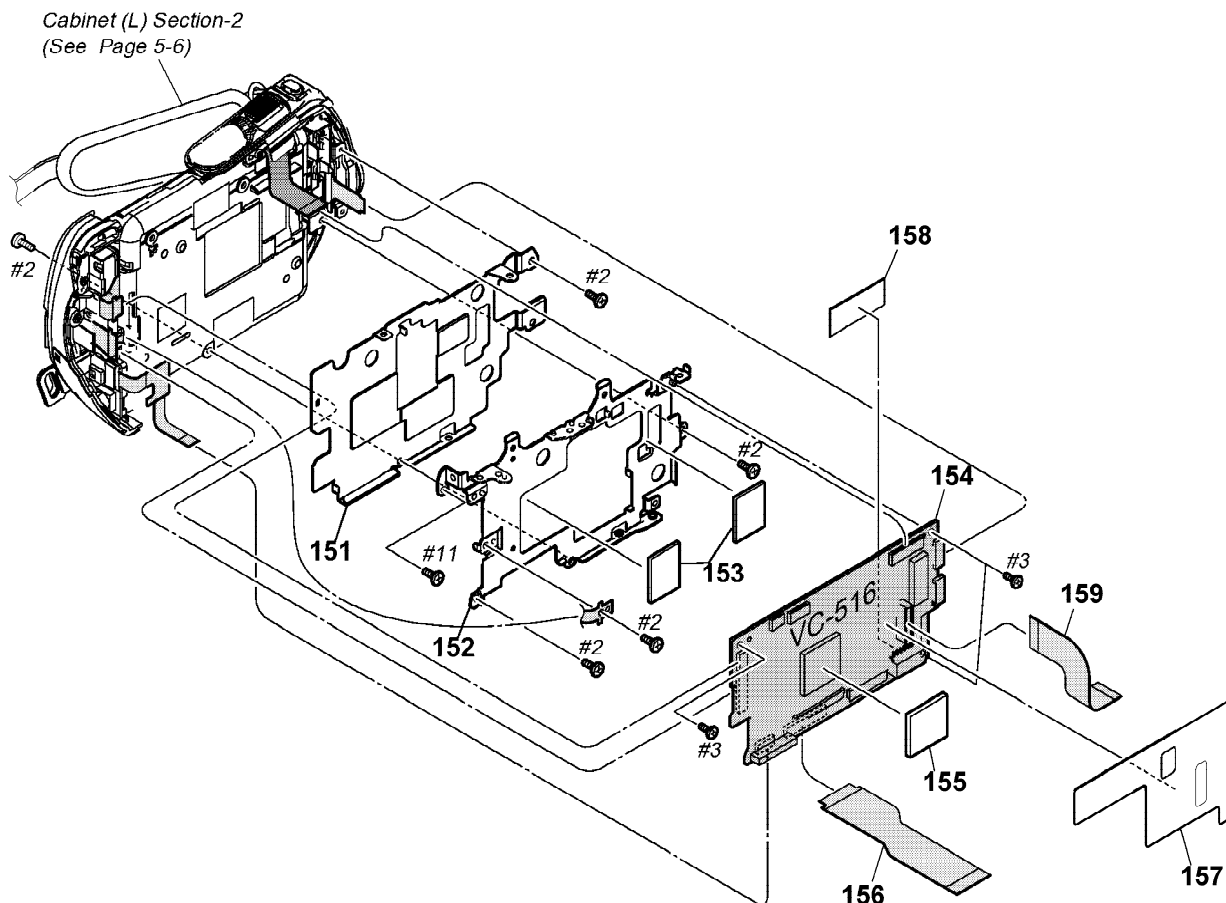

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
* 151	3-292-179-01	HEAT SINK (B (900)), VC	155	3-290-676-01	SHEET (A), VC RADIATION
152	3-292-178-01	FRAME (900), MAIN	156	1-874-807-11	FP-808 FLEXIBLE BOARD
153	3-290-677-01	SHEET (B), VC RADIATION	* 157	3-290-678-01	LABEL, FUSE REPLACEMENT CAUTION
154	A-1508-553-A	VC-516 BOARD, COMPLETE (SERVICE)	* 158	3-398-042-01	SHEET (AN), SHIELD
		(SR11/SR12)	159	1-874-804-11	FP-805 FLEXIBLE BOARD
154	A-1508-554-A	VC-516 BOARD, COMPLETE (SERVICE)			
		(SR11E/SR12E)	#2	2-635-562-31	SCREW (M1.7) (Black)
			#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
			#11	3-078-890-11	SCREW, TAPPING (Silver)


5. REPAIR PARTS LIST

5-1-5. CABINET (L) SECTION-2

ns: not supplied

DISASSEMBLY

HARDWARE LIST

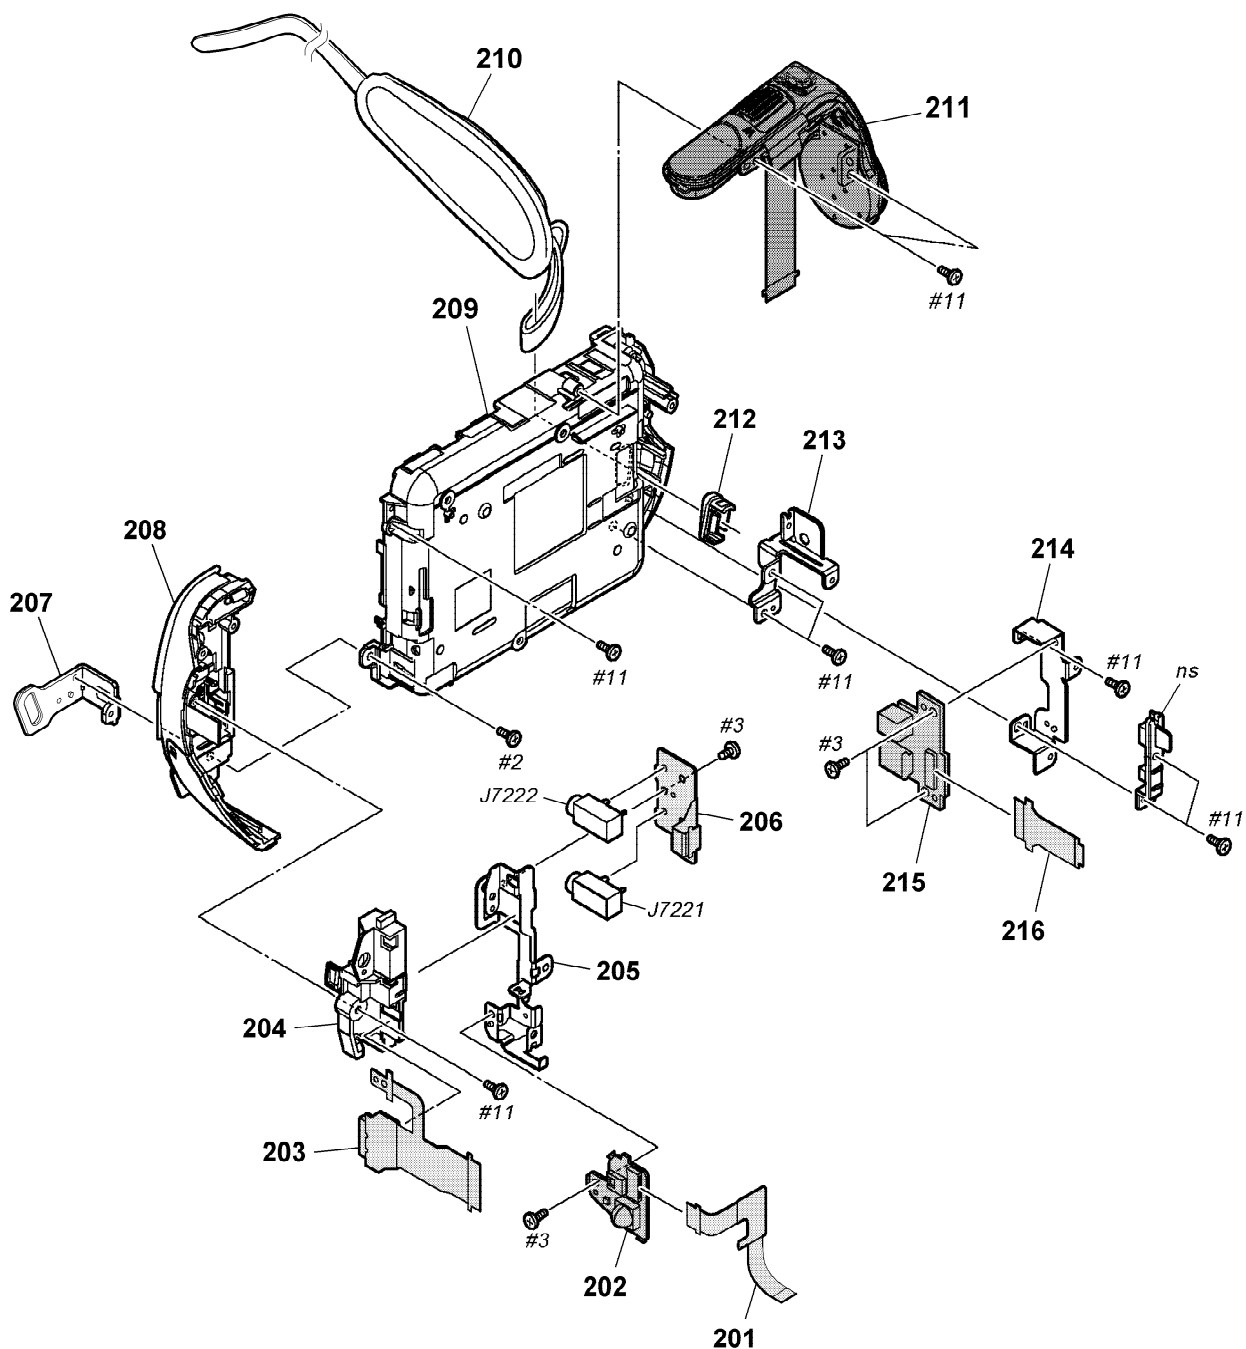

Ref. No.	Part No.	Description
201	1-874-811-11	FP-812 FLEXIBLE BOARD
202	A-1508-570-A	FR-278 BOARD, COMPLETE (SERVICE)
203	A-1494-357-A	FP-798 FLEXIBLE BOARD, COMPLETE
* 204	3-292-182-01	RETAINER, JACK
* 205	3-292-181-01	FRAME (900), LF
206	1-874-798-11	FP-799 FLEXIBLE BOARD
* 207	3-292-180-01	FRAME (F (900)), STRAP
208	X-2189-050-1	LF (900) ASSY, CABINET
209	3-290-483-01	CABINET (L) (EXCEPT SR11: US/SR12: US)
209	3-290-483-03	CABINET (L) (SR11: US/SR12: US)
210	2-664-928-41	BELT, GRIP
211	1-480-427-51	SWITCH BLOCK, CONTROL (PS28100)


Ref. No.	Part No.	Description
212	3-290-484-01	RETAINER, GRIP BELT
* 213	3-290-485-01	FRAME, BELT
* 214	3-290-672-01	FRAME, JK
215	A-1494-355-A	JK-356 BOARD, COMPLETE
216	1-874-803-11	FP-804 FLEXIBLE BOARD
J7221	1-569-950-41	JACK (SMALL TYPE) (HEADPHONE)
J7222	1-691-737-41	JACK (SMALL TYPE) (MIC)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#11	3-078-890-11	SCREW, TAPPING (Silver)

5. REPAIR PARTS LIST

5-1-6. CABINET (F) SECTION

DISASSEMBLY

HARDWARE LIST

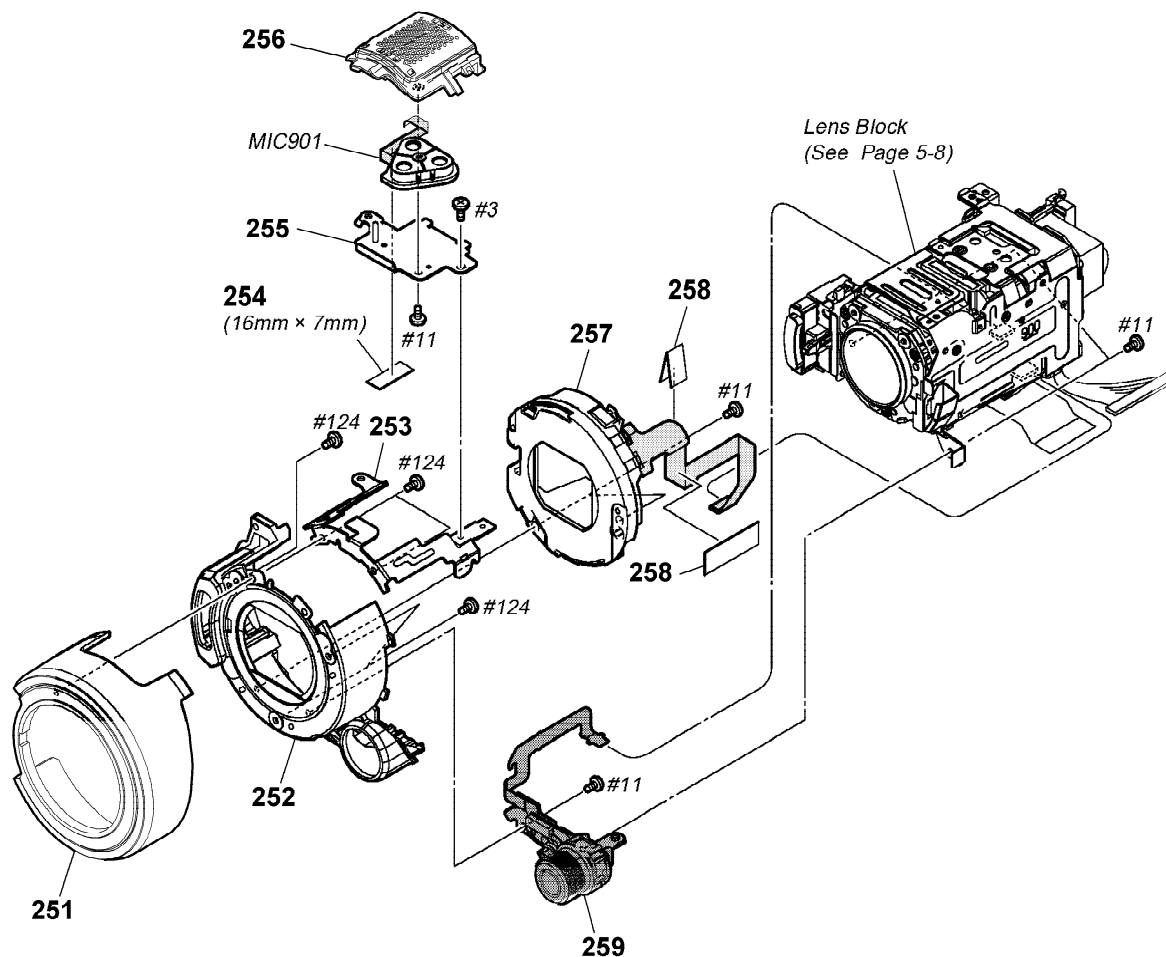

注意： 254 : TAPE (0716) (3-084-668-01) は、ヒメロン T0.25 (3-076-631-01) を切って使用してください。

CAUTION: For the part of 254 : TAPE (0716) (3-084-668-01), cut NON WOVEN (T0.25) (3-076-631-01) into the desired length and use it.

Ref. No.	Part No.	Description
251	3-292-211-01	RING (900), LENS (SR11: J)
251	3-292-211-11	RING (900), LENS (EXCEPT SR11: J)
252	X-2189-053-1	CABINET (F (900S)) ASSY (SR11: J)
252	X-2189-054-1	CABINET (F (900B)) ASSY (EXCEPT SR11: J)
253	3-292-212-01	FRAME (900), F
254	CAUTION	TAPE (0716)
255	3-292-213-01	FRAME (900), MICROPHONE
256	X-2189-055-1	HOLDER (900S) ASSY, MICROPHONE (SR11: J)
256	X-2189-056-1	HOLDER (900B) ASSY, MICROPHONE (EXCEPT SR11: J)

Ref. No.	Part No.	Description
257	A-1217-971-A	LENS BARRIER UNIT
258	3-080-272-01	TAPE (A)
259	1-480-432-11	SWITCH BLOCK, CONTROL (RS28900)
MIC901	1-542-711-31	MICROPHONE UNIT
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#124	2-599-475-01	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

5-1-7. LENS BLOCK

ns: not supplied

DISASSEMBLY

HARDWARE LIST

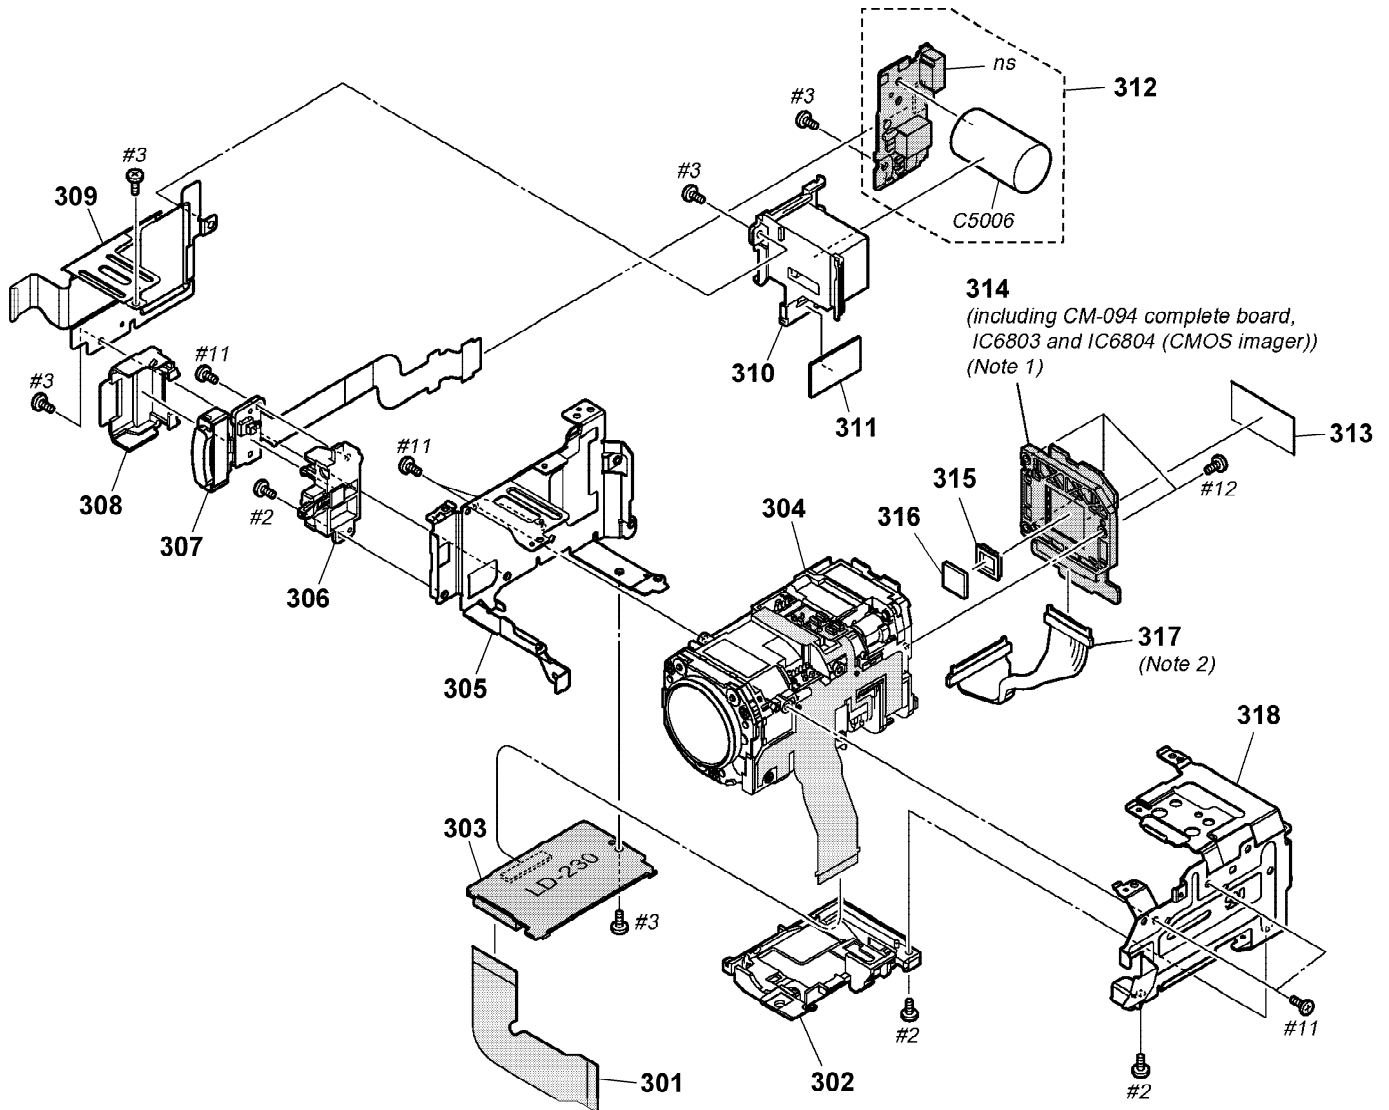

Note 1: イメージャの交換時は4-3ページの“イメージャ交換時の注意”を必ずお読みください。

Note 2: ハーネス（同軸ケーブル）の交換時は2-1ページの“Note for disconnecting the harness (coaxial cable)”を参照してください。

Note 1: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

Note 2: Refer to page 2-1 "Note for disconnecting the harness (coaxial cable)" when changing the harness (coaxial cable).

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
301	1-874-800-11	FP-801 FLEXIBLE BOARD
302	3-292-207-01	CLAMP (900), HARNESS
303	A-1494-364-A	LD-230 BOARD, COMPLETE
304	A-1497-729-A	LSV-1270A (SERVICE)
305	3-292-204-01	FRAME (L (900)), LENS
306	X-2189-052-1	HOLDER ASSY, ST
△ 307	1-480-263-11	FLASH UNIT
308	3-292-208-01	GUARD (900), ST
309	3-292-206-01	HEAT SINK (A (900)), VC
310	3-290-663-01	HOLDER, CAPACITOR
311	1-481-251-11	CORE, FERRITE
312	A-1494-365-A	ST-185 BOARD, COMPLETE
* 313	3-292-209-01	SHEET (900), CM RADIATION


Ref. No.	Part No.	Description
314	A-1512-350-A	CMOS BLOCK ASSY (1270) (including CM-094 complete board, IC6803 and IC6804 (CMOS imager)) (Note 1)
315	3-216-044-01	RUBBER (1270), SEAL
316	1-788-709-11	OPTICAL FILTER BLOCK (OFB-03-37)
317	1-965-256-31	HARNESS (COAXIAL CABLE) (Note 2)
318	3-292-205-01	FRAME (R (900)), LENS
△ *C5006	1-114-393-11	ELECT 70uF 99% 330V
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

5-1-8. CABINET (R) SECTION

DISASSEMBLY

HARDWARE LIST

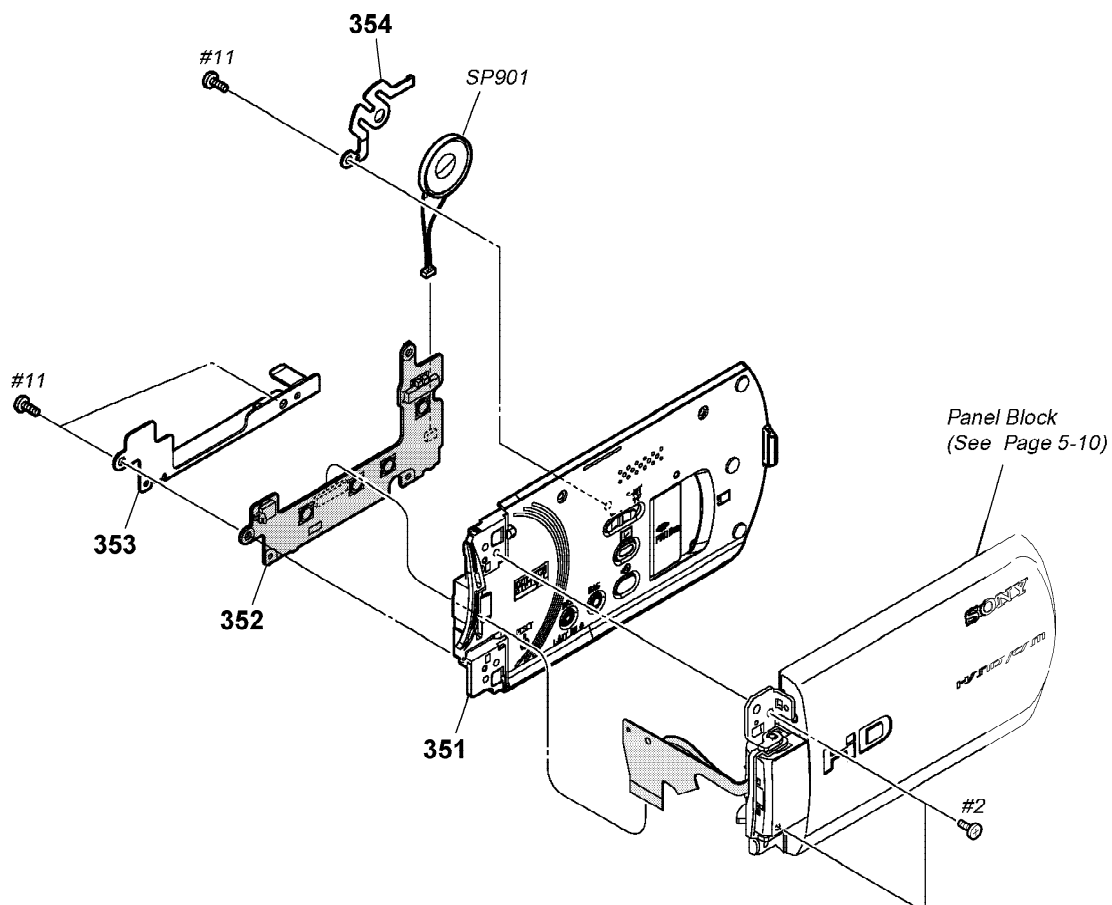

Ref. No.	Part No.	Description
351	X-2189-086-1	CABINET (R (900)) ASSY
352	A-1494-360-A	CK-185 BOARD, COMPLETE
* 353	3-292-375-01	FRAME (900), CK
* 354	3-292-376-01	RETAINER (900), SP


Ref. No.	Part No.	Description
SP901	1-825-262-82	LOUD SPEAKER (1.6CM)
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)

5. REPAIR PARTS LIST

5-1-9. PANEL BLOCK

DISASSEMBLY

HARDWARE LIST

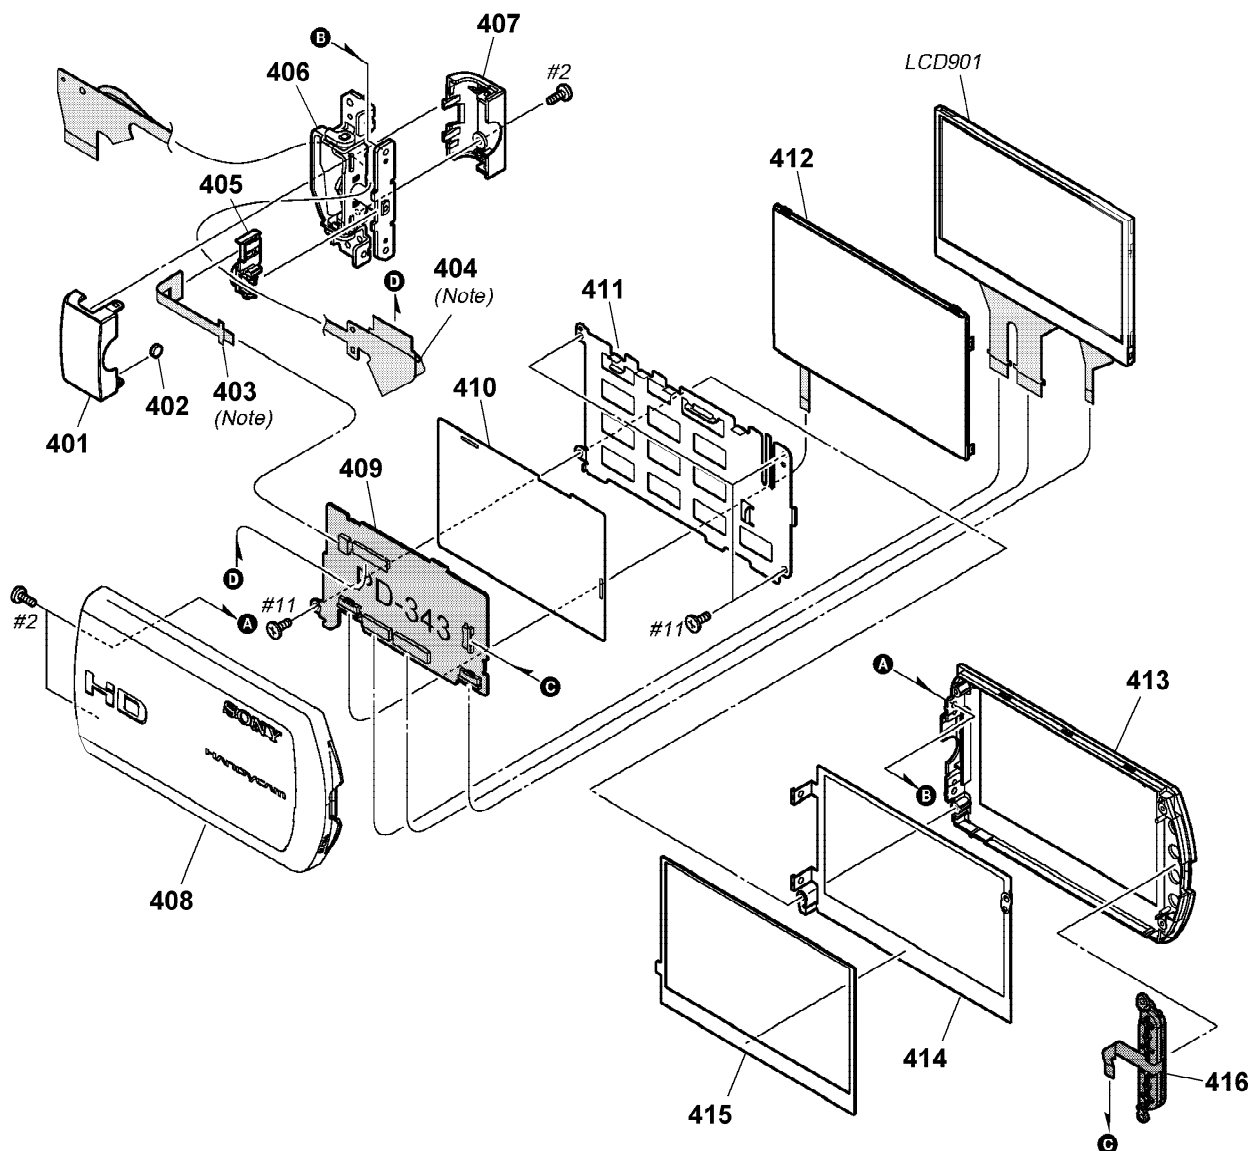

Note: FP-454, FP-807フレキシブル基板取付時は「HELP16」を必ずお読みください。

Note: Be sure to read "HELP16" when you install the FP-454, FP-807 flexible boards.


Ref. No.	Part No.	Description
401	3-292-370-01	COVER (O (900)), HINGE (SR11: J)
401	3-292-370-11	COVER (O (900)), HINGE (EXCEPT SR11: J)
402	1-471-278-11	MAGNET
403	A-1239-344-A	FP-454 FLEXIBLE BOARD, COMPLETE (Note)
404	1-874-806-11	FP-807 FLEXIBLE BOARD (Note)
* 405	3-292-372-01	CLAMP, FLEXIBLE
406	X-2189-085-1	HINGE (Y), 08 STYLE ASSY
407	3-292-371-01	COVER (U (900)), HINGE
408	A-1527-539-A	P CABINET (C (900)) SILVER (SR11: J)
408	X-2189-088-1	CABINET (C (900B)) ASSY, P (EXCEPT SR11: J)
409	A-1494-361-A	PD-343 BOARD, COMPLETE

Ref. No.	Part No.	Description
410	3-292-378-01	SHEET (P), INSULATING
* 411	3-292-374-01	RETAINER, P
412	1-480-358-21	BLOCK, LIGHT GUIDE PLATE (3.2)
413	3-292-368-01	CABINET (M (900)), P
* 414	3-292-373-01	PLATE (900), P GROUND
415	3-292-377-01	CUSHION (900), TP
416	1-480-458-11	SWITCH BLOCK, CONTROL (SB28900)
LCD901	A-1363-618-A	TP BLOCK ASSY (32ESHGU08)
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)

5. REPAIR PARTS LIST

5-1-10. EVF BLOCK

HARDWARE LIST

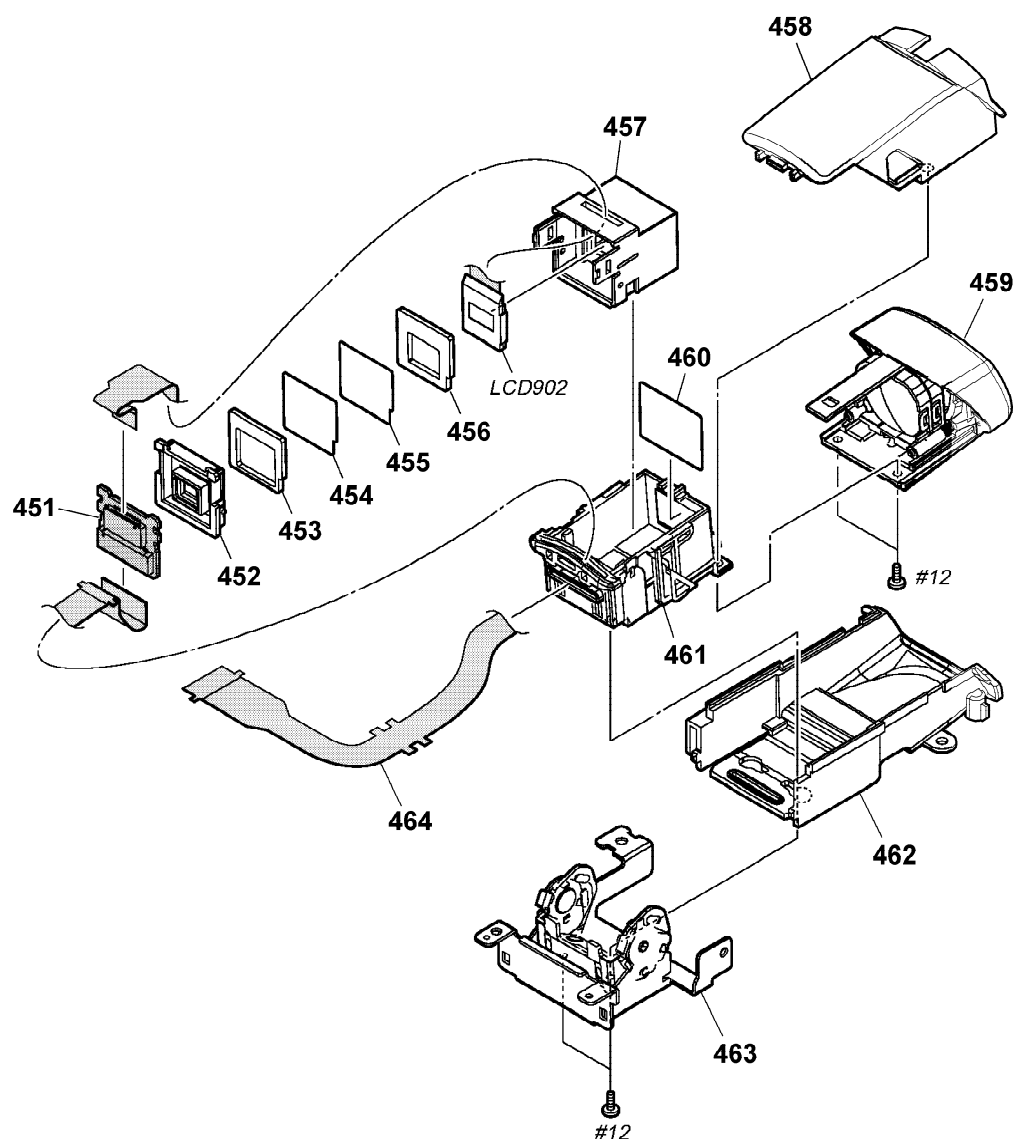

Ref. No.	Part No.	Description
451	A-1494-359-A	BL-017 BOARD, COMPLETE
452	2-664-672-01	GUIDE, LAMP
* 453	2-638-819-01	CUSHION, LCD
* 454	2-638-818-01	ILLUMINATOR
* 455	2-638-816-01	PLATE (TFT), DEFLECTION
456	2-664-671-01	SPACER, LCD
* 457	2-699-236-01	CABINET (222), INNER
458	3-292-322-01	CABINET (UPPER), VF (SR11: J)
458	3-292-322-11	CABINET (UPPER), VF (EXCEPT SR11: J)
459	X-2189-076-1	EYE CUP ASSY


Ref. No.	Part No.	Description
* 460	2-668-134-01	PANEL (CF), POLARIZATION
461	3-292-323-01	CABINET (LOWER), VF
462	3-292-324-01	COVER, VF BASE (SR11: J)
462	3-292-324-11	COVER, VF BASE (EXCEPT SR11: J)
463	X-2189-075-1	BASE ASSY, VF TILT
464	1-874-810-11	FP-811 FLEXIBLE BOARD
LCD902	8-753-241-14	LCX076AKE-1
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

5-1-11. BT PANEL BLOCK

ns: not supplied

HARDWARE LIST

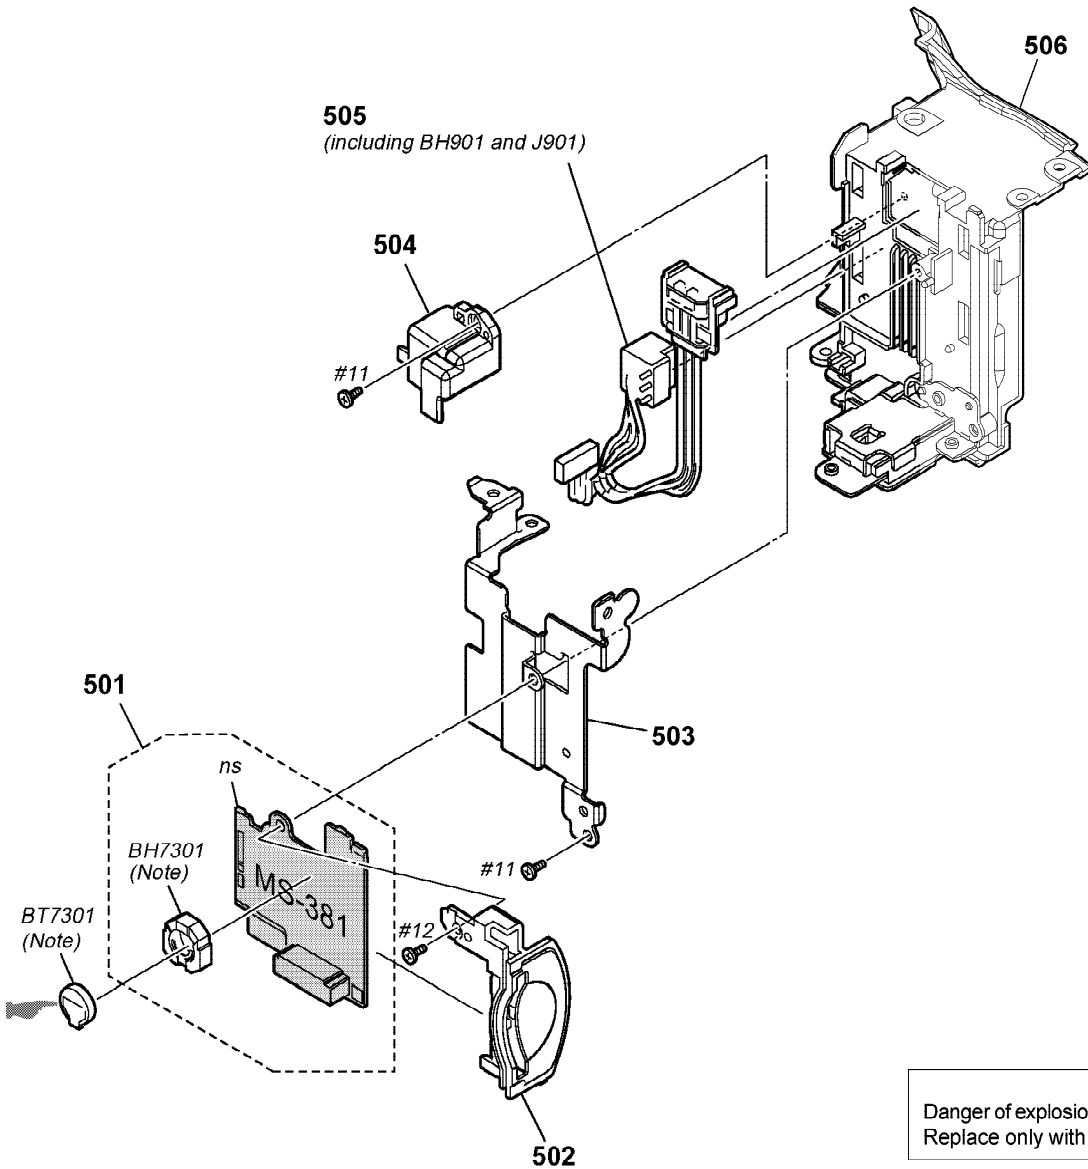

 : BT7301 (LITHIUM STORAGE BATTERY)
Board on the mount position.
(See page 4-52.)

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意
電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

ノート: MS-381基板のリチウム蓄電池 (BT7301) を交換する場合はバッテリーホルダ (BH7301) も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着して下さい。

Note: Replace the battery holder (BH7301) together when replacing the lithium storage battery (BT7301) on the MS-381 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

• Refer to page 5-1 for mark Δ .

Ref. No.	Part No.	Description
501	A-1494-358-A	MS-381 BOARD, COMPLETE
502	3-290-650-01	CABINET, MS
* 503	3-290-649-01	FRAME (700), BT TERMINAL
* 504	3-290-651-01	RETAINER, DCIN
Δ 505	1-821-575-21	DC JACK (including BH901 and J901)

Ref. No.	Part No.	Description
506	X-2189-081-1	PANEL (900) ASSY, BT
Δ *BH7301	1-756-615-51	HOLDER, BATTERY (Note)
Δ BT7301	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1494-359-A	BL-017 BOARD, COMPLETE *****
< CAPACITOR >		
C5701	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5702	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
< CONNECTOR >		
* CN5701	1-816-647-51	FFC/FPC CONNECTOR (LIF) 18P
* CN5702	1-817-698-81	CONNECTOR, FPC (ZIF) 21P
< DIODE >		
* D5701	6-501-591-01	DIODE NESW007AT-T099 (EVF BACKLIGHT)
* D5702	6-501-955-01	DIODE MAZS056G08S0
< COMPOSITION CIRCUIT BLOCK >		
* RB5701	1-234-380-21	RES, NETWORK 47K (1005X4)
	A-1494-360-A	CK-185 BOARD, COMPLETE *****
< CONNECTOR >		
* CN5801	1-820-729-61	CONNECTOR, FPC (ZIF) 51P
* CN5802	1-816-058-61	CONNECTOR, FPC (ZIF) 39P
CN5803	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
< RESISTOR >		
R5801	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R5802	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R5804	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R5805	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
< SWITCH >		
S5801	1-771-138-21	SWITCH, KEY BOARD (RESET)
S5802	1-771-138-21	SWITCH, KEY BOARD (EASY)
S5803	1-771-138-21	SWITCH, KEY BOARD (DISC BURN)
S5804	1-771-138-21	SWITCH, KEY BOARD (PLAY)
S5805	1-771-138-21	SWITCH, KEY BOARD (DISP/BATT INFO)
S5806	1-786-148-11	SWITCH, PUSH (1 KEY) (PANEL OPEN/CLOSE)
S5808	1-771-731-11	SWITCH, SLIDE (NIGHTSHOT)

Electrical parts list of the CM-094 is not shown.
Pages 5-14 is not shown.

		CR-089	FP-454	FP-798	FP-799	FP-801	FP-802	FP-803
FP-804	FP-805	FP-806	FP-807	FP-808	FP-809	FP-811	FP-812	FR-278

Ref. No.	Part No.	Description
	A-1494-362-A	CR-089 BOARD, COMPLETE *****
		< CONNECTOR >
* CN7401	1-821-664-21	CONNECTOR, MULTIPLE (PLUG) 32P (MULTI CONNECTOR)
* CN7402	1-821-202-71	CONNECTOR, FPC (ZIF) 45P
	A-1239-344-A	FP-454 FLEXIBLE BOARD, COMPLETE *****
		< IC >
IC001	6-705-011-01	IC AN48830B-NL
	A-1494-357-A	FP-798 FLEXIBLE BOARD, COMPLETE *****
		< CONNECTOR >
CN7191	1-821-166-21	CONNECTOR, HDMI (HDMI OUT)
	1-874-798-11	FP-799 FLEXIBLE BOARD *****
		(J7221 and J7222 are not included in FP-799 flexible board.)
		< JACK >
J7221	1-569-950-41	JACK (SMALL TYPE) (HEADPHONE)
J7222	1-691-737-41	JACK (SMALL TYPE) (MIC)
	1-874-800-11	FP-801 FLEXIBLE BOARD *****
		(There isn't mounted electrical parts in FP-801 flexible board.)
	1-874-801-11	FP-802 FLEXIBLE BOARD *****
		(There isn't mounted electrical parts in FP-802 flexible board.)
	1-874-802-11	FP-803 FLEXIBLE BOARD *****
		(There isn't mounted electrical parts in FP-803 flexible board.)
	1-874-803-11	FP-804 FLEXIBLE BOARD *****
		(There isn't mounted electrical parts in FP-804 flexible board.)
	1-874-804-11	FP-805 FLEXIBLE BOARD *****
		(There isn't mounted electrical parts in FP-805 flexible board.)
	1-874-805-11	FP-806 FLEXIBLE BOARD *****
		(There isn't mounted electrical parts in FP-806 flexible board.)

Ref. No.	Part No.	Description
	1-874-806-11	FP-807 FLEXIBLE BOARD *****
		(There isn't mounted electrical parts in FP-807 flexible board.)
	1-874-807-11	FP-808 FLEXIBLE BOARD *****
		(There isn't mounted electrical parts in FP-808 flexible board.)
	1-874-808-11	FP-809 FLEXIBLE BOARD *****
		(There isn't mounted electrical parts in FP-809 flexible board.)
	1-874-810-11	FP-811 FLEXIBLE BOARD *****
		(There isn't mounted electrical parts in FP-811 flexible board.)
	1-874-811-11	FP-812 FLEXIBLE BOARD *****
		(There isn't mounted electrical parts in FP-812 flexible board.)
	A-1508-570-A	FR-278 BOARD, COMPLETE (SERVICE) *****
		< CAPACITOR >
C9001	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9003	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9004	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9005	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9008	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C9009	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C9010	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C9011	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C9012	1-100-611-91	CERAMIC CHIP 22uF 20% 6.3V
C9013	1-100-611-91	CERAMIC CHIP 22uF 20% 6.3V
C9014	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C9015	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C9016	1-114-411-21	CERAMIC CHIP 0.33uF 10% 6.3V
C9017	1-114-411-21	CERAMIC CHIP 0.33uF 10% 6.3V
		< CONNECTOR >
* CN9002	1-816-644-51	FFC/FPC CONNECTOR (LIF) 12P
		< DIODE >
D9001	6-500-512-01	DIODE CL-330IRS-X-TU (NIGHTSHOT)
D9002	8-719-077-09	DIODE CL-196HR-CD-T (TALLY)
		< FERRITE BEAD >
FB9001	1-400-833-21	SMD EMI FERRITE
FB9002	1-400-833-21	SMD EMI FERRITE
FB9003	1-400-833-21	SMD EMI FERRITE
FB9004	1-400-833-21	SMD EMI FERRITE
		< IC >
IC9001	6-707-333-01	IC NJM3230SE7
IC9002	6-600-163-01	IC RS-770

Ref. No.	Part No.	Description				
< COIL >						
L9001	1-400-588-11	INDUCTOR	10uH			
< RESISTOR >						
R9004	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R9005	1-218-989-11	RES-CHIP	1M	5%	1/16W	
R9006	1-218-989-11	RES-CHIP	1M	5%	1/16W	
R9007	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R9008	1-218-990-11	SHORT CHIP	0			
R9010	1-218-945-11	RES-CHIP	220	5%	1/16W	
R9012	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	
R9013	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	
< COMPOSITION CIRCUIT BLOCK >						
* RB9001	1-234-379-21	RES, NETWORK	22K (1005X4)			
< SENSOR >						
* SE9001	1-479-022-51	SENSOR, ANGULAR VELOCITY (PITCH)				
* SE9002	1-479-022-61	SENSOR, ANGULAR VELOCITY (YAW)				
A-1494-355-A JK-356 BOARD, COMPLETE						

< CONNECTOR >						
* CN7201	1-816-648-51	FFC/FPC CONNECTOR (LIF) 20P				
CN7202	1-819-436-11	CONNECTOR (SQUARE TYPE) (USB) 5P (USB)				
CN7203	1-815-794-13	CONNECTOR (MULTIPLE) (A/V R)				
< FERRITE BEAD >						
FB7201	1-500-238-11	BEAD, FERRITE (CHIP) (1608)				
FB7202	1-500-238-11	BEAD, FERRITE (CHIP) (1608)				
< RESISTOR >						
R7201	1-216-864-11	SHORT CHIP	0			
R7202	1-216-864-11	SHORT CHIP	0			
R7203	1-216-809-11	METAL CHIP	100	5%	1/10W	
R7204	1-218-990-11	SHORT CHIP	0			
R7205	1-218-990-11	SHORT CHIP	0			
R7206	1-218-990-11	SHORT CHIP	0			
< VARISTOR >						
* VD7201	1-802-279-11	VARISTOR (SMD)				
* VD7202	1-802-279-11	VARISTOR (SMD)				
* VD7203	1-802-279-11	VARISTOR (SMD)				
* VD7204	1-802-279-11	VARISTOR (SMD)				
* VD7205	1-802-279-11	VARISTOR (SMD)				

Electrical parts list of the LD-230 is not shown.
Pages 5-17 to 5-18 are not shown.

Ref. No.	Part No.	Description
	A-1494-358-A	MS-381 BOARD, COMPLETE *****
(BT7301 (lithium storage battery) is not included in MS-381 complete board.)		
< BATTERY HOLDER >		
△*BH7301	1-756-615-51	HOLDER, BATTERY (Note)
< BATTERY >		
△ BT7301	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
< CAPACITOR >		
C7302	1-100-786-91	TANTAL. CHIP 22uF 20% 6.3V
< CONNECTOR >		
* CN7301	1-779-335-51	CONNECTOR, FFC/FPC 22P
* CN7302	1-819-990-21	MEMORY STICK DUO CONNECTOR 10P (PRO DUO)
< DIODE >		
D7301	6-501-216-01	DIODE CL-271HR-C-TS (ACCESS)
< FERRITE BEAD >		
FB7301	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7302	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7303	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7304	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
< RESISTOR >		
R7302	1-218-990-11	SHORT CHIP 0
R7303	1-218-944-11	RES-CHIP 180 5% 1/16W
R7304	1-218-944-11	RES-CHIP 180 5% 1/16W
R7305	1-218-944-11	RES-CHIP 180 5% 1/16W
R7306	1-218-944-11	RES-CHIP 180 5% 1/16W
R7307	1-218-990-11	SHORT CHIP 0
R7308	1-218-990-11	SHORT CHIP 0

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Note: Replace the battery holder (BH7301) together when replacing the lithium storage battery (BT7301) on the MS-381 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

ノート: MS-381基板のリチウム蓄電池 (BT7301) を交換する場合はバッテリーホルダ (BH7301) も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着して下さい。

Ref. No.	Part No.	Description
	A-1494-361-A	PD-343 BOARD, COMPLETE *****
< CAPACITOR >		
C5901	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C5902	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C5903	1-112-300-91	CERAMIC CHIP 4.7uF 10% 10V
C5905	1-100-786-91	TANTAL. CHIP 22uF 20% 6.3V
C5907	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5909	1-165-875-11	CERAMIC CHIP 10uF 10% 10V
C5912	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5913	1-112-300-91	CERAMIC CHIP 4.7uF 10% 10V
C5914	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C5915	1-127-861-11	CERAMIC CHIP 2.2uF 10% 16V
C5917	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C5918	1-112-300-91	CERAMIC CHIP 4.7uF 10% 10V
C5919	1-112-300-91	CERAMIC CHIP 4.7uF 10% 10V
C5920	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C5921	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C5922	1-127-861-11	CERAMIC CHIP 2.2uF 10% 16V
C5923	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C5924	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C5925	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C5926	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C5927	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
* C5928	1-112-746-11	CERAMIC CHIP 4.7uF 10% 6.3V
C5930	1-125-889-11	CERAMIC CHIP 2.2uF 10% 10V
< CONNECTOR >		
* CN5901	1-817-544-71	CONNECTOR, FPC (ZIF) 39P
* CN5902	1-794-322-51	CONNECTOR, FPC (ZIF) 6P
CN5903	1-816-180-71	CONNECTOR, FPC (ZIF) 6P
* CN5905	1-794-322-51	CONNECTOR, FPC (ZIF) 6P
* CN5906	1-819-914-71	CONNECTOR, FPC (ZIF) 29P
* CN5907	1-817-544-71	CONNECTOR, FPC (ZIF) 39P
* CN5909	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P
< DIODE >		
D5903	6-500-813-01	DIODE MA2SD32008S0
D5904	6-500-813-01	DIODE MA2SD32008S0
< IC >		
* IC5901	6-712-051-01	IC SN65LVDS302ZQER
< COIL >		
L5901	1-400-588-11	INDUCTOR 10uH
L5902	1-400-588-11	INDUCTOR 10uH
L5903	1-400-588-11	INDUCTOR 10uH
< TRANSISTOR >		
Q5901	8-729-427-37	TRANSISTOR XP411F-TXE
Q5902	8-729-427-67	TRANSISTOR XP421F-TXE
* Q5907	6-551-760-01	TRANSISTOR UNR31A3G0LS0
Q5908	8-729-053-48	TRANSISTOR 2SK3235
* Q5909	6-551-846-01	TRANSISTOR UP04401G08S0
Q5910	8-729-053-48	TRANSISTOR 2SK3235

• Refer to page 5-1 for mark △.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	< RESISTOR >			
R5901	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	
R5902	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	
R5903	1-218-954-11	RES-CHIP	1.2K	5%	1/16W	
R5909	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R5913	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R5914	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R5916	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R5919	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R5921	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R5923	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R5926	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R5928	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R5929	1-218-990-11	SHORT CHIP	0			
R5932	1-218-990-11	SHORT CHIP	0			
R5936	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W	
R5937	1-218-969-11	RES-CHIP	22K	5%	1/16W	
R5938	1-208-923-11	METAL CHIP	33K	0.5%	1/16W	
R5939	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	
R5940	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	
R5941	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	
R5942	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	
R5943	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	
R5944	1-211-973-11	METAL CHIP	15	0.5%	1/10W	

< COMPOSITION CIRCUIT BLOCK >

RB5901 1-234-381-11 RES, NETWORK 100K (1005X4)

A-1494-365-A ST-185 BOARD, COMPLETE

< CAPACITOR >

C5002	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C5003	1-165-884-91	CERAMIC CHIP	2.2uF	10%	6.3V	
C5004	1-165-875-11	CERAMIC CHIP	10uF	10%	10V	
C5005	1-163-001-11	CERAMIC CHIP	220PF	10%	50V	
△*C5006	1-114-393-11	ELECT	70uF	99%	330V	

< CONNECTOR >

* CN5001	1-779-331-51	CONNECTOR, FFC/FPC 14P				
* CN5002	1-816-647-51	FFC/FPC CONNECTOR (LIF) 18P				

< DIODE >

D5002	6-500-619-01	DIODE RB520S-40TE61				
△D5003	6-501-096-01	DIODE CRF02 (TE85R)				

< IC >

△IC5001	6-707-554-01	IC TPS65552DGQR				
---------	--------------	-----------------	--	--	--	--

< COIL >

L5001	1-412-027-11	INDUCTOR	2.2uH			
-------	--------------	----------	-------	--	--	--

< TRANSISTOR >

*△Q5001	6-551-686-01	TRANSISTOR	TIG030TS-S-TL-E			
---------	--------------	------------	-----------------	--	--	--

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
< RESISTOR >		

R5003	1-208-947-11	METAL CHIP	330K	0.5%	1/16W	
R5004	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	
R5008	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R5010	1-216-809-11	METAL CHIP	100	5%	1/10W	
R5011	1-218-989-11	RES-CHIP	1M	5%	1/16W	

< TRANSFORMER >

△T5001 1-443-568-31 TRANSFORMER, D.C.-D.C.CONVERTER


Electrical parts list of the VC-516 is not shown.
Pages 5-21 to 5-28 are not shown.

• Refer to page 5-1 for mark △.

• EXCEPT J MODEL

Checking supplied accessories.

to J MODEL

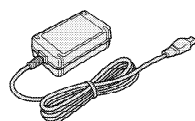

AC Adaptor
(AC-L200/L200B)
* Compatible in
L200 and L200B.
△ 1-479-285-21



Conversion (2P) Adaptor
△ 1-569-007-12 (E:NTSC, JE)



 
21-Pin Adaptor
1-770-783-21 (AEP, UK, NE)



A/V connecting cable
1-823-156-51




Wireless Remote Commander
(RMT-835)
1-479-275-41




Handycam Station
(DCRA-C210)
1-821-692-11




Power cord (Mains lead)
△ 1-555-074-91 (AUS)
△ 1-790-107-61 (US, CND)
△ 1-792-549-41 (JE)
△ 1-824-910-71 (AEP, NE, E:PAL)
△ 1-827-269-12 (UK, HK)
△ 1-832-121-31 (CH)
△ 1-833-892-21 (KR)
△ 1-834-852-11 (E:NTSC)
△ 1-835-434-11 (TH)

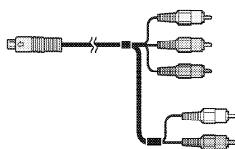

Component A/V cable
1-834-647-11

 

USB cable
1-829-868-31

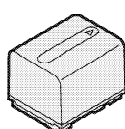

Rechargeable battery pack
(NP-FH60)
△ A-1201-666-A (US, CND)
△ A-1201-667-A
(EXCEPT US, CND, CH)
△ A-1201-668-A (CH)



Operating Guide
(HDR-SR11/SR12)
3-286-585-11 (ENGLISH, SPANISH) (US, CND, JE, E:NTSC)
3-286-585-21 (FRENCH) (CND)
3-286-585-31 (PORTUGUESE) (JE)
3-286-585-41 (TRADITIONAL CHINESE) (E:NTSC)
3-286-585-51 (KOREAN) (KR, JE)

Operating Guide
(HDR-SR11E/SR12E)
3-286-586-11 (ENGLISH) (AEP, UK, HK, AUS, JE, E:PAL, TH)
3-286-586-21 (FRENCH, DUTCH, GREEK) (AEP)
3-286-586-31 (GERMAN, ITALIAN, TURKISH) (AEP)
3-286-586-41 (SPANISH, PORTUGUESE, POLISH) (AEP)
3-286-586-51 (CZECH, HUNGARIAN, SLOVAK) (AEP)
3-286-586-61 (RUSSIAN, UKRAINIAN) (NE, JE)
3-286-586-71 (SWEDISH, DANISH, FINNISH) (NE)
3-286-586-81 (SIMPLIFIED CHINESE) (CH, JE, E:PAL)
3-286-586-91 (ARABIC, PERSIAN) (E:PAL)
3-286-587-41 (TRADITIONAL CHINESE) (HK)
3-286-587-51 (THAI) (TH)



 
DVD-ROM
"ENJOY HANDYCAM"
3-282-264-01 (KR)
ENGLISH/KOREA/JAPANESE
3-282-264-11 (US, CND)
ENGLISH/FRENCH/SPANISH/PORTUGUESE
3-282-264-21 (UK, NE)
ENGLISH/RUSSIAN/GERMAN/TURKISH
3-282-264-51 (AEP)
ENGLISH / FRENCH / GERMAN / DUTCH / SPANISH
/ PORTUGUESE / ITALIAN / TURKISH
3-282-264-61 (HK, AUS, CH, E)
ENGLISH / FRENCH / SIMPLIFIED CHINESE / TRADITIONAL CHINESE
3-282-264-71 (E)
ENGLISH / TRADITIONAL CHINESE / SPANISH / PORTUGUESE



Handycam Handbook (PDF)

The CD-ROM supplied contains all of language version of
the Instruction Manual in pdf (Handycam Handbook.pdf) for printing.

- The printed matter is not supplied. If required,
please order it with the part number below.
- * (Only for destination Japanese model)



CD-ROM "Handycam
Application Software"
— Picture Motion Browser
(Software)
— PMB Guide
— Handycam Handbook
3-286-588-01

HDR-SR11/SR12


- 3-286-589-01 (JAPANESE)
- * 3-286-589-11 (ENGLISH)
- * 3-286-589-21 (FRENCH)
- * 3-286-589-31 (SPANISH)
- * 3-286-589-41 (PORTUGUESE)
- * 3-286-589-51 (TRADITIONAL CHINESE)
- * 3-286-589-61 (KOREAN)

HDR-SR11E/SR12E

- | | |
|-----------------------------|--------------------------------------|
| * 3-286-590-11 (ENGLISH) | * 3-286-591-71 (SWEDISH) |
| * 3-286-590-21 (FRENCH) | * 3-286-591-81 (DANISH) |
| * 3-286-590-31 (DUTCH) | * 3-286-591-91 (FINNISH) |
| * 3-286-590-41 (GREEK) | * 3-286-592-11 (SIMPLIFIED CHINESE) |
| * 3-286-590-51 (GERMAN) | |
| * 3-286-590-61 (ITALIAN) | * 3-286-592-21 (ARABIC) |
| * 3-286-590-71 (TURKISH) | * 3-286-592-31 (PERSIAN) |
| * 3-286-590-81 (SPANISH) | * 3-286-592-41 (MALAY) |
| * 3-286-590-91 (PORTUGUESE) | * 3-286-592-51 (THAI) |
| * 3-286-591-11 (POLISH) | * 3-286-592-61 (INDONESIAN) |
| * 3-286-591-21 (CZECH) | * 3-286-592-71 (TRADITIONAL CHINESE) |
| * 3-286-591-31 (HUNGARIAN) | |
| * 3-286-591-41 (SLOVAK) | |
| * 3-286-591-51 (RUSSIAN) | |
| * 3-286-591-61 (UKRAINIAN) | |

• Refer to page 5-1 for mark △.

• J MODEL

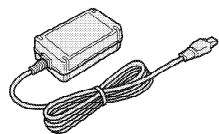


ACアダプタ
(AC-L200/L200B)
* L200, L200B, 1
1-479-285-21




デジタル
1-792-549-41




ムービー
3-286-585-01 (付属)

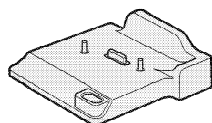

デジタル
(DCRA-C210)
1-821-692-11

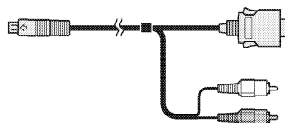


デジタルAV
1-834-646-21

 

DVD-ROM
3-282-264-01
付属



 
AV
1-823-156-51




USB
1-829-868-31



リモコン
(RMT-835)
1-479-275-41

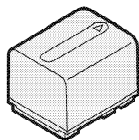

リチウムイオン電池
(NP-FH60)
A-1201-665-A

 

CD-ROM
Application Software
— uPicture Motion Browser
(iMovie)
— uPMB
— uデジタル
3-286-588-01




デジタル (PDF)


3-286-589-01 (付属)

HARDWARE LIST (1/7)


#1: M1.7 X 2.5
(Black)
2-635-562-11

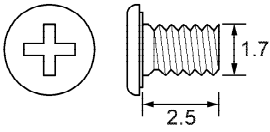


#2: M1.7 X 4.0
(Black)
2-635-562-31

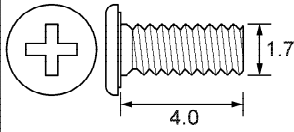


#3: M1.7 X 2.5
(Red)
2-660-401-01

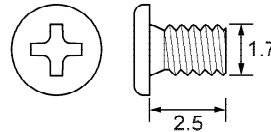


#4: M1.4 X 2.5 (Tapping)
(Dark Silver)
3-348-998-81

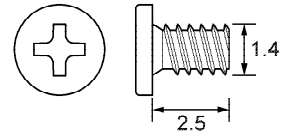


#5: M1.7 X 3.5 (Tapping)
(Black)
3-080-204-01

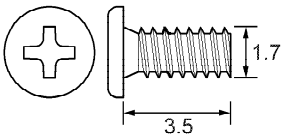


#6: M1.4 X 1.7
(Silver)
2-598-474-01

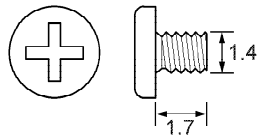


#7: M1.7 X 1.6
(Black)
7-627-552-18

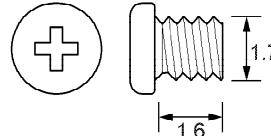


#8: M1.7 X 3.5 (Tapping)
(Silver)
3-078-890-01

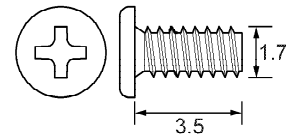


#9: M1.7 X 5.0 (Tapping)
(Silver)
3-078-890-21

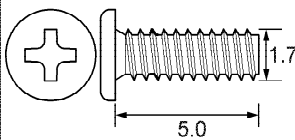


#10: M1.7 X 4.0
(Silver)
2-599-475-31

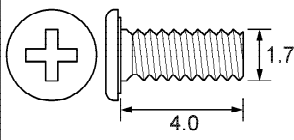


#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

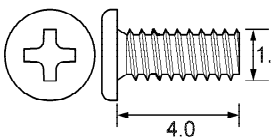


#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21

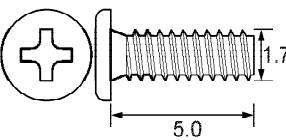


#13: M1.7 X 2.5 (Tapping)
(Silver)
3-085-397-01

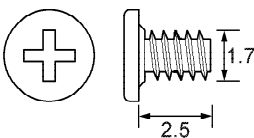


#14: M1.7 X 2.5
(Silver)
2-599-475-11

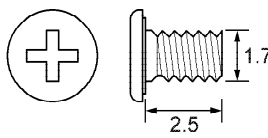


#15: M1.4 X 1.5
(Silver)
3-062-214-01

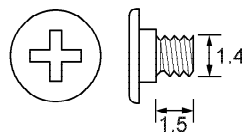


#16: M1.4 X 2.5
(Silver)
2-586-337-01

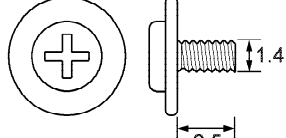


#17: M1.7 X 1.5
(Silver)
2-586-389-01

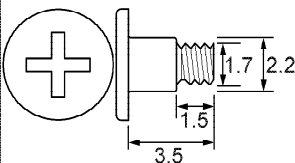


#18: M1.4 X 2.5
(Silver)
2-635-591-21

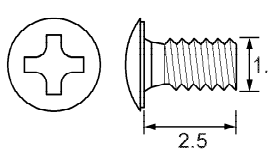

#19: M1.2 X 4.0 (Tapping)
(Red)
3-086-156-21

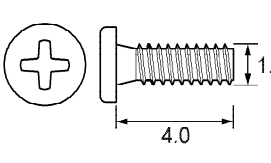


#20: M1.4 X 3.0
(Silver)
2-635-591-31

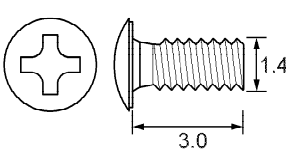


HARDWARE LIST (2/7)


#21: M1.4 X 3.0
(Black)
2-662-396-21

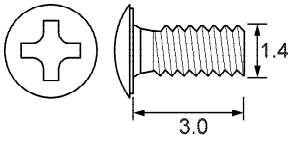


#22: M1.7 X 5.0 (Tapping)
(Silver)
3-083-261-01

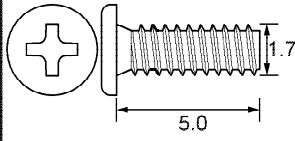


#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11

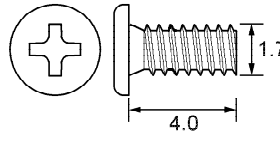


#24: B1.7 X 5.5 (Tapping)
(Black)
4-679-805-11

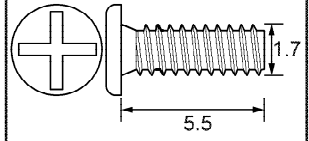


#25: M1.7 X 3.0
(Black)
2-635-562-21

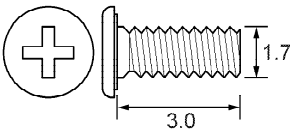


#26: M1.4 X 2.0
(Silver)
2-635-591-11

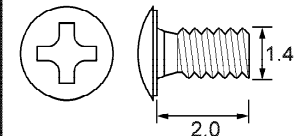


#27: M1.4 X 2.0
(Black)
2-662-396-11

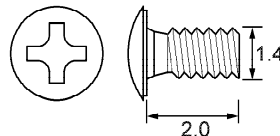


#28: M1.4 X 4.0 (Tapping)
(Silver)
3-348-998-61

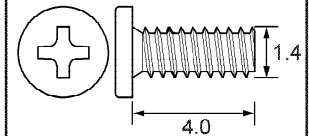


#29: M1.4 X 2.5
(Black)
2-662-396-01

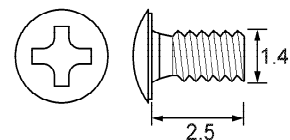


#30: M1.2 X 4.0 (Tapping)
(White)
3-086-156-11

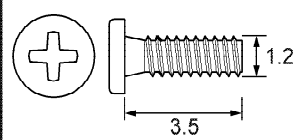


#31: M3.0 X 4.0
(Silver)
2-102-434-01

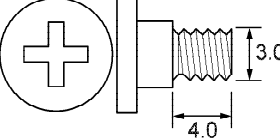


#32: M2.0 X 4.5 (Tapping)
(Silver)
2-102-498-01

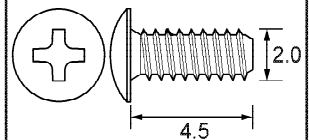


#33: M3.0 X 6.0
(Silver)
3-077-331-21

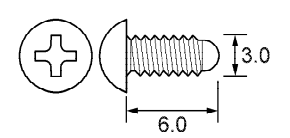


#34: M3.0 X 8.0
(Black)
3-077-331-41

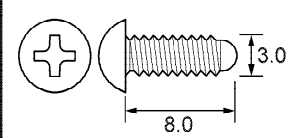


#35: M4.0 X 6.0 (Tapping)
(Silver)
3-975-291-02

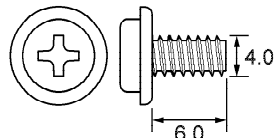


#36: M3.0 X 6.0
(Silver)
4-886-821-11

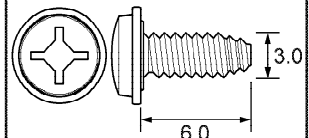


#37: M2.0 X 6.0 (Tapping)
(Black)
3-080-206-31

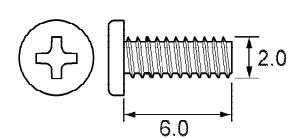


#38: M3.0 X 20.0 (Tapping)
(Silver)
7-685-651-79

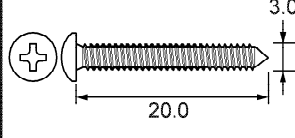

#39: M2.6 X 5.0 (Tapping)
(Black)
7-685-791-09

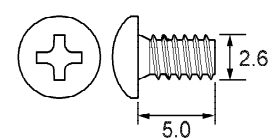


#40: M2.0 X 4.0 (Tapping)
(Silver)
7-685-851-04

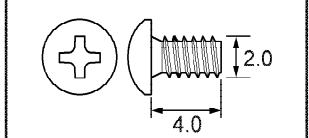


HARDWARE LIST (3/7)


#41: M3.0 X 8.0 (Tapping)
(Silver)
3-065-748-01

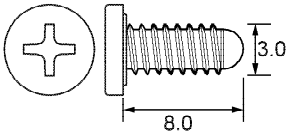


#42: M2.0 X 4.0 (Tapping)
(Silver)
7-628-253-00

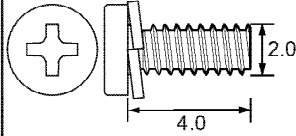


#43: M1.7 X 4.0
(Red)
2-660-401-31

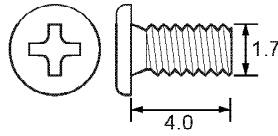


#44: M1.7 X 3.0 (Tapping)
(Silver)
3-078-890-61

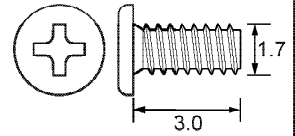


#45: M1.4 X 2.5
(Silver)
2-587-151-01

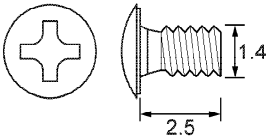


#46: M1.7 X 3.0
(Red)
2-660-401-11

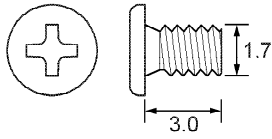


#47: M1.4 X 3.0 (Tapping)
(Silver)
2-665-774-01

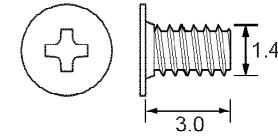


#48: M1.7 X 2.5
(Silver)
3-973-497-91

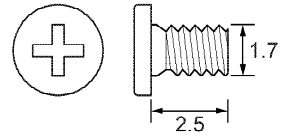


#49: M2.0 X 4.0
(Black)
2-630-005-31

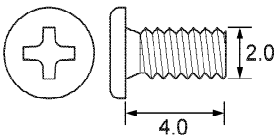


#50: M2.0 X 3.0
(Red)
2-891-494-11

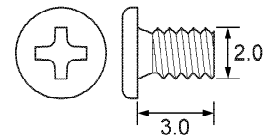


#51: M2.0 X 2.5
(Silver)
3-073-686-01

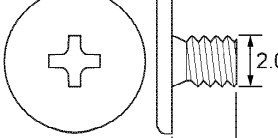


#52: M2.0 X 4.0 (Tapping)
(Black)
3-080-206-11

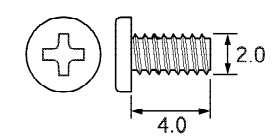


#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

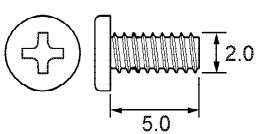


#54: M1.75 X 6.0 (Tapping)
(Black)
3-318-203-11

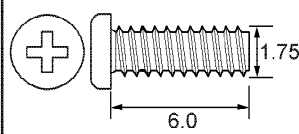


#55: M2.0 X 4.0
(Silver)
2-655-582-11

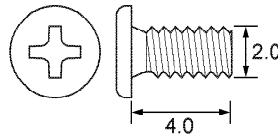


#56: M2.0 X 3.5
(Silver)
3-067-187-11

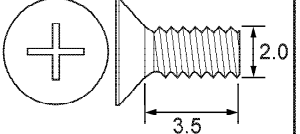


#57: M1.7 X 4.0
(Black)
7-627-852-18

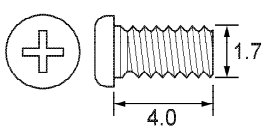


#58: M2.0 X 6.0 (Tapping)
(Silver)
3-719-408-11

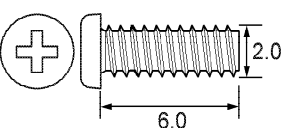

#59: M2.0 X 5.0 (Tapping)
(Silver)
3-080-205-21

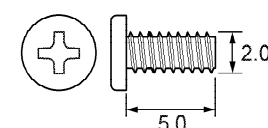


#60: M2.6 X 5.0
(Black)
3-061-062-11

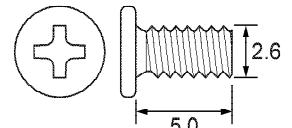


HARDWARE LIST (4/7)


#61: M3.0 X 10.0
(Black)
7-682-549-09

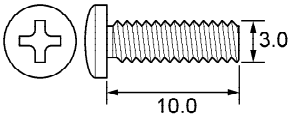


#62: M2.0 X 3.0
(Silver)
3-080-202-21

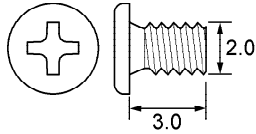


#63: M5.0 X 12.5
(Black)
3-060-811-21

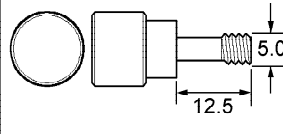


#64: M1.7 X 5.0 (Tapping)
(Silver)
2-666-551-21

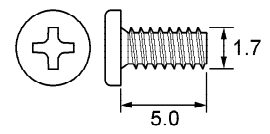


#65: M1.4 X 3.5
(Silver)
2-635-591-01

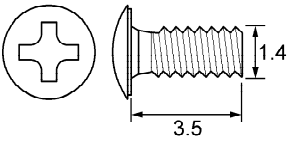


#66: M1.4 X 1.4
(Silver)
2-635-591-41

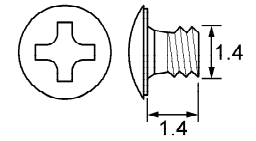


#67: M1.4 X 2.0
(Silver)
3-389-523-16

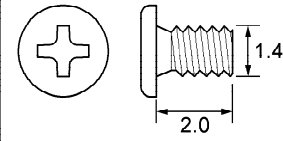


#68: M1.7 X 4.0
(Silver)
2-655-581-01

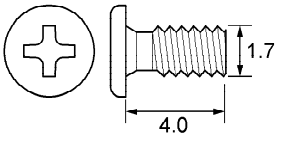


#69: M1.7 X 3.0
(Silver)
2-599-475-21

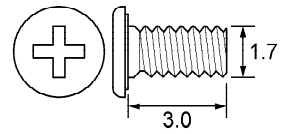


#70: M1.7 X 5.0
(Silver)
2-599-475-41

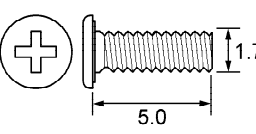


#71: M1.4 X 2.0
(Red)
3-208-537-01

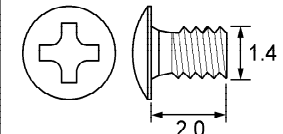


#72: M1.4 X 2.0
(Silver)
4-663-621-41

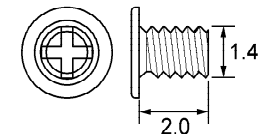


#73: M1.2 X 4.0 (Tapping)
(Black)
3-086-156-61

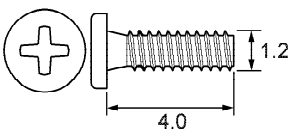


#74: M1.7 X 6.0 (Tapping)
(Silver)
2-666-551-31

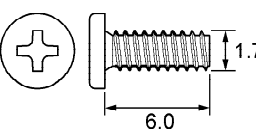


#75: M1.7 X 3.5 (Tapping)
(Silver)
2-666-551-01

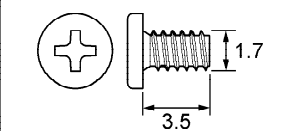


#76: M1.7 X 4.0 (Tapping)
(Silver)
2-666-551-11

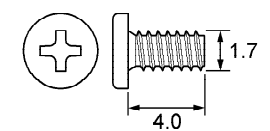


#77: M1.2 X 5.0 (Tapping)
(Silver)
3-086-156-31

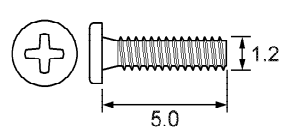


#78: M1.4 X 3.5
(Red)
3-208-537-11

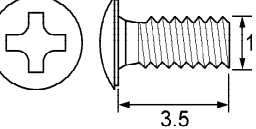

#79: M1.4 X 2.0
(Silver)
2-587-151-11

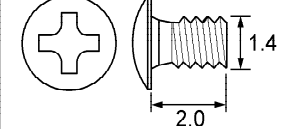


#80: M1.4 X 2.0
(Black)
3-279-411-01

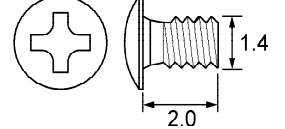


HARDWARE LIST (5/7)


#81: M1.7 X 2.5
(Silver)
2-515-756-01

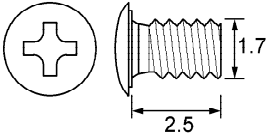


#82: M1.4 X 1.4
(Silver)
3-272-251-01

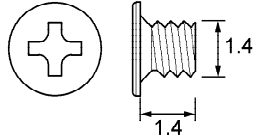


#83: M1.7 X 7.0 (Tapping)
(Black)
3-080-204-41

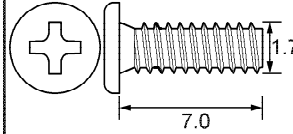


#84: M2.0 X 3.0
(Silver)
3-072-453-11

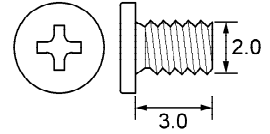


#85: M1.7 X 2.5
(Black)
2-515-483-11

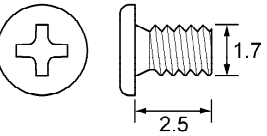


#86: M1.7 X 4.0 (Tapping)
(Silver)
2-695-434-21

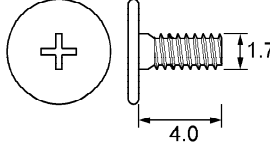


#87: M1.6 X 5.3
(Black)
2-689-328-01

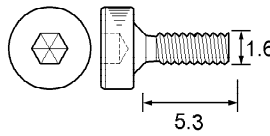


#88: M1.6 X 5.9 (Tapping)
(Silver)
2-689-015-01

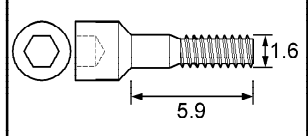


#89: M2.0 X 5.5 (Tapping)
(Silver)
2-695-575-01

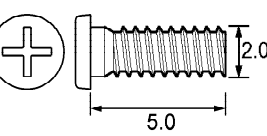


#90: M1.7 X 3.0
(Silver)
3-271-395-01

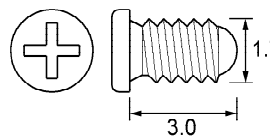


#91: M1.7 X 3.0 (Tapping)
(Silver)
2-695-434-11

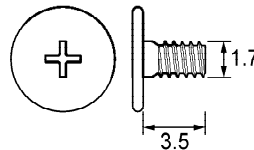


#92: M2.0 X 3.9
(Black)
3-268-954-01

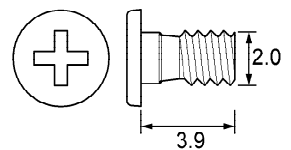


#93: M1.7 X 3.5 (Tapping)
(Silver)
3-254-082-01

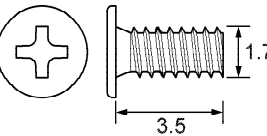


#94: M1.7 X 4.0
(Black)
2-515-483-31

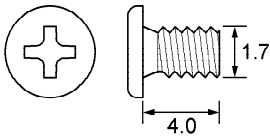


#95: M3.0 X 8.0 (Tapping)
(Black)
7-685-646-79

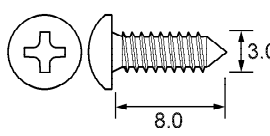


#96: M1.4 X 2.5
(Silver)
2-587-151-21

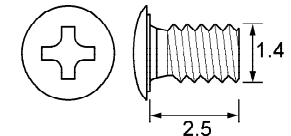


#97: M1.4 X 2.5
(Black)
2-662-396-31

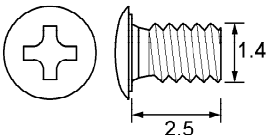


#98: M3.0 X 8.0
(Silver)
3-077-331-01

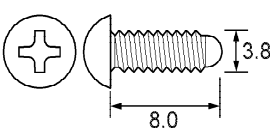

#99: M2.5 X 6.0 (Tapping)
(Silver)
3-776-750-02

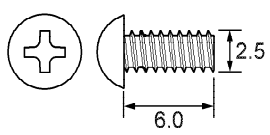


#100: M2.0 X 6.0
(Black)
3-080-203-51

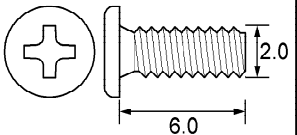


HARDWARE LIST (6/7)


#101: M2.0 X 5.0
(Silver)
7-621-555-39

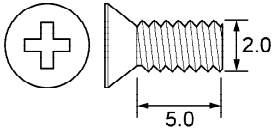


#102: M2.6 X 8.0
(Black)
7-621-284-30

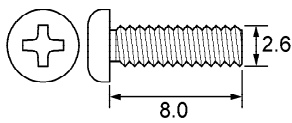


#103: M2.6 X 10.0
(Silver)
7-685-794-09

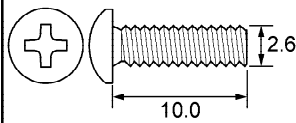


#104: M3.0 X 8.0
(Black)
7-682-548-09

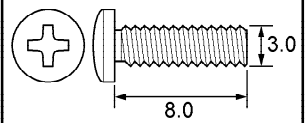


#105: M2.0 X 4.0
(Red)
2-891-494-31

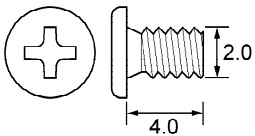


#106: M2.0 X 6.0
(Black)
3-713-786-11

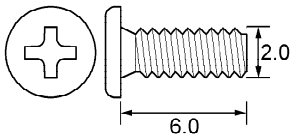


#107: M2.0 X 5.0
(Silver)
3-032-750-01

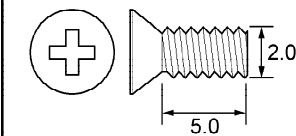


#108: M1.7 X 3.0 (Tapping)
(Black)
2-695-430-01

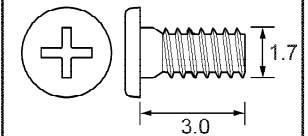


#109: M1.7 X 3.0
(Black)
2-515-483-21

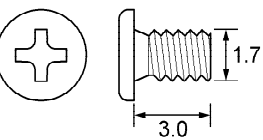


#110: M2.0 X 3.0
(Black)
2-630-005-21

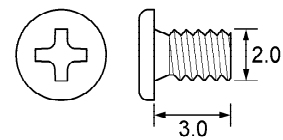


#111: M1.7 X 4.0 (Tapping)
(Black)
2-887-124-01

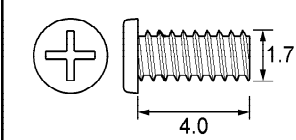


#112: M1.4 X 5.0
(Black)
2-178-410-11

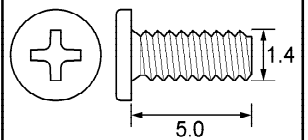


#113: M1.7 X 5.0
(Black)
2-635-562-41

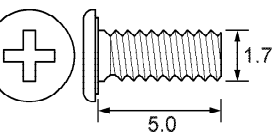


#114: M2.0 X 5.5 (Tapping)
(Silver)
2-698-464-01

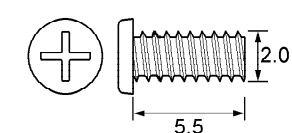


#115: M1.4 X 3.5 (Tapping)
(Silver)
3-348-998-51

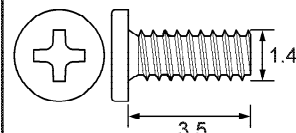


#116: M2.0 X 3.5 (Tapping)
(Silver)
2-695-435-01

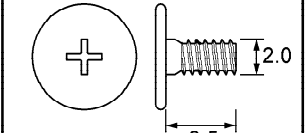


#117: M1.7 X 4.5 (Tapping)
(Silver)
2-695-429-31

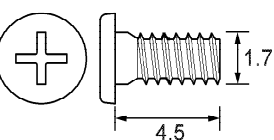


#118: M1.4 X 2.0
(Black)
2-655-580-01

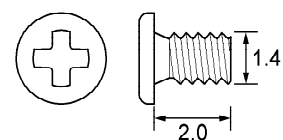

#119: M2.6 X 5.0
(Black)
7-627-556-58

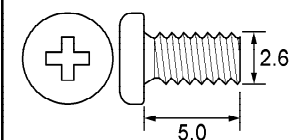


#120: M2.6 X 6.0
(Silver)
7-621-770-67

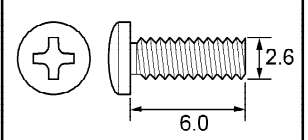


HARDWARE LIST (7/7)


#121: M2.0 X 4.0 (Tapping)
(Silver)
3-080-205-11

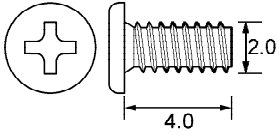


#122: M3.0 X 6.0
(Black)
7-682-547-09

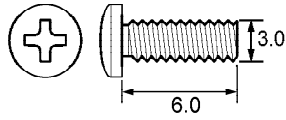

#123: M4.0 X 8.0
(Black)
7-682-561-09

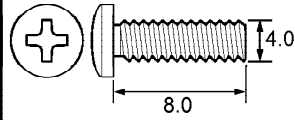

#124: M1.7 X 2.0
(Silver)
2-599-475-01

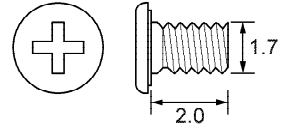

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2008.01	Official Release	—	—
1.1	2008.05	Supplement-1 (DI08-064)	• Addition of Thai Model for IIDR-SR11E/ SR12E • Revision of Accessories S.M. Revised: Page 5-29, 5-30	Yes
1.2	2008.06	Supplement-2 (DI08-087)	• Addition of Note for DISASSEMBLY • Addition of repair parts for EXPLODED VIEWS	No