

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION-1

ns: not supplied

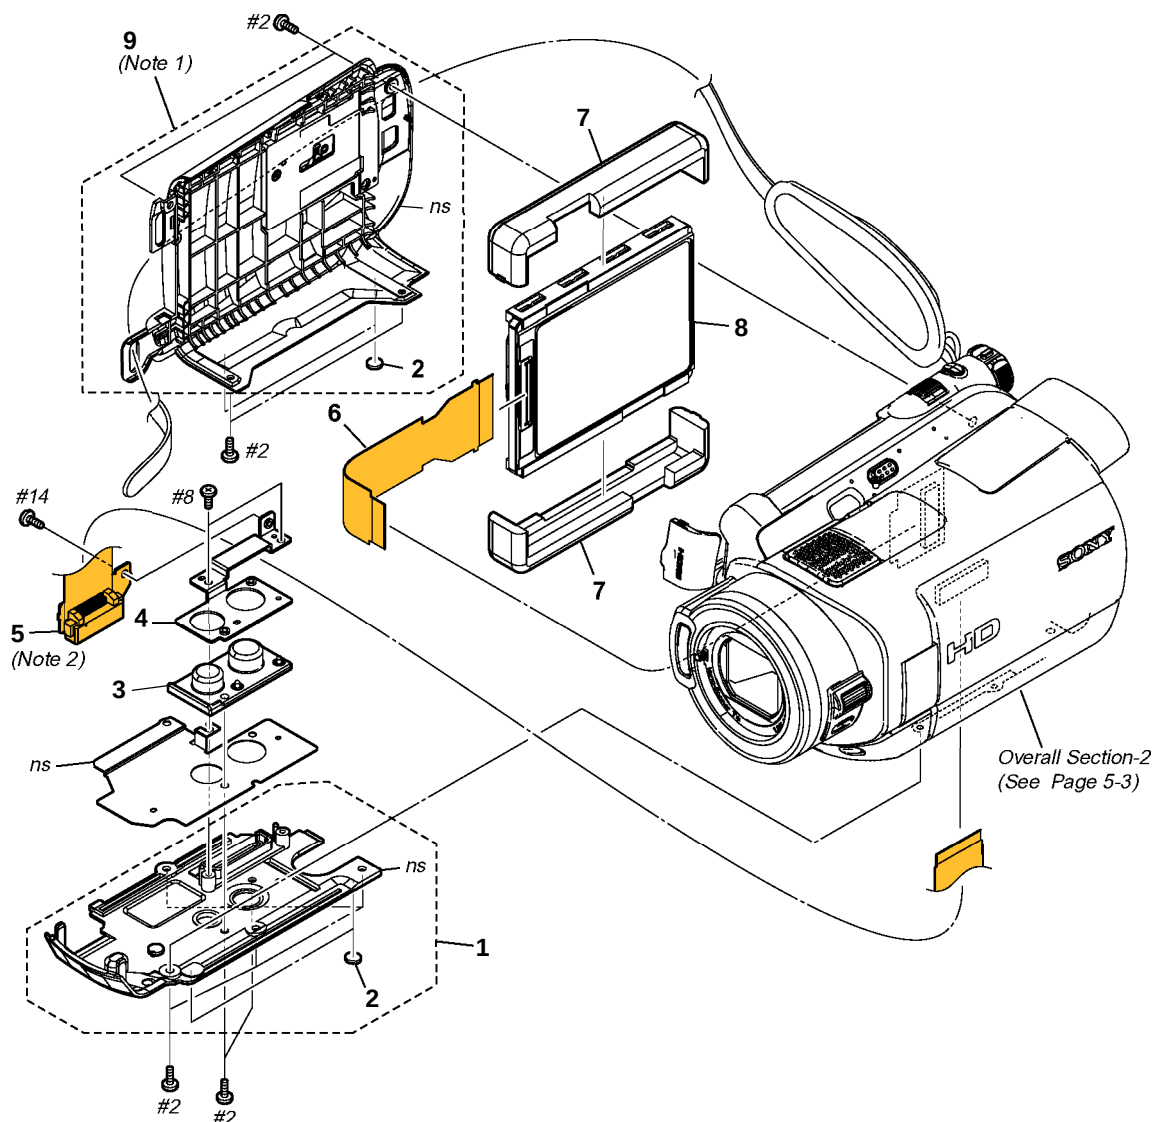

Note 1 : Refer to page 1-13 **⚠**Precaution on replacing the cabinet (G) assy**⚠**when changing the cabinet (G) assy.

Note 1 : キャビネット (G) 組立の交換時は1-13ページの“キャビネット (G) 組立交換時の注意”を参照してください。

Note 2 : Be sure to read **⚠**HELP**⚠**when attach the FP-718 flexible board.

Note 2 : FP-718フレキシブル基板取付時は“HELP”を必ずお読みください。

Ref. No.	Part No.	Description
1	A-1317-545-A	CABINET (SERVICE), BOTTOM
2	2-589-376-01	FOOT (395), RUBBER
* 3	3-213-064-01	SCREW, TRIPOD
* 4	3-213-066-01	FRAME, BOTTOM CABINET
5	A-1274-040-A	FP-718 FLEXIBLE BOARD, COMPLETE (Note 2)
6	A-1202-561-A	FP-515 FLEXIBLE BOARD, COMPLETE
7	2-697-545-01	DAMPER, DM
8	1-797-659-11	HDD (MK6008GAH-60GB) (SR7/SR7E)


Ref. No.	Part No.	Description
8	1-797-808-11	HDD (MK4009GAL-40GB) (SR5/SR5E)
8	1-797-867-11	HDD (MK1011GAH-100GB) (SR5C/SR8/SR8E)
9	(Note 1)	CABINET (G) ASSY
#2	2-635-562-31	SCREW (M1.7) (Black)
#8	3-078-890-01	SCREW, TAPPING (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. OVERALL SECTION-2

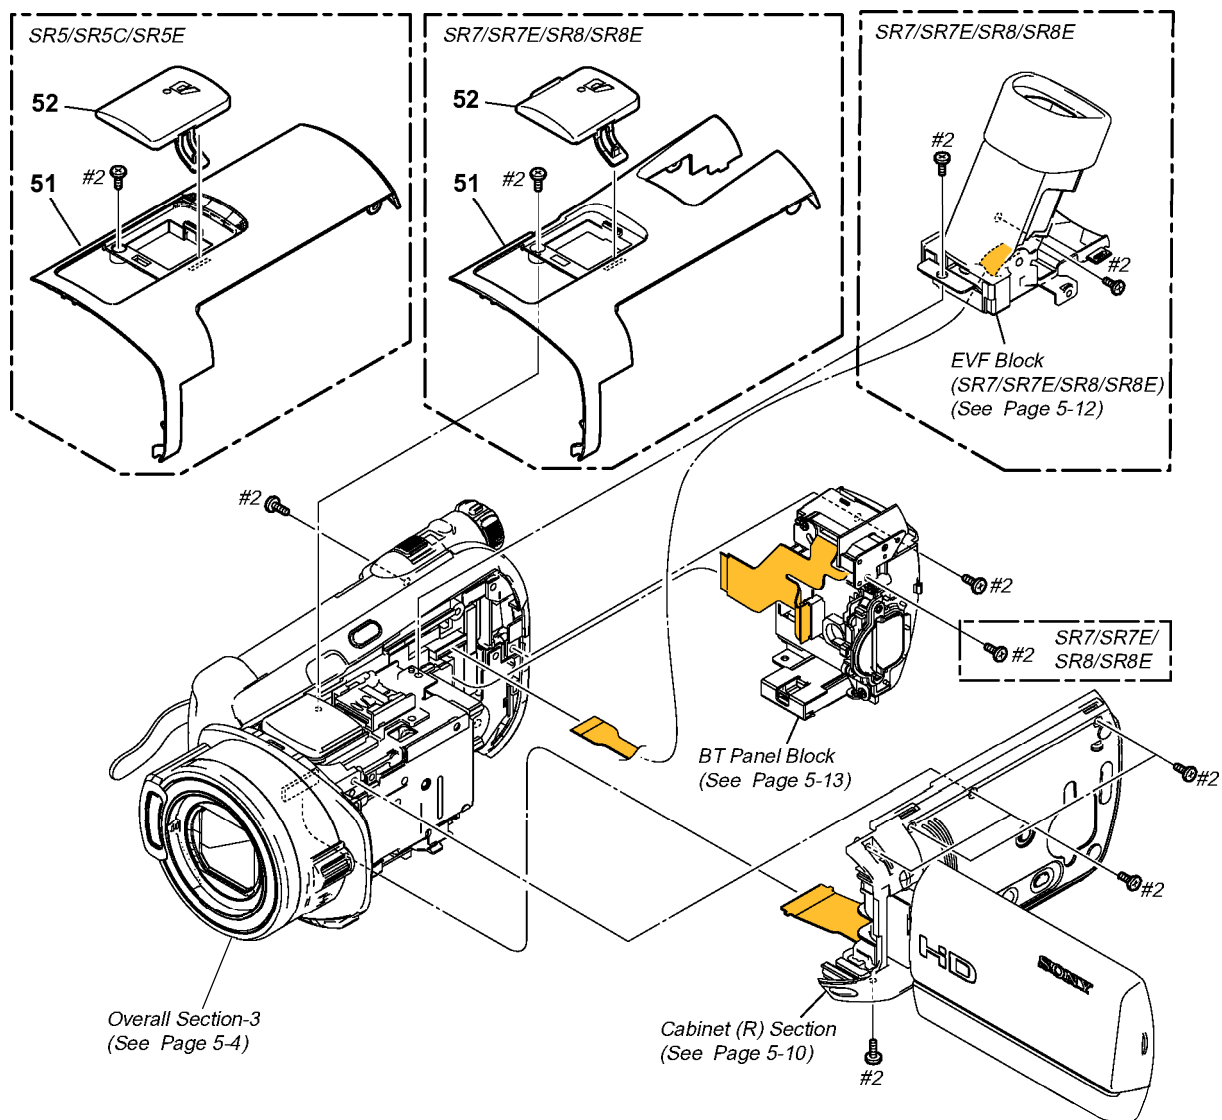

Ref. No.	Part No.	Description
51	3-212-977-01	CABINET (T (255)) (SR7:J)
51	3-212-977-11	CABINET (T (255)) (SR7:US, CND, E, KR, JE/ SR7E/SR8:US, CND, E, KR, JE/SR8E)
51	3-212-977-21	CABINET (T (255)) (SR8:J)
51	X-2178-757-1	CABINET (T (253)) ASSY (SR5/SR5C/SR5E)
52	X-2178-751-1	COVER (255C) ASSY, SHOE (SR7:J)


Ref. No.	Part No.	Description
52	X-2178-752-1	COVER (255B) ASSY, SHOE (SR7:US, CND, E, KR, JE/SR7E/SR8/SR8E)
52	X-2178-753-1	COVER (253) ASSY, SHOE (SR5/SR5C/SR5E)
#2	2-635-562-31	SCREW (M1.7) (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. OVERALL SECTION-3

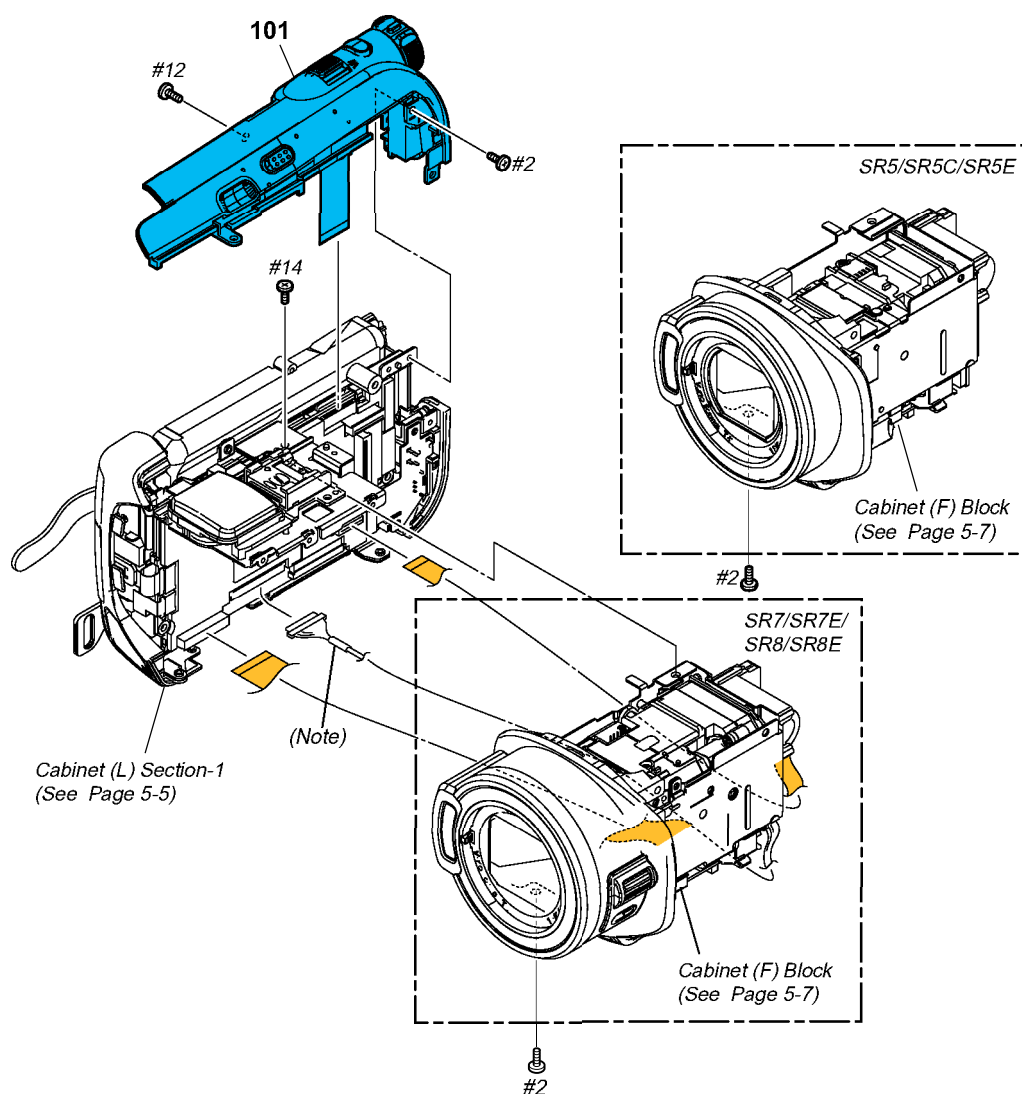

Note: Refer to page 2-1 Note for disconnection the harness when changing the harness.

Note: HARNESS (COAXIAL CABLE) の交換時は2-1ページ Note for disconnection the harnessを参照して下さい。

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
101	1-480-164-11	SWITCH BLOCK, CONTROL (PS25500) (SR7:J/SR8:J)	#2	2-635-562-31	SCREW (M1.7) (Black)
101	1-480-164-21	SWITCH BLOCK, CONTROL (PS25500) (SR7:US, CND, E, KR, JE/SR7E/SR8:US, CND, E, KR, JE/SR8E)	#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
101	1-480-164-41	SWITCH BLOCK, CONTROL (PS25500) (SR5/SR5C/SR5E)	#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. CABINET (L) SECTION-1

ns: not supplied

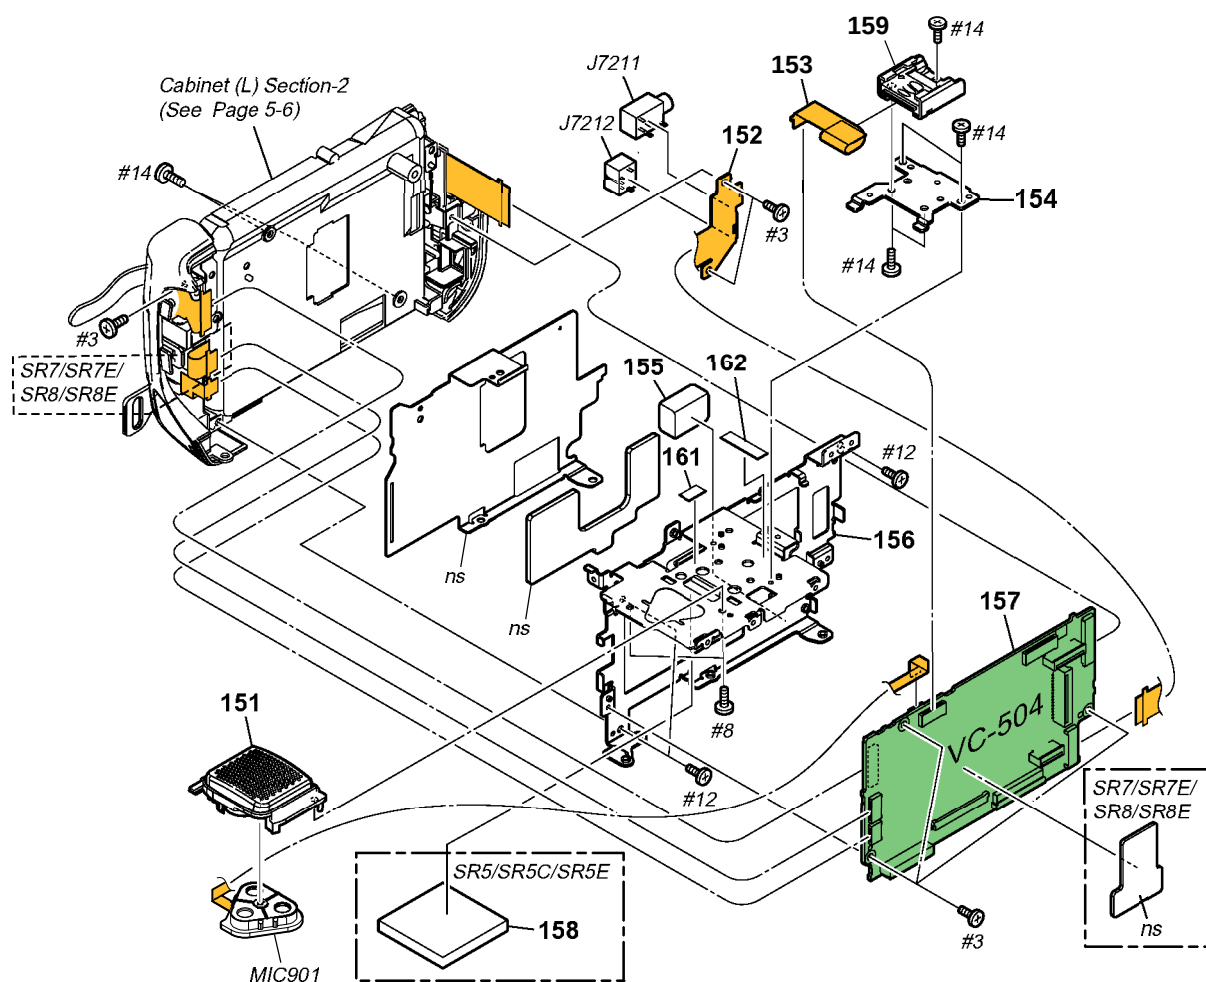

¥Refer to page 5-1 for mark Δ .

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
151	X-2178-754-1	HOLDER ASSY, MICROPHONE (SR7:J)	157	A-1274-789-A	VC-504 BOARD, COMPLETE (SREVICE)
151	X-2178-755-1	HOLDER (255B) ASSY, MICROPHONE (SR7:US, CND, E, KR, JE/SR7E/SR8/SR8E)			(SR5E)
151	X-2178-756-1	HOLDER (253) ASSY, MICROPHONE (SR5/SR5C/SR5E)	* 158	3-214-816-01	CUSHION (253), SILENCE (SR5/SR5C/SR5E)
152	1-873-196-11	FP-721 FLEXIBLE BOARD	159	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
153	1-873-200-11	FP-725 FLEXIBLE BOARD	* 161	3-269-692-01	SHEET (SMALL), ABSORBING
			* 162	3-269-691-01	SHEET (LARGE), ABSORBING
154	3-212-974-01	FRAME, SHOE	J7211	1-793-995-21	JACK, SUPER SMALL TYPE (REMOTE)
* 155	2-673-770-01	GASKET (D)	Δ J7212	1-815-792-11	CONNECTOR, DC-IN (7.2V) (DC IN)
156	3-212-973-01	FRAME, MAIN	MIC901	1-542-711-31	MICROPHONE UNIT
157	A-1274-786-A	VC-504 BOARD, COMPLETE (SREVICE) (SR7/SR8)	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
157	A-1274-787-A	VC-504 BOARD, COMPLETE (SREVICE) (SR7E/SR8E)	#8	3-078-890-01	SCREW, TAPPING (Silver)
157	A-1274-788-A	VC-504 BOARD, COMPLETE (SREVICE) (SR5/SR5C)	#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
			#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. CABINET (L) SECTION-2

ns: not supplied

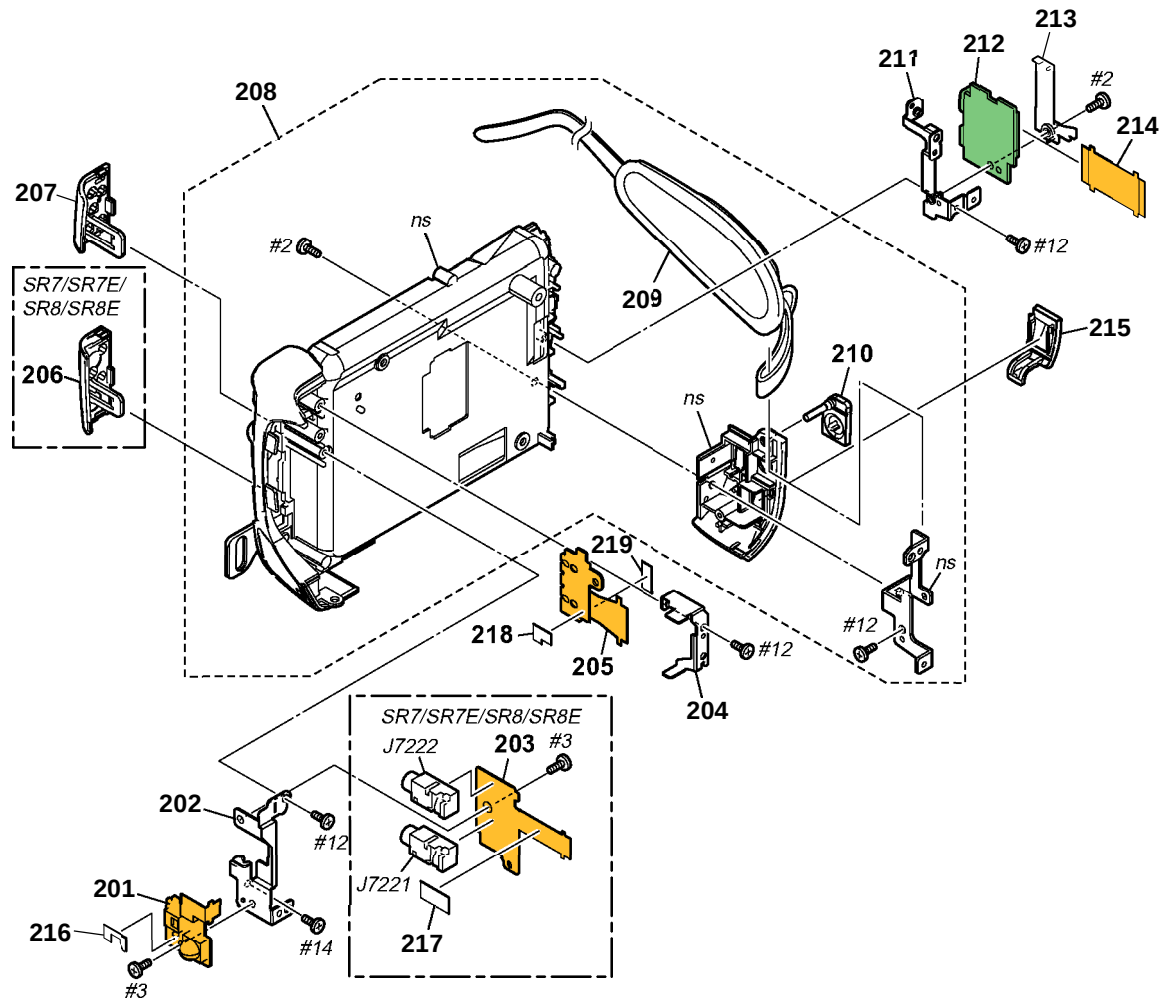

Ref. No.	Part No.	Description
201	A-1274-042-A	FP-729 FLEXIBLE BOARD, COMPLETE
* 202	3-213-057-01	FRAME (F), JACK
203	1-873-197-11	FP-722 FLEXIBLE BOARD (SR7/SR7E/SR8/SR8E)
* 204	3-213-058-01	FRAME (HDMI), JACK
205	A-1274-041-A	FP-719 FLEXIBLE BOARD, COMPLETE
206	X-2178-750-1	COVER (MICHP) ASSY, JACK (SR7/SR7E/SR8/SR8E)
207	X-2178-749-1	COVER (HDMI) ASSY, JACK
208	X-2178-739-1	CABINET (L (255)) ASSY (SR7/SR7E/SR8/SR8E)
208	X-2178-740-1	CABINET (L (253)) ASSY (SR5/SR5C/SR5E)
209	2-664-928-31	BELT, GRIP
210	3-213-124-01	COVER (REMOTE), JACK
* 211	3-213-059-01	FRAME (R), JACK
212	A-1274-034-A	JK-342 BOARD, COMPLETE


Ref. No.	Part No.	Description
* 213	3-213-060-01	RETAINER, D TERMINAL
214	1-873-201-11	FP-726 FLEXIBLE BOARD
215	3-213-160-01	COVER (DC), JACK
* 216	3-269-696-01	SHEET, TALLY LIGHT INTERCEPTION
* 217	3-269-693-01	GUARD, MIC FLEXIBLE (SR7/SR7E/SR8/SR8E)
* 218	3-269-695-01	CUSHION (REAR), HDMI
* 219	3-269-694-01	CUSHION (FRONT), HDMI
J7221	1-569-950-41	JACK (SMALL TYPE) (HEADPHONE) (SR7/SR7E/SR8/SR8E)
J7222	1-691-737-41	JACK (SMALL TYPE) (MIC (PLUG IN POWER)) (SR7/SR7E/SR8/SR8E)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. CABINET (F) BLOCK

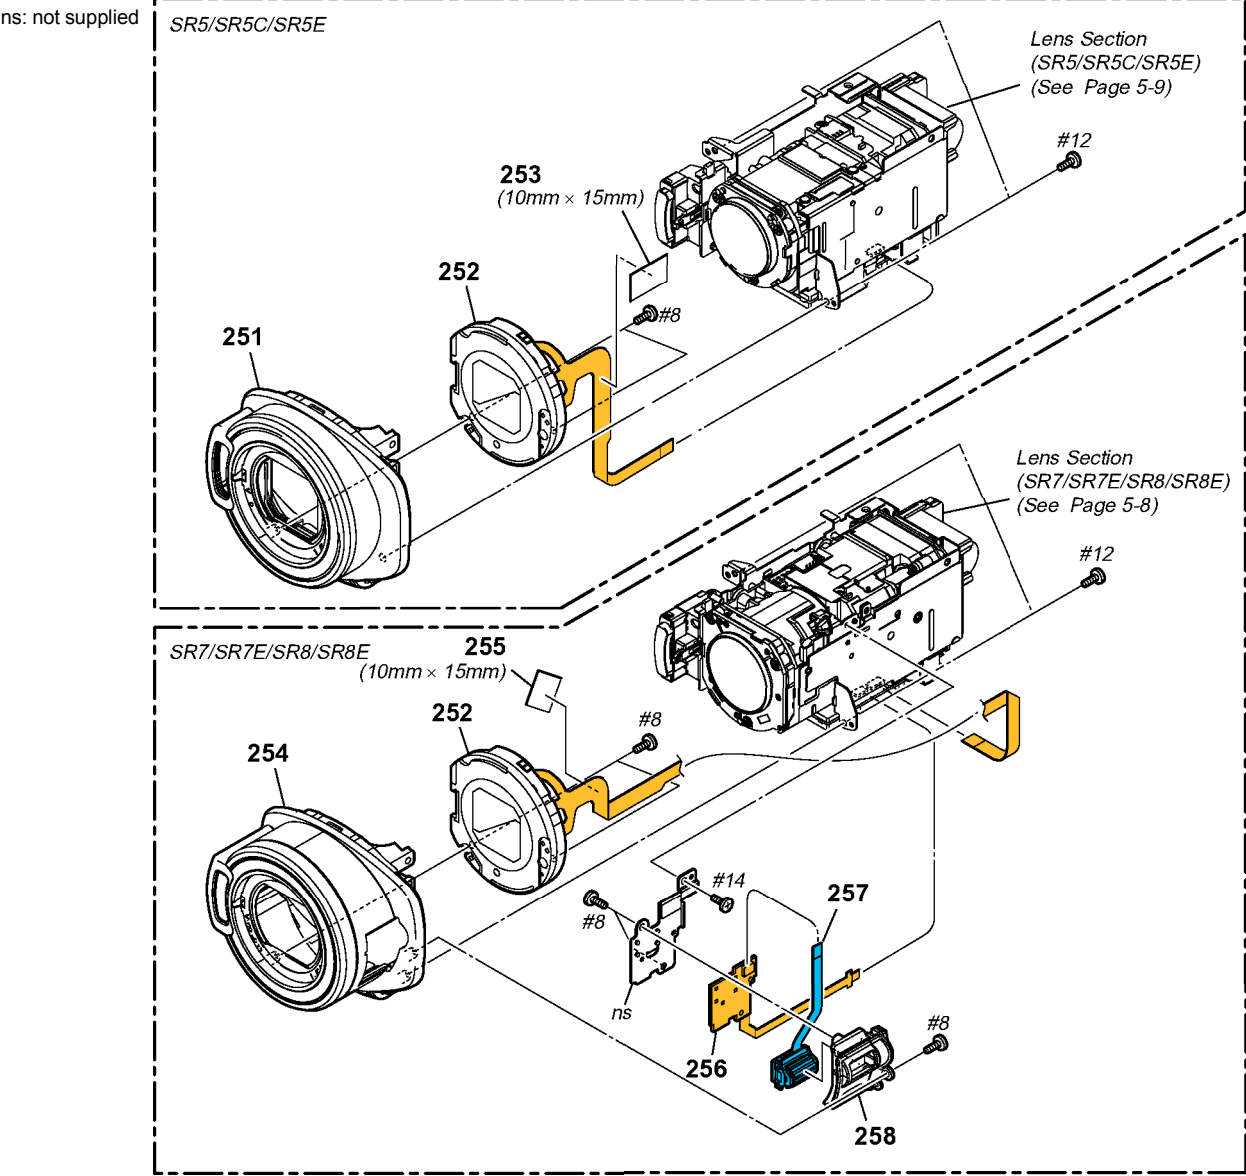

CAUTION :
For the part of 253: TAPE AS (3-079-115-01) or 255: TAPE (A (2/3)) (2-676-475-01), cut NON WOVEN (T0.25) (3-076-631-01) into the desired length and use it.

CAUTION :
253: TAPE AS (3-079-115-01)、255: TAPE (A(2/3)) (2-676-475-01)は、ヒメロン T0.25 (3-076-631-01) を切って使用して下さい。

Ref. No.	Part No.	Description
251	X-2178-738-1	CABINET (F (253)) ASSY (SR5/SR5C/SR5E)
252	A-1217-971-A	LENS BARRIER UNIT
253	CAUTION	TAPE AS (SR5/SR5C/SR5E)
254	X-2178-735-1	CABINET (F (255C)) ASSY (SR7:J)
254	X-2178-736-1	CABINET (F (255B)) ASSY (SR8:J)
254	X-2178-737-1	CABINET (F (255B)) ASSY (E) (SR7:US, CND, E, KR, JE/SR7E/SR8:US, CND, E, KR, JE/SR8E)

Ref. No.	Part No.	Description
255	CAUTION	TAPE (A(2/3)) (SR7/SR7E/SR8/SR8E)
256	A-1274-039-A	FP-717 FLEXIBLE BOARD, COMPLETE (SR7/SR7E/SR8/SR8E)
257	1-479-004-21	SWITCH BLOCK, CONTROL (AD11800) (SR7/SR7E/SR8/SR8E)
258	X-2178-734-1	BASE ASSY, AD (SR7/SR7E/SR8/SR8E)
#8	3-078-890-01	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#14	2-599-475-11	SCREW (M1.7) (Silver) (SR7/SR7E/SR8/SR8E)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. LENS SECTION (SR7/SR7E/SR8/SR8E)

ns: not supplied

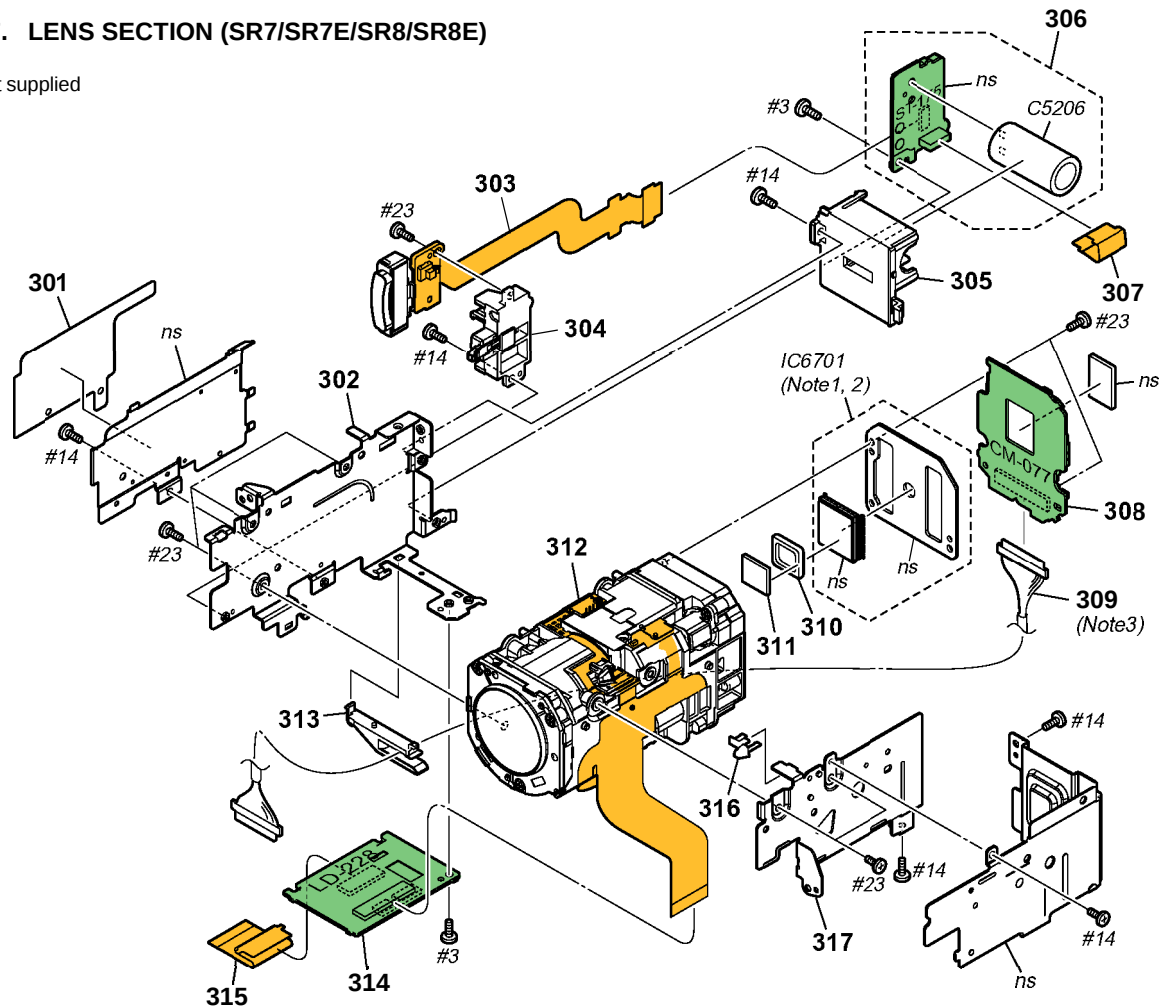

Note 1: IC6701 is not supplied, but this is included in CMOS block assy.

Note 1: IC6701は交換対象ではありませんが、CMOS部組に含まれます。

Note 2: Be sure to read Ⓞprecautions for Replacement of ImagerⓄon page 4-3 when changing the imager.

Note 2: イメージャの交換時は4-4ページの「イメージャ交換時の注意」を必ずお読みください。

Note 3: Refer to page 2-1 ⓄNote for disconnection the harnessⓄwhen changing the harness.

Note 3: HARNESS (COAXIAL CABLE) の交換時は2-1ページ「Note for disconnection the harness」を参照して下さい。

¥Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
* 301	3-213-042-01	SHEET (255), VC INSULATING
* 302	3-213-033-01	FRAME (L (255)), LENS
△ 303	1-480-263-11	FLASH UNIT
304	X-2176-859-1	HOLDER ASSY, ST
* 305	3-213-035-01	HOLDER, CAPACITOR
306	A-1274-038-A	ST-175 BOARD, COMPLETE
307	1-873-199-11	FP-724 FLEXIBLE BOARD
308	A-1237-309-A	CM-077 BOARD, COMPLETE (SERVICE)
309	1-965-256-11	HARNESS (COAXIAL CABLE) (Note3)
310	2-698-010-01	RUBBER (1190), SEAL
311	1-788-558-11	FILTER BLOCK, OPTICAL

Ref. No.	Part No.	Description
312	A-1227-735-A	LSV-1190A (SERVICE)
* 313	3-213-036-01	CLAMP, HARNESS
314	A-1274-032-A	LD-228 (FIR) BOARD, COMPLETE
315	1-873-198-11	FP-723 FLEXIBLE BOARD
* 316	3-213-037-01	GUARD, BARRIER FLEXIBLE
* 317	3-213-034-01	FRAME (R (255)), LENS
△*C5206	1-114-393-11	CAP. ELECT 70MF 330V
IC6701	A-1209-688-A	CMOS BLOCK ASSY (CMOS IMAGER)(Note1, 2)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#14	2-599-475-11	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-8. LENS SECTION (SR5/SR5C/SR5E)

ns: not supplied

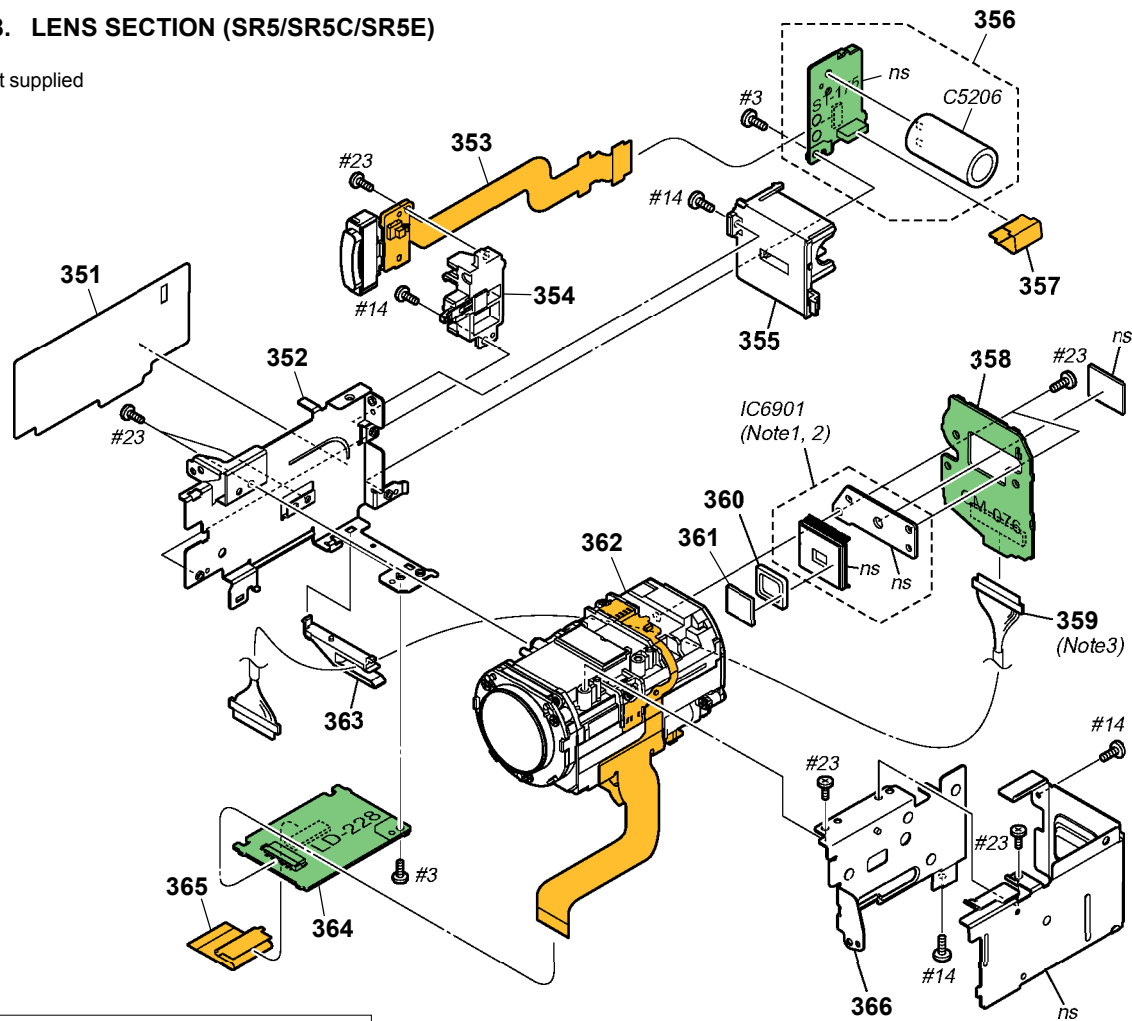

Note 1: IC6901 is not supplied, but this is included in CMOS block assy.

Note 1: IC6901は交換対象ではありませんが、CMOS部組に含まれます。

Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

Note 2: イメージャの交換時は4-4ページの「イメージャ交換時の注意」を必ずお読みください。

Note 3: Refer to page 2-1 "Note for disconnection the harness" when changing the harness.

Note 3: HARNESS (COAXIAL CABLE) の交換時は2-1ページ "Note for disconnection the harness" を参照して下さい。

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
* 351	3-213-045-01	SHEET (253), VC INSULATING
* 352	3-213-043-01	FRAME (L (253)), LENS
△ 353	1-480-263-11	FLASH UNIT
354	X-2176-859-1	HOLDER ASSY, ST
* 355	3-213-035-01	HOLDER, CAPACITOR
356	A-1274-038-A	ST-175 BOARD, COMPLETE
357	1-873-199-11	FP-724 FLEXIBLE BOARD
358	A-1231-932-A	CM-076 BOARD, COMPLETE
359	1-965-258-71	HARNESS (COAXIAL CABLE) (Note3)
360	2-629-086-01	RUBBER (871), SEAL
361	1-788-382-11	OPTICAL FILTERBLOCK (OFB-03-26)

Ref. No.	Part No.	Description
362	8-848-825-01	DEVICE, LENS LSV-942C
* 363	3-213-036-01	CLAMP, HARNESS
364	A-1274-033-A	LD-228 (FIY) BOARD, COMPLETE
365	1-873-198-11	FP-723 FLEXIBLE BOARD
* 366	3-213-044-01	FRAME (R (253)), LENS
△ *C5206	1-114-393-11	CAP, ELECT 70MF 330V
IC6901	A-1172-742-A	CMOS BLOCK ASSY (CMOS IMAGER)(Note1, 2)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#14	2-599-475-11	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-9. CABINET (R) SECTION

ns: not supplied

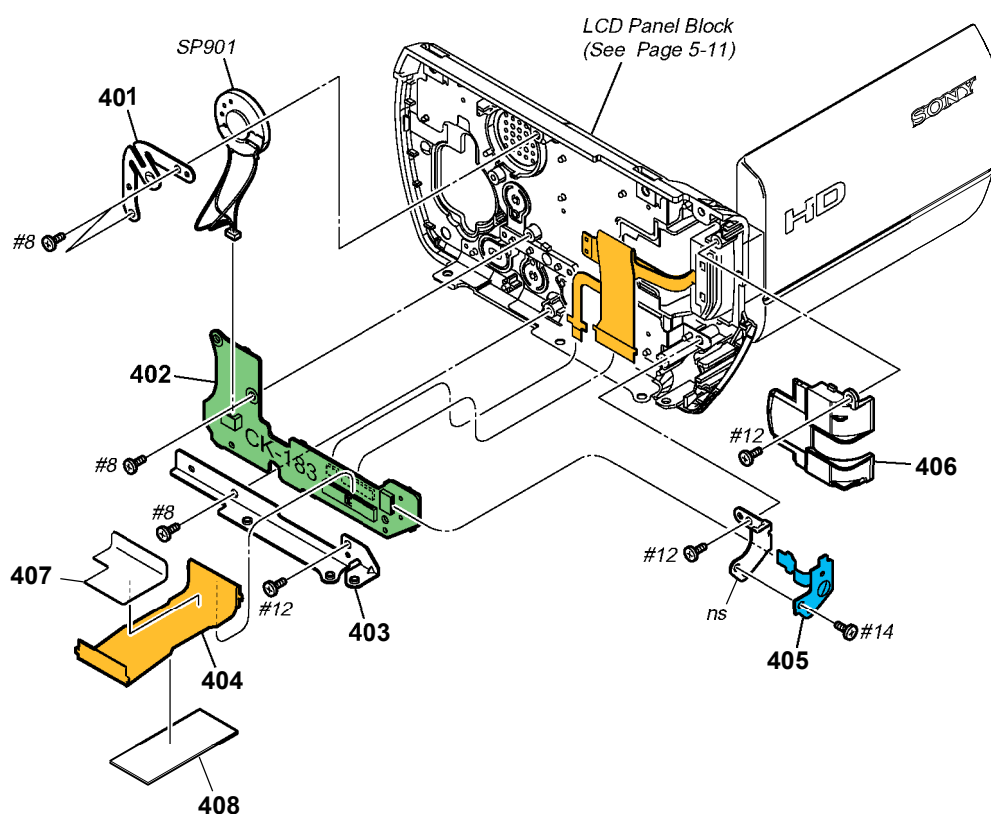

Ref. No.	Part No.	Description
401	3-213-049-01	FRAME, SP RETAINER
402	A-1274-036-A	CK-183 BOARD, COMPLETE
* 403	3-213-050-01	FRAME, CABINET (R)
404	1-873-203-11	FP-727 FLEXIBLE BOARD
405	1-480-165-11	SWITCH BLOCK, CONTROL (SB25500)
406	3-213-048-01	COVER, HINGE BLIND

Ref. No.	Part No.	Description
* 407	3-270-566-01	SHEET, WATERPROOF
* 408	3-218-521-01	SHEET, FLEXIBLE ELECTROSTATIC
SP901	1-825-262-82	LOUD SPEAKER (1.6CM)
#8	3-078-890-01	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-10. LCD PANEL BLOCK

ns: not supplied

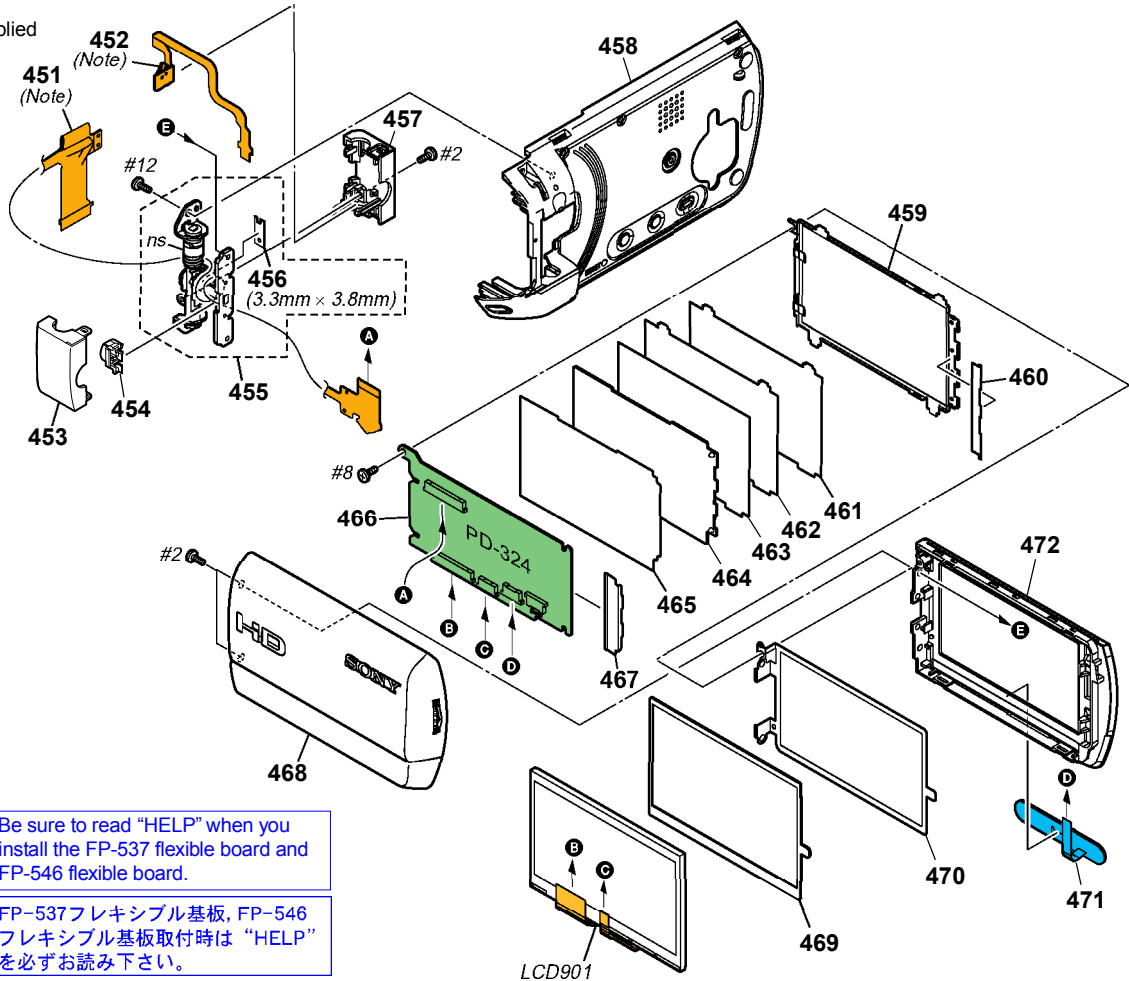

Note : Be sure to read "HELP" when you install the FP-537 flexible board and FP-546 flexible board.

Note : FP-537フレキシブル基板, FP-546フレキシブル基板取付時は "HELP" を必ずお読み下さい。

CAUTION :
For the part of 456: SHEET, HINGE ADHESIVE (3-089-465-01), cut SHEET, ADHESIVE (2-649-300-01) into the desired length and use it.

CAUTION :
456: ヒンジ接着紙 (3-089-465-01) は、接着紙 (2-649-300-01) を切って使用して下さい。


Ref. No.	Part No.	Description
451	1-870-992-11	FP-537 FLEXIBLE BOARD (Note)
452	A-1239-340-A	FP-546 FLEXIBLE BOARD, COMPLETE (Note)
453	3-213-051-01	COVER (O), PANEL HINGE (SR7:J)
453	3-213-051-11	COVER (O), PANEL HINGE (SR7:US, CND, E, KR, JE/SR7E/SR8/SR8E)
453	3-213-051-21	COVER (O), PANEL HINGE (SR5/SR5C/SR5E)
* 454	3-096-413-01	CLAMP, FLEXIBLE
455	X-2108-475-1	HINGE ASSY
456	CAUTION	SHEET, HINGE ADHESIVE
457	3-213-052-01	COVER (U), PANEL HINGE
458	X-2178-741-1	CABINET (R) ASSY (E) (EXCEPT SR7:J/SR8:J)
458	X-2178-742-1	CABINET (R) ASSY (SR7:J/SR8:J)
459	2-887-999-01	FRONT FRAME (2.7J)
460	2-666-807-02	AG SHEET (2.7)
461	2-666-802-01	PRISM SHEET V (2.7)
462	2-666-803-01	PRISM SHEET H (2.7)
463	2-666-804-01	DIFFUSION SHEET (2.7)

Ref. No.	Part No.	Description
464	2-666-801-01	LIGHT GUIDE (2.7)
465	2-894-347-01	REFLECTION SHEET (2.7J)
466	A-1242-019-A	PD-324 BOARD, COMPLETE
* 467	2-638-780-01	CLIP
468	X-2178-743-1	CABINET (C (255C)) ASSY, P (SR7:J)
468	X-2178-744-1	CABINET (C (255B)) ASSY, P (SR7:US, CND, E, KR, JE/SR7E)
468	X-2178-745-1	CABINET (C (253)) ASSY, P (SR5/SR5C/SR5E)
468	X-2179-066-1	CABINET (C (SR8B)) ASSY, P (SR8/SR8E)
* 469	2-672-277-01	CUSHION, TP
* 470	3-213-054-01	FRAME, PANEL GROUND
471	1-479-995-11	KEY BLOCK, CONTROL (SB22200)
472	3-213-053-01	CABINET (M), P (SR7:J/SR8:J)
472	3-213-053-11	CABINET (M), P (EXCEPT SR7:J/SR8:J)
LCD901	A-1202-059-A	TP BLOCK ASSY (27ESTMG07)
#2	2-635-562-31	SCREW (M1.7) (Black)
#8	3-078-890-01	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-11. EVF BLOCK (SR7/SR7E/SR8/SR8E)

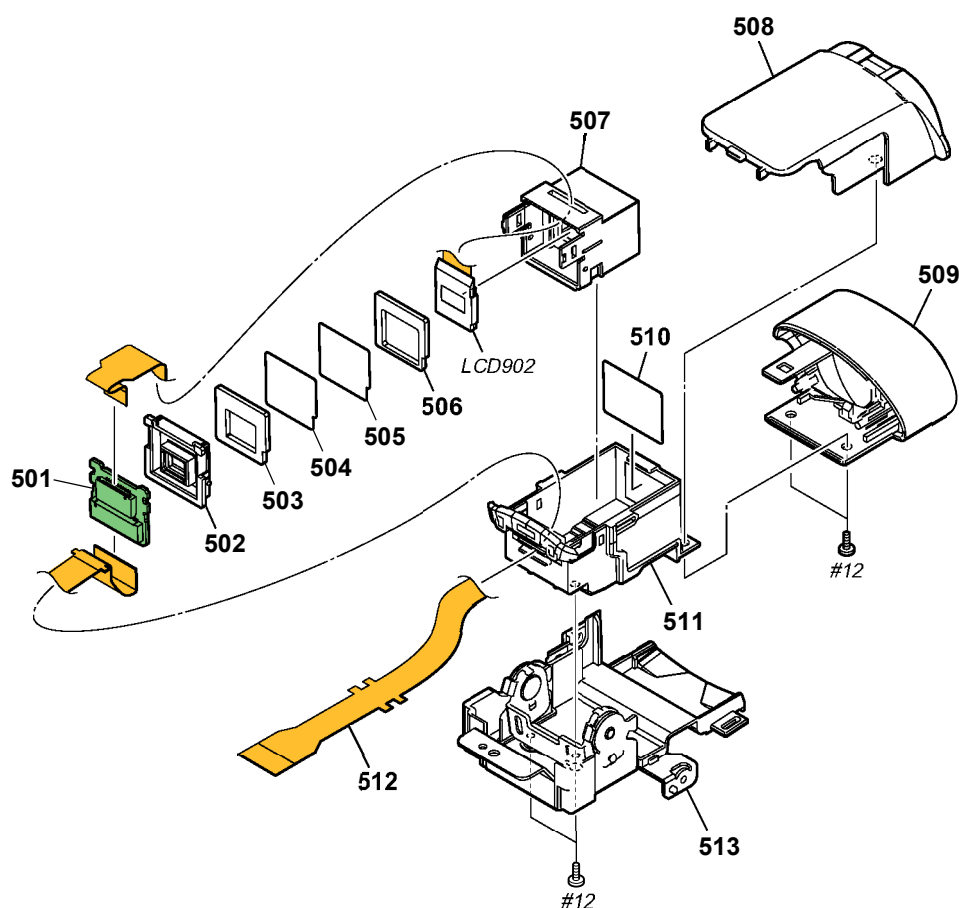

Ref. No.	Part No.	Description
501	A-1274-035-A	BL-013 BOARD, COMPLETE
502	2-664-672-01	GUIDE, LAMP
* 503	2-638-819-01	CUSHION, LCD
* 504	2-638-818-01	ILLUMINATOR
* 505	2-638-816-01	PLATE (TFT), DEFLECTION
506	2-664-671-01	SPACER, LCD
* 507	2-699-236-01	CABINET (222), INNER
508	3-213-061-01	CABINET (UPPER), VF (SR7:J)
508	3-213-061-11	CABINET (UPPER), VF (SR7:US, CND, E, KR, JE/SR7E/SR8/SR8E)


Ref. No.	Part No.	Description
509	X-2178-733-1	EYE CUP ASSY
* 510	2-668-134-01	PANEL (CF), POLARIZATION
511	3-213-062-01	CABINET (LOWER), VF
512	1-873-204-11	FP-728 FLEXIBLE BOARD
513	X-2178-732-1	BASE ASSY, VF TILT
LCD902	8-753-241-14	LCX076AKE-1
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-12. BT PANEL BLOCK

ns: not supplied

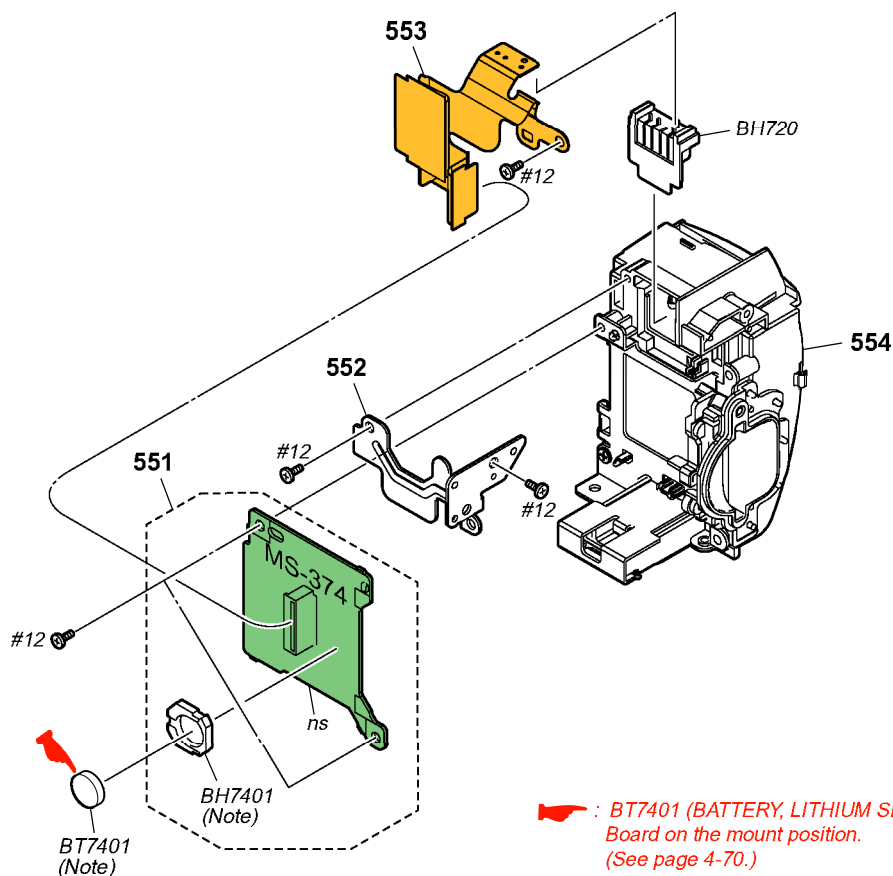

Note: Replace the battery holder (BH7401) together when replacing the lithium battery (BT7401) on MS-374 board.
(The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: MS-374基板的リチウム電池(BT7401)を交換する場合はバッテリーホルダ(BH7401)も同時に新品に交換して下さい。
(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着してください。

¥Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
551	A-1274-037-A	MS-374 BOARD, COMPLETE
* 552	3-213-063-01	FRAME, BT TERMINAL
553	1-873-195-11	FP-720 FLEXIBLE BOARD
554	X-2178-731-1	PANEL ASSY, BT

Ref. No.	Part No.	Description
△ BH720	1-780-064-21	BATTERY TERMINAL BOARD
△ BH7401	1-756-615-31	HOLDER, BATTERY (Note)
△ BT7401	1-528-900-31	BATTERY, LITHIUM SECONDARY (Note)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1274-035-A	BL-013 BOARD, COMPLETE (SR7/SR7E/SR8/SR8E)

< CAPACITOR >

C5901	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5902	1-165-908-11	CERAMIC CHIP	1uF	10%	10V

< CONNECTOR >

* CN5901	1-816-648-51	FFC/FPC CONNECTOR (LIF) 20P
* CN5902	1-817-560-71	CONNECTOR, FPC (ZIP) 21P

< DIODE >

* D5901	6-501-591-01	DIODE NESW007AT-T099 (EVF BACKLIGHT)
D5902	6-500-941-01	DIODE MAZS056008S0

< COMPOSITION CIRCUIT BLOCK >

RB5901	1-234-380-21	RES, NETWORK	47K (1005X4)
--------	--------------	--------------	--------------

A-1274-036-A	CK-183 BOARD, COMPLETE
--------------	------------------------

< CONNECTOR >

* CN6001	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P
* CN6002	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P
CN6003	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
* CN6004	1-816-650-51	FFC/FPC CONNECTOR (LIF) 24P
* CN6005	1-819-572-51	CONNECTOR, FFC/FPC (LIF) 30P

< DIODE >

D6008	8-719-056-54	DIODE MAZS068008S0
-------	--------------	--------------------

< RESISTOR >

R6001	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R6002	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R6003	1-208-720-11	METAL CHIP	36K	0.5%	1/16W

< SWITCH >

S6001	1-786-515-21	SWITCH, TACTILE (RESET)
S6002	1-771-138-21	SWITCH, KEY BOARD (EASY)
S6003	1-771-138-21	SWITCH, KEY BOARD (DISP/BATT INFO)
S6004	1-771-138-21	SWITCH, KEY BOARD (PLAY)
S6005	1-786-148-11	SWITCH, PUSH (1 KEY) (PANEL OPEN/CLOSE)
S6006	1-771-138-21	SWITCH, KEY BOARD (FILM ROLL INDEX)

Electrical parts list of the CM-076 and CM-077 boards is not shown.
Pages 5-15 to 5-16 are not shown.

							FP-515	FP-546
FP-717	FP-718	FP-719	FP-720	FP-721	FP-722	FP-729	JK-342	

Ref. No.	Part No.	Description
	A-1202-561-A	FP-515 FLEXIBLE BOARD, COMPLETE *****
		< RESISTOR >
R8401	1-218-929-11	RES-CHIP 10 5% 1/16W
R8402	1-218-929-11	RES-CHIP 10 5% 1/16W
R8403	1-218-929-11	RES-CHIP 10 5% 1/16W
R8404	1-218-929-11	RES-CHIP 10 5% 1/16W
R8405	1-218-929-11	RES-CHIP 10 5% 1/16W
R8406	1-218-929-11	RES-CHIP 10 5% 1/16W
R8407	1-218-929-11	RES-CHIP 10 5% 1/16W
R8408	1-218-929-11	RES-CHIP 10 5% 1/16W
R8409	1-218-929-11	RES-CHIP 10 5% 1/16W
R8410	1-218-929-11	RES-CHIP 10 5% 1/16W
R8411	1-218-929-11	RES-CHIP 10 5% 1/16W
R8412	1-218-929-11	RES-CHIP 10 5% 1/16W
R8413	1-218-929-11	RES-CHIP 10 5% 1/16W
R8414	1-218-929-11	RES-CHIP 10 5% 1/16W
R8415	1-218-929-11	RES-CHIP 10 5% 1/16W
R8416	1-218-929-11	RES-CHIP 10 5% 1/16W
	A-1239-340-A	FP-546 FLEXIBLE BOARD, COMPLETE *****
		< SWITCH >
S001	1-786-680-21	SWITCH, DETECTION (SMD) (PANEL REVERSE DETECT)
	A-1274-039-A	FP-717 FLEXIBLE BOARD, COMPLET (SR7/SR7E/SR8/SR8E) *****
		< CONNECTOR >
* CN7171	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P
		< SWITCH >
S7171	1-786-157-31	TACTILE SWITCH (MANUAL)
	A-1274-040-A	FP-718 FLEXIBLE BOARD, COMPLETE *****
		(CN7181 is not supplied, but this is included in the FP-718 flexible complete board.)
		< CONNECTOR >
CN7181	(Not supplied)	CONNECTOR, MULTIPLE (SOCKET)
	A-1274-041-A	FP-719 FLEXIBLE BOARD, COMPLETE *****
		(CN7191 is not supplied, but this is included in the FP-719 flexible complete board.)
		< CONNECTOR >
CN7191	(Not supplied)	CONNECTOR, HDMI (HDMI)

Ref. No.	Part No.	Description
	1-873-195-11	FP-720 FLEXIBLE BOARD ***** (BH720 is not included in the FP-720 flexible board.)
		< BATTERY TERMINAL >
△ BH720	1-780-064-21	BATTERY TERMINAL BOARD
	1-873-196-11	FP-721 FLEXIBLE BOARD ***** (J7211 and J7212 are not included in the FP-721 flexible board.)
		< JACK >
J7211	1-793-995-21	JACK, SUPER SMALL TYPE (REMOTE)
△ J7212	1-815-792-11	CONNECTOR, DC-IN (7.2V) (DC IN)
	1-873-197-11	FP-722 FLEXIBLE BOARD (SR7/SR7E/SR8/SR8E) ***** (J7221 and J7222 are not included in the FP-722 flexible board.)
		< JACK >
J7221	1-569-950-41	JACK (SMALL TYPE) (HEADPHONE)
J7222	1-691-737-41	JACK (SMALL TYPE) (MIC (PLUG IN POWER))
	A-1274-042-A	FP-729 FLEXIBLE BOARD, COMPLETE *****
		< CAPACITOR >
C7291	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V
		< DIODE >
D7291	6-500-512-01	DIODE CL-330IRS-X-TU (NIGHT SHOT)
D7292	8-719-064-07	DIODE SML-310LTT86 (TALLY)
		< IC >
IC7291	6-600-163-01	IC RS-770
	A-1274-034-A	JK-342 BOARD, COMPLETE *****
		< CAPACITOR >
C7301	1-164-933-11	CERAMIC CHIP 220PF 10% 50V
C7302	1-164-933-11	CERAMIC CHIP 220PF 10% 50V
		< CONNECTOR >
CN7301	1-818-607-12	CONNECTOR, SQUARE TYPE 10P (COMPONENT OUT)
CN7302	1-815-794-13	CONNECTOR (MULTIPLE) (AV OUT)
* CN7303	1-818-087-51	CONNECTOR, FFC/FPC (LIF) 26P
		< DIODE >
D7301	6-500-750-01	DIODE NSAD500H-T1-A
		< FERRITE BEAD >
FB7301	1-400-927-31	BEAD, FERRITE (1005)

• Refer to page 5-1 for mark △.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
FB7302	1-400-927-31	BEAD, FERRITE (1005)
FB7305	1-400-833-21	SMD EMI FERRITE
FB7306	1-400-833-21	SMD EMI FERRITE
FB7307	1-400-833-21	SMD EMI FERRITE

FB7308 1-400-833-21 SMD EMI FERRITE

< VARISTOR >

VDR731 1-803-974-11 VARISTOR, CHIP (1608)
VDR732 1-803-974-11 VARISTOR, CHIP (1608)
VDR734 1-803-974-11 VARISTOR, CHIP (1608)

Electrical parts list of the LD-228 board is not shown.
Pages 5-19 to 5-20 are not shown.

Ref. No.	Part No.	Description
	A-1274-037-A	MS-374 BOARD, COMPLETE *****
(BT7401 (lithium secondary battery) is not included in the MS-374 complete board.)		
< BATTERY HOLDER >		
△ BH7401	1-756-615-31	HOLDER, BATTERY (Note)
< BATTERY >		
△ BT7401	1-528-900-31	BATTERY, LITHIUM SECONDARY (Note)
< CAPACITOR >		
C7404	1-100-786-91	TANTAL. CHIP 22uF 20% 6.3V
C7405	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
< CONNECTOR >		
* CN7401	1-779-334-51	CONNECTOR, FFC/FPC 20P
* CN7402	1-819-990-21	MEMORY STICK DUO CONNECTOR 10P
< DIODE >		
D7401	6-501-216-01	DIODE CL-271HR-C-TS (ACCESS)
< FERRITE BEAD >		
FB7401	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7402	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7403	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7404	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
< RESISTOR >		
R7403	1-218-944-11	RES-CHIP 180 5% 1/16W
R7404	1-218-944-11	RES-CHIP 180 5% 1/16W
R7405	1-218-944-11	RES-CHIP 180 5% 1/16W
R7406	1-218-944-11	RES-CHIP 180 5% 1/16W

Note : Replace the battery holder (BH7401) together when replacing the lithium battery (BT7401) on MS-374 board.
(The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note :MS-374基板のリチウム電池(BT7401)を交換する場合はバッテリーホルダ(BH7401)も同時に新品に交換して下さい。
(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着してください。

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Ref. No.	Part No.	Description
	A-1242-019-A	PD-324 BOARD, COMPLETE *****
< CAPACITOR >		
C6101	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6102	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6103	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6105	1-127-895-91	TANTAL. CHIP 22uF 20% 4V
C6107	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C6108	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6109	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C6111	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6112	1-100-786-91	TANTAL. CHIP 22uF 20% 6.3V
C6113	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6114	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6115	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
* C6116	1-112-298-91	CERAMIC CHIP 1uF 10% 16V
* C6117	1-112-298-91	CERAMIC CHIP 1uF 10% 16V
C6119	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C6120	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6121	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6123	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6124	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6125	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6126	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
< CONNECTOR >		
* CN6101	1-785-905-51	FFC/CONNECTOR, FPC (ZIF) 24P
* CN6102	1-794-322-51	FFC/CONNECTOR, FPC (ZIF) 6P
CN6104	1-816-180-71	CONNECTOR, FPC (ZIF) 6P
* CN6105	1-785-905-51	FFC/CONNECTOR, FPC (ZIF) 24P
< DIODE >		
D6105	6-500-941-01	DIODE MAZS056008S0
* D6106	6-501-597-01	DIODE NSSW008DT-T108 (LCD BACKLIGHT)
* D6107	6-501-597-01	DIODE NSSW008DT-T108 (LCD BACKLIGHT)
* D6108	6-501-597-01	DIODE NSSW008DT-T108 (LCD BACKLIGHT)
< FERRITE BEAD >		
FB6101	1-400-331-11	FERRITE, EMI (SMD) (1005)
< IC >		
IC6102	8-753-229-98	IC CXM3006CR-T4
< COIL >		
L6101	1-400-588-11	INDUCTOR 10uH
L6102	1-400-588-11	INDUCTOR 10uH
L6103	1-400-588-11	INDUCTOR 10uH
< TRANSISTOR >		
Q6101	8-729-427-37	TRANSISTOR XP411F-TXE
Q6102	8-729-427-67	TRANSISTOR XP421F-TXE
Q6107	6-550-239-01	TRANSISTOR DTA144EMT2L
Q6108	6-550-234-01	TRANSISTOR UNR32A300LS0
Q6109	6-551-184-01	TRANSISTOR MCH6305-TL-E-S
Q6110	8-729-054-48	TRANSISTOR UP04601008S0
Q6111	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description				
Q6112	8-729-054-49	TRANSISTOR	UP04401008S0			
Q6113	8-729-054-48	TRANSISTOR	UP04601008S0			
< RESISTOR >						
R6101	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	
R6102	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	
R6104	1-218-990-11	SHORT CHIP	0			
R6105	1-218-954-11	RES-CHIP	1.2K	5%	1/16W	
R6109	1-218-975-11	RES-CHIP	68K	5%	1/16W	
R6110	1-218-949-11	RES-CHIP	470	5%	1/16W	
R6112	1-208-934-11	METAL CHIP	91K	0.5%	1/16W	
R6115	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	
R6122	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R6130	1-208-898-11	METAL CHIP	3K	0.5%	1/16W	
R6132	1-218-969-11	RES-CHIP	22K	5%	1/16W	
R6133	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R6134	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	
R6135	1-218-981-81	RES-CHIP	220K	5%	1/16W	
R6136	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	
R6137	1-218-978-11	RES-CHIP	120K	5%	1/16W	
R6138	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R6139	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	
R6140	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	
R6141	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	
R6142	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	
R6143	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R6144	1-211-969-11	METAL CHIP	10	0.5%	1/10W	
R6145	1-218-989-11	RES-CHIP	1M	5%	1/16W	
R6152	1-218-990-11	SHORT CHIP	0			
R6153	1-218-990-11	SHORT CHIP	0			
R6154	1-218-990-11	SHORT CHIP	0			
R6155	1-216-864-11	SHORT CHIP	0			

A-1274-038-A ST-175 BOARD, COMPLETE

< CAPACITOR >

C5201	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5202	1-125-889-11	CERAMIC CHIP	2.2uF	10%	10V
C5203	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C5204	1-163-001-11	CERAMIC CHIP	220PF	10%	50V
△*C5206	1-114-393-11	CAP, ELECT	70MF		330V

< CONNECTOR >

* CN5201	1-816-647-51	FFC/FPC CONNECTOR (LIF) 18P
CN5202	1-779-331-51	CONNECTOR, FFC/FPC 14P

< DIODE >

D5201	6-501-096-01	DIODE CRF02 (TE85R)
△D5202	6-501-096-01	DIODE CRF02 (TE85R)

< IC >

△IC5201	6-707-554-01	IC TPS65552DGQR
---------	--------------	-----------------

< COIL >

L5201	1-412-027-11	INDUCTOR	2.2uH
-------	--------------	----------	-------

Ref. No.	Part No.	Description				
< TRANSISTOR >						
△*Q5201	6-551-447-01	TRANSISTOR	TIG022TS-S-TL-E			
< RESISTOR >						
R5201	1-208-947-11	METAL CHIP	330K	0.5%	1/16W	
R5202	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	
R5203	1-216-864-11	SHORT CHIP	0			
R5204	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R5205	1-216-809-11	METAL CHIP	100	5%	1/10W	
R5206	1-218-989-11	RES-CHIP	1M	5%	1/16W	
R5207	1-218-953-11	RES-CHIP	1K	5%	1/16W	
< TRANSFORMER >						
△T5201	1-443-568-21	TRANSFORMER, D.C.-D.C.CONVERTER				

 
 
 
 
 
 
Electrical parts list of the VC-504 board is not shown.
Pages 5-23 to 5-32 are not shown.

• Refer to page 5-1 for mark △.

EXCEPT J MODEL

Checking supplied accessories.

to J MODEL

 AC Adaptor (AC-L200/L200B) ▲ 1-479-285-21	 Power cord ▲ 1-555-074-91 (AUS) ▲ 1-790-107-42 (US, CND) ▲ 1-792-549-41 (JE) ▲ 1-827-269-12 (AEP, HK) ▲ 1-827-826-41 (UK, E: PAL) ▲ 1-832-121-31 (CH) ▲ 1-833-892-21 (KR) ▲ 1-834-852-11 (E: NTSC)	 Operating Guide (HDR-SR5/SR5C/SR7/SR8) 3-210-378-11 (ENGLISH) (US, CND, E, JE) 3-210-378-21 (FRENCH) (CND) 3-210-378-31 (SPANISH) (US, E: NTSC, JE) 3-210-378-41 (PORTUGUESE) (E: NTSC, JE) 3-210-378-51 (TRADITIONAL CHINESE) (E: NTSC) 3-210-378-61 (KOREAN) (KR, JE) Operating Guide (HDR-SR5E/SR7E/SR8E) 3-210-379-11 (ENGLISH) (AEP, UK, AUS, E: PAL, HK, JE) 3-210-379-21 (FRENCH, DUTCH) (AEP) 3-210-379-31 (GERMAN, ITALIAN, TURKISH) (UK) 3-210-379-41 (SPANISH, PORTUGUESE, GREEK) (UK) 3-210-379-51 (RUSSIAN, SWEDISH) (UK, JE) 3-210-379-61 (DANISH, FINNISH, POLISH) (UK) 3-210-379-71 (CZECH, HUNGARIAN, SLOVAK) (UK) 3-210-379-81 (SIMPLIFIED CHINESE) (E: PAL, CH, JE) 3-210-380-31 (TRADITIONAL CHINESE) (HK) 3-210-380-41 (ARABIC, PORTUGUESE) (E: PAL)																																						
 Handycam Station (DCRA-C181) 1-821-168-21	 Conversion (2P) Adaptor ▲ 1-569-007-12 (E: NTSC, JE)																																							
 Component video cable 1-829-414-61	 A/V connecting cable 1-823-156-61																																							
 USB cable 1-829-579-41	 Rechargeable battery pack (NP-FH60) ▲ A-1201-666-A (US, CND) ▲ A-1201-667-A (EXCEPT US, CND, CH) ▲ A-1201-668-A (CH)	 DVD-ROM "ENJOY HANDYCAM" 3-093-691-01 (KR) ENGLISH/KOREAN/JAPANESE 3-093-691-11 (US, CND, E) ENGLISH/FRENCH/SPANISH/PORTUGUESE 3-093-691-21 (UK) ENGLISH/RUSSIAN/GERMAN 3-093-691-51 (AEP) ENGLISH/FRENCH/GERMAN/DUTCH/PORTUGUESE/ITALIAN/RUSSIAN 3-093-691-61 (E: PAL, HK, AUS, CH) ENGLISH/FRENCH/SIMPLIFIED CHINESE for CHINA/ TRADITIONAL CHINESE for HONG KONG 3-093-691-71 (E: NTSC) ENGLISH/TRADITIONAL CHINESE for TAIWAN/SPANISH/PORTUGUESE																																						
 Wireless Remote Commander (RMT-835) 1-479-275-41																																								
 21-Pin Adaptor 1-770-783-21 (AEP)																																								
 CD-ROM "Handycam Application Software" (Picture Motion Browser (Software), Picture Motion Browser Guide, Handycam Handbook) 3-214-674-01	 Handycam Handbook (PDF) The CD-ROM supplied contains all of language version of the Instruction Manual in pdf (Handycam Handbook.pdf) for printing. Note: The printed matter is not supplied. If required, please order it with the part number below. <table border="0" style="width: 100%;"> <tbody> <tr> <td>3-210-374-01 (JAPANESE) (SR7/SR8)</td> <td>3-210-376-11 (RUSSIAN) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-374-11 (ENGLISH) (SR5/SR5C/SR7/SR8)</td> <td>3-210-376-21 (SWEDISH) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-374-21 (FRENCH) (SR5/SR5C/SR7/SR8)</td> <td>3-210-376-31 (DANISH) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-374-31 (SPANISH) (SR5/SR5C/SR7/SR8)</td> <td>3-210-376-41 (FINNISH) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-374-41 (PORTUGUESE)</td> <td>3-210-376-51 (POLISH) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>(SR5/SR5C/SR7/SR8)</td> <td>3-210-376-61 (CZECH) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-374-51 (TRADITIONAL CHINESE)</td> <td>3-210-376-71 (HUNGARIAN) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>(SR5/SR5C/SR7/SR8)</td> <td>3-210-376-81 (SLOVAK) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-374-61 (KOREAN) (SR5/SR5C/SR7/SR8)</td> <td>3-210-376-91 (SIMPLIFIED CHINESE)</td> </tr> <tr> <td>3-210-375-11 (ENGLISH) (SR5E/SR7E/SR8E)</td> <td>(SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-375-21 (FRENCH) (SR5E/SR7E/SR8E)</td> <td>3-210-377-11 (THAI) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-375-31 (GERMAN) (SR5E/SR7E/SR8E)</td> <td>3-210-377-21 (INDONESIAN) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-375-41 (DUTCH) (SR5E/SR7E/SR8E)</td> <td>3-210-377-31 (MALAY) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-375-51 (TURKISH) (SR5E/SR7E/SR8E)</td> <td>3-210-377-41 (TRADITIONAL CHINESE)</td> </tr> <tr> <td>3-210-375-61 (SPANISH) (SR5E/SR7E/SR8E)</td> <td>(SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-375-71 (PORTUGUESE)</td> <td>3-210-377-51 (ARABIC) (SR5E/SR7E/SR8E)</td> </tr> <tr> <td>(SR5E/SR7E/SR8E)</td> <td>3-210-377-61 (PERSIAN)</td> </tr> <tr> <td>3-210-375-81 (ITALIAN) (SR5E/SR7E/SR8E)</td> <td>(SR5E/SR7E/SR8E)</td> </tr> <tr> <td>3-210-375-91 (GREEK) (SR5E/SR7E/SR8E)</td> <td></td> </tr> </tbody> </table>		3-210-374-01 (JAPANESE) (SR7/SR8)	3-210-376-11 (RUSSIAN) (SR5E/SR7E/SR8E)	3-210-374-11 (ENGLISH) (SR5/SR5C/SR7/SR8)	3-210-376-21 (SWEDISH) (SR5E/SR7E/SR8E)	3-210-374-21 (FRENCH) (SR5/SR5C/SR7/SR8)	3-210-376-31 (DANISH) (SR5E/SR7E/SR8E)	3-210-374-31 (SPANISH) (SR5/SR5C/SR7/SR8)	3-210-376-41 (FINNISH) (SR5E/SR7E/SR8E)	3-210-374-41 (PORTUGUESE)	3-210-376-51 (POLISH) (SR5E/SR7E/SR8E)	(SR5/SR5C/SR7/SR8)	3-210-376-61 (CZECH) (SR5E/SR7E/SR8E)	3-210-374-51 (TRADITIONAL CHINESE)	3-210-376-71 (HUNGARIAN) (SR5E/SR7E/SR8E)	(SR5/SR5C/SR7/SR8)	3-210-376-81 (SLOVAK) (SR5E/SR7E/SR8E)	3-210-374-61 (KOREAN) (SR5/SR5C/SR7/SR8)	3-210-376-91 (SIMPLIFIED CHINESE)	3-210-375-11 (ENGLISH) (SR5E/SR7E/SR8E)	(SR5E/SR7E/SR8E)	3-210-375-21 (FRENCH) (SR5E/SR7E/SR8E)	3-210-377-11 (THAI) (SR5E/SR7E/SR8E)	3-210-375-31 (GERMAN) (SR5E/SR7E/SR8E)	3-210-377-21 (INDONESIAN) (SR5E/SR7E/SR8E)	3-210-375-41 (DUTCH) (SR5E/SR7E/SR8E)	3-210-377-31 (MALAY) (SR5E/SR7E/SR8E)	3-210-375-51 (TURKISH) (SR5E/SR7E/SR8E)	3-210-377-41 (TRADITIONAL CHINESE)	3-210-375-61 (SPANISH) (SR5E/SR7E/SR8E)	(SR5E/SR7E/SR8E)	3-210-375-71 (PORTUGUESE)	3-210-377-51 (ARABIC) (SR5E/SR7E/SR8E)	(SR5E/SR7E/SR8E)	3-210-377-61 (PERSIAN)	3-210-375-81 (ITALIAN) (SR5E/SR7E/SR8E)	(SR5E/SR7E/SR8E)	3-210-375-91 (GREEK) (SR5E/SR7E/SR8E)	
3-210-374-01 (JAPANESE) (SR7/SR8)	3-210-376-11 (RUSSIAN) (SR5E/SR7E/SR8E)																																							
3-210-374-11 (ENGLISH) (SR5/SR5C/SR7/SR8)	3-210-376-21 (SWEDISH) (SR5E/SR7E/SR8E)																																							
3-210-374-21 (FRENCH) (SR5/SR5C/SR7/SR8)	3-210-376-31 (DANISH) (SR5E/SR7E/SR8E)																																							
3-210-374-31 (SPANISH) (SR5/SR5C/SR7/SR8)	3-210-376-41 (FINNISH) (SR5E/SR7E/SR8E)																																							
3-210-374-41 (PORTUGUESE)	3-210-376-51 (POLISH) (SR5E/SR7E/SR8E)																																							
(SR5/SR5C/SR7/SR8)	3-210-376-61 (CZECH) (SR5E/SR7E/SR8E)																																							
3-210-374-51 (TRADITIONAL CHINESE)	3-210-376-71 (HUNGARIAN) (SR5E/SR7E/SR8E)																																							
(SR5/SR5C/SR7/SR8)	3-210-376-81 (SLOVAK) (SR5E/SR7E/SR8E)																																							
3-210-374-61 (KOREAN) (SR5/SR5C/SR7/SR8)	3-210-376-91 (SIMPLIFIED CHINESE)																																							
3-210-375-11 (ENGLISH) (SR5E/SR7E/SR8E)	(SR5E/SR7E/SR8E)																																							
3-210-375-21 (FRENCH) (SR5E/SR7E/SR8E)	3-210-377-11 (THAI) (SR5E/SR7E/SR8E)																																							
3-210-375-31 (GERMAN) (SR5E/SR7E/SR8E)	3-210-377-21 (INDONESIAN) (SR5E/SR7E/SR8E)																																							
3-210-375-41 (DUTCH) (SR5E/SR7E/SR8E)	3-210-377-31 (MALAY) (SR5E/SR7E/SR8E)																																							
3-210-375-51 (TURKISH) (SR5E/SR7E/SR8E)	3-210-377-41 (TRADITIONAL CHINESE)																																							
3-210-375-61 (SPANISH) (SR5E/SR7E/SR8E)	(SR5E/SR7E/SR8E)																																							
3-210-375-71 (PORTUGUESE)	3-210-377-51 (ARABIC) (SR5E/SR7E/SR8E)																																							
(SR5E/SR7E/SR8E)	3-210-377-61 (PERSIAN)																																							
3-210-375-81 (ITALIAN) (SR5E/SR7E/SR8E)	(SR5E/SR7E/SR8E)																																							
3-210-375-91 (GREEK) (SR5E/SR7E/SR8E)																																								

• Refer to the page 5-1 for mark ▲.