


SERVICE MANUAL



AE-6B CHASSIS

MODEL	COMMANDER	DEST	CHASSIS NO.	MODEL	COMMANDER	DEST	CHASSIS NO.
KV-29LS60B	RM-932	FR	SCC-Q83A-A	KV-29LS60K	RM-932	OIRT	SCC-Q82B-A
KV-29LS60E	RM-932	ESP	SCC-Q81A-A				

FD Trinitron

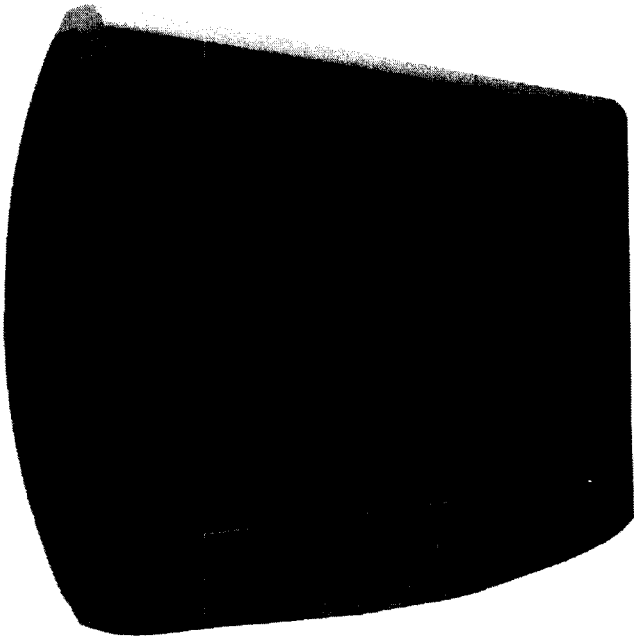

KV-29LS60



RM-932

TRINITRON[®] COLOR TV
SONY[®]

SECTION 6 EXPLODED VIEWS


NOTE :

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

6-1. CHASSIS

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.


Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

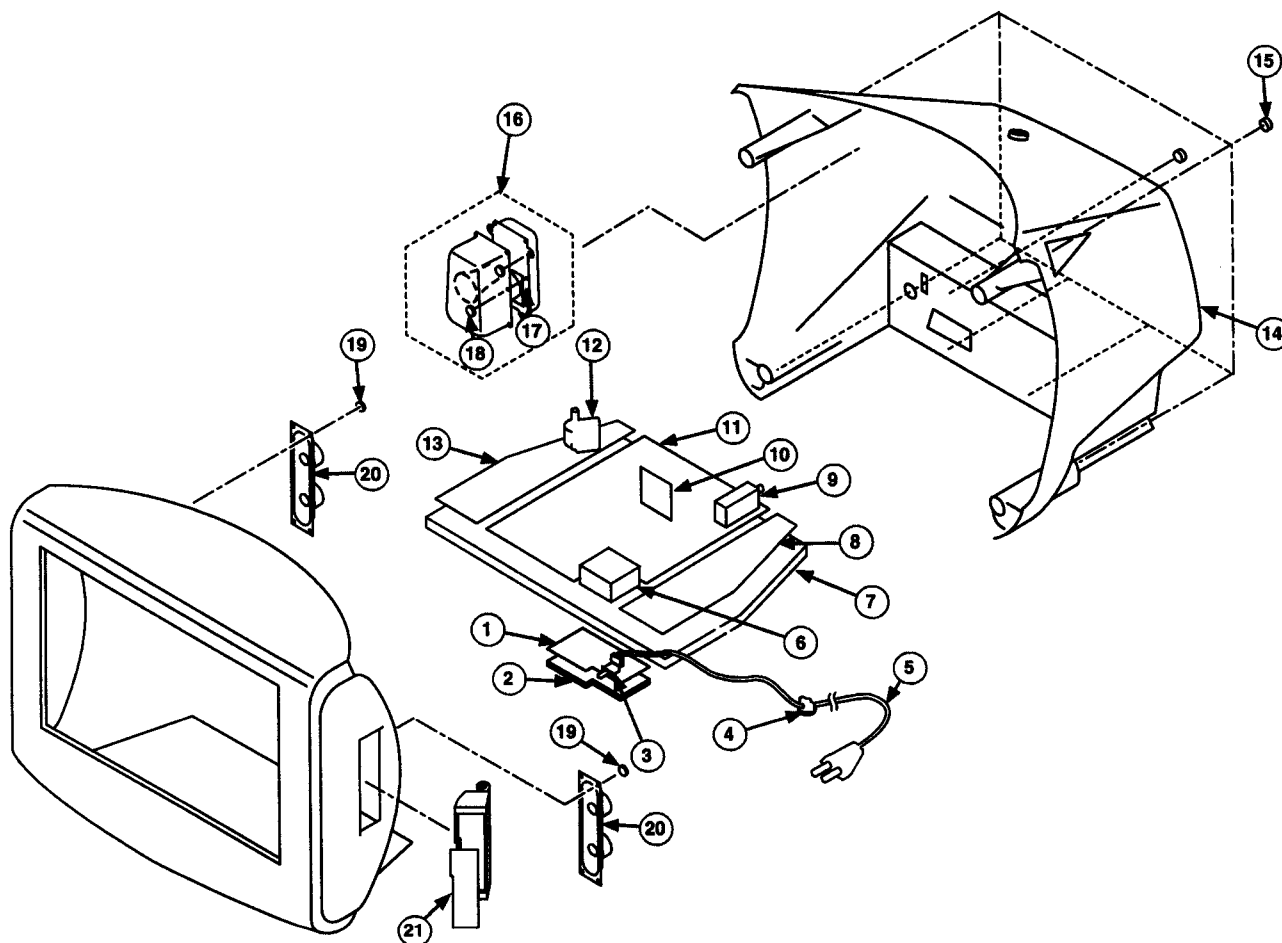

REF.NO.	PART.NO	DESCRIPTION	REMARK
1	*A-1624-102-A	F2 BOARD, COMPLETE	
2	*4-206-055-01	BRACKET, F2	
4	*4-202-531-01	AC CORD LOCK (SC)	
6	1-424-855-11	COIL, CHOKE	
7	*4-206-106-01	BRACKET, MAIN	
8	*A-1637-024-A	G BOARD, COMPLETE	
9	8-598-535-11	FRONTEND (BTF-EF411)	(KV-29LS60B)
	8-598-533-01	FRONTEND (BTF-EC411)	(KV-29LS60E/29LS60K)
10	*A-1634-062-A	M BOARD, COMPLETE	

REF.NO.	PART.NO	DESCRIPTION	REMARK
11	*A-1632-954-A	A BOARD, COMPLETE (KV-29LS60B)	
	*A-1632-955-A	A BOARD, COMPLETE (KV-29LS60E/29LS60K)	
13	*A-1640-432-A	D BOARD, COMPLETE	
14	4-206-051-01	REAR COVER	
15	7-685-663-79	SCREW +BVTP 4x16 TYPE 2 IT-3	
16	*A-1678-205-A	WOOFER COMPLETE ASSY	17,18
17	1-529-989-11	SPEAKER (8CM)	
18	7-685-663-71	SCREW +BVTP 4x16 TYPE 2 IT-3	
19	7-685-663-71	SCREW +BVTP 4x16 TYPE 2 IT-3	
20	1-529-408-11	SPEAKER (4.2x24CM)	
21	*A-1647-043-A	H2 BOARD, COMPLETE	

6-2. PICTURE TUBE

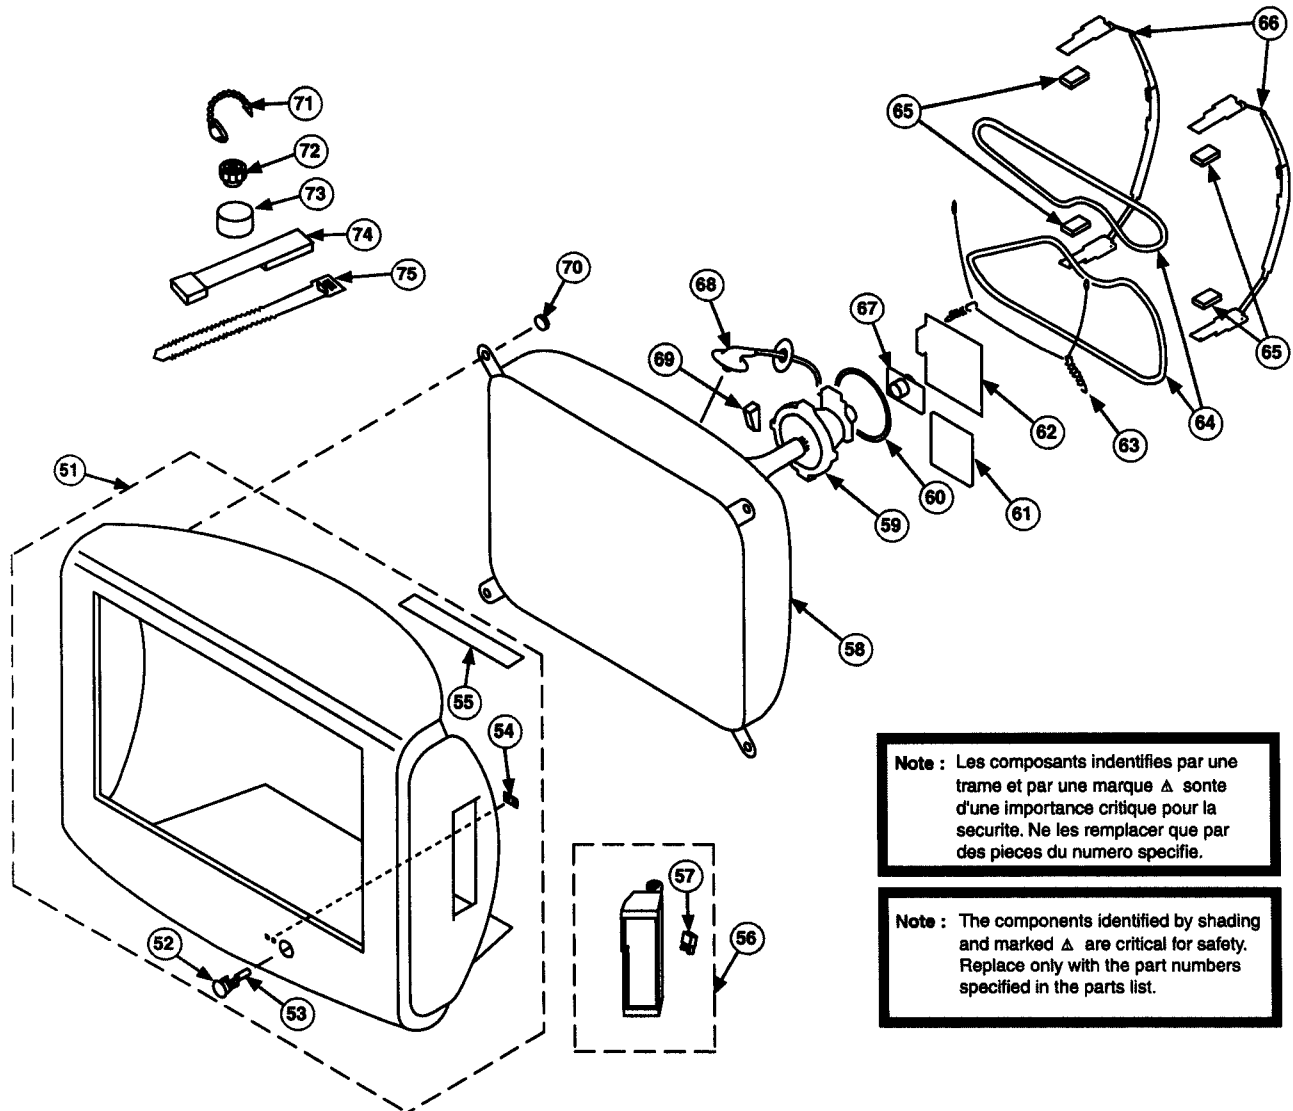

REF.NO.	PART.NO	DESCRIPTION	REMARK
51	X-4200-710-1	BEZNET ASSY	52-55
52	4-205-948-01	POWER BUTTON	
53	4-204-426-01	SPRING	
54	4-205-375-01	GUIDE, LIGHT	
55	4-204-666-01	SHEET, BLOTTING	
56	X-4200-712-1	DOOR ASSY	57
57	4-047-464-01	CATCHER, PUSH	
59	8-451-504-31	DEFLECTION YOKE (Y29RSC-S)	
60	1-452-896-11	COIL, NA ROTATION (RT200)	
61	*A-1644-119-A	VM BOARD, COMPLETE	
62	*A-1638-158-A	C BOARD, COMPLETE	
63	4-369-318-21	SPRING, TENSION	

REF.NO.	PART.NO	DESCRIPTION	REMARK
65	4-203-390-11	CUSHION, DGC	
66	*4-204-768-01	HOLDER, DGC (29")	
67	8-453-011-41	NECK ASSY, (NA299-C)	
69	3-704-495-01	SPACER, DY	
70	4-046-765-12	SCREW, TAPPING 7+ CROWN WASHER	
71	4-308-870-00	CLIP, LEAD WIRE	
72	1-452-094-00	MAGNET, ROTATABLE DISK; 15MM	
73	1-452-032-00	MAGNET, DISK; 10MM	
74	X-4387-214-1	PERMALLOY ASSY, CORRECTION	
75	3-701-007-00	BAND, BINDING	