

GRANDIN

OPERATING INSTRUCTIONS

LD32VGB279S

COLOUR TELEVISION WITH REMOTE CONTROL



HOTLINE CONSOMMATEURS

0800.801.512

Du Lundi au Vendredi
De 9h00 à 12h30 et de 14h00 à 18h00

www.vestel-france.fr

TV :

Durée de disponibilité des pièces détachées
fonctionnelles : 3 ans, à partir de la date de
fabrication du produit.



Article 6 de la loi N°2014-344 du 17 mars 2014

Article L 111-3 Code de la consommation

Contents

Security instructions	1
Getting started	3
Notifications & Characteristics & Accessories	3
Functions	3
Television's command buttons	3
Connecting the power cord	4
Remote control	5
Connections	6
Turning the TV on/off	7
First time installation	7
Reading media through the USB input	7
Recording a programme	8
Time shift recording	8
Instant Recording	8
Watching recorded programmes	8
Media browser menu	9
Quick Menu	9
Options and functions of the TV menu	10
Channel list	12
Use of the channel list	12

Security instructions

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
WARNING : TO AVOID THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

To operate your TV in extreme ambient conditions may cause the damage of the device.



In case of storm or lightning, or if you are not going to use the TV for some time, (during holidays for example) disconnect the power cord from the wall outlet. The electricity plug is used to disconnect the television from the main power and should therefore always be easy to operate.



The exclamation mark inside the equilateral triangle is used in the documentation provided with this device, to indicate to users instructions that are important for the proper operation and maintenance of the device.

Note : Please follow the instructions that appear on your screen concerning the activation of related functionalities.

Setting of parental control settings	12
Electronic Program Guide (EPG)	12
Software update	13
Troubleshooting and tips	13
Typical PC Input Display Modes	15
Formats of files supported in USB mode	15
AV and HDMI Signal Compatibility	15



IMPORTANT - Please read these instructions fully before installing or operating

WARNING: Never let people (including children) with reduced physical, sensory or mental capabilities or lack of experience and / or knowledge use electrical devices unsupervised.

- For ventilation purposes, leave a free space of at least 10 cm all around the set.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc...
- **Do not** place the TV on sloping or unstable surfaces, the TV may tip over.
- The apparatus shall be used in moderate climates only.
- The power cord plug should be easily accessible. **Do not** place the TV, furniture, etc. on the power cord. A damaged power cord/plug can cause fire or give you an electric shock. Handle the power cord by the plug, **do not** unplug the TV by pulling the power cord. Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock. Never make a knot in the power cord or tie it with other cords. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **Do not** use this TV in a humid or damp place. Do not expose the TV to liquids. The apparatus shall not be exposed to dripping or splashing. No objects filled






with liquids, such as vases, shall be placed on the apparatus. If any liquid falls into the cabinet unplug the TV and have it checked by qualified personnel before operating it any further.

- **Do not** expose the TV to direct sunlight or other heat sources.
- The TV should not be placed near to open flames or sources of intense heat such as an electric heater.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Ensure that no open flame sources, such as lit candles, are placed on top of the TV.
- To prevent injury, this TV must be securely attached to the wall in accordance with the installation instructions (if the option is available).
- Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green or red point. Please note that this does not affect the performance of your product. Take care not to scratch the screen with fingernails or other hard objects.
- Before cleaning, unplug the TV from the wall socket. Only use a soft, dry cloth while cleaning.



CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Different types of batteries or new and used batteries are not to be mixed. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product. Batteries shall be disposed off in a safe way. Only dispose off batteries in specific collection containers (contact your retailer for more information) in order to protect the environment

 Warning	Serious injury or death risk
 Risk of electric shock	Dangerous voltage risk
 Caution	Injury or property damage risk
 Important	Correctly the system operate
 Notice	Additional notes marked

Markings on the Product

The following symbols are used **on the product** as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the product bears related marking only. Note such information for security reasons.



Class II Equipment: This appliance is designed in such a way that it does not require a safety connection to electrical earth.



Class II Equipment With Functional Earthing: This appliance is designed in such

a way that it does not require a safety connection to electrical earth, the earth connection is used for functional purposes.



Protective Earth Connection: The marked terminal is intended for connection of the protective earthing conductor associated with the supply wiring.



Hazardous Live Terminal: The marked terminal(s) is/are hazardous live under normal operating conditions.



Caution, See Operating Instructions: The marked area(s) contain(s) user replaceable coin or button cell batteries.



Class 1 Laser Product: This product contains Class 1 laser source that is safe under reasonably foreseeable conditions of operation.

- **WARNING**
- Do not ingest the battery, Chemical Burn Hazard
- (The accessories supplied with or) This product may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as;

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on all furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

Getting started

Notifications & Characteristics & Accessories

Information relating to the environment

This television is designed to consume less power in a bid to protect the environment. In order to effectively reduce your electric energy consumption, you have to follow the steps below:

If you set the energy economy mode to **Eco**, TV will enter energy economy mode. The energy economy mode can be found at the level of the 'Image' submenu under the main menu. Note that some image settings cannot be changed.

If the option "disabled Image" is selected, the message **"the screen will turn off in 15 seconds"** will appear on the screen. Select the **CONTINUE** option and press **OK** to continue. The screen will turn off automatically.

Turn the television of and disconnect it when not in use. This good practice will also help you to economise energy.

Standby notifications

1. If the television does not receive any incoming signal (an antenna or an HDMI source for example) for 5 minutes, it will go on standby. The next time it is turned on, the following message will appear: **"Standby mode if no signal"** Press **OK** to continue.
2. If the television stays inactive for 4 hours, it will enter standby mode. The next time it is turned on, the following message will appear: **"Standby mode if no signal"** Press **OK** to continue.

Functions

 
- Colour television with remote control.
- Digital tuner cable and High definition TNT (DVB-T/C)
- The HDMI ports are meant for devices with HDMI plugs.
- USB ports.(with digital video tape-recorder function)
- OSD Settings Menu.
- Jack socket for external devices (video camera, video game, audio player, etc.)
- Stereo sound system.
- Teletext.
- Headphone jack.
- Automatic settings system.
- Manual setting.
- Automatic shutdown which can be set between 2 to 6 hours maximum without using the remote control.
- Programmable shutdown.
- Parental control lock

- Automatic sound-off when there's no transmission.
- NTSC Video .
- AVL (Automatic Volume Limitation)
- PLL Tuner (Frequency scanning).
- PC port with Plug & Play function.
- Instant Plug&Play for Windows 98,) ME, 2000, XP, Vista.
- Gaming mode (optional)


Accessories included

- Remote control
- User manual
- Batteries not included

Television's command buttons

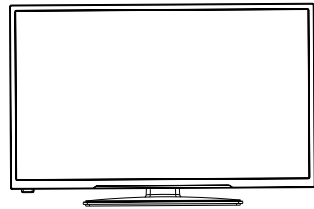

 The control button & the Functioning of the TV

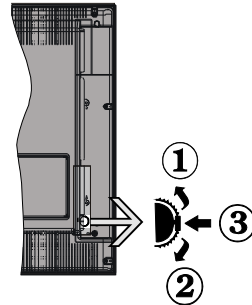

1. Previous
2. Next
3. Program / Volume / AV / Standby command selection

The button makes it possible to control the **"Volume"** / **"Program"** / **"Source"** functions and to Enable Standby Mode on your television.

To adjust the volume: Increase the volume by pressing the **Up button**. Reduce the volume by pressing the **Down button**.

 
To change channels: Press the centre of the button for information on the channel to appear on the screen. Browse through stored channels by pressing the **Up** or **Down** button.

To change source: Press the centre of the button for the list of sources to appear on the screen. Browse through stored channels by pressing the **Up** or **Down** button.

To turn off the television : Press and hold down the centre of the **Down** button for a few seconds until the television enters Standby mode.

Inserting the Batteries into the Remote

Remove the screw that secure the battery compartment cover on the back side of the remote control first. Lift the cover gently. Insert two **AAA** batteries. Make sure the (+) and (-) signs match (observe correct polarity). Place the cover back on. Then screw the cover back on again.

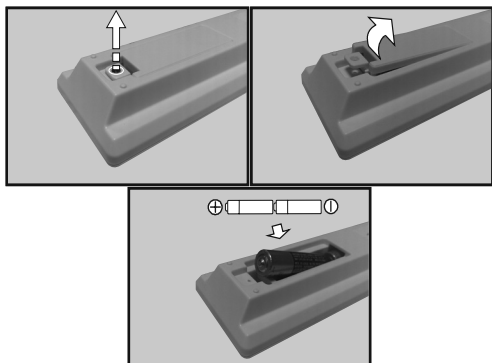


Connecting the power cord

IMPORTANT: This television is designed to operate solely with a **220-240V ~ 50 Hz.** power supply. After taking the television out of its package, wait a bit for the TV to reach ambient temperature before connecting it to the electricity plug. Connect the power cord to the main plug.

Connecting the antenna/Cable

 Connect the antenna or the SDSq antenna cable to the **ANTENNA INPUT (ANT)** found at the back of the TV set.



Notification

Manufactured under licence from Dolby Laboratories

MANUFACTURED UNDER LICENCE

"Dolby" and the double D symbol are trademarks of Dolby Laboratories.



HDMI, the HDMI logo and the high definition multimedia interface are marks or registered trademarks of HDMI Licensing LLC.

 


Information applicable to users in relation to disposal of old devices and batteries

[European Union only]

This symbol indicates that the equipment should not be disposed of as household waste. If you have to discard the TV set or the batteries, consider using collection systems or infrastructure for appropriate recycling.

Note: The *Pb* sign inscribed on the batteries indicates that the battery contains lead.

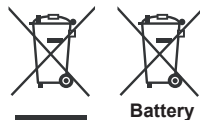


Technical details

TV Frequency (tuner)	VHF (BAND I/III) - UHF (BAND U) - HYPERBAND
Number of memorable channels	1000
Audio standard	German +Nicom Stereo
On screen display	On Screen Display
RF Input Socket	75 Ohms (unbalanced)
Operating voltage:	220-240V ~, 50HZ
AUDIO OUTPUT POWER (WRMS.) (10% THD)	2 x 6 WRMS
Power consumption	65W (max)
st-by power consumption	0,5 W (max)
TV Dimensions DxLxH (with foot)	185 x 735 x 478 mm
TV Dimensions DxLxH (without foot)	77/97 x 735 x 438 mm
Operating temperature and humidity	0°C up to 40°C, 85% humidity max

Getting started

 Remote control

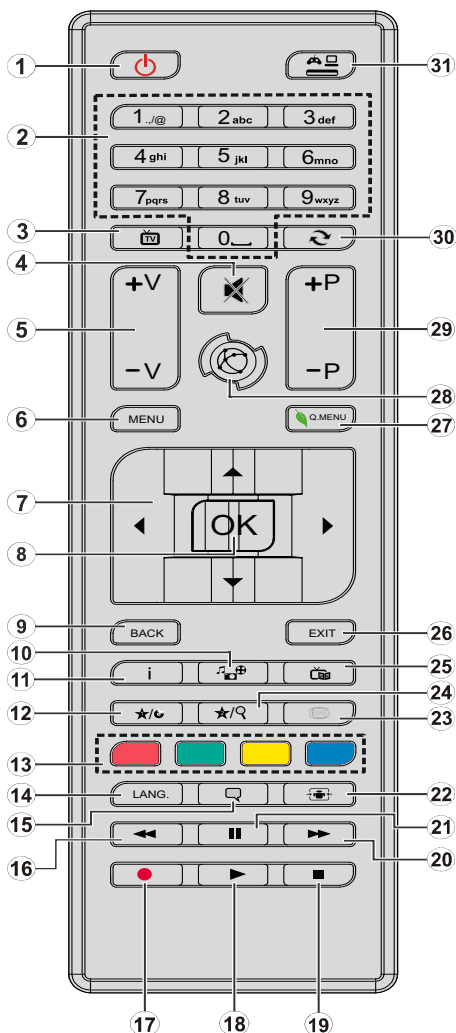








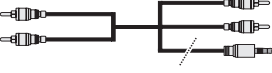



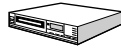










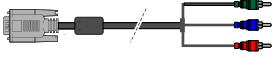
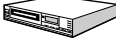




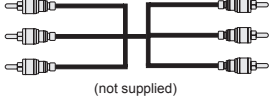

- Standby:** On / Off switch of the TV
- Numeric buttons:** Used to navigate channels and enter passwords, text etc.
- TV:** Displays channel list / Switches among broadcast types
- Mute:** Completely turns off the volume of the TV
- Volume +/-**
- Menu:** Displays TV menu
- Navigation buttons:** Helps navigate menus, content etc. and displays the subpages in TXT mode when pressed Right
- OK:** Confirms user selections, holds the page (in TXT mode), views channel list (DTV mode)
- Back:** Returns to previous screen, opens index page (in TXT mode)
- Media browser:** Opens the media browsing screen
- Info:** Displays information about on-screen content, shows hidden information (reveal - in TXT mode)
- My button 1 (*)**
- Coloured Buttons**
- Language:** Switches between sound modes (analogue TV), displays and changes audio/subtitle language (where available)(digital TV)
- Subtitles:** Turns subtitles on and off (where available)
- Rapid reverse:** Moves frames backwards in media such as movies
- Record:** Records programmes
- Play:** Starts to play selected media
- Stop:** Stops the media being played
- Rapid advance:** Moves frames forward in media such as movies
- Pause:** Pauses the media being played, starts timeshift recording
- Screen:** Changes the aspect ratio of the screen
- Text:** Displays teletext (where available), press again to superimpose the teletext over a normal broadcast picture (mix)
- My button 2 (*)**
- EPG (Electronic programme guide):** Displays the electronic programme guide
- Exit:** Closes and exits from displayed menus or returns to previous screen
- Quick Menu:** Displays a list of menus for quick access
- No function**
- Programme +/-**
- Swap:** Quickly cycles between previous and current channels
- Source:** Shows all available broadcast and content sources


How to use My button 1 / 2

Browse to the desired source, channel, or link, press and hold MY BUTTON 1 / 2 for five seconds, until this message "MY BUTTON HAS BEEN SET" appears on the screen. This message confirms that the MY BUTTON option selected is now associated to the selected function.

Getting started

Connections

Connector	Type	No cable or accessory provided	Device
	External device Connection (behind)		
	VGA Connection (behind)		
AV ON THE SIDE 	PC/YPbPr Audio Connection (side)	 YPbPr audio connection cable (not supplied)	
	HDMI Connection (behind)		
 SPDIF	SPDIF Connection (behind)		
AV ON THE SIDE 	Lateral AV Audio / Video Connection (side)	 (not supplied)	
 HEADPHONE	Headphone Connection (side)		
	YPbPr Video Connection (behind)		
 USB	USB Connection (side)		
 CI	CI Connection (side)		

 You may use a VGA-compatible YPbPr cable (not provided) to enable the YPbPr signal via the VGA port. | You will no longer be able to use the VGA and YPbPr simultaneously. | **For the YPBR or PC port, you have to connect the audio output of your device to the television's audio AV input.** | When an external device is connected to the jack socket of your TV, the TV will enter AV mode automatically when you turn on the external device. | When you are in digital mode (tuner, usb, hdmi) you will not have audio-video signal output through the jack socket. | If you use a wall-mounted kit, it is advisable to connect all your cables before fixing your TV to the kit. | Insert or delete the CI module CI only when the television is off. Consult the module's instruction manual for more information on its settings.

Getting started


First time installation - USB connections

Turning the TV on/off


Turning the TV on/off

Connect the power cord to a 220-240V ~ 50 Hz socket.

To turn on the TV from standby mode, you can either :

- Press the “”, **P+** / **P-** button or a digital button on the remote control,
- Press the side-function button until the TV leaves standby mode.

Putting the TV on standby

Press the “” button on the remote control or the multi-function button on the side of the TV until the TV enters standby mode.

To turn off the television completely, unplug the power cord from the power socket.

*Note: When the television is in standby mode, the indicator light flashes to indicate that options such as **Standby search mode**, **automatic download** or **Timer** are enabled. The LED may also flash when you turn on the television from standby mode.*

First time installation

When you turn on the television for the first time, the language selection menu appears. Select the language you want and press **OK**.

The First time installation (FTI) screen appears during first installation. Set your preferences using the browsing buttons. When you are through, press **OK** to continue.

IMPORTANT : If you chose France or Italy as an alternative, the PIN code menu will appear and you will have to enter 4-digit code. You will not be able to use 0000 as code (you are advised to write down this code on your instruction manual so that you can remember it when you need to use it). Enter a PIN code and confirm by entering it again. Press the **OK** button to continue.

WARNING : When prompted to enter a PIN code to access a menu item, you have to use the code you set during first installation. If you forget the said code, use the main code **4725**.


Demo Mode

If you want to use your television inside a home, you are advised to select the home mode.

If you choose the shop mode, you will have to confirm your choice.

Choosing TV receiver mode

You will have to choose your reception mode, antenna or cable. If you choose the **ANTENNA** option from the **Type of search** screen, the digital television will search for digital terrestrial broadcasts.

 **NOTE**: You can press the **MENU** button to cancel.

Once all the available channels have been saved, the list of the channels will appear on the screen. If you find the said channels interesting, depending on the LCN(*), select Yes, then press **OK**.

Press the **MENU** button to exit the list of channels and watch the television.

(*) LCN Channel number system which displays channels in the order established by government agencies .

Installing the cable

If you choose the **CABLE** option and press the **OK** button on the remote control. You can set the frequencies manually or press **OK** to start an automatic search.

Note: The duration of the search will depend on the search zone selected.

Reading media through the USB input

You can connect external hard drives (hard drives with or without external power cables, depending on their voltage) or a USB port to your TV through your TV's USB ports.

IMPORTANT! Backup your files before making any connection to the TV. Note that the manufacturer shall not be held accountable if files are damaged or data lost. Some types of USB devices (MP3 players for example) or USB “**hard drives / memory cards**” “may be incompatible with this television. This television supports FAT32 and NTFS disk formatting. However, **you will not be able to record with NTFS formatted disks.**

If your hard drive's capacity is above 1TO, you may experience some issues with formatting. Avoid disconnecting your reader quickly after inserting it in the television's USB port. This can physically damage the USB reader and the USB device itself. Never remove the USB while a file is being read.

Recording a programme

IMPORTANT: When using a new USB hard drive reader, it is advisable to first format the disk using the “**Format disk**” option of your television.

Note: To record a programme, you first have to connect a 2.0 compatible USB device at least, if not an error message will appear, to your television which you would have turned off before this. Then turn on the TV set in order to enable the record function.

To use the record function, you have to connect a USB key or an external hard drive to the television. The USB key connected should have a capacity of 1 GB at least. A 4 Go key is recommended.

Note: Programmes recorded are saved on your USB device. You can “**copy**” these recordings on a computer if you want. However, they can be read only on your television.

Note: You cannot record radio broadcasts. The maximum duration of a recording is unlimited. During simultaneous recording (time shift) an image-sound gap may occur.

Programmes recorded are divided into 4 GB partitions.

If the write speed of the USB device connected is insufficient, the recording may fail and the time shift option may not be available.

As such, it is advisable to use USB devices that are HD compatible.

Avoid disconnecting your USB device during recording. If you do, you may damage the device.

It is possible to have multiple partitions on your device (maximum of 2). The television can support a maximum of two different partitions. The first partition of the USB disk will be used for the recording function (PVR).

Due to some antenna issues, it will not be possible to record some signal data. Also, the images may be blurry during playback.

The **Record, Play, Pause, Display** buttons (for PlayListDialog) are not active in Teletext mode. If a recording starts from the timer when the teletext is active, the latter will be disabled automatically. Teletext does not function in multimedia mode.

Time shift recording

Press the **⏸** (PAUSE) button while watching a programme to switch to delayed replay mode. When you use this mode, the programme pauses and the recording continues.

Press the **▶** (PLAY) button again to watch the paused programme. Press the **STOP** button to stop recording and return to real time broadcast

Note: This function is not available in radio mode. You may use the fast forward /fast rewind buttons to browse.

Note: You cannot use the fast rewind and fast forward buttons if you are not in play mode.

Instant Recording

Press the **●** (RECORD) button to start instant recording of a programme while you're watching it. The recording will be done based on the EPG. You can press the **●** (RECORD) button on the remote control again to record the next programme on the EPG (Electronic Programme Guide). In this case, the programmes scheduled for recording will be displayed on the screen. Press the **■** (STOP) button to cancel instant recording.

Note: In instant recording mode, you cannot change channels or watch a source other than that being recorded. When recording a programme during a time shifting, a warning message will appear on the screen if your USB device's speed is not sufficient.

Watching recorded programmes

Select the **Recordings in library** option under the **media browser** menu. Select one of the recordings in the list. Press the **OK** button to display the **play options**. Select an option and press the **OK**

Note: The display of the main menu and the submenus are not available when playing recordings.

Press the **■** (STOP) button to stop playing and return to the recordings in the Library.

Slow forward

If you press the **⏪** (PAUSE) button while watching a recorded programme, the slow forward option will be available. You can use the **▶▶** button for the slow forward. To modify the slow forward speed, press the **▶▶▶** button.

Record settings

Select **Record settings** option in the **Settings** menu to configure recording parameters.

Format the disc : You can use the disk formatting option to format the connected USB disc. Your PIN code will then be asked.

The default PIN code can change depending on the country selected.

If a PIN code is required to display a menu option, enter one of the following codes: 4725, 0000 or 1234.







IMPORTANT : Note that all the data contained in the USB device will be lost and the device will be formatted using FAT32. Also, if your USB device does not function properly, you can try to format it. In most cases, formatting the USB device solves the problem, however, ALL the data contained in the USB disc are lost in the same situation.

Note : If the message “USB too slow” appears on the screen at the start of a recording, try starting the recording again. If the same error message appears, it is possible that your USB disk does not have the required speed. Try to connect another USB disc.

Media browser menu

You can view picture, music and video files stored in a USB device by connecting this device to your TV set. Connect a USB stick to one of the USB ports located on the side of the TV set. For video, photo and music files, you can access a settings sub menu (image, sound and others) by pressing the MENU button. This function does not work with recordings done on the TV set. By pressing the **MENU** button again the display disappears. You can set the preferences of your media browser through your settings menu.

Functioning of the Random / Repeat mode

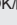Launch playback with  and enable 	The TV set reads the next file and closes the list.
Launch playback with  and enable 	The same folder will be read repeatedly.
Launch playback with OK  and enable 	The folders concerned will be read randomly.

Quick Menu

The **quick parameters** menu ensures quick access to certain options. This menu includes **Power economy mode**, **Picture mode**, favorites and Programmed shutdown options. Press the **Q.MENU** button of the remote control to display the quick menu. See subsequent chapters for details of listed functions.

Content of the image menu	
Mode	You can edit the image mode according to your preferences and demands. The Image mode can be set on one of these options : Cinema , Game , Dynamic and Natural .
Contrast	Adjusts the brightness and darkness of the screen.
Brightness	Adjusts the brightness of the screen.
Sharpness	Defines the sharpness of objects displayed on the screen.
Colour	Adjusts the colour value, adjusts colours.
Power Saving Mode	If you choose the Power saving mode set to Eco, you can enable or disable the screen . (When the mode is Dynamic , the Power saving mode set to Eco is automatically disabled.)
Back-lighting (optional)	This parameter controls the back-light level. The back-light function will be inactive if the Power saving mode is set to Eco. The Back-light mode cannot be enabled in VGA mode Multimedia navigator or when Image mode is defined on the Game.
Noise reduction	If the broadcasting signal is weak and the image noisy, use the noise reduction functionality to reduce the intensity of the noise.
Advanced settings	
Dynamic contrast	You can adjust the dynamic contrast ratio at your convenience.
Colour temperature	Adjusts the desired colour tone.
Image zoom	Adjusts the size of images in the images zoom menu. Note: <i>Auto (Available only in Scart mode with SCART PIN8 high/low voltage switch)</i>
HDMI True Black (optional)	When you watch the television from the HDMI source, this option is visible in the Image setting menu. You can use this option to increase image darkness.
Film Mode	Films are recorded at a number of frames per second different from normal television programs. Enable this function when you are watching films so as to better visualize the accelerated images.
Skin tone	The skin tone function can be edited between -5 and 5.
Colour editing	Adjusts the desired colour tone.
RGB gain	You can configure the colour temperature values using the RGB Gain functionality.
Reset	Resets the image settings to the default values (except Game mode).
Auto-position (in PC mode)	Automatically optimises display. Press OK to optimise.
Position H (in PC mode)	This section changes the image horizontally towards the right or left side of the screen.
Position V (in PC mode)	This element moves the image vertically towards the upper or lower part of the screen.
Frequency guide (in PC mode)	The <i>pilot frequency</i> settings correct interferences which appear as vertical lines in the image for displays such as worksheets, paragraphs or texts in smaller font sizes.
Phase (in PC mode)	Depending on the resolution and the scanning frequency you enter for the television, you can see a fogged or sound image on the screen. In such a case you can use this element to get a clear image through trial and error.
<i>In VGA mode (PC), certain elements of the image menu will be unavailable. On the contrary, the parameters of the VGA mode will be added to the Image parameters in PC mode.</i>	

Content of Sound menu	
Volume	Adjusts the volume level.
Equaliser	You can choose from 4 pre-set modes or make your own settings by selecting the user mode.
Balance	This parameter is used to highlight the balance of the left or right loudspeakers.
Headphone	Adjusts the volume of the headphone.
Sound mode	You can choose stereo or select language in dual -I or dual -II mode if the transmission includes this option. .
AVL (Automatic Volume Limitation)	This function is used to limit the volume differences between programmes.
Digital output	To be adjusted depending on the type of appliance attached to this plug.
Content of the Settings menu	
Conditional access	Controls the conditional access modules when they are available.
Language	Configures language parameters (can vary depending on the country chosen). The favourite parameters and current ones will be available. The current settings can only be edited if the broadcaster takes charge of them.
Parental control	Enter the correct password to edit parental control settings. You can easily adjust menu lock and parental control from this menu. You can also enter a new pin code (See the chapter on setting of parental parameters on page 12).
Timer	This function is used to set sleep mode and to program recordings made on your USB device.
Record settings	Displays the record settings menu, accessible if your (USB device is connected.
Date/Time	Selects the date and time.
Sources	Enables or disables selected Source options.
Other settings: Displays other television setting options:	
OSD display time	Defines the menu display time.
Encoded channels search	When this parameter is enabled, the search process locates scrambled channels as well.
Blue Screen	In Active mode, it displays a blue screen when there is no signal.
Software update	Updates the software package of your television.
Application version:	Displays the software version of your television.
Hearing-impaired	Enables specific functions for the hearing-impaired broadcast by the channels.
Audio description	Audio description refers to an extra narration path reserved for the visually and hearing impaired. You can only use this option if the broadcaster takes it in charge. <i>Note: The audio sound description functionality cannot be available during recording or when the time-lag mode is active.</i>
TV Automatic shutdown	When this function is enabled, it defines the time at which your television automatically stops (between one and six hours).
Standby search mode (optional)	If the Standby search mode is enabled, available channels will be searched when the television is on standby. If the television finds missing or new channels, a menu screen is displayed, asking if you wish to apply these changes or not. The channels list is updated and edited after this process.

Options and functions of the TV menu

Storage Mode (optional)	Enables or disables the Demo mode..
Turn on mode	This parameter configures preferences of the power on mode. Always enabled : the television comes on when the main power on/off button is pressed. Standby: the television always comes on in standby mode. / Last view : the television comes on on the last channel/source selected.
Installation	
Automatic channel search	If you wish to install or update new channels, you can use this menu. It displays automatic setting options. Digital antenna : Searches and stores DVB channels. Digital cable :Searches and stores DVB cable television channels Analogue : Searches and stores analogue stations. Analogue and digital antenna : Search and store DVB and analogue channels. Analogue and digital cable : Search and store analogue and DVB stations..
Automatic channel search	Used to search or directly store a channel if the frequency is known.
Network channel search	Searches channels related to the transmission system.
Fine tune (analogue)	You can use this option to fine-tune analogue channels. It is only available if analogue channels are stored.
Initial Installation	Deletes all television settings and takes you back to the first installation.

Channel list

Use of the channel list

You can configure the channel list by moving, deleting, renaming and locking them to your liking.

Setting of parental control settings

To prevent certain programs from being watched, channels and menus can be locked through the parental control system.

To display lock menu option, enter the PIN code. By default, the set factory code is **0000**. After entering the appropriate PIN code, the Parental control settings menu will be displayed :

Menu lock : The Menu lock option enables or disables access to the menu.

Maturity lock: After installation, this option searches information related to parental programs and if this parental level has been disabled, access to broadcast is not enabled.


Parental control lock: When the Parental lock option is selected, the television can only be controlled with a remote control. In this case, the control panel buttons will not be active.

PIN code setting: Defines a new PIN code.

The default PIN code can change depending on the country selected.

If a PIN code is required to display a menu option, enter one of the following codes: 4725, 0000 or 1234.

Electronic Program Guide (EPG)

Some channels, not all, display information concerning the on-going program and the next one. Press the  button to get access to the EPG menu.

Through this menu, you will have access to the following information: Channels program, and summary of selected program. Press the INFO button of the remote control, reserve or record a selected program.

Red button (Previous day) displays the previous day's programs.

Green button (Next day) : displays the next day's programs.

Yellow button (Zoom): Displays more information concerning the program.

Blue button (filter) : Displays filter options.

The TV is not coming on

Check to ensure that the electricity plug is safely connected to the wall socket or that the batteries of the remote control are functional.

Poor picture quality

- Check if your antenna is properly connected. A poor signal level can negatively affect image quality.
- If you carried out manual settings, verify that you entered the right channel frequency.
- Image quality may be affected negatively when two devices are connected to the television set at the same time. If such is the case, disconnect one of the devices.

No image

- No image indicates that your TV is not receiving a signal. Have you selected the correct buttons on the remote control? Try once more. Also make sure that you have selected the right input source.
- Is the antenna connected properly?
- Is the antenna cable damaged?
- Are suitable plugs used to connect the antenna?
- If you are not sure, please consult your supplier.

No sound


- Has the **mute** button been pressed? If that is the case, press the "⊗" button, or increase the volume.
- Only one speaker is producing sound. Is the balance well placed in the middle? Consult the Sound menu.

The remote control is not working

- The batteries may be down. Replace the batteries.

Input sources cannot be selected.

- If you cannot select an input source, it is possible that no device is connected.
- Check the AV cables and connections if you have tried to connect a device.


SUBTITLE : Press the  button to see menu of the type selected. By using this functionality, you can check the program guide database depending on the type selected. Information available in the program guide will be searched and the results corresponding to your criteria will be listed.


INFO: Displays detailed information on the selected program.

Digital buttons (Skip): Go straight to your favourite channel by using digital buttons.

OK : After selecting a program, if you press the OK button, you access the following functions : **View** channel, **Store**, and / or **Reserve** the selected program.

Text (Search): Displays the EPG search menu. (Search guide).

 (**Info**) : Displays information related to on-going programs.

 (**RECORDING**): The television starts to record the selected program. You can press again to stop recording.

P+P-: More info on the events

IMPORTANT : Connect your USB device only when your television is turned off. Then turn on the TV set in order to enable the record function.

Note: During recording, it is not possible to change the channel or Source.

Note: It is impossible to record two channels at the same time.

Software update

Your television can, through the antenna or cable, search and provide updates.

Software update search via the user interface

Simply go through the main menu. Choose **Settings and** select other settings menu. In the **Other settings** menu, select **Software update** and press the **OK** button to open the **Update options menu**.

3 Search and update mode

When the TV set receives signal from the antenna. If the **Automatic search** option in the **Update options menu** is active, the television automatically turns on at 3:00 a.m. and launches the search for broadcasting channels in order to update the new software. If new software is found and downloaded successfully, the television begins to work with the new software version when next it is turned on.

Note: If the television does not come on after the update, disconnect it for two minutes, then connect it again.


Recording not available

To record a programme, you first have to connect your USB device to your television which you have to shut down first. Then turn on the TV set in order to enable the record function. If you are unable to record, try turning off the television and inserting the USB device again.



The USB device is too slow

If the message "USB too slow" appears on the screen at the start of a recording, try starting the recording again. If the same error message appears, it is possible that your USB device does not have the required speed. Try to connect another USB device.

Teletext

Press the  button to enter teletext mode. Press again to enable the Mix mode. Press one more time to exit. Follow the instructions displayed on the digital teletext screen.

Digital teletext (United Kingdom only)

Press on the  button to display information related to the digital teletext. Use the coloured buttons, the cursor buttons and the **OK** button to adjust. The operating method may differ, depending on the content of the digital teletext. Follow the instructions displayed on the digital teletext screen. When the  button is pressed, TV switches back to television broadcast.

Typical PC Input Display Modes

The following table is an illustration of some of the typical video display modes. Your TV cannot support all resolutions. It can support up to 1920x1080.

Index	Resolution	Frequency
1	640x480	60 Hz
2	800x600	56 Hz
3	800x600	60 Hz
4	1024x768	60 Hz
5	1024x768	66 Hz
6	1280x768	60 Hz
7	1280x960	60 Hz
8	1280x1024	60 Hz
9	1360x768	60 Hz
10	1400x1050	60 Hz
11	1600x1200	60 Hz
12	1920x1080	60 Hz

AV and HDMI Signal Compatibility

Source	Supported Signals	Available	
EXT SCART	PAL 50/60	O	
	NTSC 60	O	
	RGB 50	O	
	RGB 60	O	
Lateral AV	PAL 50/60	O	
	NTSC 60	O	
PC/YPBPR)	480i, 480P	60Hz	O
	576i, 576P	50Hz	O
	720P	50Hz 0,60Hz	O
	1080i	50Hz 0,60Hz	O
	1080P	50Hz 0,60Hz	O
	HDMI1 HDMI2	480i	60Hz
	480P	60Hz	O
	576i, 576P	50Hz	O
	720P	50Hz 0,60Hz	O
	1080i	50Hz 0,60Hz	O
	1080P	24Hz, 25Hz 30Hz, 50Hz, 60Hz	O

(X: Not Available, O: Available)

In some cases, the images on the television's screen may fail to display properly. It might be an issue of incompatibility with the standards of the source equipment (DVD, decoder, etc.). If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment.

Formats of files supported in USB mode

Media	File extension	Format		Remarks
		Video	Audio	(Maximum resolution/Bit rate, etc.)
Movie	mpg, mpeg	MPEG1, MPEG2		MPEG1: 768x576 @30P MPEG2: 1920x1080 @30P
	vob	MPEG2		1920x1080 @30P
	mp4	MPEG4, Xvid, H.264		
	mkv	H.264, MPEG4, VC-1		
	avi	MPEG2, MPEG4, Xvid, H.264		
	flv	H.264/VP6/Sorenson		H.264/VP6: 1920x1080 @30P Sorenson: 352x288 @30P
	3gp	MPEG4, H.264		1920x1080 @30P
Music	.mp3	-	MPEG 1 Layer 1 / 2 (MP3)	32Kbps ~ 320Kbps (Bit rate)32K, 44.1k, 48k Hz,16K, 22.05K, 24K Hz,8K, 11.025K, 12K Hz (Sampling rate)
Photo	.jpg .jpeg	Basic JPEG	-	max WxH = 17,000x10,000 4,147,200 bytes
	.	Progressive JPEG	-	max WxH = 4,000x4,000 3,840,000octets
	.bmp	-	-	max WxH = 9,600x6,400 3,840,000 bytes
Subtitle	.sub .srt	-	-	-



50334943