


D11TOY2


23

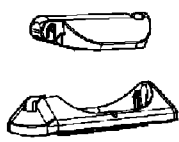

23B



23A

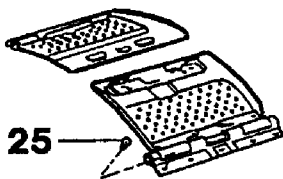

25


22

21

48A



36

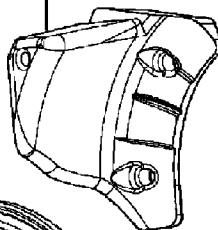

48



52



43A



45



20



7A


7



39



3

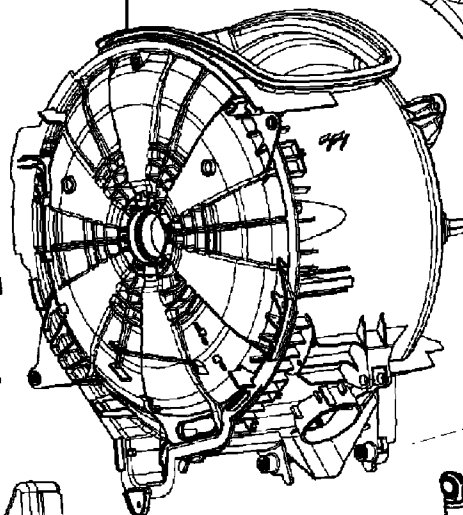

2

3



4



1



37

38

7A




39




40



47

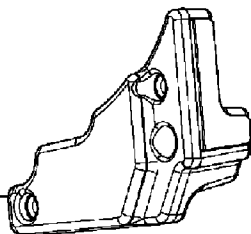

49

 


13

51




CARBC3CLA1

© Electrolux

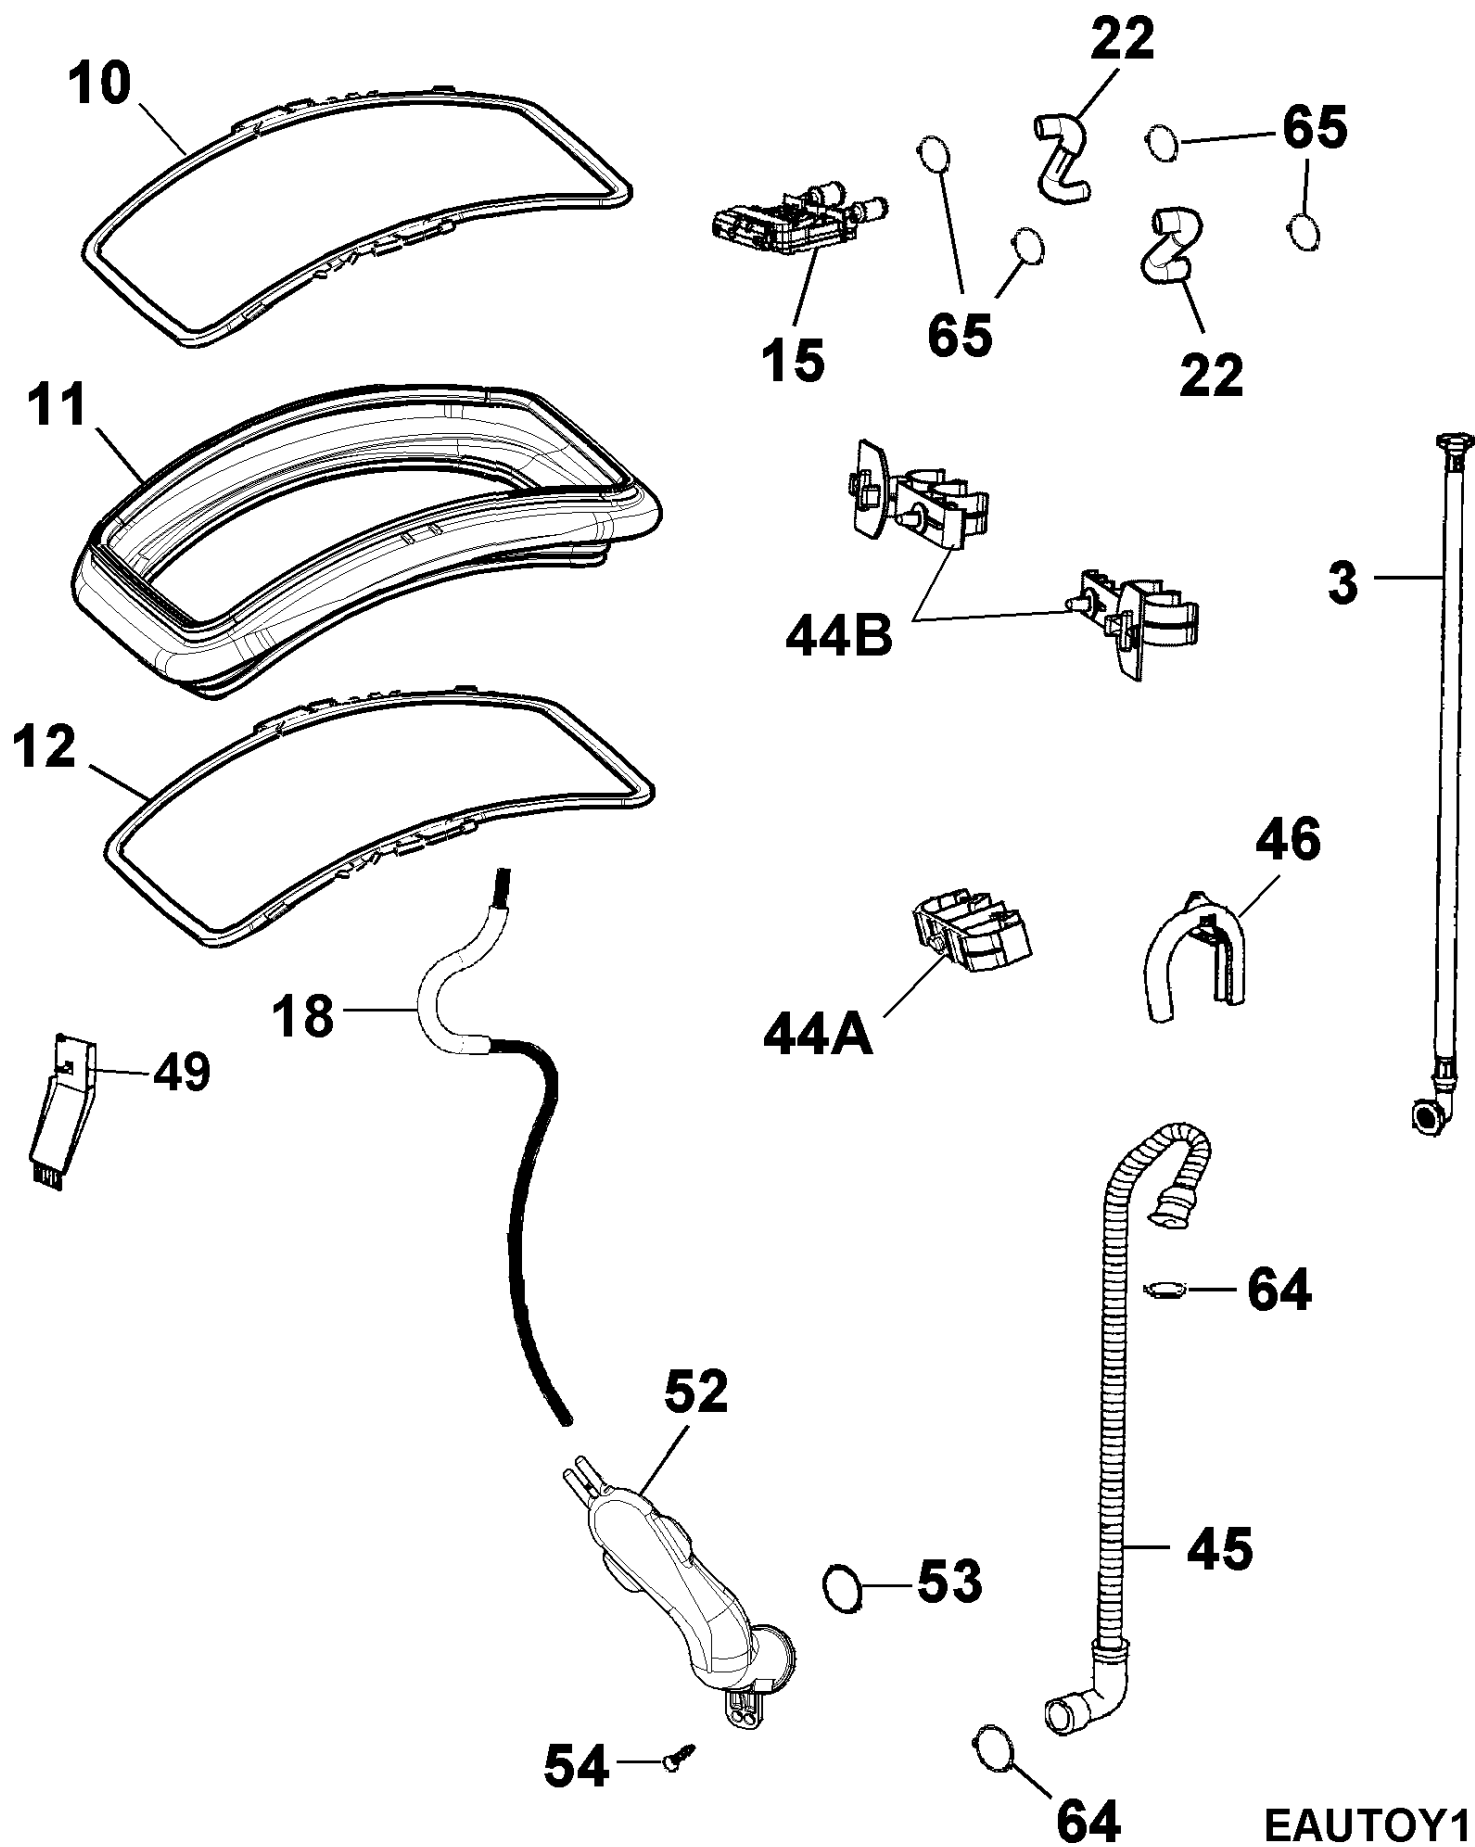

EAUTOY1

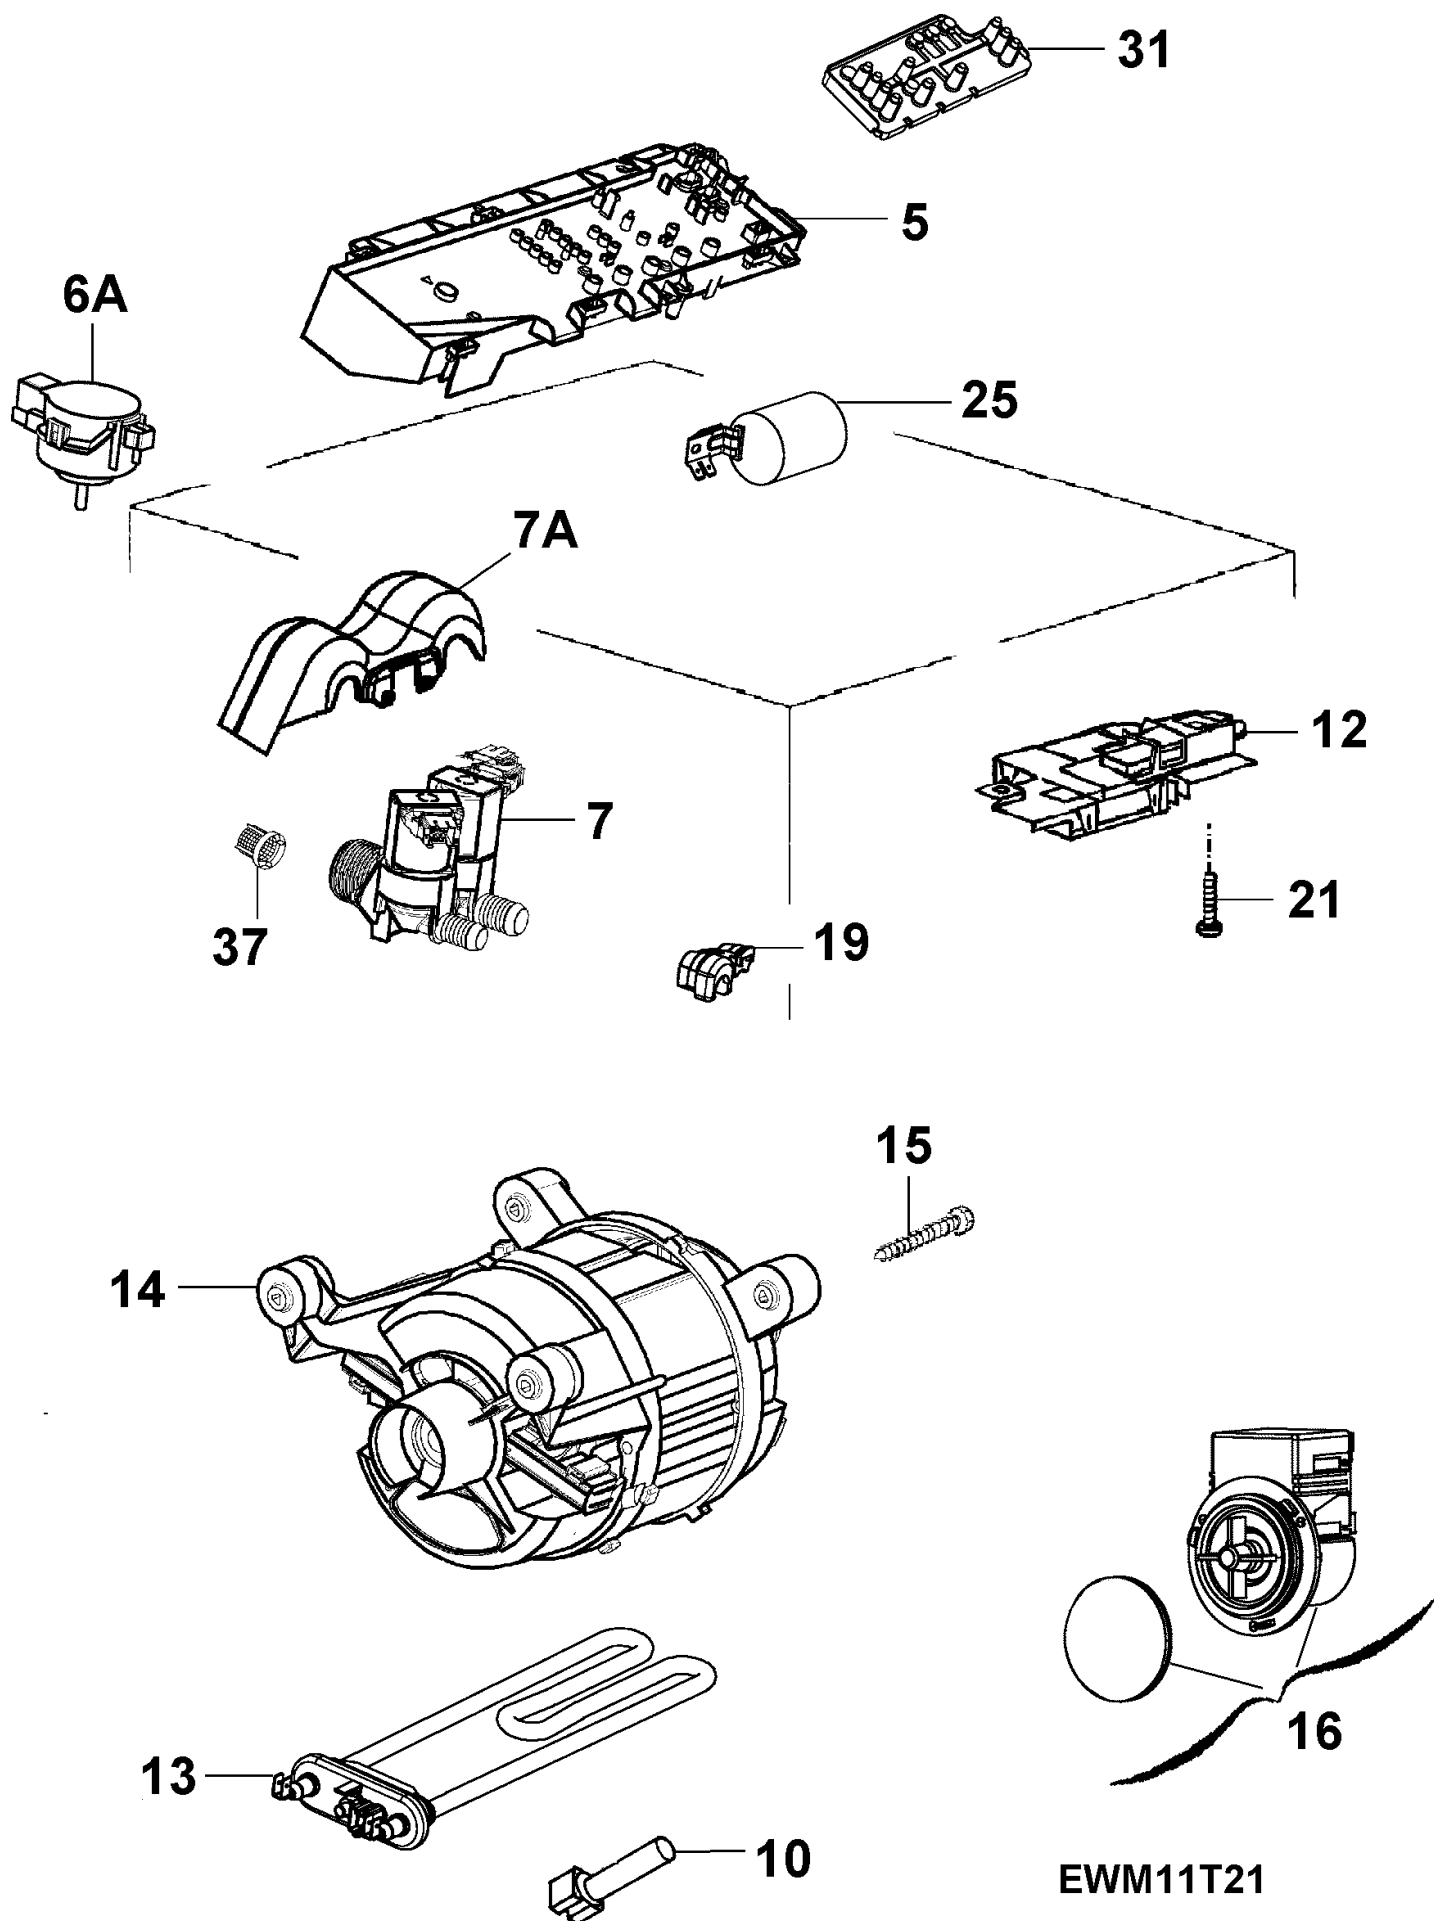

EWM11T21