


(Bottom view)

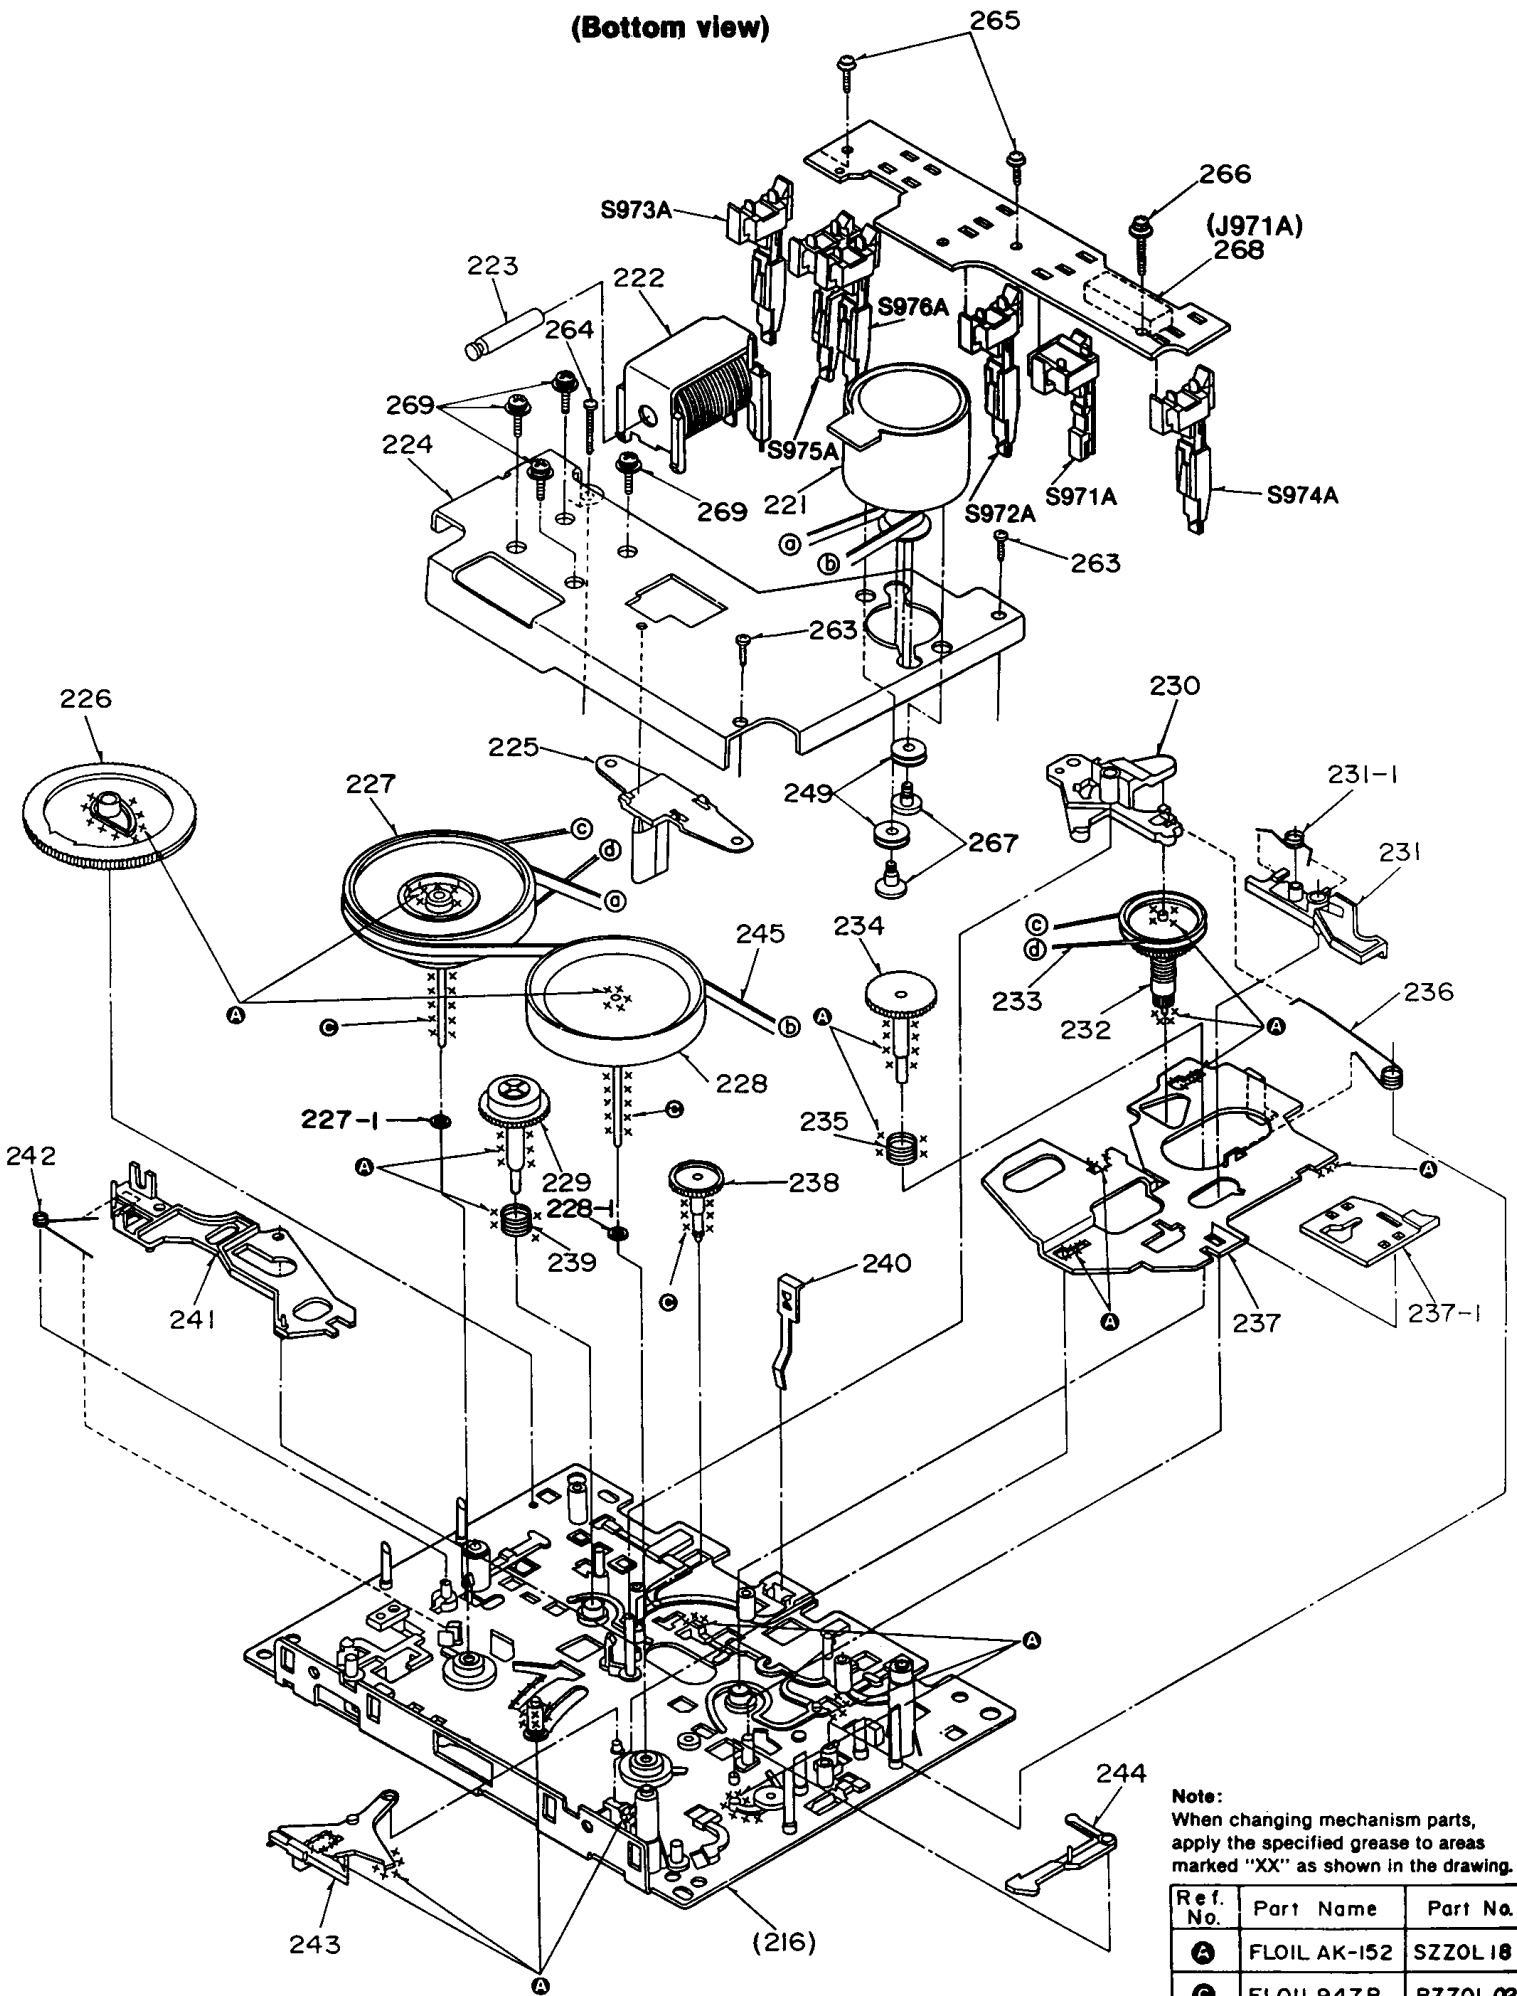

Note:
When changing mechanism parts,
apply the specified grease to areas
marked "X" as shown in the drawing.

Ref. No.	Part Name	Part No.
A	FLOIL AK-152	SZZ0L I8
C	FLOIL 947P	RZZ0L 02