



Nr.	ASWO-N°
B410	3881454
B440	3784832
B444	3784851
B446	3784837
B448	3784852
B452	3784854
B473	3784844
G420	3784868
G450	3784867
G480	3784826
G510	3813750
G520	3784861
G527	3784842
G530	3786518
G532	3784833
G546	3784787
G555	3776597
G680	3800158
K110	3784849
K140	3784850
K182	3784859
K188	3784856
K240	3784860
K248	3784843
K250	3784846
K330	3776601
K340	3776600
K350	3776599
K490	3789513
K502	3785085
K530	3784864
K546	3784841

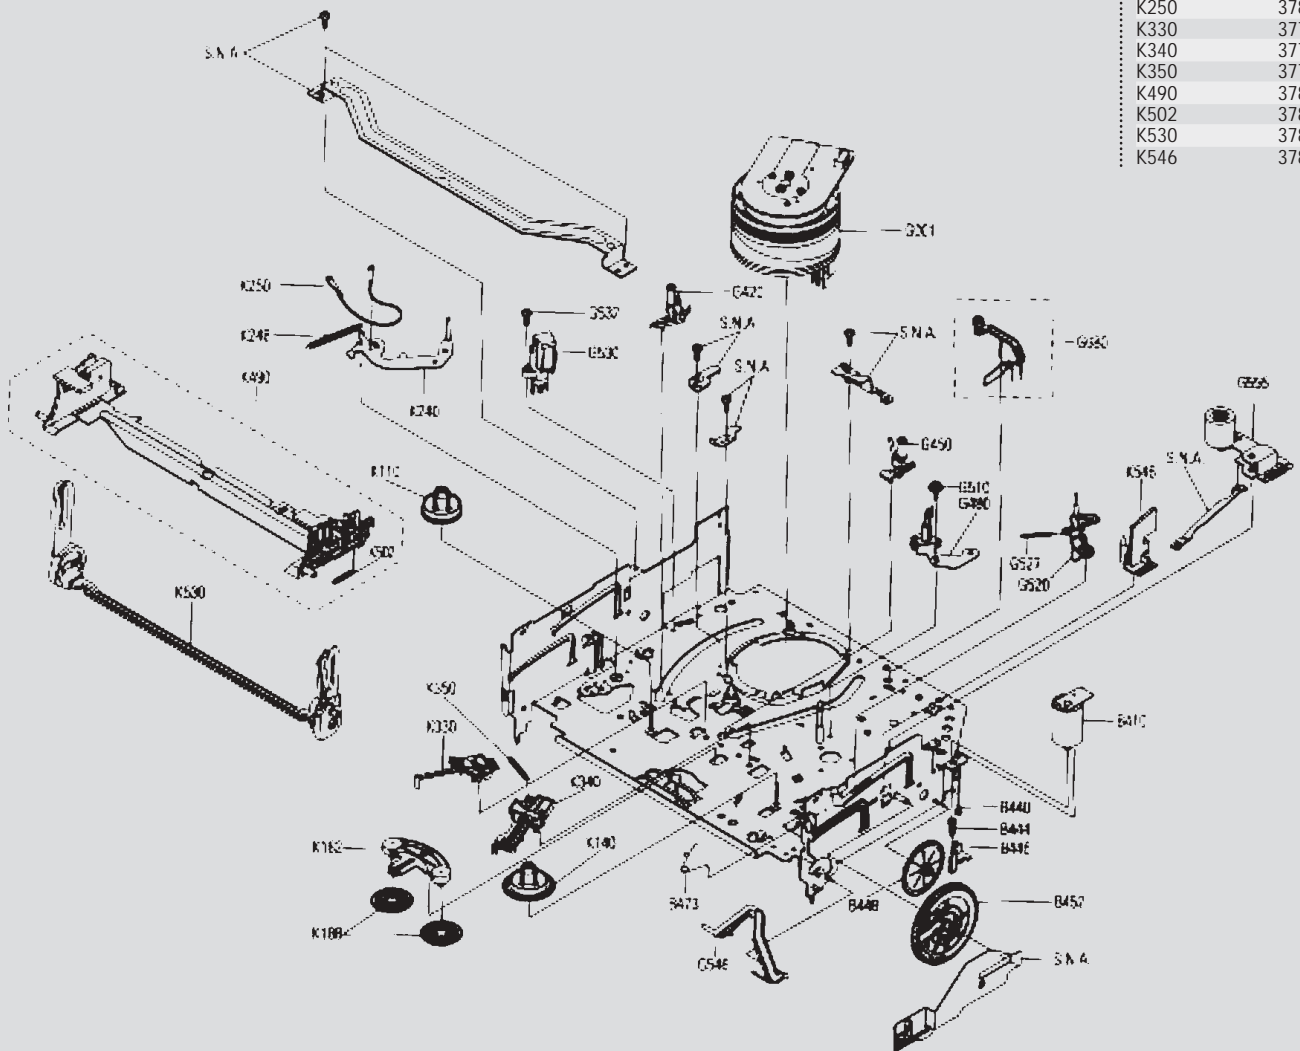

*) Diese Teile müssen gerätespezifisch bestellt werden, da sie teilweise unterschiedlich sind!
 These parts must be ordered by the specific model number, since they are not interchangeable!
 Ces pièces doivent être commandées par rapport au modèle, car elles diffèrent selon les versions!
 Questi pezzi devono essere ordinati secondo il tipo di apparecchio, perché parzialmente differenti!

Nr.	ASWO-N°
B238	380 62 30
B456	378 48 55
B458	378 48 53
B462	380 61 46
B484	378 48 57
B488	378 48 63
B500	378 48 62
B560	*
B570	378 48 31
G542	378 48 66
K200	378 48 40
K221	378 48 58
K222	378 48 34
K225	378 48 65

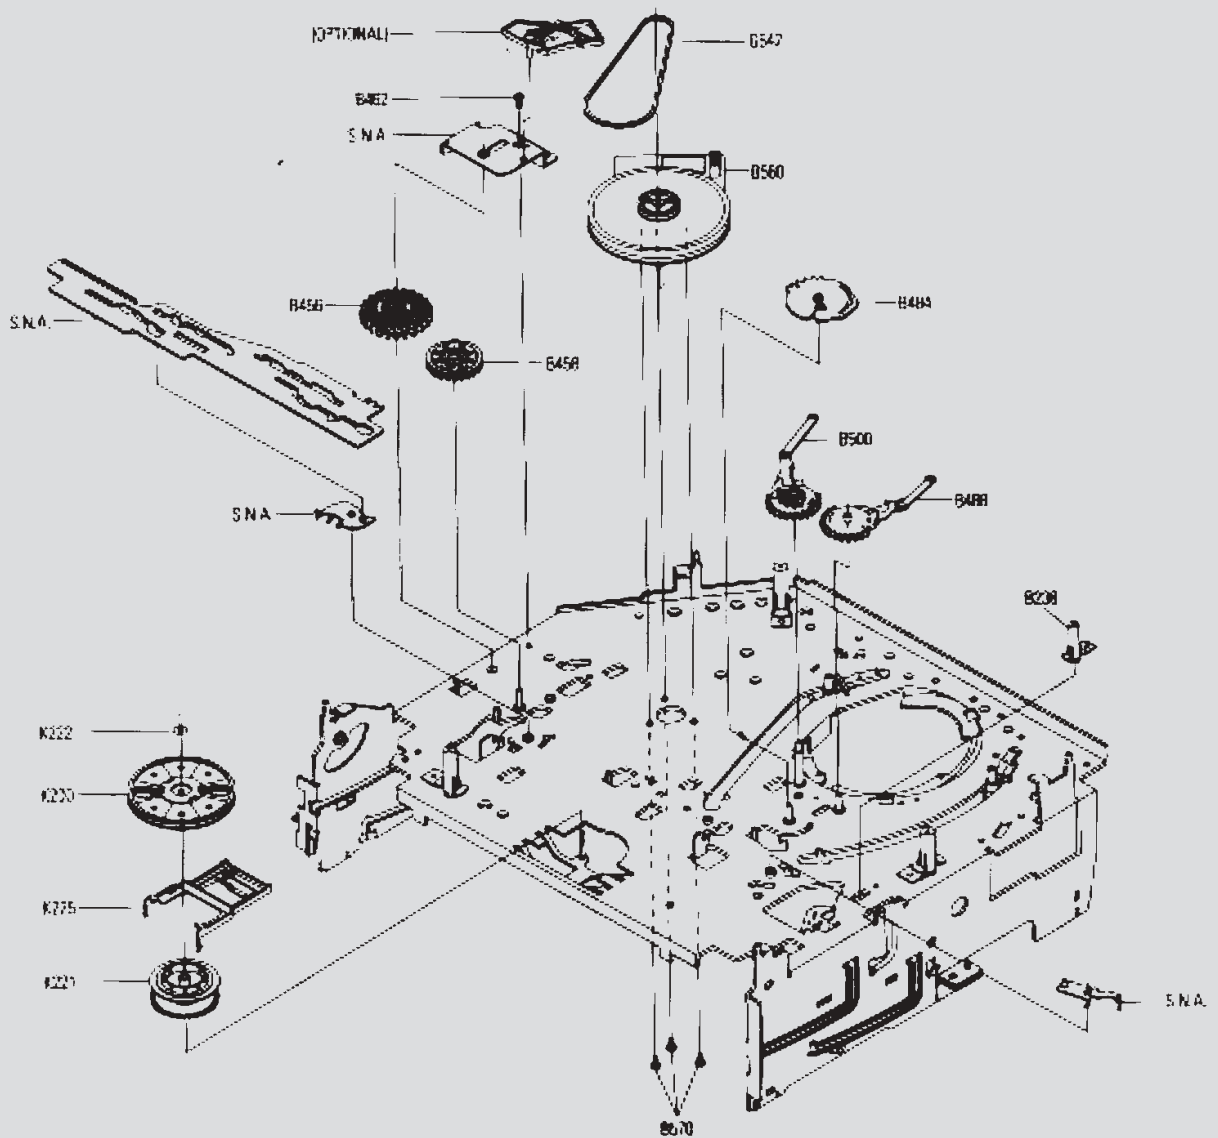

*) Diese Teile müssen gerätespezifisch bestellt werden, da sie teilweise unterschiedlich sind!
 These parts must be ordered by the specific model number, since they are not interchangeable!
 Ces pièces doivent être commandées par rapport au modèle, car elles diffèrent selon les versions!
 Questi pezzi devono essere ordinati secondo il tipo di apparecchio, perché parzialmente differenti!