


Cover (VPL-EX100/EX120)


4-2. Exploded Views

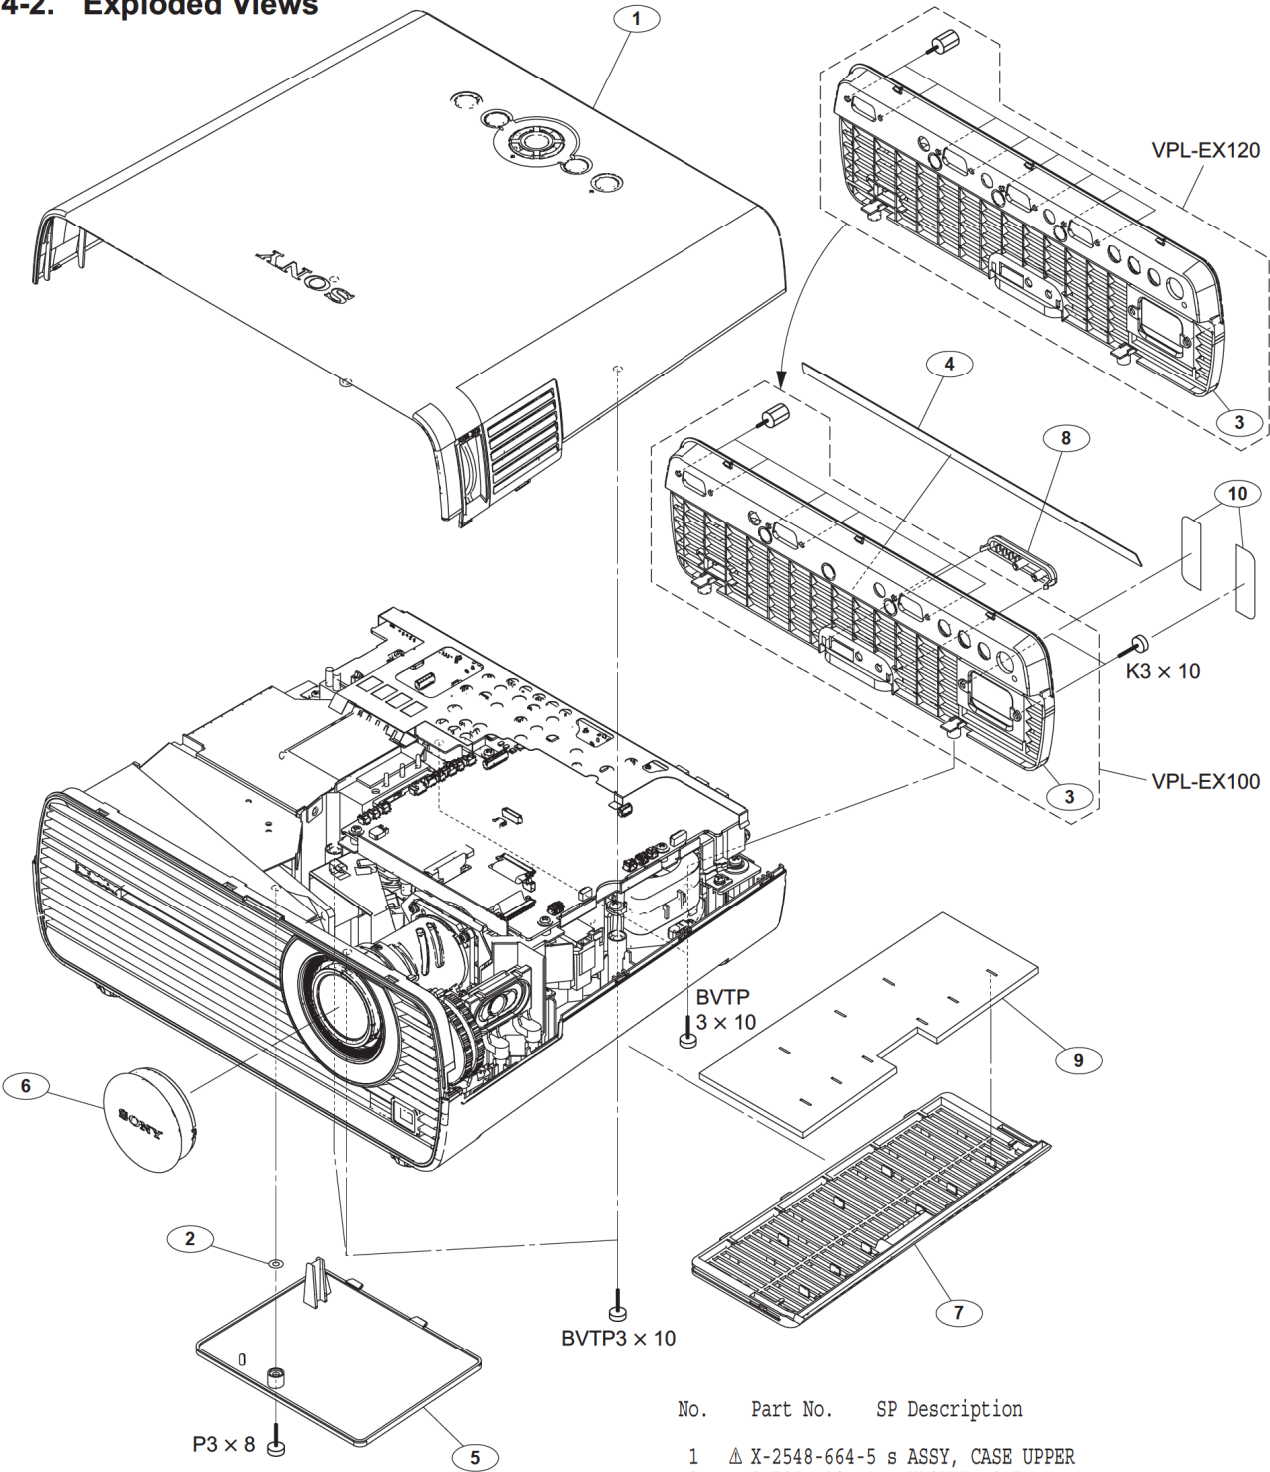


No.	Part No.	SP Description
1	△ X-2548-664-5	s ASSY, CASE UPPER
2	3-701-438-11	s WASHER, 2.5
3	△ 4-188-044-01	s PANEL, REAR (For VPL-EX100)
	△ 4-188-044-11	s PANEL, REAR (For VPL-EX120)
4	4-193-623-01	s CONNECTOR SHEET A (For VPL-EX100)
	4-193-624-01	s CONNECTOR SHEET B (For VPL-EX120)
5	△ 4-194-071-01	s DOOR, LAMP
6	4-194-075-01	s CAP, LENS
7	4-194-076-02	s COVER, FILTER
8	4-194-077-01	s BUTTON, ADJUST
9	4-194-098-01	s FILTER
10	4-261-652-01	s SHEET, BLIND

7-682-249-09 s SCREW +K 3X10
7-685-647-19 s SCREW +BVTP 3X10 TYPE2 N-S


Main Board

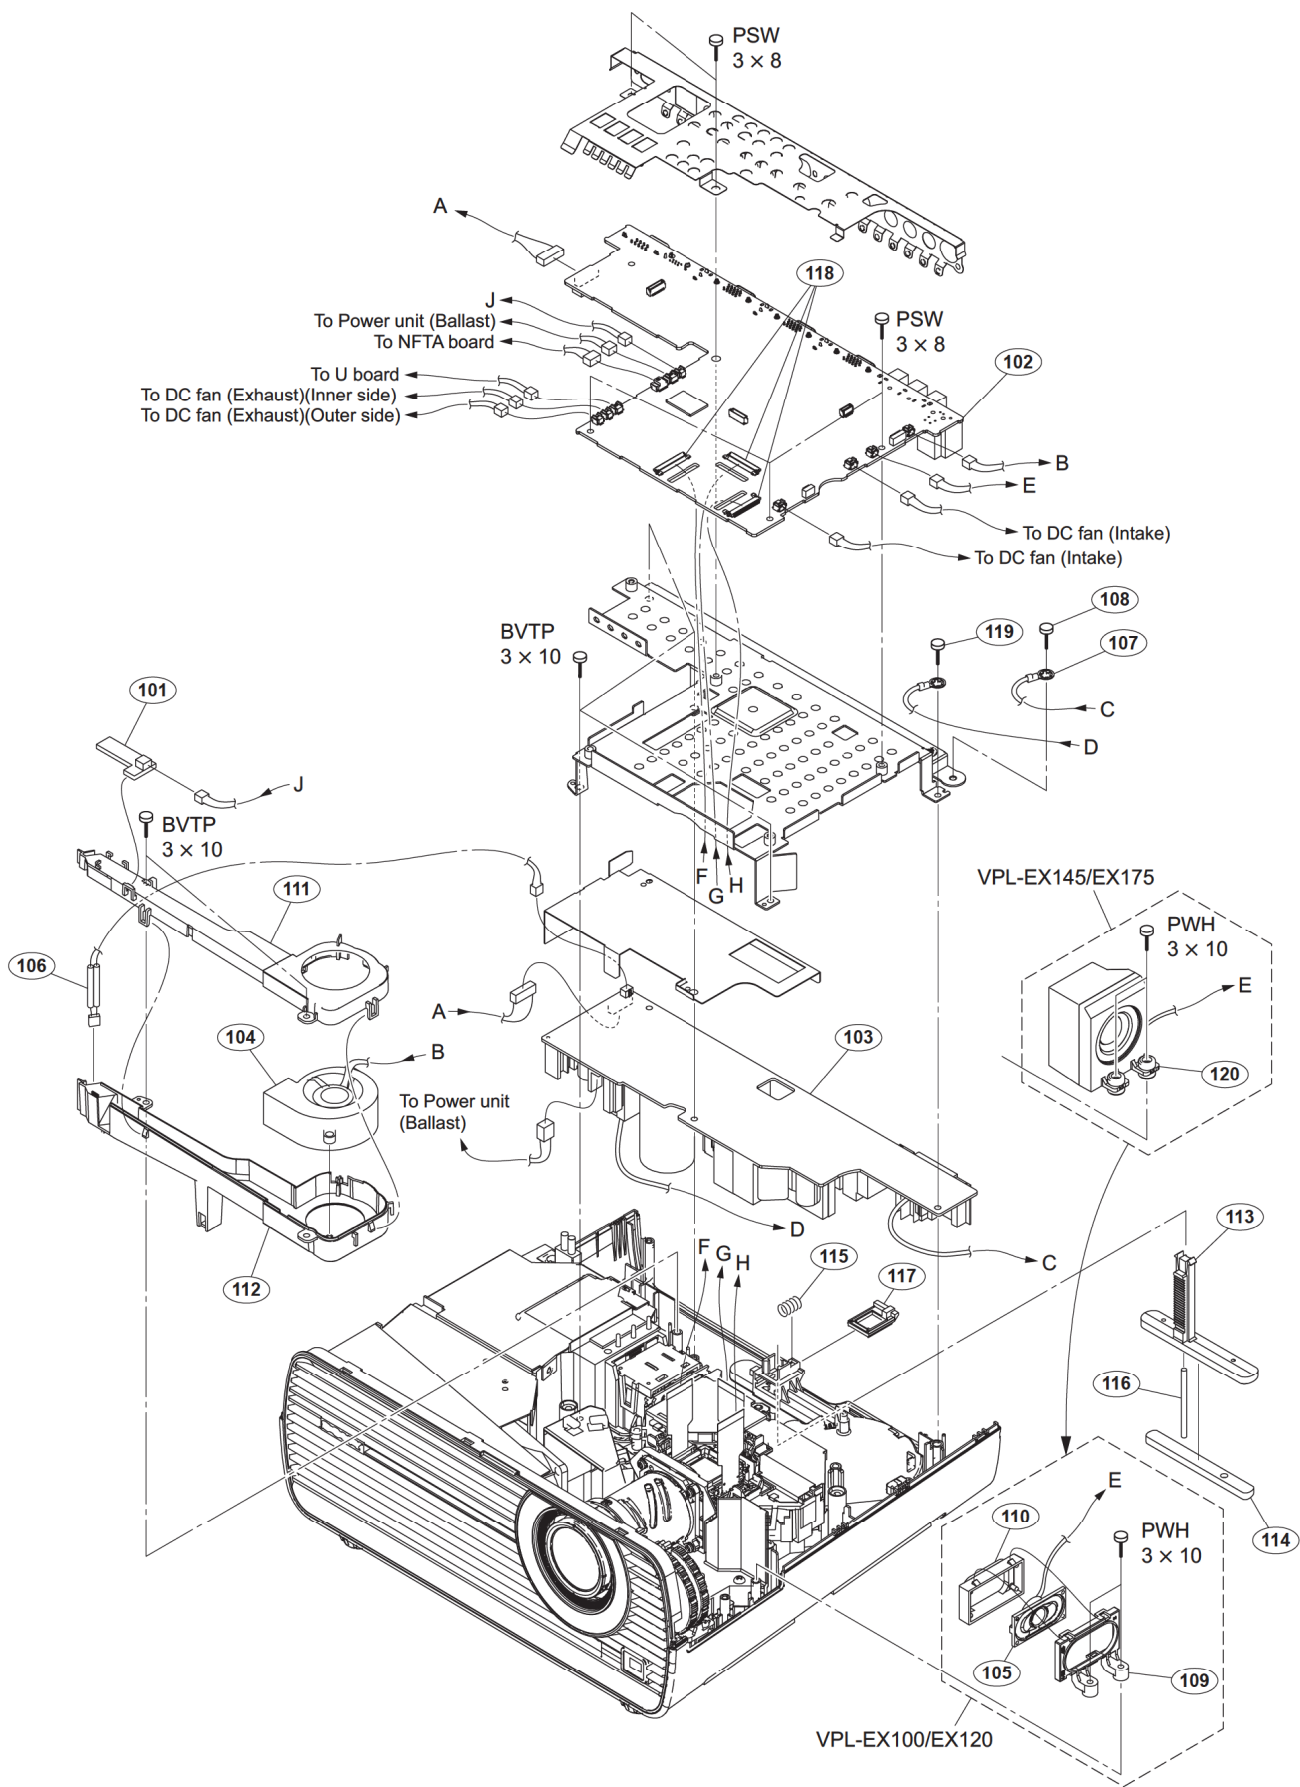

Lower Case

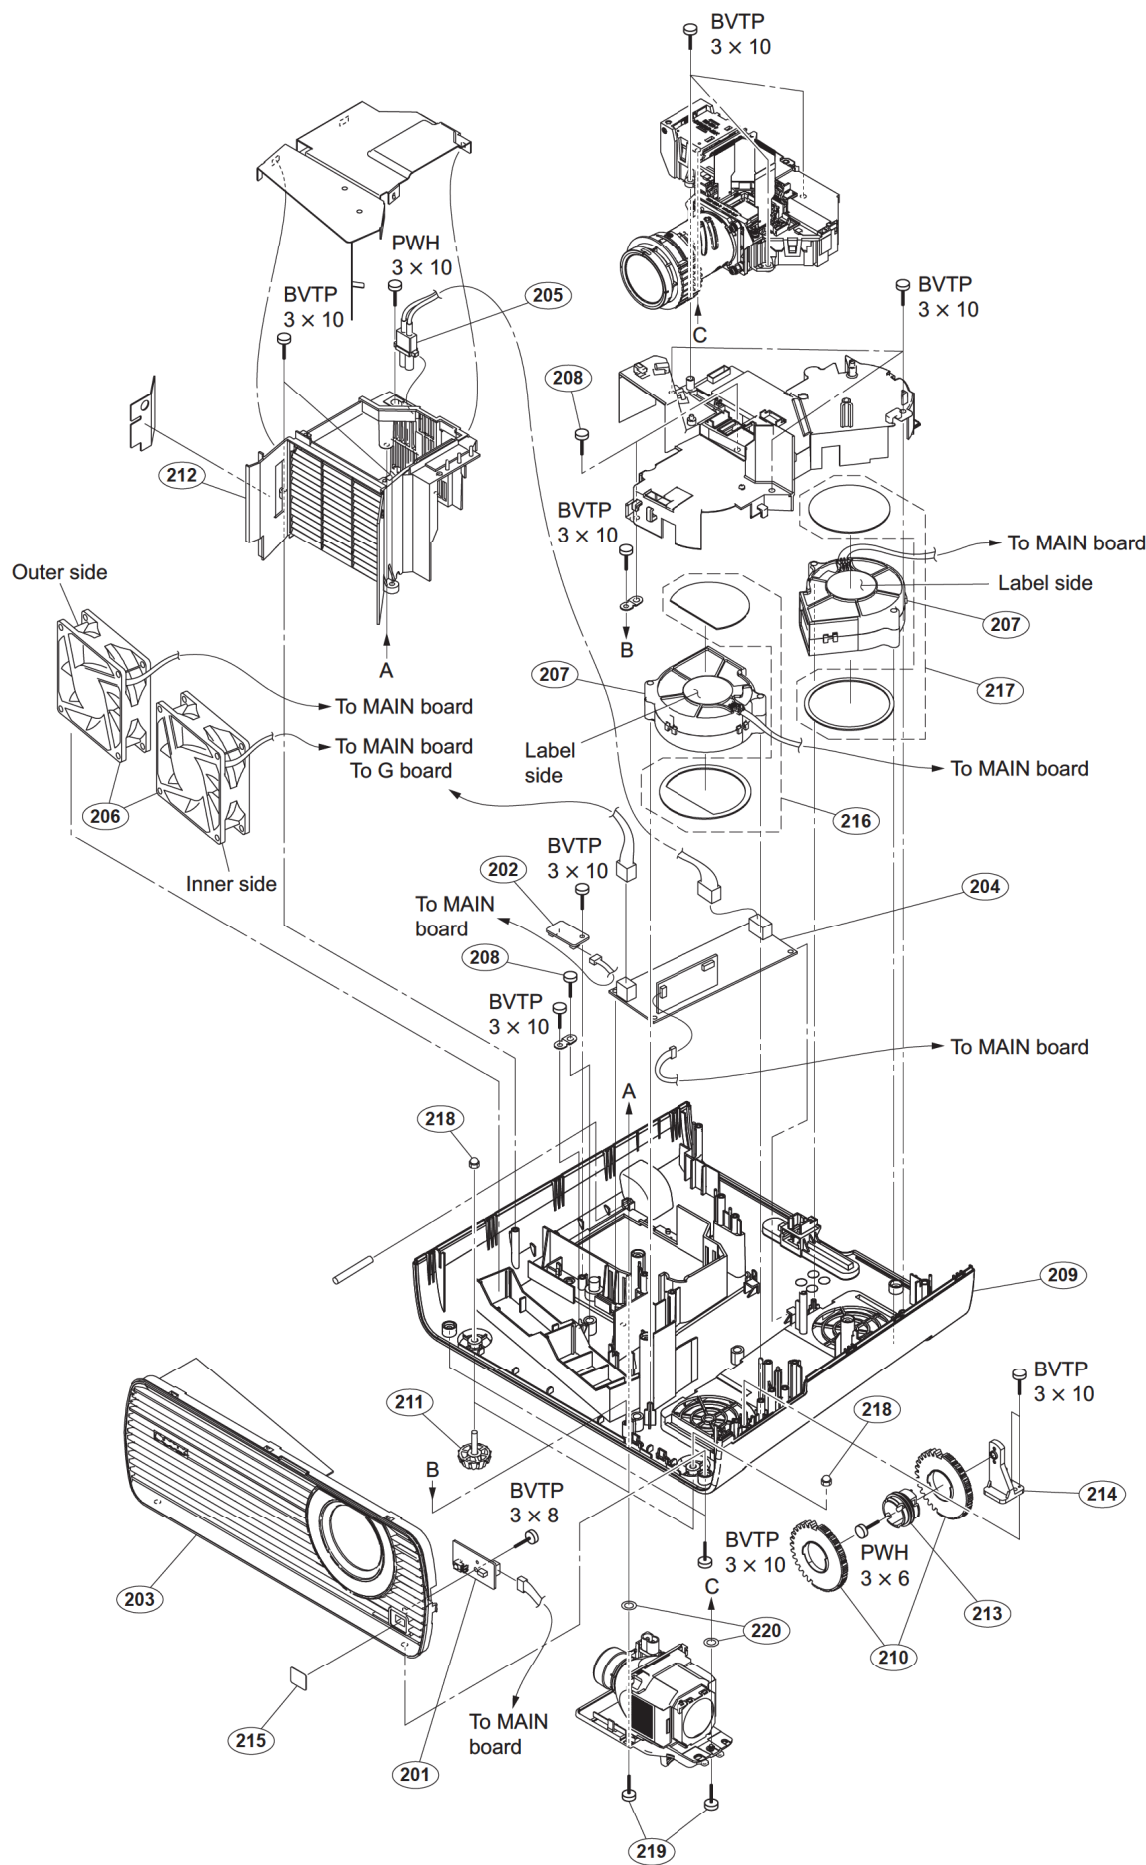

Optical Block

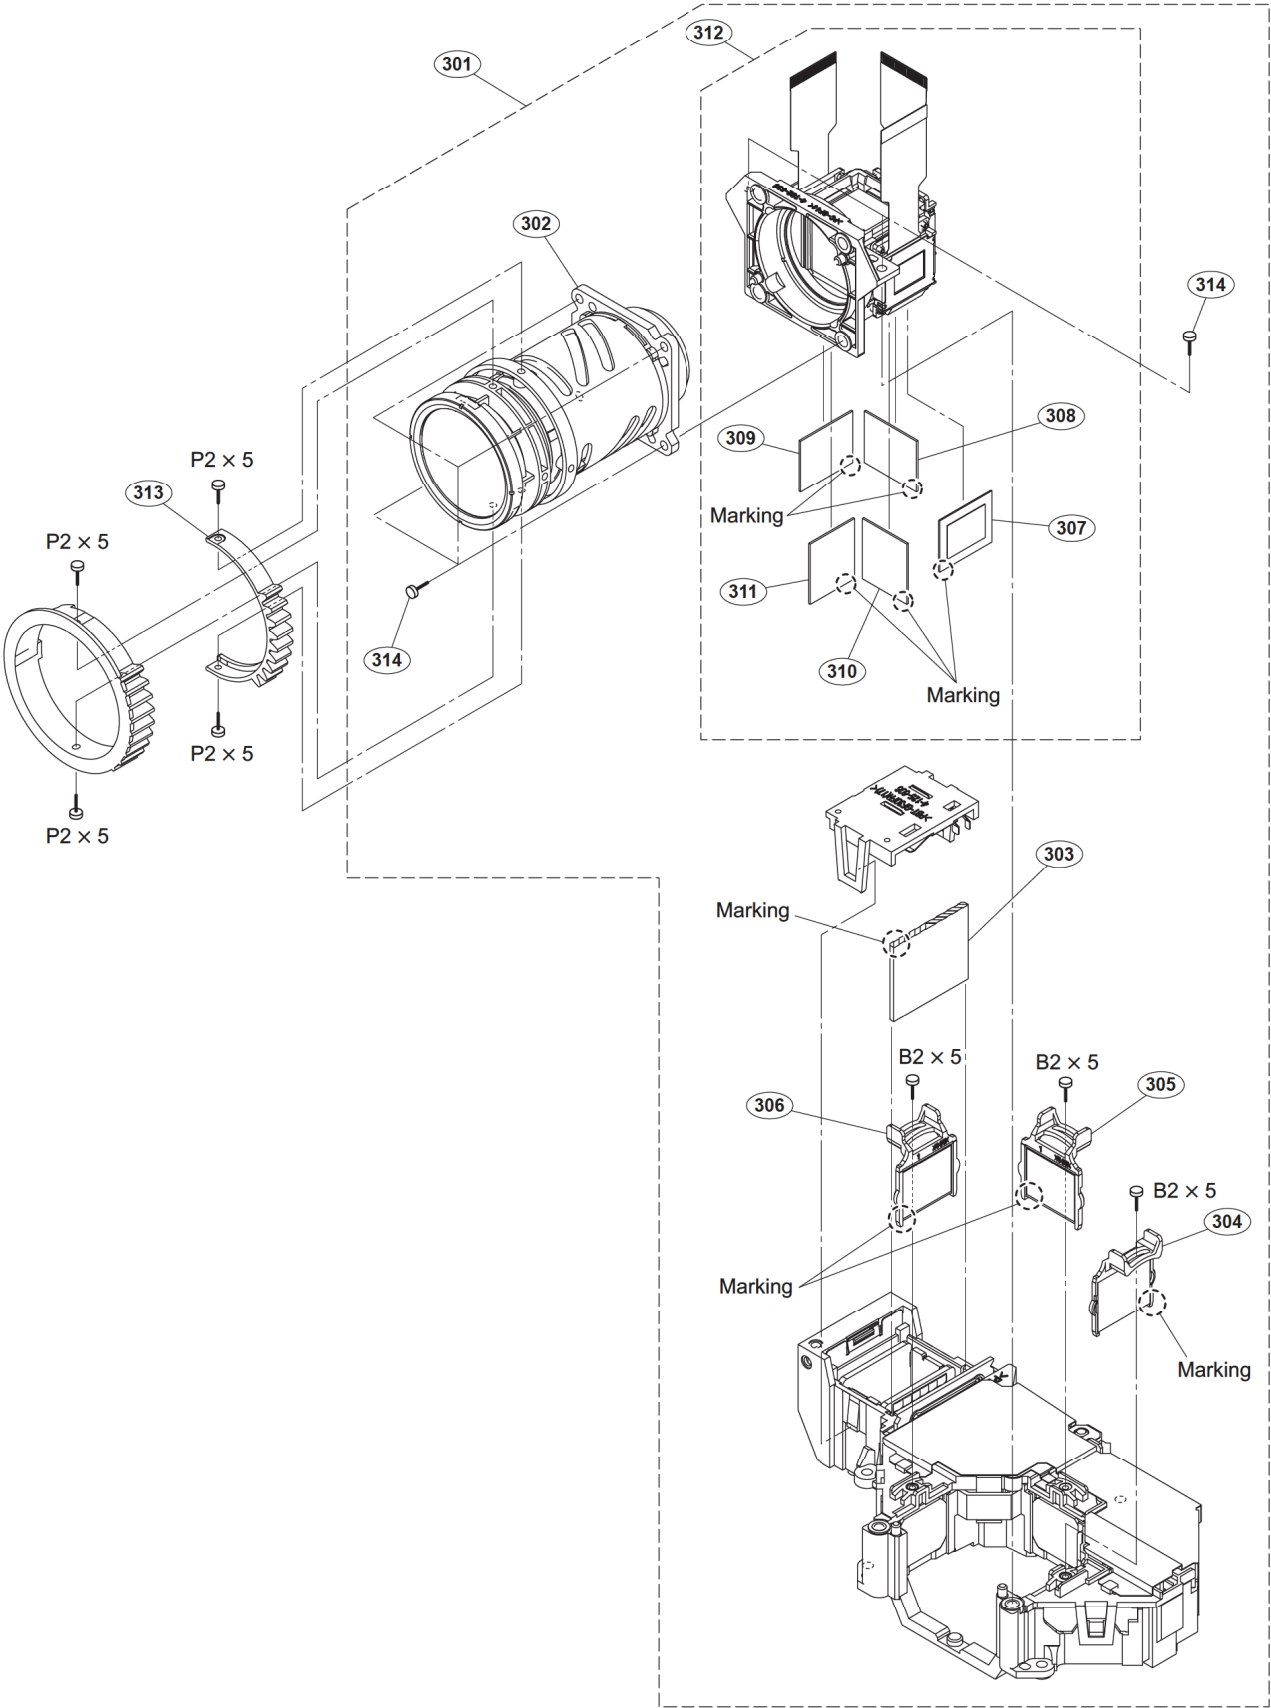

For detail of marking position, refer to Sections 1-3-13 to 1-3-15.