


(2) FRONT PANEL SECTION

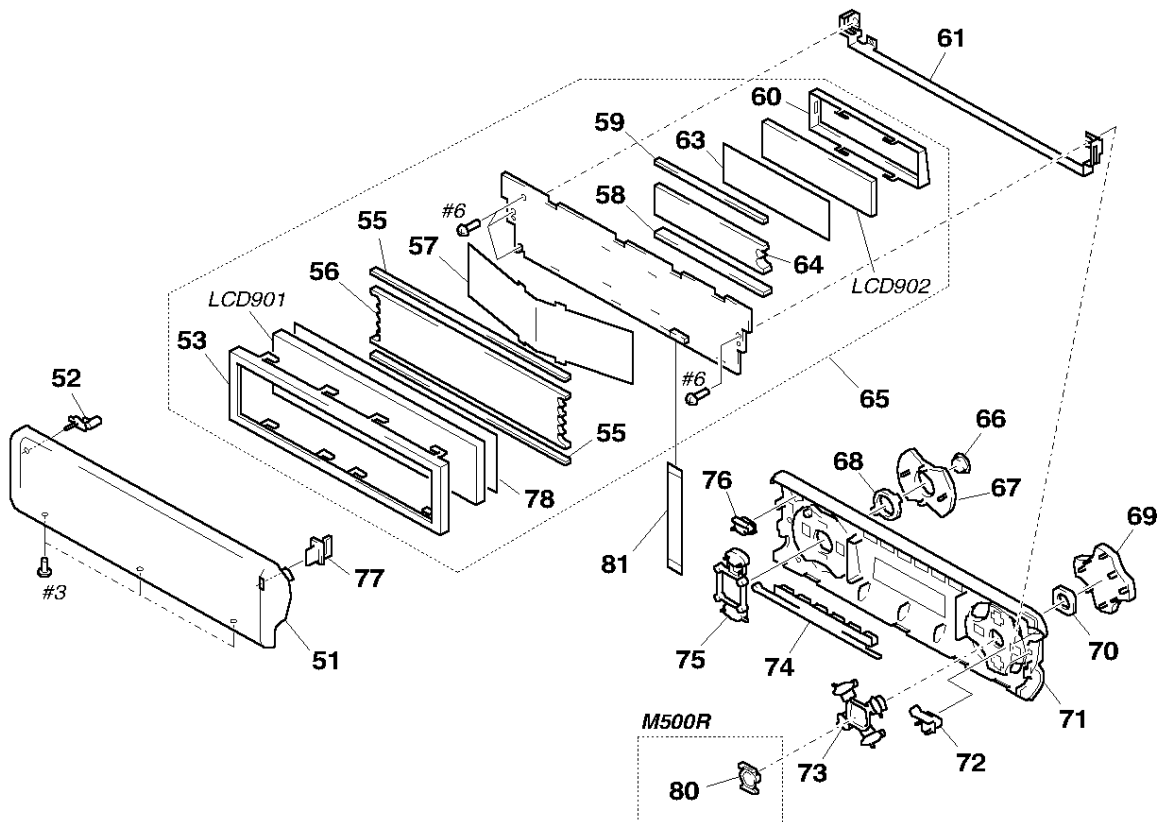

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	X-3378-768-1	PANEL (MAIN) ASSY, FRONT		69	3-045-739-01	BUTTON (SEEK) (M550) (DISC +, ►►►►►, - DISC, ◄◄◄)	
52	3-045-781-01	BUTTON (RESET) (MAIN)		70	3-045-734-01	CUSHION (SEEK)	
53	3-045-702-01	BRACKET (LCD) (MAIN)		71	3-044-469-11	PANEL (SUB), FRONT (M500R)	
55	1-694-685-11	CONDUCTIVE BOARD, CONNECTION		71	3-044-469-21	PANEL (SUB), FRONT (M550)	
* 56	3-045-703-01	PLATE (LCD) MAIN, LIGHT GUIDE		72	3-045-733-01	BUTTON (CLOSE)	
* 57	3-045-705-01	SHEET (MAIN), REFLECTION		73	3-045-731-01	BUTTON (ENTER) (LIST, ENTER, SOUND, MENU)	
58	1-694-686-11	CONDUCTIVE BOARD, CONNECTION		74	3-045-724-01	BUTTON (6KEY) (M550) (1, 2, 3, 4, 5, 6)	
59	1-694-687-11	CONDUCTIVE BOARD, CONNECTION		74	3-045-724-11	BUTTON (6KEY) (M500R) (AF, 1, 2, 3, 4, 5, 6, TA)	
* 60	3-045-706-01	BRACKET (LCD) (SUB)		75	3-045-728-11	BUTTON (MODE) (DSPL, MODE ◄►)	
* 61	X-3378-710-1	BRACKET (PANEL) ASSY		76	3-045-729-01	BUTTON (OFF)	
* 63	3-045-708-01	SHEET (SUB), DIFFUSION		77	3-045-735-01	BUTTON (OPEN)	
* 64	3-045-707-01	PLATE (LCD) SUB, LIGHT GUIDE		* 78	3-045-705-01	SHEET (MAIN), REFLECTION	
* 65	A-3294-886-A	DISPLAY BOARD, COMPLETE (M550)		80	3-045-732-01	BUTTON (D-BASS) (M500R)	
* 65	A-3294-895-A	DISPLAY BOARD, COMPLETE (M500R)		81	1-677-340-11	FLEXIBLE BOARD	
66	3-045-726-01	BUTTON (SOURCE)		LCD901	1-803-913-11	DISPLAY PANEL, LIQUID CRYSTAL	
67	3-045-725-01	BUTTON (+/-)		LCD902	1-803-914-11	DISPLAY PANEL, LIQUID CRYSTAL	
68	3-045-727-01	PLATE (RING), LIGHT GUIDE					
69	3-045-730-01	BUTTON (SEEK) (DSO) (M500R) (DISC +, ►►►►►, - DISC, ◄◄◄)					