

022

001




002




004



005

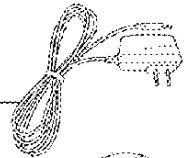

006

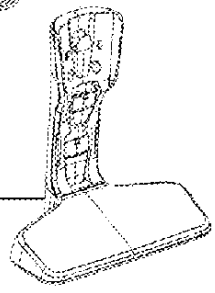

007




008





009




010

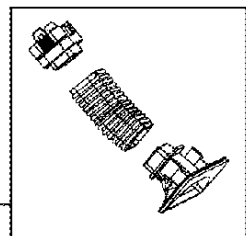


011

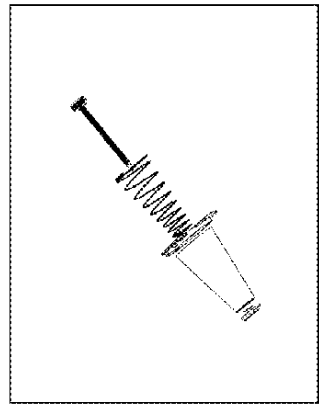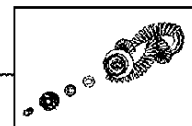


020

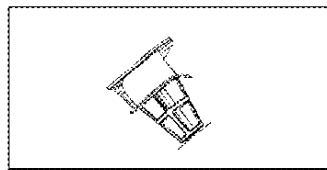


019

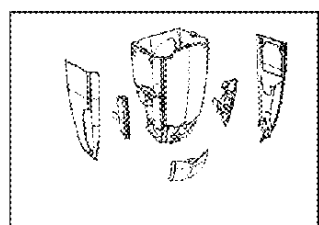


018

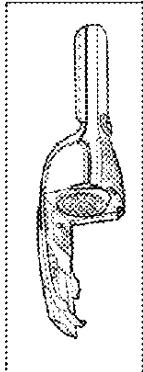

017

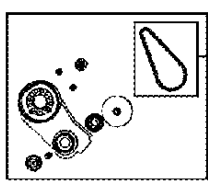

016

 

014



013



012

Pos.	Référence	Désignation
001	405506609/8	BROSSE,PETIT
002	405506610/6	SUCEUR PLAT
005	405506611/4	CHARGEUR,ELECTROLUX
006	405506612/2	STATION DE CHARGE
007	405506613/0	CLIP
008	405506146/1	PLAQUE,BROSSE
009	405506614/8	VOYANT PCB,ENSEMBLE
011	405506148/7	BROSSE,COMPLET
011	5029708400/1	TUBE,CONNECTION
012	5029708600/6	ROULETTE,ENSEMBLE,PETIT,2 PCS.
013	5029708700/4	ROULETTE,ENSEMBLE,GRAND,2 PCS.
014	405506149/5	MOTEUR,ÉLECTRONIQUE
015	405506150/3	COURROIE,ENSEMBLE
015	5029708800/2	COURROIE DE TRANSMISSION,POUR,
016	405501855/2	BOULON,GRAND
017	405506780/7	UNITÉ,SANS,RÉSERVOIR,ZB2904X
018	405506782/3	CUVE,SANS,FILTRE
019	5029707900/1	FILTRE,EXTÉRIEUR
020	5029707800/3	FILTRE,INTÉRIEUR,COMPLET
022	405506615/5	INTERRUPTEUR,COMPLET,"STICK UN