



1. CABINET AND MAIN FRAME SECTION

1. CABINET AND MAIN FRAME SECTION

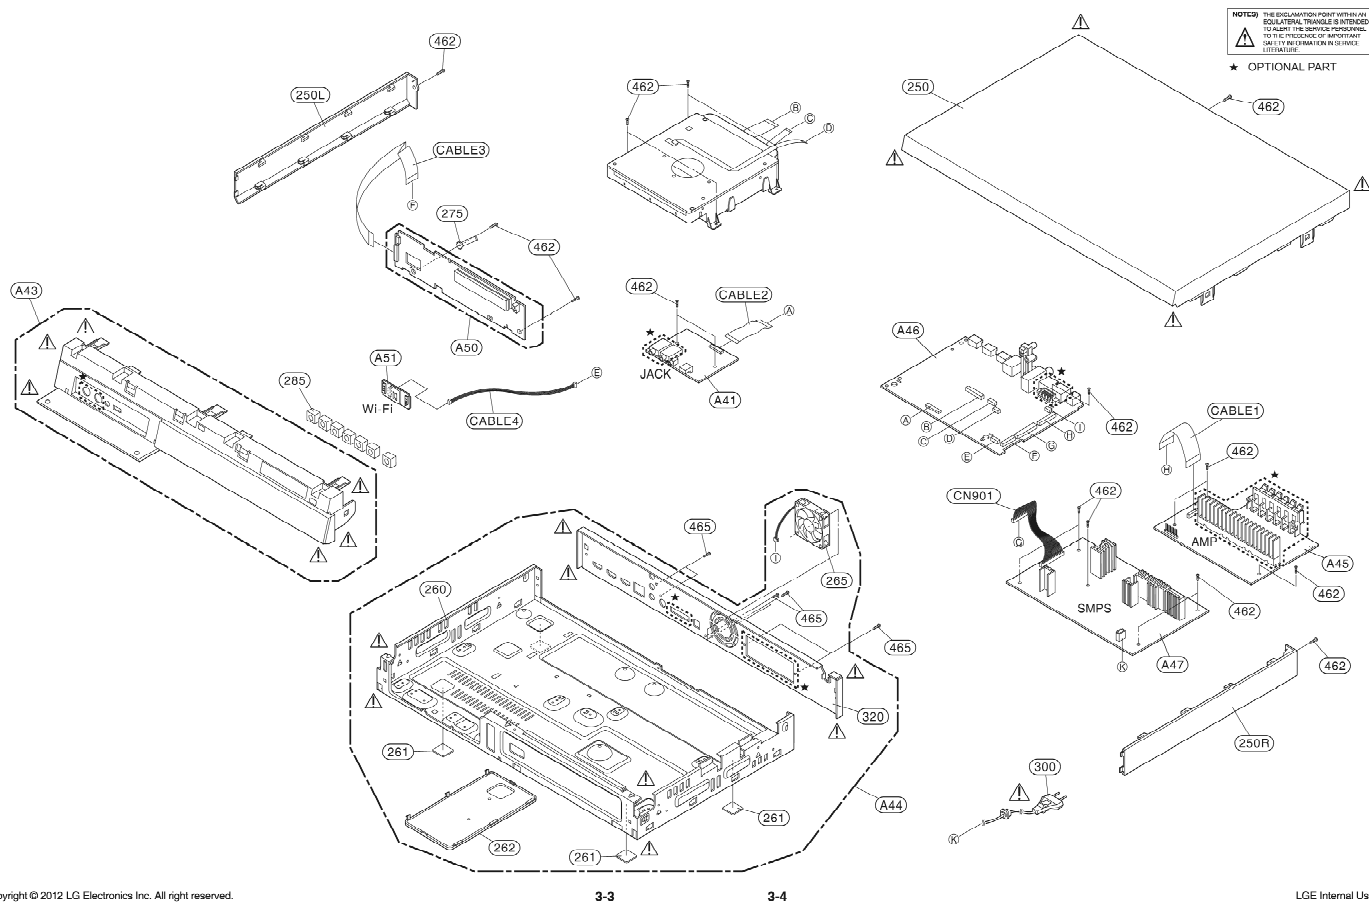

2. DECK MECHANISM SECTION

MEMO

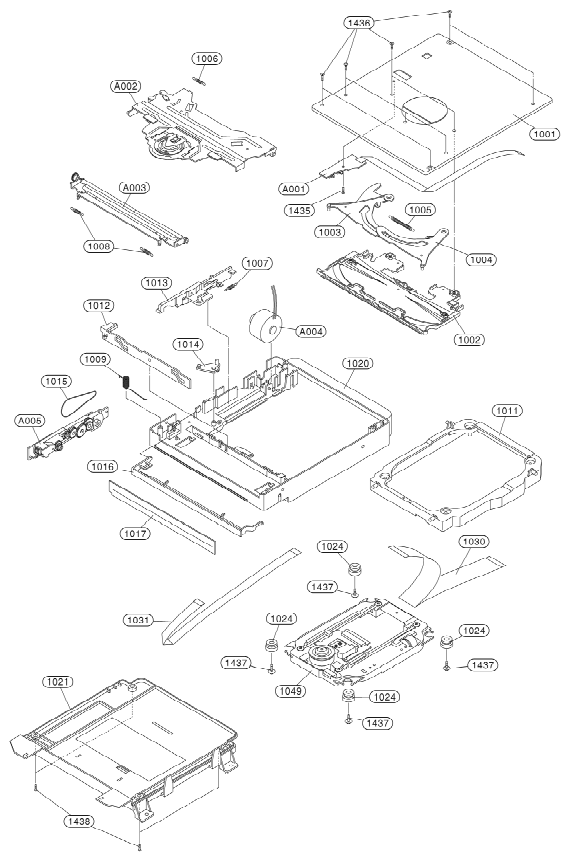


3. PACKING ACCESSORY SECTION

(801) Owner's manual




 (805) Clear sheet




(808) Batteries

 (811) Video cable




(825) FM antenna

 (832) CD title



(900) Remote control

(803) Packing

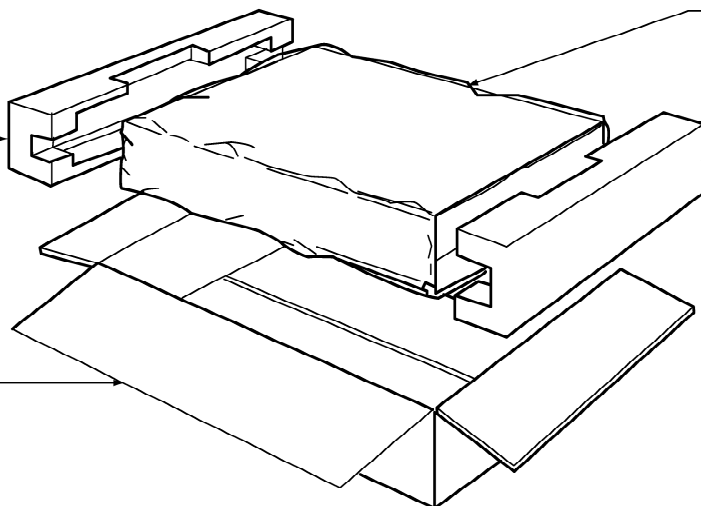


(804) Bag

(803) Packing

(802) Box, Master


Speaker cables

- (WIRE80) Front Left
- (WIRE81) Front Right
- (WIRE70) Center
- (WIRE90) Subwoofer
- (WIRE60) Rear Left
- (WIRE61) Rear Right

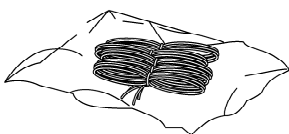


4. SPEAKER SECTION


4-1. CENTER SPEAKER

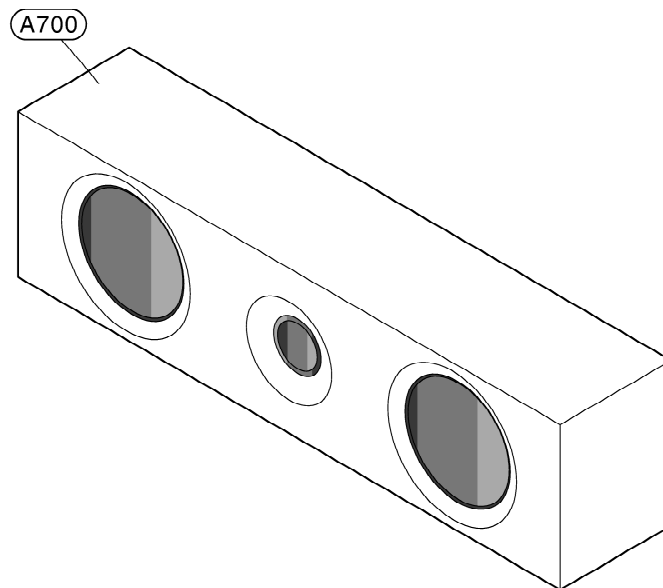

4-2. FRONT SPEAKER

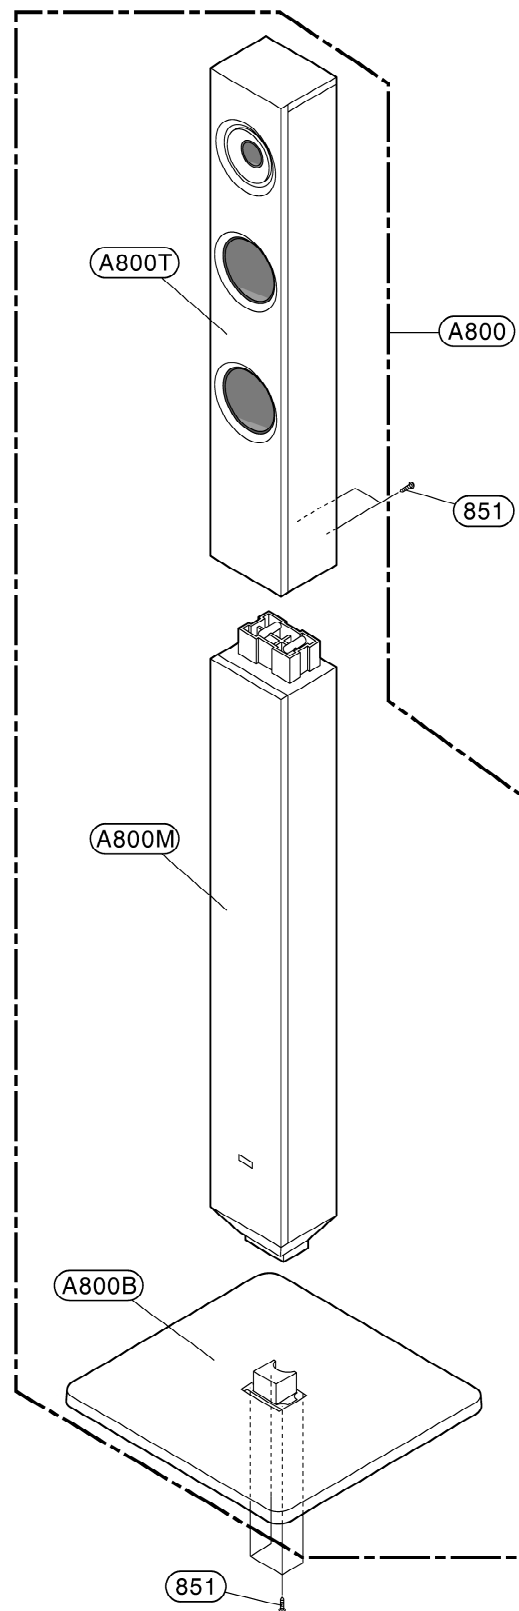

4-3. REAR SPEAKER

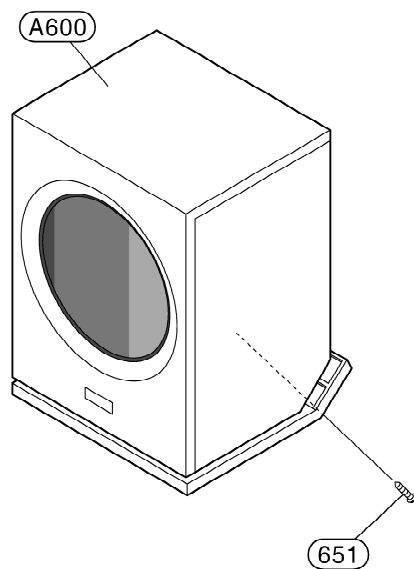

4-4. PASSIVE SUBWOOFER

