 





5-1-2. VTR COMPLETE SECTION

ns : not supplied
(PC105/PC105E)

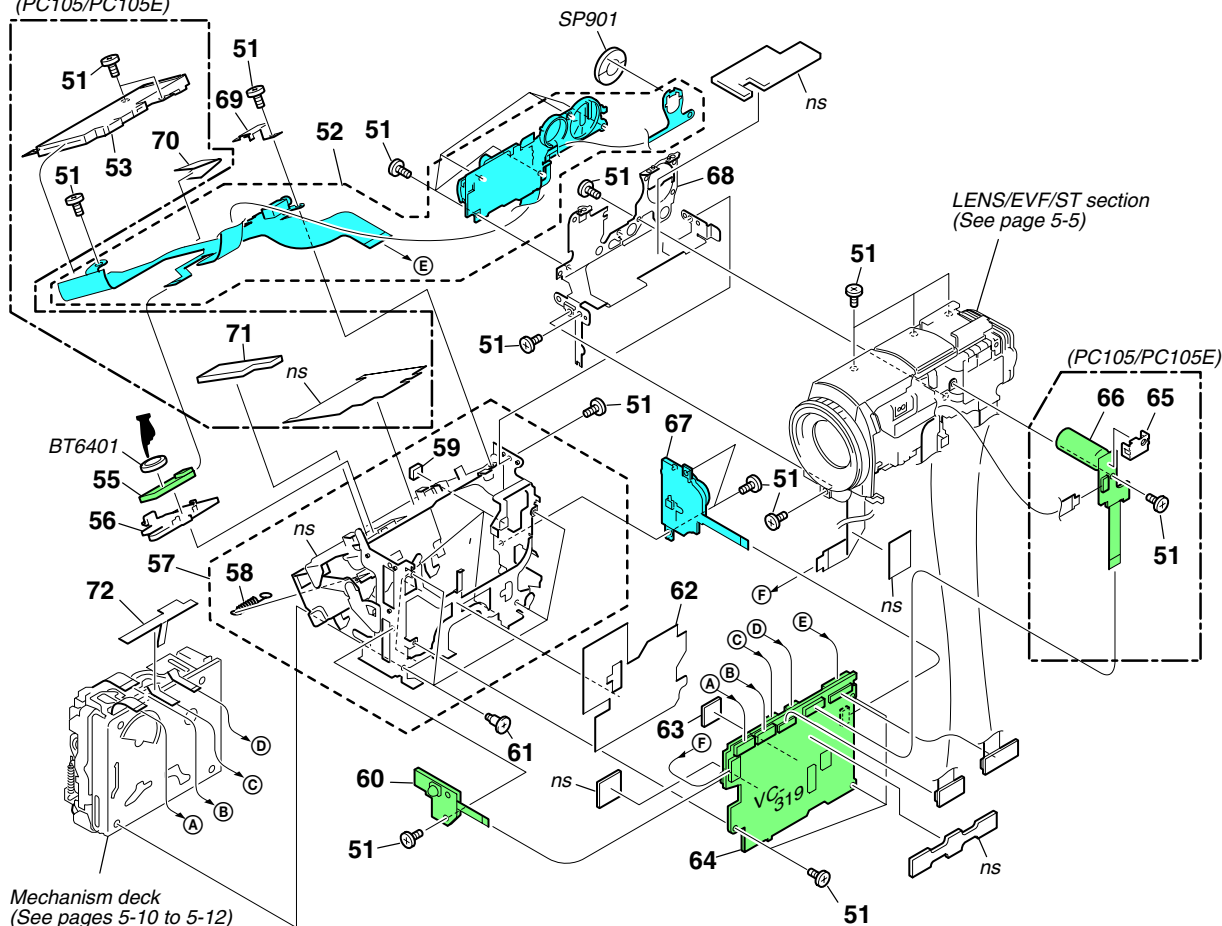

 : BT6401 (Lithium battery) LI-070 board on the mount position. (See page 4-65)

CAUTION :

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
51	4-974-725-01	SCREW (M1.7), LOCK ACE, P2	64	A-7016-988-A	VC-319B BOARD, COMPLETE (PC104E/PC105E)
52	1-477-820-11	SWITCH BLOCK, CONTROL (FK4400)			(SERVICE)
		(PC105/PC105E)	64	A-7016-989-A	VC-319C BOARD, COMPLETE (PC103E)
52	1-477-820-21	SWITCH BLOCK, CONTROL (FK4400)			(SERVICE)
		(PC103E/PC104E)	65	3-082-545-01	HOLDER, CONDENSER (PC105/PC105E)
53	1-816-271-21	CONNECTOR, MEMORY STICK 10P	66	A-7016-619-A	ST-084 BOARD, COMPLETE (PC105/PC105E)
		(PC105/PC105E)	67	1-477-821-11	SWITCH BLOCK, CONTROL (PS4400)
55	A-7016-632-A	LI-070 BOARD, COMPLETE			(PC105/PC105E)
56	3-082-538-01	HOLDER, LI	67	1-477-821-21	SWITCH BLOCK, CONTROL (PS4400)
57	X-3953-354-1	FRAME ASSY, G			(PC103E/PC104E)
58	3-954-730-01	SPRING, TENSION	68	X-3953-373-1	FRAME ASSY, FK
59	3-975-921-01	SHEET, VIBRATION PROOF	69	X-3953-460-1	HP RETAINER ASSY
60	A-7016-623-A	NS-018 BOARD, COMPLETE	70	3-083-938-01	SHEET, SHIELD, MS (PC105/PC105E)
61	3-062-214-01	SCREW (M1.4X1.5)	71	3-083-908-01	CUSHION, MS (PC105/PC105E)
62	3-082-580-01	SHEET, VC HEAT INSULATION	72	3-083-864-01	TAPE (Z), DF
63	3-082-583-01	SPACER, VC	SP901	1-825-261-11	LOUD SPEAKER (1.6CM)
64	A-7016-987-A	VC-319A BOARD, COMPLETE (PC105) (SERVICE)			



5. REPAIR PARTS LIST

5-1-3. LENS/EVF/ST SECTION

ns : not supplied

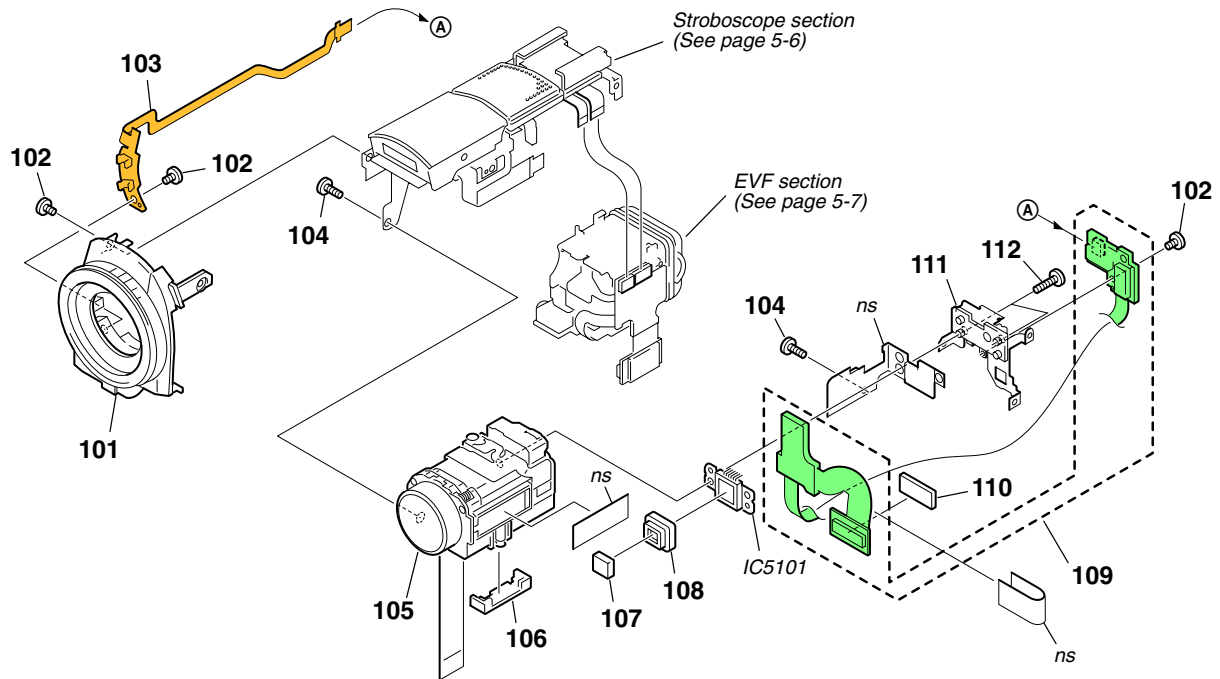


Be sure to read "Precautions upon replacing CCD imager" on page 4-8 when changing the CCD imager.

Ref. No.	Part No.	Description
101	X-3953-355-1	RING ASSY, MF (PC105/PC105E)
101	X-3953-402-1	RING ASSY (N), MF (PC103E/PC104E)
102	4-974-725-01	SCREW (M1.7), LOCK ACE, P2
103	A-7016-616-A	FP-672 BOARD, COMPLETE
104	3-713-791-71	SCREW (M1.7X4)
105	8-848-769-01	DEVICE, LENS LSV-751A
106	X-3953-094-2	PROTECTOR ASSY, MR

Ref. No.	Part No.	Description
107	1-758-569-11	FILTER BLOCK, OPTICAL
108	3-053-973-01	RUBBER (W), SEAL
109	A-7016-628-A	CD-444 BOARD, COMPLETE
110	3-082-559-01	CUSHION, CONNECTOR RETAINER
111	X-3953-364-1	FRAME ASSY, CD
112	3-713-791-21	SCREW (M1.7X8), TAPPING, P2
IC5101	A-7031-367-A	CCD BLOCK ASSY (CCD IMAGER)

5-1-4. STROBOSCOPE SECTION

ns : not supplied

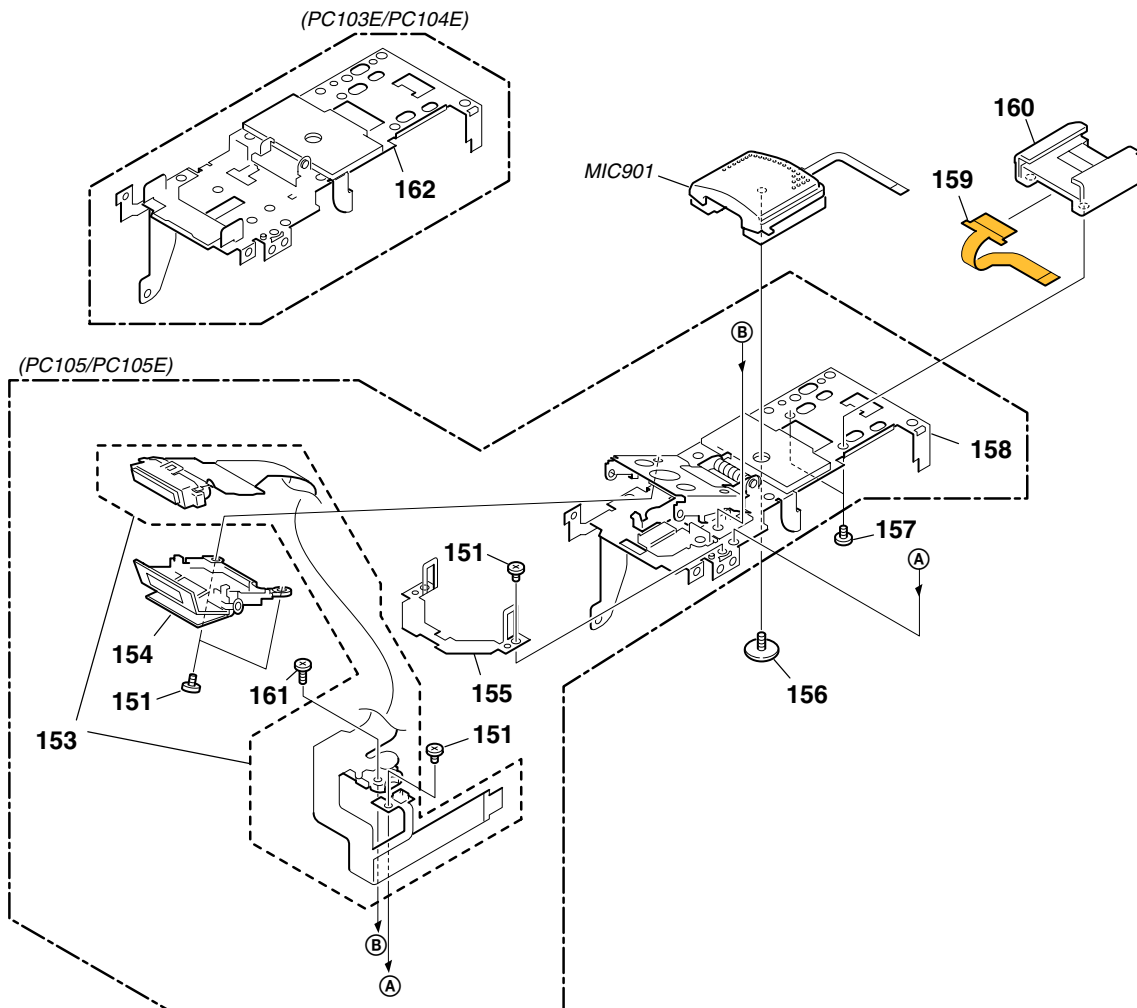

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
151	3-078-893-11	O PLATE +P2 MAIN EG GRIP M1.7	158	X-3953-362-1	FRAME ASSY, ST (PC105/PC105E)
△ 153	1-477-819-11	FLASH UNIT (FL4400) (PC105/PC105E)	159	1-687-816-11	FP-671 FLEXIBLE BOARD
154	X-3953-370-1	CABINET (LOWER) ASSY, ST (PC105/PC105E)	160	1-793-996-11	CONNECTOR, EXTERNAL
155	3-082-542-01	STOPPER, ST (PC105/PC105E)	161	3-068-597-11	GRIP (M1.4), EG
156	3-082-584-01	SCREW, TAPPING, SPECIAL	162	X-3953-391-1	FRAME ASSY (N), ST (PC103E/PC104E)
157	3-080-198-11	SCREW(M1.7),LOCK ACE,P2	MIC901	1-542-523-11	MICROPHONE UNIT

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



5. REPAIR PARTS LIST

5-1-5. EVF SECTION

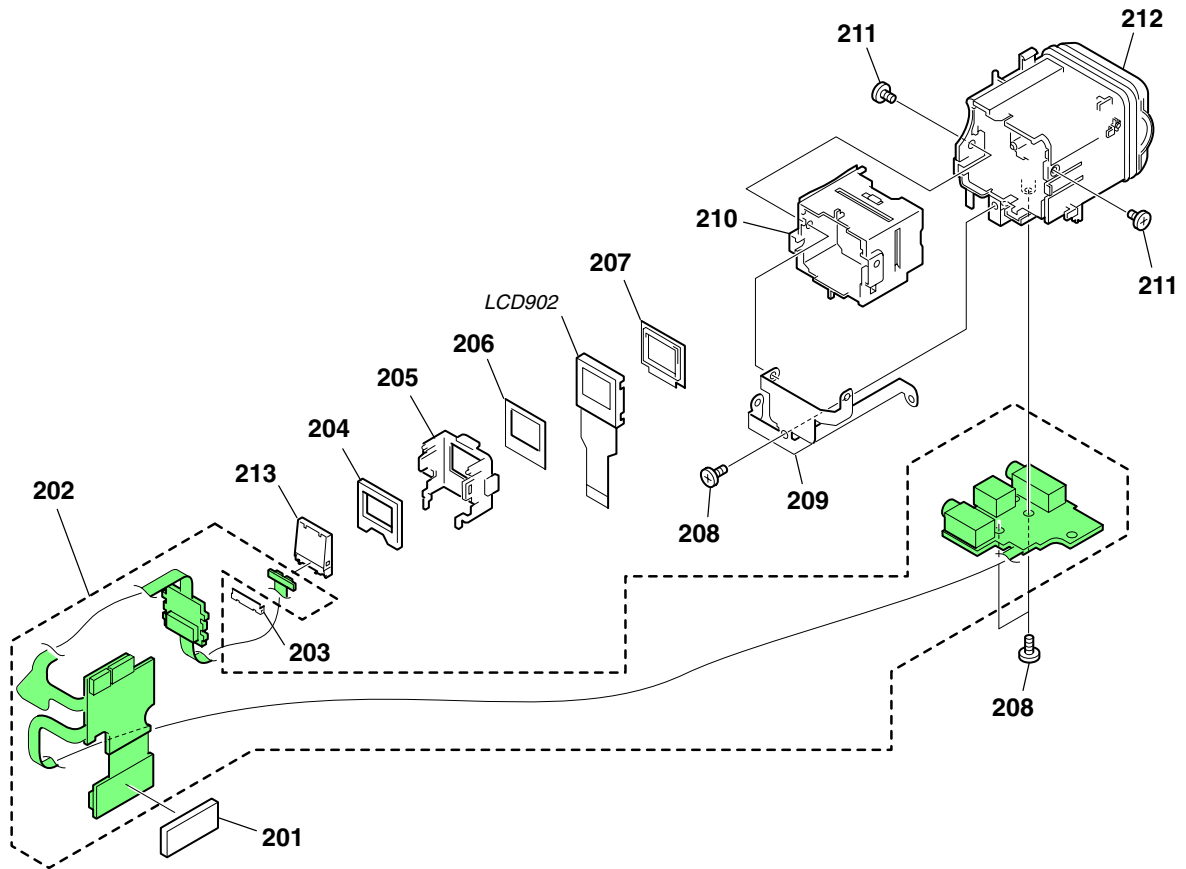

Ref. No.	Part No.	Description
201	3-082-559-01	CUSHION, CONNECTOR RETAINER
202	A-7016-614-A	VF-156 BOARD, COMPLETE
203	3-069-940-01	SHEET METAL, BL RETAINER
204	3-062-205-11	CUSHION (B), BL
205	3-075-319-01	BL UNIT
206	3-068-772-01	CUSHION (L), BL
* 207	3-062-767-01	CUSHION, LCD


Ref. No.	Part No.	Description
208	3-713-791-71	SCREW (M1.7X4)
209	3-082-547-01	PLATE, FIXED, VF
210	X-3953-366-1	GUIDE ASSY, VF SLEEVE
211	4-974-725-01	SCREW (M1.7), LOCK ACE, P2
212	X-3953-365-2	VF ASSY
213	1-476-810-11	BLOCK(0.44), LIGHT GUIDE PLATE
LCD902	8-753-028-47	LCX032AN-5



5. REPAIR PARTS LIST

5-1-6. CABINET (R) SECTION-1

ns : not supplied

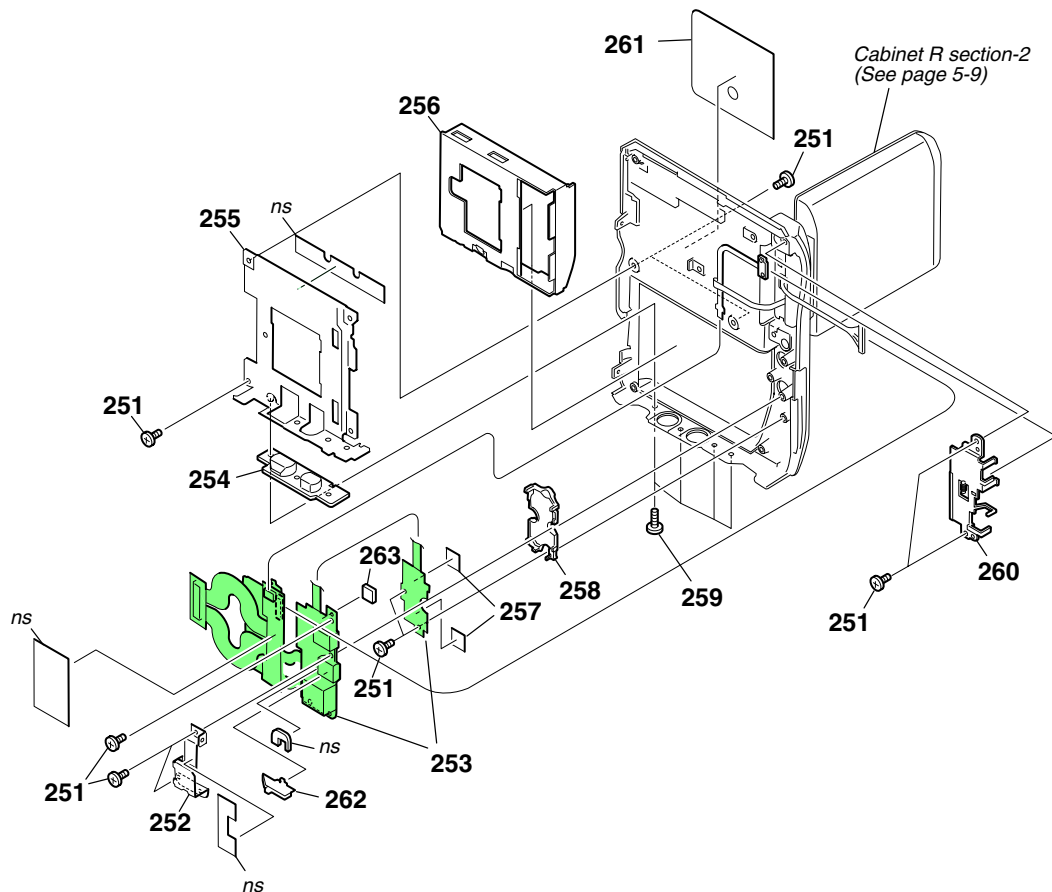


Ref. No.	Part No.	Description
251	4-974-725-01	SCREW (M1.7), LOCK ACE, P2
252	3-082-526-01	PLATE, FIXED, DC CONNECTOR
253	A-7016-629-A	BJ-004 BOARD, COMPLETE
254	3-082-482-01	SCREW
255	3-082-523-01	BRACKET, BATTERY
256	3-082-524-02	HOLDER, BATTERY
257	3-076-228-01	SHEET (SMALL), MUFFLE

Ref. No.	Part No.	Description
258	3-082-480-01	BUTTON, CF (PC105/PC105E)
258	3-082-480-11	BUTTON, CF (PC103E/PC104E)
259	3-989-735-31	SCREW (M1.7), LOCK ACE, P2
260	X-3953-360-2	PLATE ASSY, BLIND
261	3-082-531-11	SHEET, GUARD
262	X-3953-489-1	GUIDE ASSY, LIGHT, LED
263	3-084-055-02	CUSHION (CF)




5. REPAIR PARTS LIST

5-1-7. CABINET (R) SECTION-2

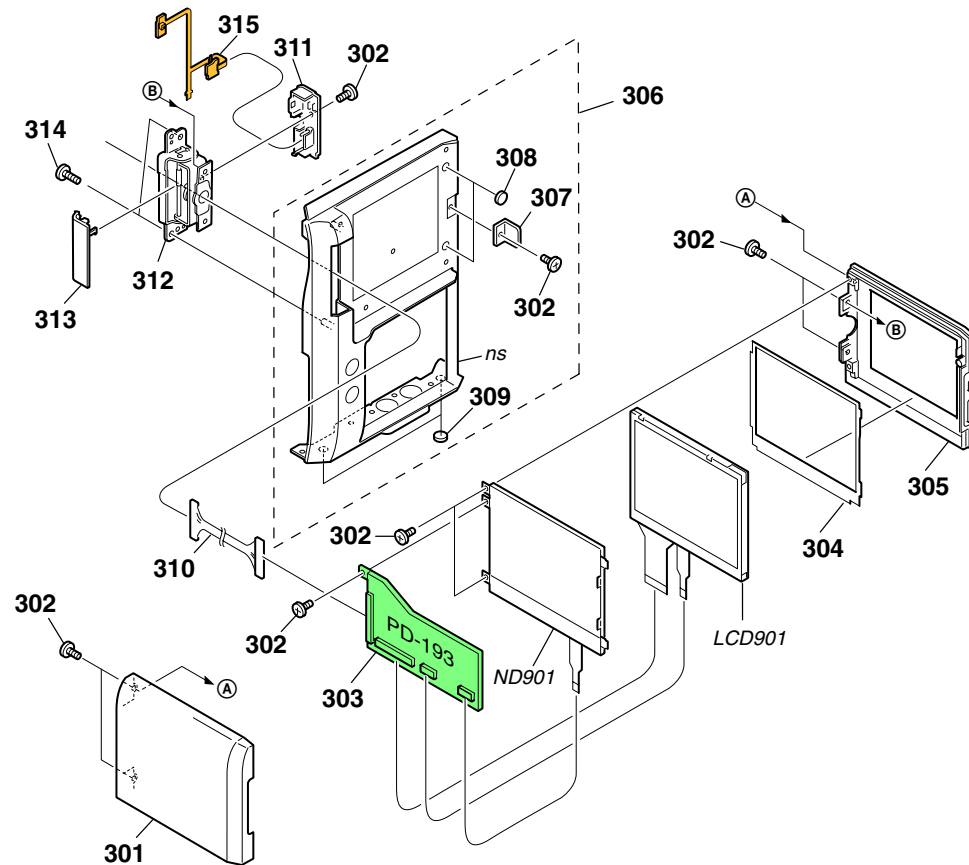

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
301	3-082-532-11	CABINET (R), LCD (PC105E)	308	3-082-519-01	FOOT (R), RUBBER
301	3-082-532-21	CABINET (R), LCD (PC105)	309	3-969-387-01	FOOT, RUBBER
301	3-083-693-01	CABINET (R) (N), LCD (PC103E)	310	1-962-115-11	HARNESS (PB-052)
301	3-083-693-11	CABINET (R) (N), LCD (PC104E)	311	3-082-535-01	COVER (BACK), HINGE
302	4-974-725-01	SCREW (M1.7), LOCK ACE, P2	312	X-3953-359-1	HINGE ASSY, LCD
303	A-7016-624-A	PD-193 BOARD, COMPLETE	313	3-082-534-01	COVER (FRONT), HINGE
304	3-082-533-01	SHEET, PROTECTION, LCD PANEL	314	3-989-735-31	SCREW (M1.7), LOCK ACE, P2
305	X-3953-358-1	CABINET (L) ASSY, LCD	315	A-7016-626-A	FP-697 BOARD, COMPLETE
306	X-3953-390-2	CABINET (R) ASSY	LCD901	8-753-052-41	ACX500DMM-1
307	3-082-536-01	CLAW, PANEL LOCK	ND901	1-477-759-11	BLOCK LIGHT GUIDE PLATE (2.5)

5-1-8. MECHANISM DECK OVERALL (Z100)

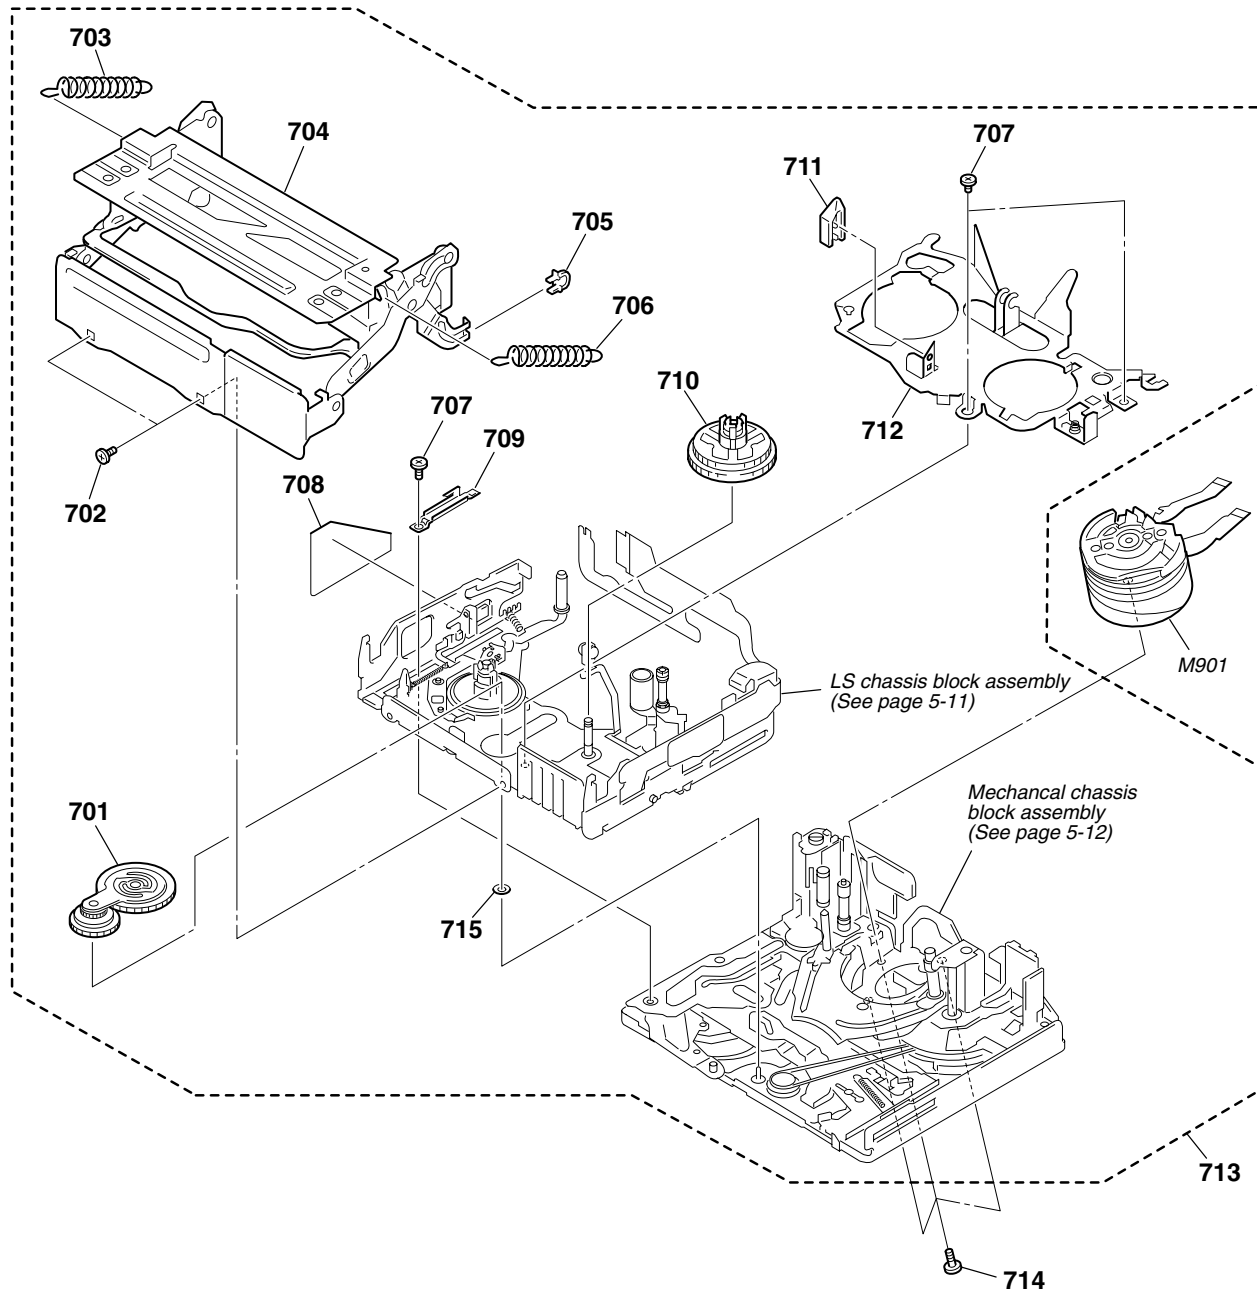

Ref. No.	Part No.	Description
701	X-3952-938-3	GEAR ASSY, GOOSENECK
702	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD
703	3-079-206-02	SPRING (POP UP S), TXTENSION
704	X-3952-939-4	COMPARTMENT ASSY, CASSETTE
705	3-079-367-01	DAMPER, CASSETTE COMPARTMENT
706	3-079-215-02	SPRING (POP UP T), EXTENSION
707	3-703-816-15	SCREW (M1.4), SPECIAL HEAD
708	3-080-545-01	COVER, SENSOR S


Ref. No.	Part No.	Description
709	3-079-364-01	RETAINER, LS GUIDE
710	X-3952-937-1	TABLE ASSY, T REEL
711	3-079-366-01	RELEASE, REEL LOCK
712	X-3953-257-1	PLATE ASSY, RETAINER
713	A-7095-393-A	MD (Z100) SUB ASSY
714	3-079-741-02	SCREW, DRUM FIXING
715	3-748-682-01	WASHER, T
M901	A-7048-981-A	DRUM BLOCK ASSY (DEH-30A-R) (SERVICE)



5. REPAIR PARTS LIST

5-1-9. LS CHASSIS BLOCK ASSEMBLY

ns : not supplied

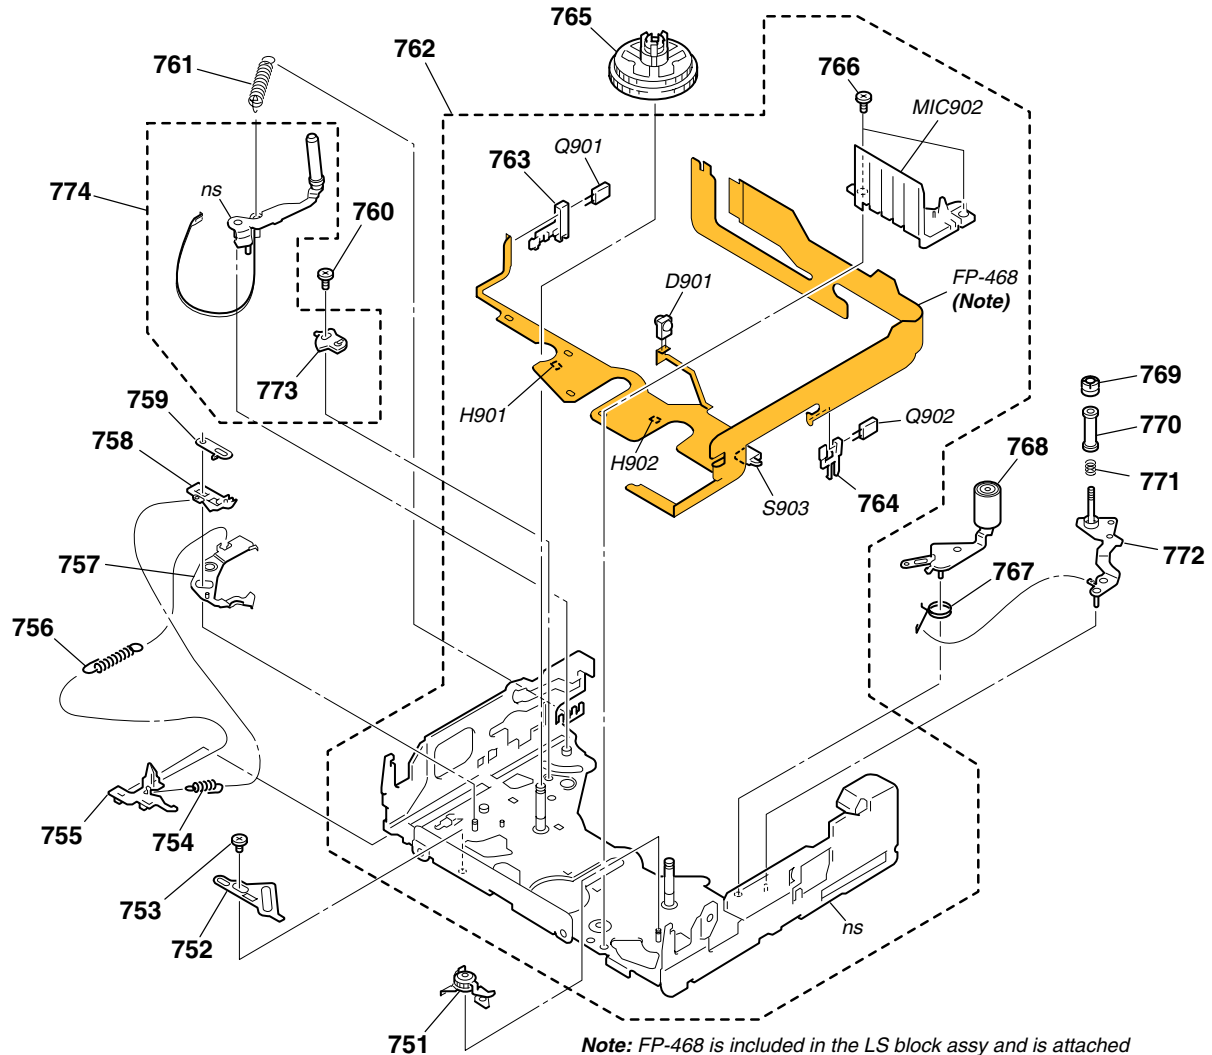


Note: FP-468 is included in the LS block assy and is attached to chassis by hot-press.
Because installation of FP-468 requires a very high accuracy, FP-468 is not supplied as an independent service parts.

Ref. No.	Part No.	Description
751	A-7095-402-B	BRAKE (T) BLOCK ASSY
752	3-079-241-01	PLATE, LS CAM
753	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD
754	3-079-246-01	SPRING(RELEASE RACK),EXTENSION
755	3-079-248-01	POSITIONING(S), CASSETTE
756	3-079-244-01	SPRING (ULE), EXTENSION
757	X-3952-932-1	BRAKE ASSY, ULE
758	3-079-245-01	RACK (S), RELEASE
759	3-079-247-01	BRAKE (S)
760	3-059-090-11	SCREW (M1.4X2.5), SPECIAL HEAD
761	3-079-242-01	SPRING, TENSION
762	A-7095-401-A	LS BLOCK ASSY
763	3-079-267-01	HOLDER (S), SENSOR
764	3-079-268-01	HOLDER (T), SENSOR
765	X-3952-936-2	TABLE ASSY, S REEL
766	3-703-816-15	SCREW (M1.4), SPECIAL HEAD

Ref. No.	Part No.	Description
767	3-079-243-02	SPRING (PINCH RETURN), TORSION
768	X-3952-934-1	ARM ASSY, PINCH
769	3-052-062-02	NUT, TG7
770	3-079-219-02	TG7
771	3-081-591-01	SPRING, COMPRESSION (TG7)
772	X-3952-935-3	ARM ASSY, TG7
773	3-079-237-02	ADJUSTOR, BAND
774	A-7095-403-D	TG2 ARM BLOCK ASSY
D901	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL)
H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL)
MIC902	1-817-175-12	PIN, CONNECTOR (WITH DETECTION SWITCH)
S903	1-529-566-51	SWITCH, PUSH (1 KEY) (C.C.DOWN)
Q901	6-550-402-01	TRANSISTOR PT4850FE000F (TAPE END)
Q902	6-550-402-01	TRANSISTOR PT4850FE000F (TAPE TOP)

5-1-10. MECHANICAL CHASSIS BLOCK ASSEMBLY

ns : not supplied

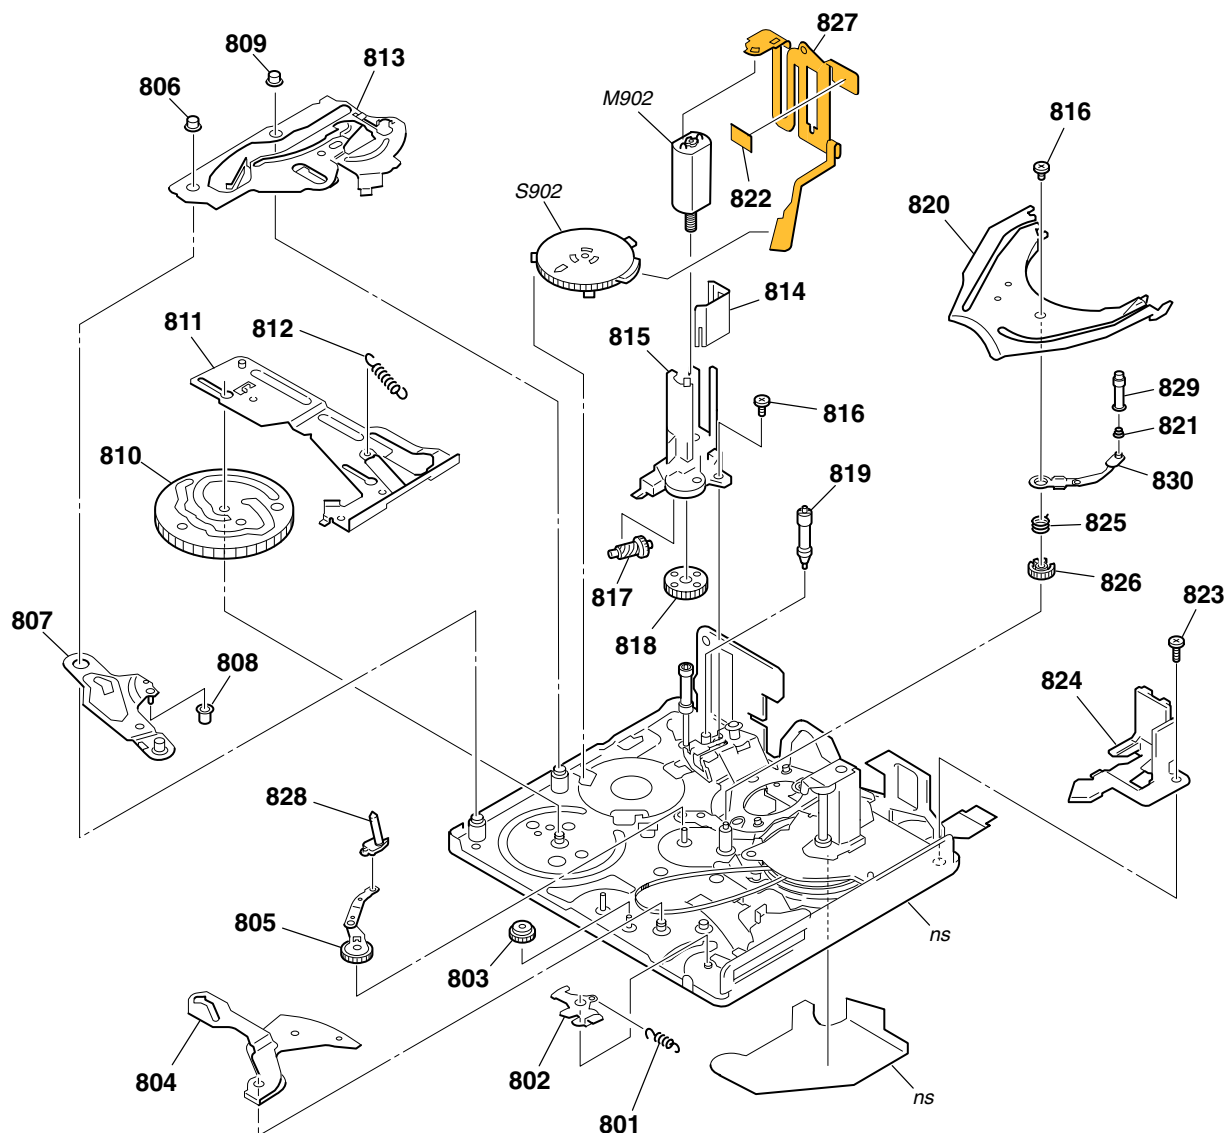

Ref. No.	Part No.	Description
801	3-079-314-01	SPRING (EJ), EXTENSION
802	3-079-327-01	ARM, EJ
803	3-079-323-01	GEAR, CONVERSION
804	3-079-324-03	ARM, GL DRIVING
805	X-3952-928-1	GL (S) ASSY
806	3-079-315-01	ROLLER (S1), LS GUIDE
807	X-3952-925-1	ARM ASSY, LS
808	3-079-320-01	ROLLER, LS
809	3-079-316-01	ROLLER (S2), LS GUIDE
810	3-079-319-01	GEAR, CAM
811	X-3952-941-1	SLIDER ASSY, M
812	3-079-321-02	SPRING (PINCH), EXTENSION
813	X-3952-940-2	PLATE ASSY, TG2 CAM
814	3-079-312-01	SHIELD, MOTOR
815	3-079-307-01	HOLDER, MOTOR
816	3-703-816-15	SCREW (M1.4), SPECIAL HEAD

Ref. No.	Part No.	Description
817	3-079-308-01	SHAFT, WORM
818	3-079-309-01	GEAR, DECELERATION
819	X-3952-942-2	ROLLER ASSY, TG3
820	3-079-325-01	RAIL, GUIDE
821	3-079-295-02	SPRING, TG5
822	1-677-049-11	FP-228 FLEXIBLE BOARD (DEW SENSOR)
823	3-079-328-01	SCREW ,SPECIAL
824	3-079-326-02	SUPPORT, TG7
825	3-079-301-01	SPRING (GLT), TORSION
826	3-079-298-01	GEAR (T), GL
827	1-686-798-11	PFP-467 FLEXIBLE BOARD
828	X-3952-927-2	COASTER (S) ASSY
829	X-3952-930-3	ROLLER ASSY, TG5
830	X-3952-929-5	COASTER (T) ASSY
M902	A-7095-396-A	MOTOR BLOCK ASSY, L (LOADONG)
S902	1-477-679-11	ROTARY, ENCODER (MODE SWITCH)