






2-1-5. CABINET (R) SECTION

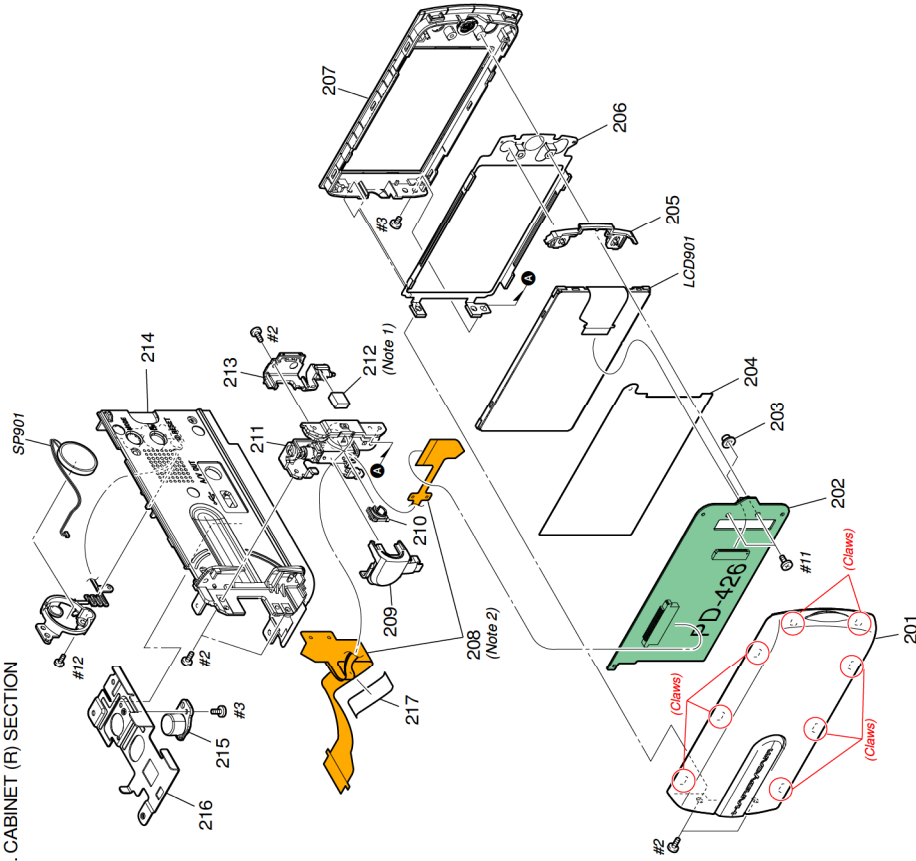

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
201	4-209-675-41	CABINET (C), P (SR20/SR20E (BLACK))	212	1-471-504-11	MAGNET (ND5X3.5X2.4-B) (Note 1)
201	4-209-675-51	CABINET (C), P (SR20/SR20E (SILVER))	* 213	4-205-712-01	COVER (M), HINGE
201	4-209-675-61	CABINET (C), P (SR15E)	214	A-1790-677-A	CABINET (R (248)) ASSY
202	A-1790-695-A	PD-426 BOARD, COMPLETE	215	3-283-643-11	SCREW, TRIPOD
203	4-209-715-01	JOYSTICK	* 216	4-209-704-01	FRAME, BOTTOM
* 204	4-209-716-01	INSULATING SHEET, PD	217	4-261-409-01	SHEET, WAVE SPHERE SERIES
205	4-209-714-01	BUTTON, PLAYBACK	LCD901	1-811-218-11	LCD MODULE
* 206	4-209-713-01	PLATE, P GROUND	SP901	1-859-490-41	SPEAKER (1.3CM)
207	4-209-711-01	CABINET (M), P	#2	2-635-562-31	SCREW (M1.7)
208	1-882-551-11	FP-1289 FLEXIBLE BOARD (Note 2)	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2
* 209	4-209-719-01	COVER (C), HINGE (BLACK)	#11	3-078-890-11	SCREW, TAPPING
* 210	4-166-451-01	CLAMP FLEXIBLE	#12	3-080-204-21	SCREW, TAPPING, P2
211	X-2546-040-1	HINGE (Y (C)) ASSY, 10TH TYPE			


DCR-SR15E/SR20/SR20E_L2

Screw

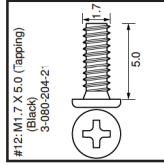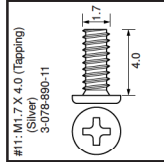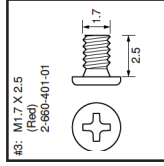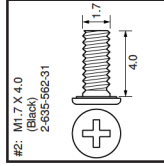

Note

 Note 1: Put the marking side together on the position of figure when you install the magnet.



Note 2: Refer to "Assembly-5: The Method of attachment of FP-1289 Flexible Board..."