


EXPLODED DIAGRAM OF OVEN PARTS

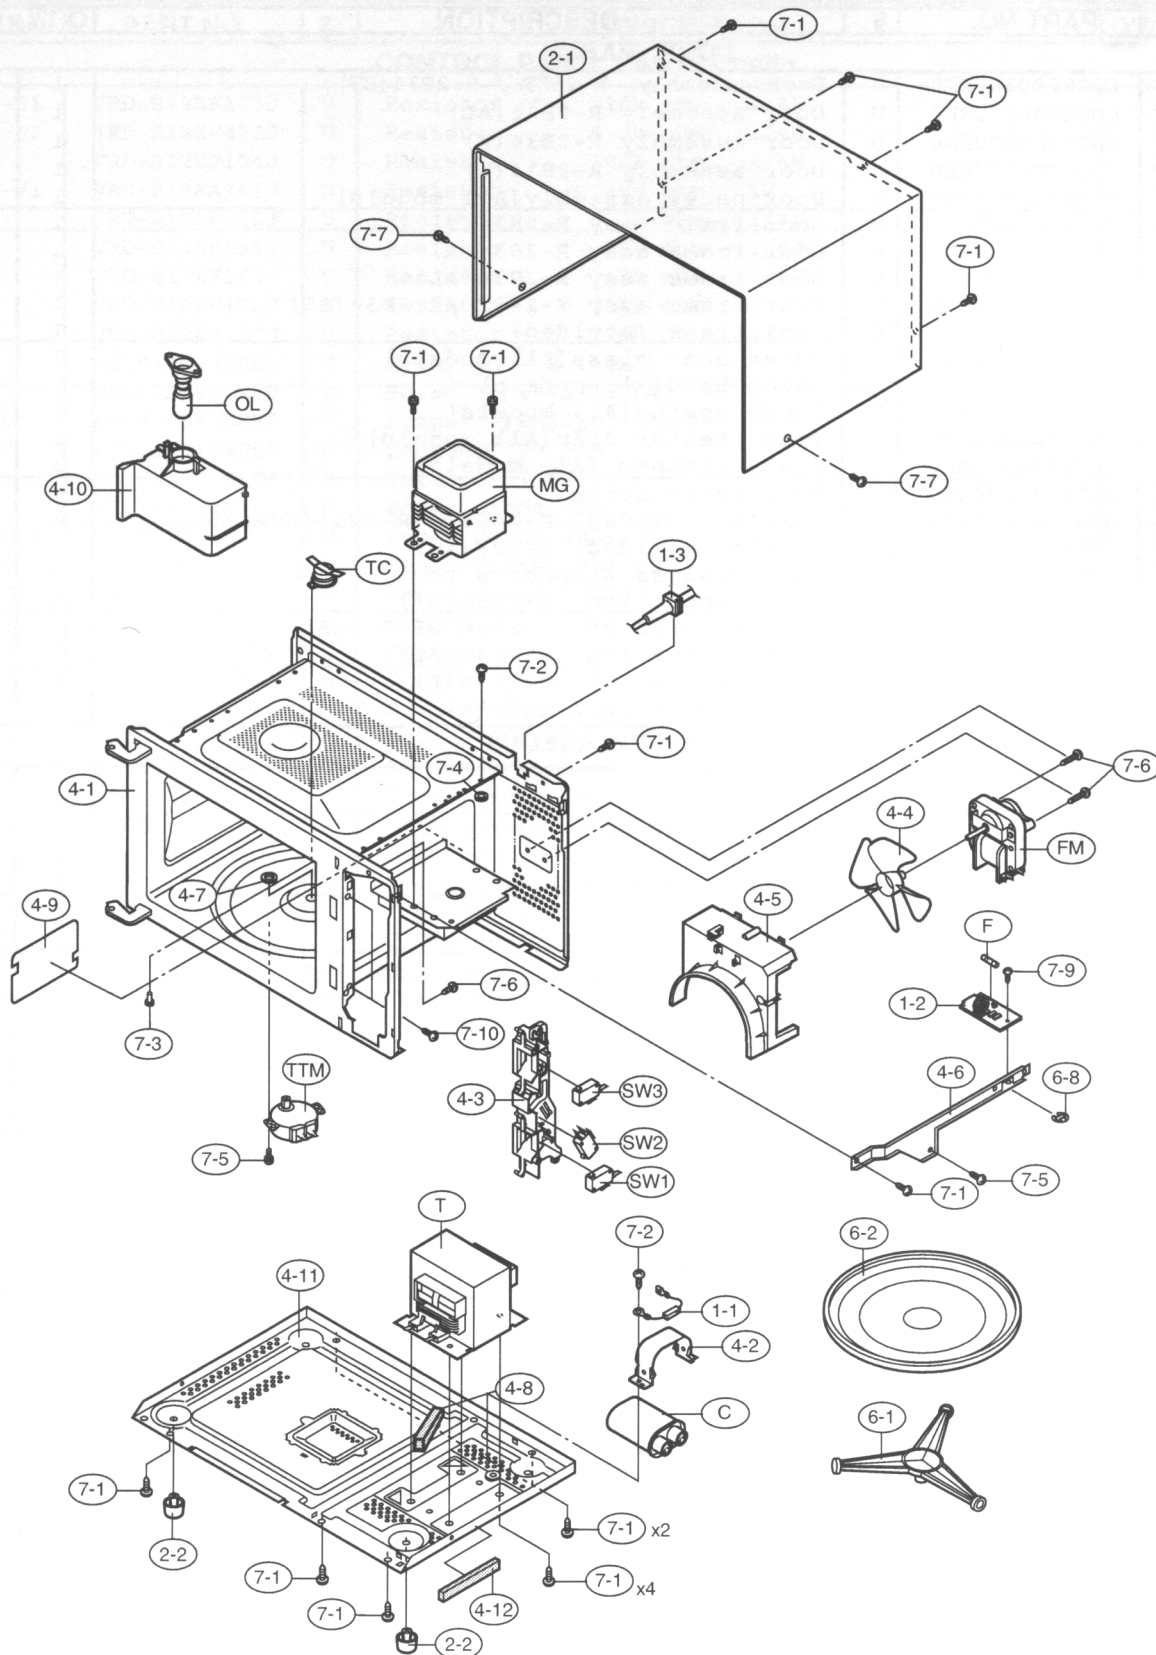

NOTE: In the event of removing the turntable motor cover this part should be refitted using screw connection: LX-CZA030WRE0 (7-11)