



Website: <http://www.LGService.com>

E-mail: <http://www.LGService.com/techsup.html>

WASHING MACHINE SERVICE MANUAL

▲ CAUTION

READ THIS MANUAL CAREFULLY TO DIAGNOSE
PROBLEMS CORRECTLY BEFORE SERVICING THE UNIT.

MODEL : WD(M)-12320BD / WD(M)-12325BD



JUN. 2004 PRINTED IN KOREA

P/No.:3828ER3027U

CONTENTS

1. SPECIFICATIONS	3
2. FEATURES & TECHNICAL EXPLANATION	4
3. PARTS IDENTIFICATION	7
4. INSTALLATION & TEST	8
5. WIRING DIAGRAM/PROGRAM CHART	11
6. OPERATION	12
7. TROUBLESHOOTING	14
7-1. BEFORE PERFORMING SERVICE	14
7-2. QC TEST MODE	14
7-3. HOW TO CHECK THE WATER LEVEL FREQUENCY	14
7-4. ERROR DISPLAY	15
8. ERROR DIAGNOSIS AND CHECK LIST	17
8-1. DIAGNOSIS AND SOLUTION FOR ABNORMAL OPERATION	17
8-2. FAULT DIAGNOSIS AND TROUBLESHOOTING	20
9. DISASSEMBLY INSTRUCTIONS	29
10. EXPLODED VIEW	38
10-1. CABINET & CONTROL PANEL ASSEMBLY	38
10-2. DRUM & TUB ASSEMBLY	39
10-3. DISPENSER ASSEMBLY	40

1. SPECIFICATIONS

ITEM		WD(M)-12320BD/WD(M)-12325BD
COLOR		BLUE WHITE
POWER SUPPLY		AC 220-240V~, 50Hz
PRODUCT WEIGHT		76 kg
ELECTRIC POWER CONSUMPTION	WASHING	200 W
	DRAIN MOTOR	37 W
	WASH HEATER	2200 W
REVOLUTION SPEED	WASH	42 rpm
	SPIN	1200 rpm
CYCLES		9
WASH/RINSE TEMPERATURES		5
SPIN SPEEDS		5
OPTIONS		Bio, Soak, Pre Wash, Rinse+Spin, Spin Only
CUSTOM PROGRAM		Incorporated
WATER CIRCULATION		Incorporated
OPERATIONAL WATER PRESSURE		30-1000 kPa
CONTROL TYPE		Electronic
WASH CAPACITY		9 kg
DIMENSIONS		635 m(W) x 740 m(D) x 925 m(H)
DELAY WASH		From 3 hours to 19 hours
DOOR SWITCH TYPE		PTC + Solenoid
WATER LEVEL		10 steps (by sensor)
LAUNDRY LOAD SENSING		Incorporated
ERROR DIAGNOSIS		Incorporated
AUTO POWER OFF		Incorporated
CHILD LOCK		Incorporated


2. FEATURES & TECHNICAL EXPLANATION

2-1. FEATURES



■ Direct Drive System

The advanced Brushless DC motor directly drives the drum without belt and pulley.

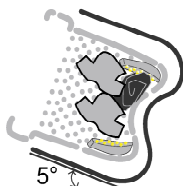


■ Tilted Drum and Extra Large Door Opening

The tilted drum and extra large door opening make it possible to load and unload easily.




■ Water Circulation

Spray detergent solution and water onto the load repeatedly. Clothes are soaked more quickly and thoroughly during the wash cycle. Detergent suds are eliminated more easily by the water shower during rinse cycle. The water circulation system uses both water and detergent more efficiently.

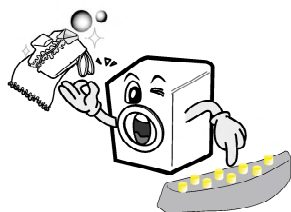


■ RollerJets

The washing ball enhances wash performance and reduces damage to clothing. The jets spray and help tumble clothes to enhance washing performance while maintaining fabric care.

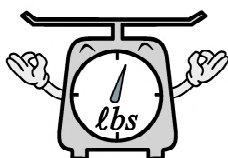

■ Automatic Wash Load Detection

Automatically detects the load and optimizes the washing time.

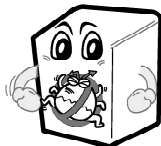

■ Built-in Heater

The internal heater automatically heats the water to the optimum temperature on selected cycles.




■ Child Lock

The Child lock feature prevents children from pressing any buttons to change the settings during operation.

2-2. NEURO FUZZY WASHING TIME OPTIMIZATION

To get the best washing performance, optimal time is determined by the water temperature, the selected washing temperature, and the size of the load.

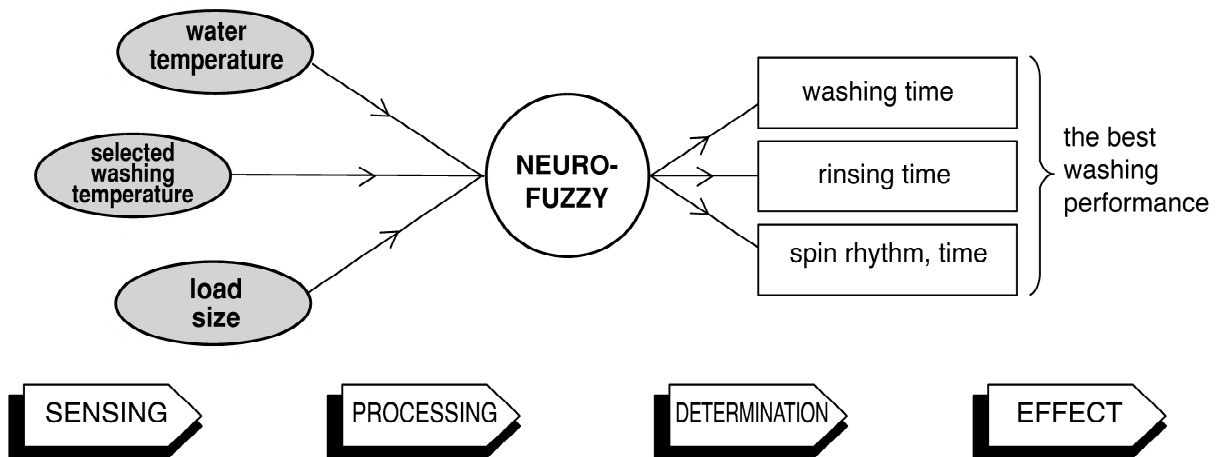

2-3. WATER LEVEL CONTROL

- This model incorporates a pressure sensor which can sense the water level in the tub.
- The water supply is stopped when the water level reaches the preset level, the washing program then proceeds.
- Spinning does not proceed until the water in the tub drains to a certain level.

2-4. DOOR CONTROL

- The door can be opened by pulling the door handle whenever washer is not in operation.
- When the cycle is completed, the DOOR LOCKED light will turn off.
- If a power failure has occurred while in operation, the door will unlock after 5 minutes.
- Clicking sounds can be heard when the door is locked/unlocked.


2-5. THE DOOR CAN NOT BE OPENED

- While program is operating
- When a power failed and power plug is taken out in operation
- While Door Lock lights turn on.
- While the motor is in the process of intertial rotating, through the operation is paused.

2-6. DOOR LOCKED LAMP LIGHTS

- When the frequency of water level is lower than 22.9 kHz
(It can be canceled when the frequency is more than 23.8 kHz)
- When the temperature inside the tub is higher than 45 °C and water level is not 25.5 kHz
(It can be canceled when the water level is 25.5 kHz or the temperature inside the tub is lower than 40 °C)


2-7. CHILD LOCK

- Use this option to prevent unwanted use of the washer. Press and hold Option and Rinse button for 3 seconds to lock/unlock control.
- When Child lock is set, CHILD LOCK lights and all buttons are disabled except the Power  button.
You can lock the washer while it is operating.


2-8. WATER CIRCULATION

- When Washing and Rinsing function of shower at the upper part of Gasket.
- When Washing, it continuously operates for 3 minutes and intermittently.
- When Rinsing, it continuously operates after completion of water supply.


3. PARTS IDENTIFICATION

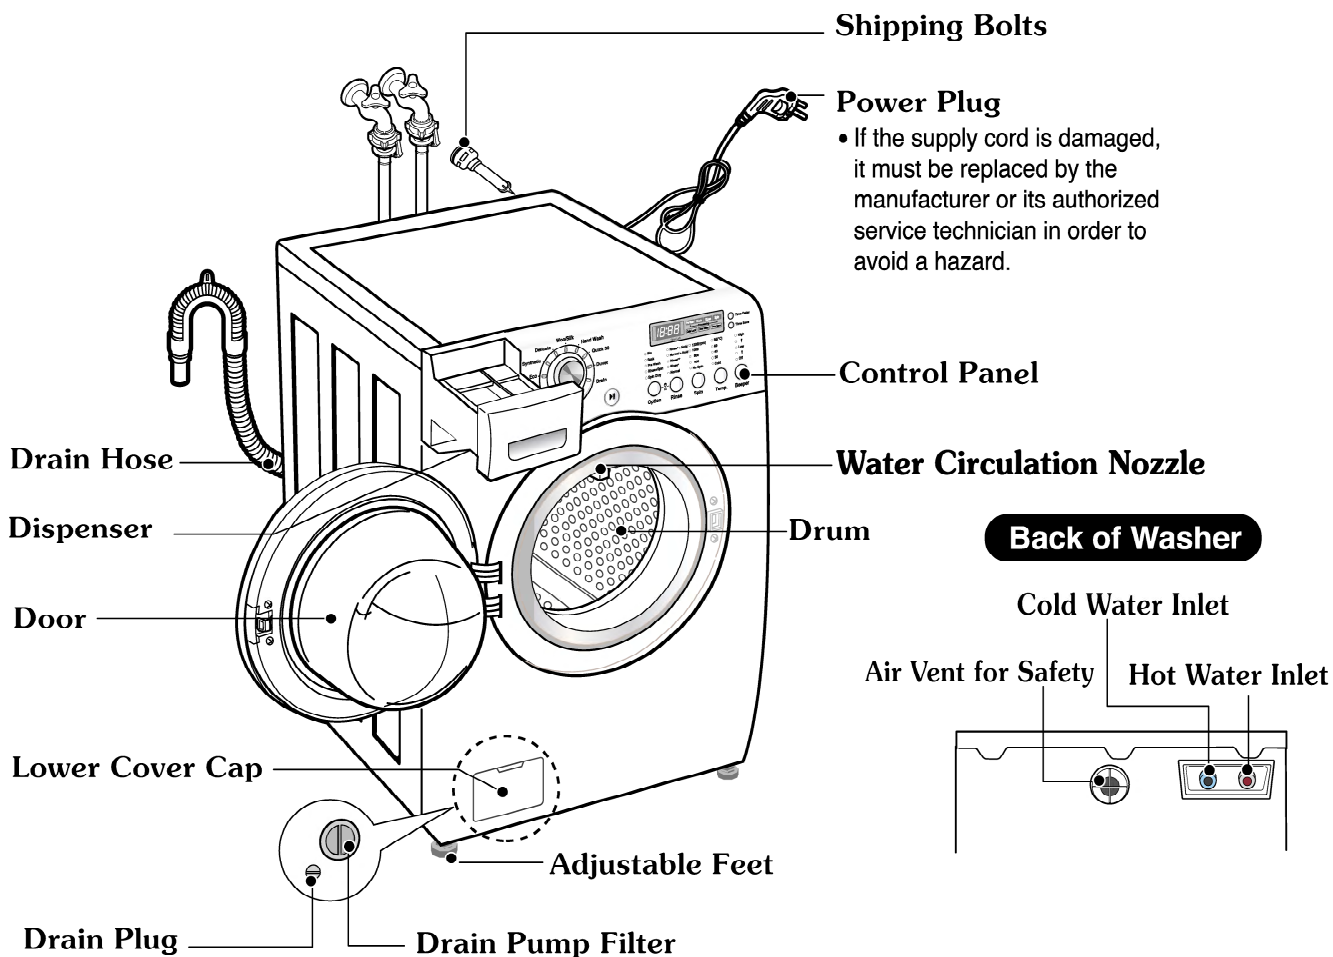

■ ACCESSORIES

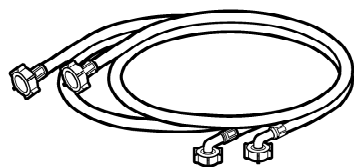

 Inlet Hose (1EA)
※ Option Hot/Cold (2EA)






Wrench

4. INSTALLATION & TEST

- ❶ Before servicing, ask the customer what the trouble is.
- ❷ Check the setup (power supply is 220-240V AC, remove the transit bolts....).
- ❸ Check with the troubleshooting guide.
- ❹ Plan your service method by referring to the disassembly instructions.
- ❺ Service the unit.
- ❻ After servicing, operate the appliance to see whether it functions correctly.


■ STANDARD INSTALLATION

The appliance should be installed as follows:

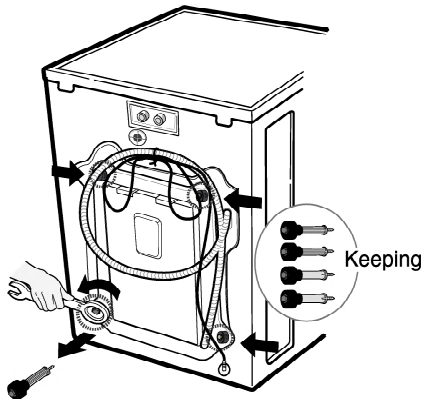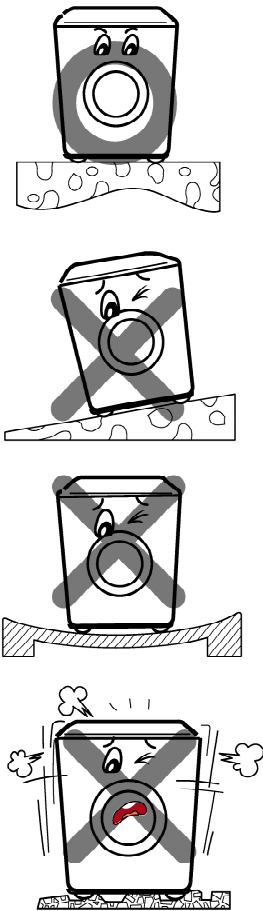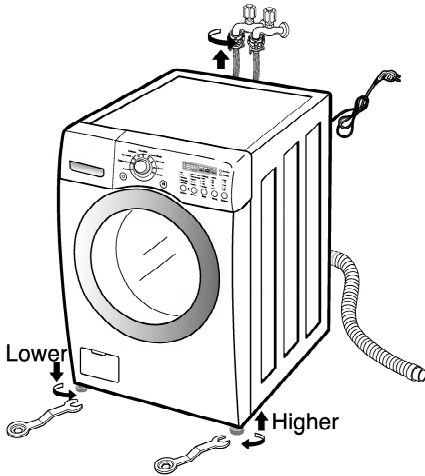
REMOVE THE SHIPPING BOLTS	INSTALL THE APPLIANCE ON A FLAT AND FIRM SURFACE	ADJUST THE LEVELING
<ul style="list-style-type: none"> Remove the 4 shipping bolts with the supplied wrench. ※ Do first lower side to remove easily. Keep the shipping bolts and spanner for future use. Insert the 4 caps (provided) into the hole. 		<ul style="list-style-type: none"> Turn the leveling feet to adjust the appliance.  <ul style="list-style-type: none"> Turn clockwise to raise; counterclockwise to lower.

■ HOW TO CONNECT THE INLET HOSE


- Verify that the rubber washer is inside of the valve connector.
- Tighten the inlet hose securely to prevent leaks.

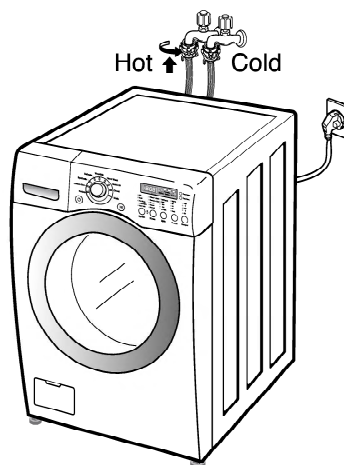

■ CONNECT THE DRAIN HOSE

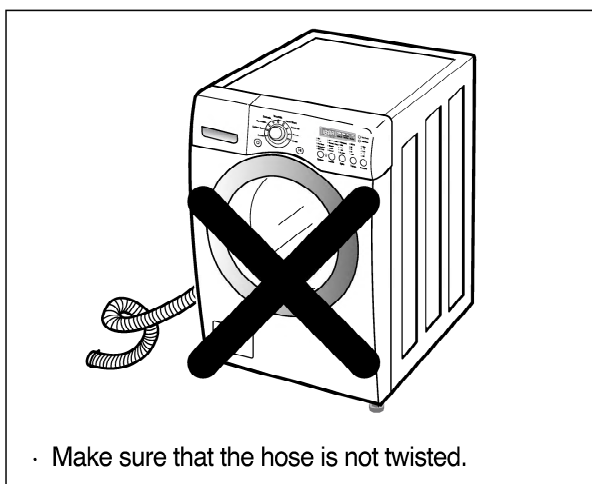


- Make sure that the hose is not twisted.

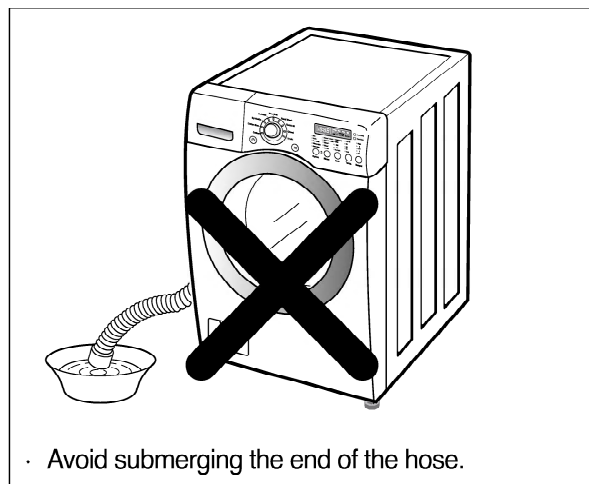


- Avoid submerging the end of the hose.

※ The end of the drain hose should be placed less than 100 cm from the floor.

■ CONNECT POWER PLUG

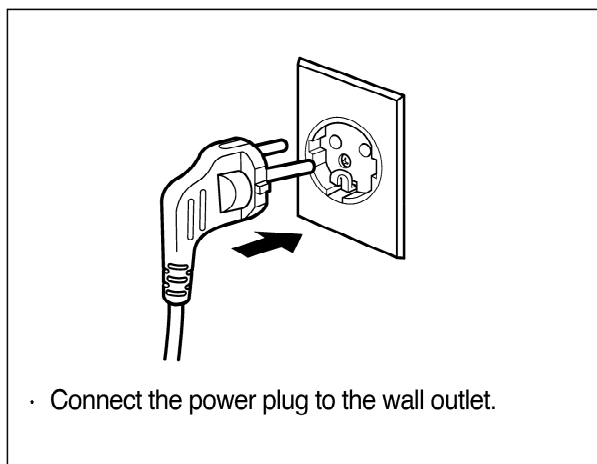


- Connect the power plug to the wall outlet.

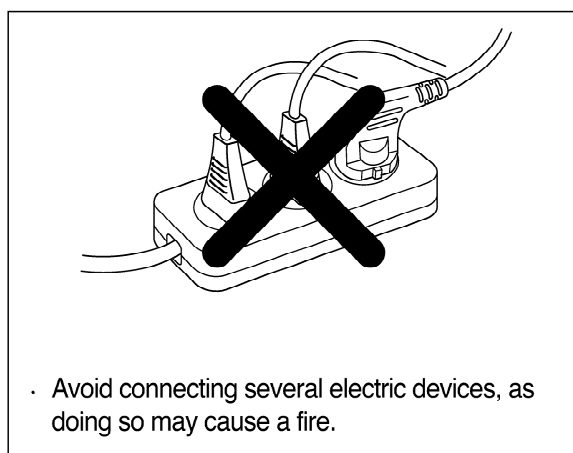


- Avoid connecting several electric devices, as doing so may cause a fire.

7 TEST OPERATION

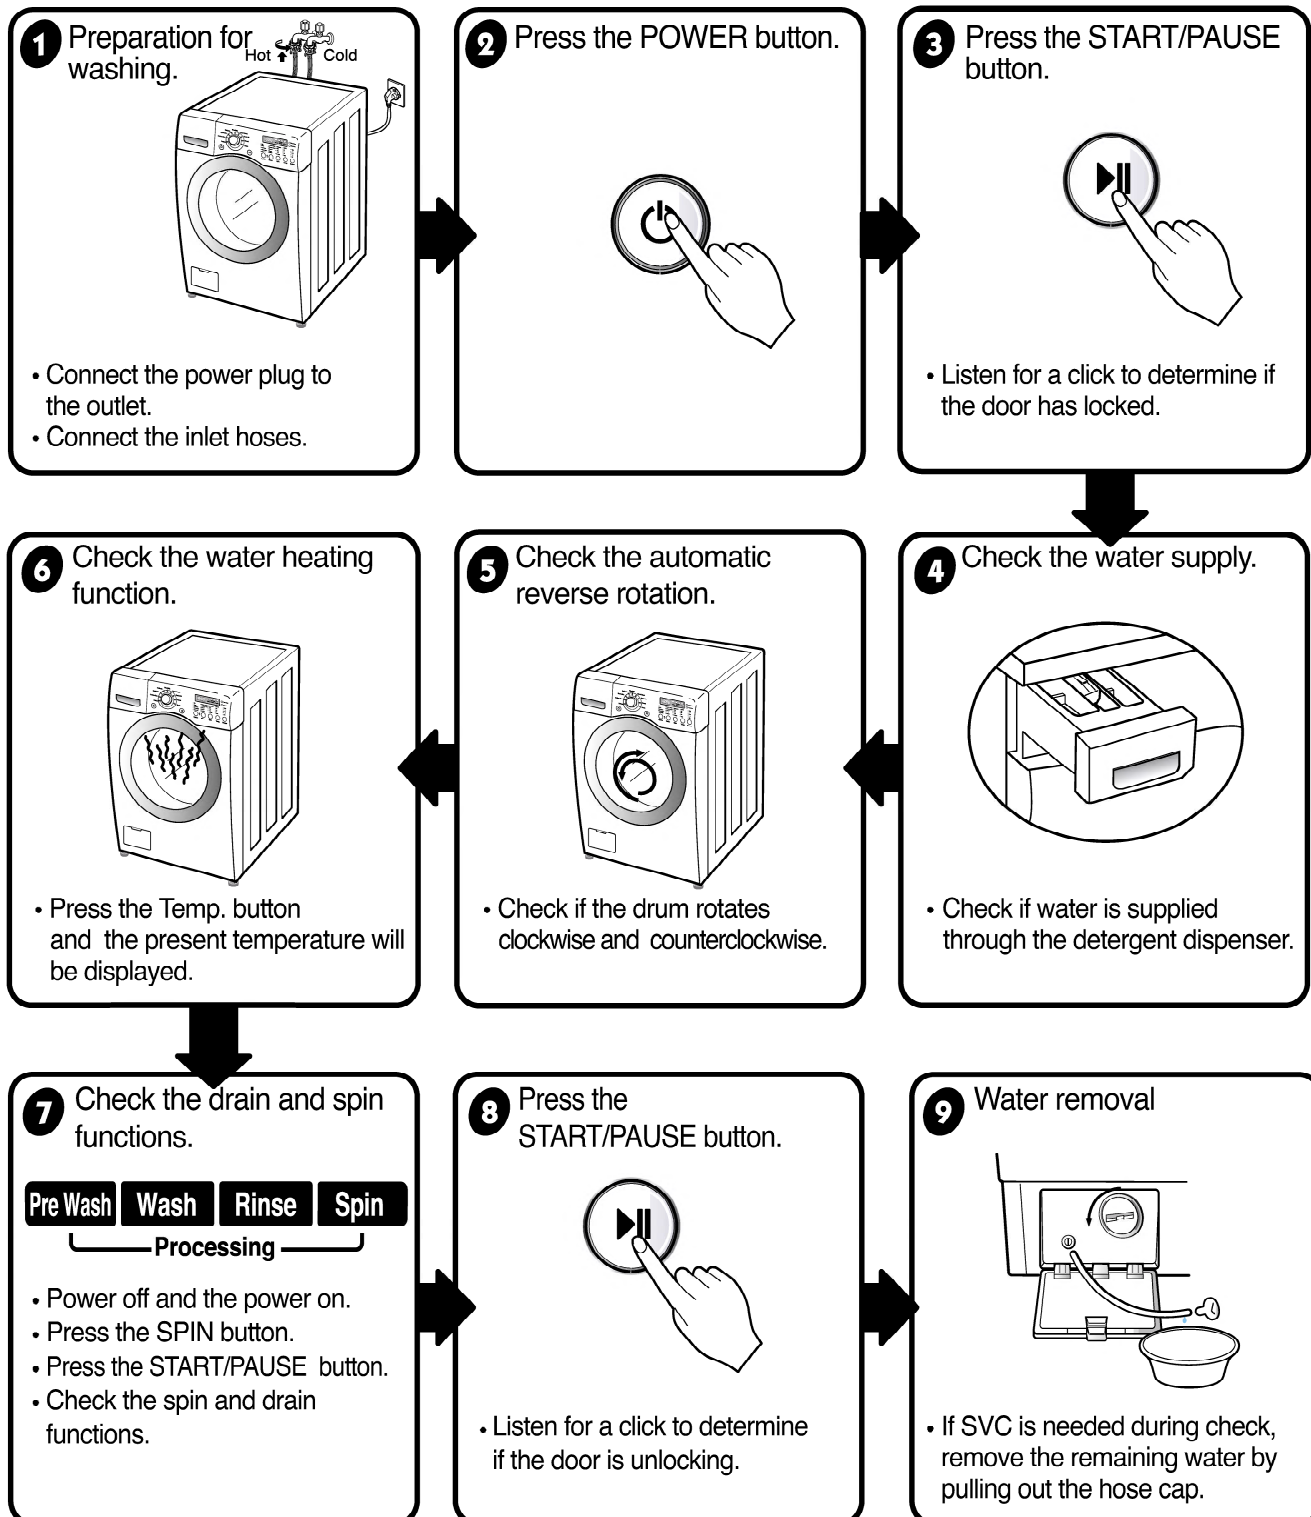

5. WIRING DIAGRAM/PROGRAM CHART

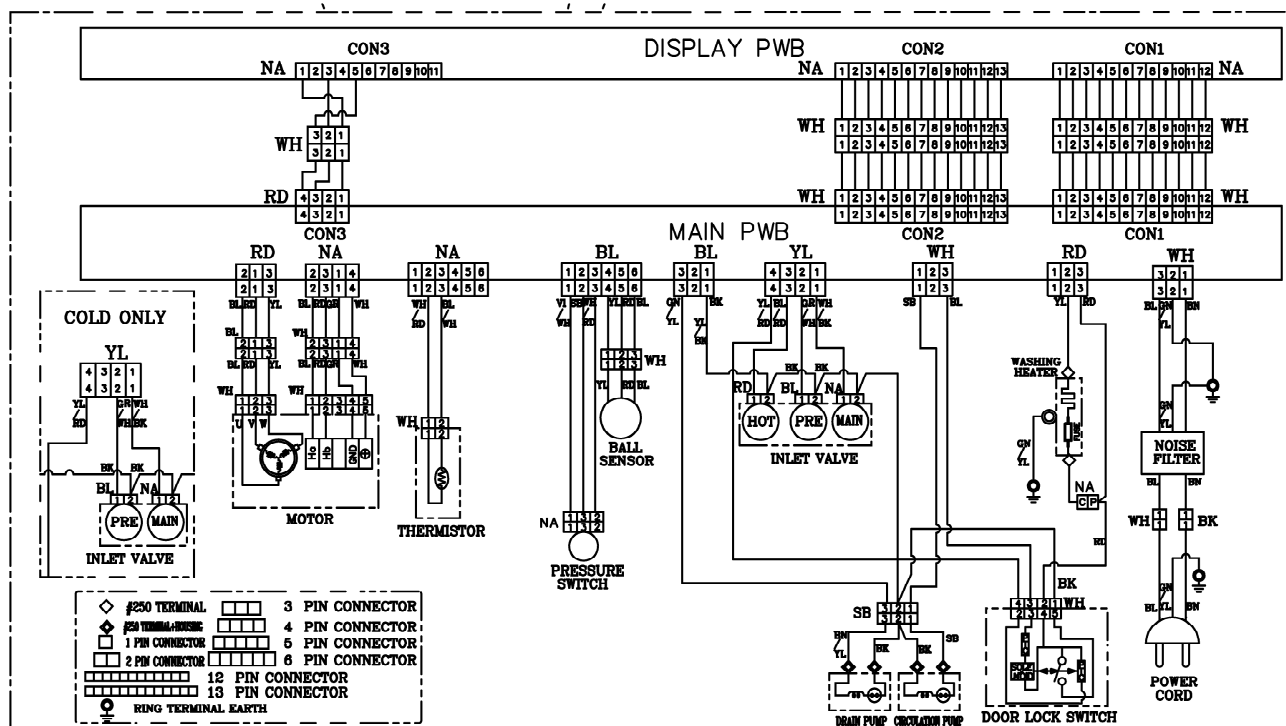

PROGRAM CHART

* Water Supply : W-S

* Intermittent Spin : I-S

* Disentangle : D-T

CYCLE STEP				Washing										Rinse										Spin			A U T O O F F	Normal Working Time (Hour:Minute)			
COURSE				Pre				Main						Normal					Extra or Stain					Extra & Stain							
				W.S	Washing	Drain	I.S	W.S	Washing		Staycooling	1		2			3			3											
									Heating	Washing		W.S	Rinsing	Drain	Drain	I.S	W.S	Rinsing	Drain	I.S	W.S	Rinsing	Drain	I.S	W.S	Rinsing					
Time (SEC)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	20	20
	60	MIN	60	300	60		MIN	60	60	60	60	300	60	240	60	300	60	240	60	300	60	240	60	300	60	240	60	120 ~ 540	120	20	20
Cotton		8					66			2TIMES																					About 2:33
Synthetic		8					19																								About 1:38
Delicate		8					17																								About 59
Wool/Silk		8					13																								About 53
Hand Wash		8					13																								About 51
Quick 30		8					7								120			120													About 30
Duvet		8					17																								About 1:24
Spin																															About 13
Drain																															About 1

* Basic Cycle

* Optional Cycle

* Pre-Setting Time : Water Supply - 60 sec.
Drain - 60 sec.

* Basic time is minute in washing chart.

* The actual program time can be varied with the load amount, water temperature or ambient temperature.

6. OPERATION

• POWER button


- Use this button to turn the power On/Off.

• EST.TIME REMAINING

- This display shows:
 - a) the estimated time remaining in the cycle when operating.
 - b) an error code when an error has been detected.

• CYCLE SELECTOR knob

- Rotate the **Cycle selector knob** to select the cycle designed for different types of fabric and soil levels.

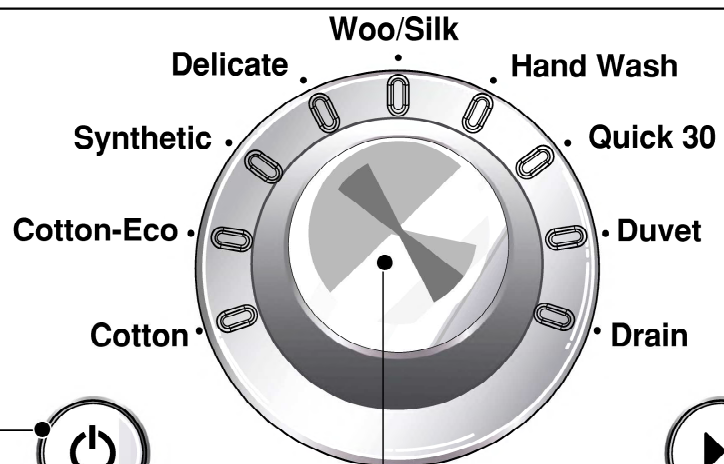

• START/PAUSE button

- Use this button to Start/ Stop the washer.

• CHILD LOCK

- Use this option to prevent unwanted use of the washer. Press and hold **Option** and **Rinse** button for 3 seconds to lock/unlock control.
- When Child lock is set, CHILD LOCK lights and all buttons are disabled except the Power button. You can lock the washer while it is operating.


• STATUS INDICATOR


- These lights show which portion of the cycle the washer is operating.

• TIME DELAY

- Allows the start of any cycle to be delayed for 3~19 hours.

• DOOR LOCKED lamp

- Lights whenever the door of the washer is locked.
- The door can be unlocked by pressing the Start/Pause  button to stop the washer.

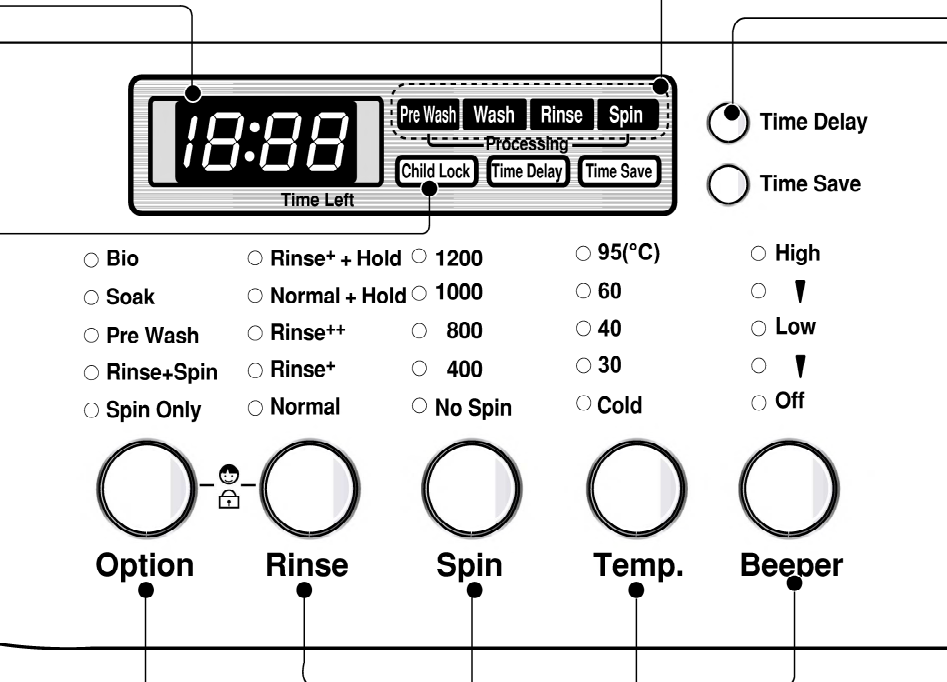

• OPTION button

- **Pre Wash:** Use this option for loads that need pretreatment. It add 17 minutes prewash and drain.
- **Rinse+Spin:** Use this option to rinse and then spin.
- **Spin Only:** If you want Spin Only Select the this option.
- **Soak:** Use this mode to wash normal clothes or thick and heavy clothes which are excessively dirty
- **Bio:** If you want to elimenate protein stains(milk, blood, chocolate...), you may select Bio by pressing the option button.[You can select Bio when temperature is higher than 60°C in Cotton, Cotton-Eco and Synthetic.]

• RINSE, SPIN, TEMP. and BEEPER For Manual

- Use these button to change Rinse/Spin/Temp./Beeper
- When lamp is off, no selection has been mode.
- Pre Wash and Soak available for Cotton, Cotton-Eco and Synthetic.

7. TROUBLESHOOTING

7-1. BEFORE PERFORMING SERVICE

- Be careful of electric shock when disconnecting parts while troubleshooting.
- The voltage of each terminal is 220-240V AC and DC when the unit is plugged in.

7-2. QC TEST MODE.


The washer must be empty and the controls must be in the off state.

1. Press the Option and Spin buttons simultaneously.
2. Press the Power (⏻) button, while the above condition. Then buzzer will sound twice.
3. Press the Start/Pause (⏮) button repeatedly to cycle through the test modes.

Number of times the Start/Pause button is pressed	Check Point	Display Status
None	Turns on all lamps and locks the door.	18:88
1 time	Tumble clockwise.	rpm (40~50)
2 times	Low speed Spin.	rpm (58~65)
3 times	High speed Spin.	rpm (100~120)
4 times	Inlet valve for prewash turns on.	Water level frequency (25~65)
5 times	Inlet valve for main wash turns on.	Water level frequency (25~65)
6 times	Inlet valve for hot water turns on.	Water level frequency (25~65)
7 times	Inlet valve for bleach turns on.	Water level frequency (25~65)
8 times	Tumble counterclockwise.	rpm (40~50)
9 times	Heater turns on for 3 sec.	Water temperature
10 times	Circulation pump turns on.	Water level frequency (25~65)
11 times	Drain pump turns on.	Water level frequency (25~65)
12 times	Power off and unlock the door.	Turn off all lamps.

7-3. HOW TO CHECK THE WATER LEVEL FREQUENCY

 - * Press the Spin and Rinse button simultaneously.















- The digits indicate the water level frequency (x.1 kHz).

So, for example a display indicating 241: a Water level frequency of 241 x.1 kHz
= 24.1 kHz

7-4. ERROR DISPLAY





 
- If you press the START/PAUSE button when an error is displayed, any error except 『PE』 will disappear and the machine will go into the pause status.
- In case of 『PE』, 『UE』, 『DE』 if the error is not resolved within 20 sec., or the in case of other errors, if the error is not resolved within 4 min., power will be turned off automatically and the error code will blink. But in the case of 『FE』, power will not be turned off.


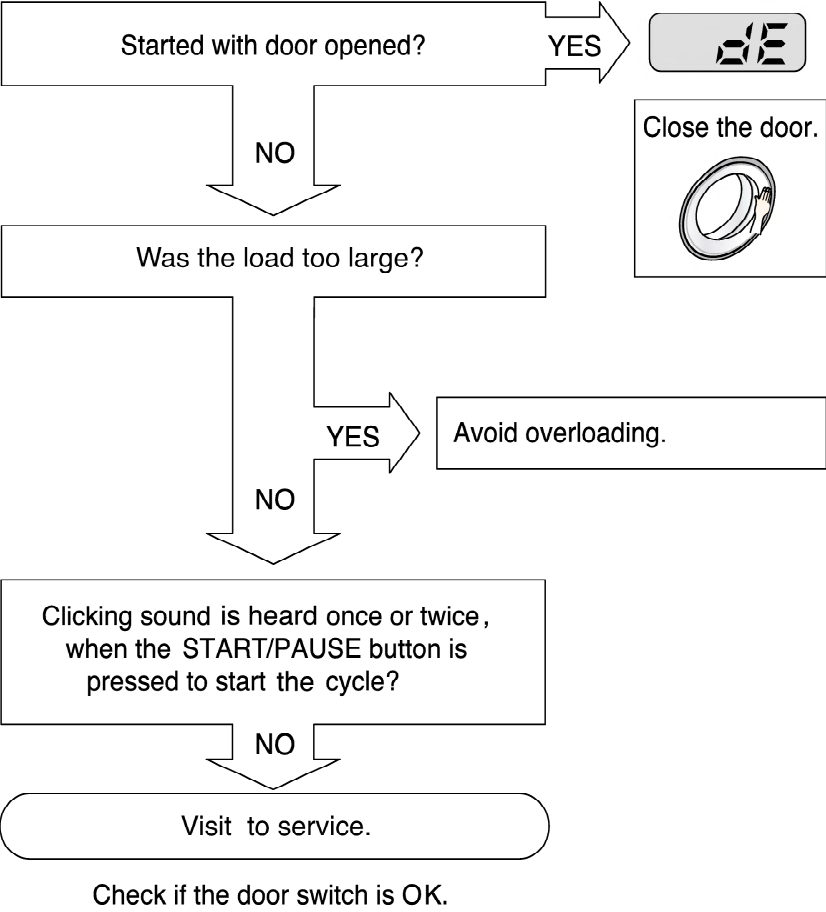

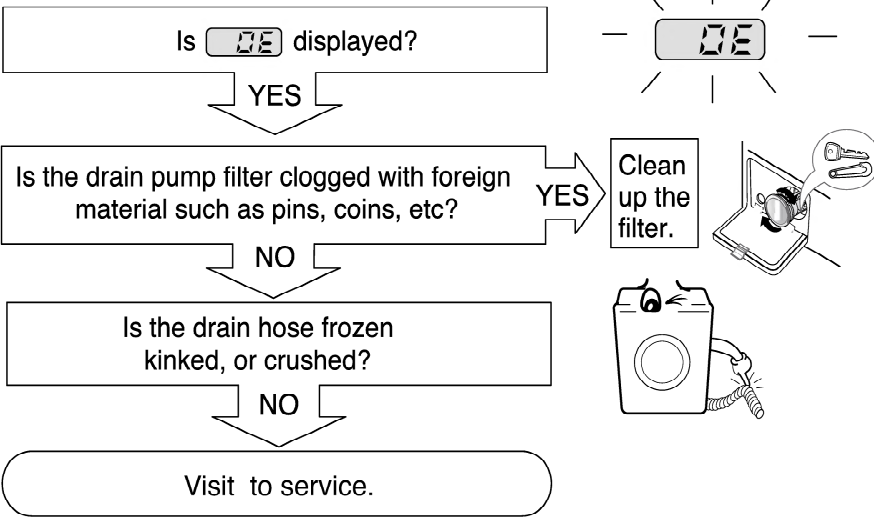
	ERROR	SYMPTOM	CAUSE
1	WATER INLET ERROR		<ul style="list-style-type: none"> • Correct water level (246) is not reached within 8 minutes after water is supplied or it does not reach the preset water level within 25 minutes.
2	IMBALANCE ERROR		<ul style="list-style-type: none"> • The load is too small. • The appliance is tilted. • Laundry is gathered to one side. • Non distributable things are put into the drum.
3	DRAIN ERROR		<ul style="list-style-type: none"> • Not fully drained within 10 minutes.
4	OVER FLOW ERROR		<ul style="list-style-type: none"> • Water is overflowing (water level frequency is over 213). ※ If 『FE』 is displayed, the drain pump will operate to drain the water automatically.
5	PRESSURE SENSOR ERROR		<ul style="list-style-type: none"> • The SENSOR SWITCH ASSEMBLY is out of order.
6	DOOR OPEN ERROR		<ul style="list-style-type: none"> • Door not all the way closed. • Loose electrical connections at Door switch and PWB Assembly. • The DOOR SWITCH ASSEMBLY is out of order.
7	HEATING ERROR		<ul style="list-style-type: none"> • The THERMISTOR is out order.




	ERROR	SYMPTOM	CAUSE
8	OVER CURRENT ERROR		<ul style="list-style-type: none"> • MAIN PWB ASSEMBLY is out of order. • Winding in the STATOR ASSEMBLY is short-circuited.
9	LOCKED MOTOR ERROR		<ul style="list-style-type: none"> • The connector (3-pin, male, white) in the MOTOR HARNESS is not connected to the connector (3-pin, female, white) of STATOR ASSEMBLY. • The electric contact between the connectors (3-pin, male, white) in the MOTOR HARNESS and 4-pin, female, white connector in the MAIN PWB ASSEMBLY is bad or unstable. • The MOTOR HARNESS between the STATOR ASSEMBLY and MAIN PWB ASSEMBLY is cut (open circuited). • The hall sensor is out of order/defective.
10	BALL SENSOR ERROR		<ul style="list-style-type: none"> • Loose Ball Sensor Connector. • Ball Sensor is out of order. ※ Displayed only when the START/PAUSE button is first pressed in the QC Test Mode.
11	EEPROM ERROR		<ul style="list-style-type: none"> • EEPROM is out of order. ※ Displayed only when the START/PAUSE button is first pressed in the QC Test Mode.
12	POWER FAILURE		<ul style="list-style-type: none"> • The washer experienced a power failure.

8. ERROR DIAGNOSIS AND CHECK LIST

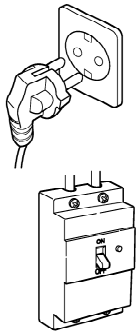8-1. DIAGNOSIS AND SOLUTION FOR ABNORMAL OPERATION

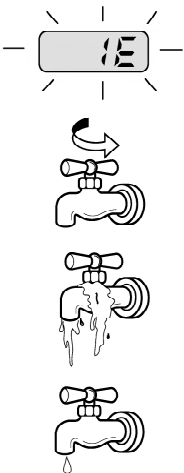SYMPTOM	GUIDE FOR SERVICE CALL
<p>No power</p>	<div data-bbox="555 555 1106 913"> <p>Is the power plug connected firmly to 220-240V AC outlet?</p> <p>YES</p> <p>Power failure? or Breaker opened? Is the outlet controlled by a switch?</p> <p>NO</p> <p>Visit to service.</p> </div> <div data-bbox="1190 562 1326 891">  </div>
<p>Water inlet trouble</p> <div data-bbox="260 1115 419 1173">  </div>	<div data-bbox="555 1014 1106 1809"> <p>Is  displayed?</p> <p>YES</p> <p>Is the tap opened?</p> <p>YES</p> <p>Is the tap frozen?</p> <p>NO</p> <p>Is the water supply shut-off?</p> <p>NO</p> <p>Is filter in the inlet valve clogged with foreign material?</p> <p>YES</p> <p>NO</p> <p>Visit to service.</p> </div> <div data-bbox="1166 1025 1350 1496">  </div> <div data-bbox="1182 1507 1401 1709"> <p>Clean the filter of inlet valve</p>  </div>

SYMPTOM	GUIDE FOR SERVICE CALL
<p>Door error</p> 	 <pre> graph TD Q1[Started with door opened?] -- YES --> D1[DE] Q1 -- NO --> Q2[Was the load too large?] Q2 -- YES --> A1[Avoid overloading.] Q2 -- NO --> Q3[Clicking sound is heard once or twice, when the START/PAUSE button is pressed to start the cycle?] Q3 -- NO --> A2[Visit to service.] A2 --> C1[Check if the door switch is OK.] </pre>
<p>Drain trouble</p> 	 <pre> graph TD Q1[Is OE displayed?] -- YES --> Q2[Is the drain pump filter clogged with foreign material such as pins, coins, etc?] Q2 -- YES --> A1[Clean up the filter.] Q2 -- NO --> Q3[Is the drain hose frozen, kinked, or crushed?] Q3 -- NO --> A2[Visit to service.] </pre>

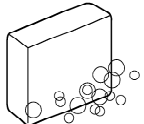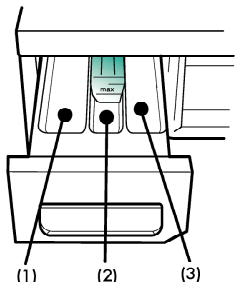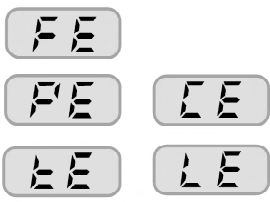
SYMPTOM	GUIDE FOR SERVICE CALL
<p>Suds overflow from the appliance. (In this condition, wash and spin do not operate normally)</p>	<div data-bbox="574 414 1125 504">Is a low-sudsing detergent used?</div> <div data-bbox="782 504 917 548">YES</div> <div data-bbox="574 560 1125 660">Is the proper amount of detergent used as recommended?</div> <div data-bbox="782 660 917 705">YES</div> <div data-bbox="574 705 1125 795">Recommend to reduce the amount of detergent.</div> <div data-bbox="622 817 1332 985"> <ul style="list-style-type: none"> * This appliance has an automatic suds sensing function which prevents overflow. * When excessive suds are sensed, the suds removing implementations such as drain, water input, pause will operate, without rotating the drum. </div> <div data-bbox="1189 425 1380 593">  <p>LOW-SUDSING</p> </div>
<p>Liquid laundry products do not flow in.</p>	<div data-bbox="574 1075 1125 1164">Is liquid laundry product put in the correct compartment of the dispenser?</div> <div data-bbox="782 1164 917 1209">YES</div> <div data-bbox="574 1220 1125 1310">Is the cap clogged?</div> <div data-bbox="782 1310 917 1355">YES</div> <div data-bbox="574 1355 1125 1444">Explain proper use of liquid laundry products.</div> <div data-bbox="606 1444 893 1568"> <p>Clean the compartment.</p> </div> <div data-bbox="1141 1120 1396 1500">  <p>(1) Main Wash Compartment (2) Liquid fabric Softener Compartment (3) Prewash Compartment</p> </div>
	<div data-bbox="574 1668 1125 1736">Visit to service.</div>

8-2. FAULT DIAGNOSIS AND TROUBLESHOOTING


⚠ CAUTION

1. Be careful of electric shock if disconnecting parts while troubleshooting.
2. First of all, check the connection of each electrical terminal with the wiring diagram.
3. If you replace the MAIN PWB ASSEMBLY, reinsert the connectors correctly.

NO POWER

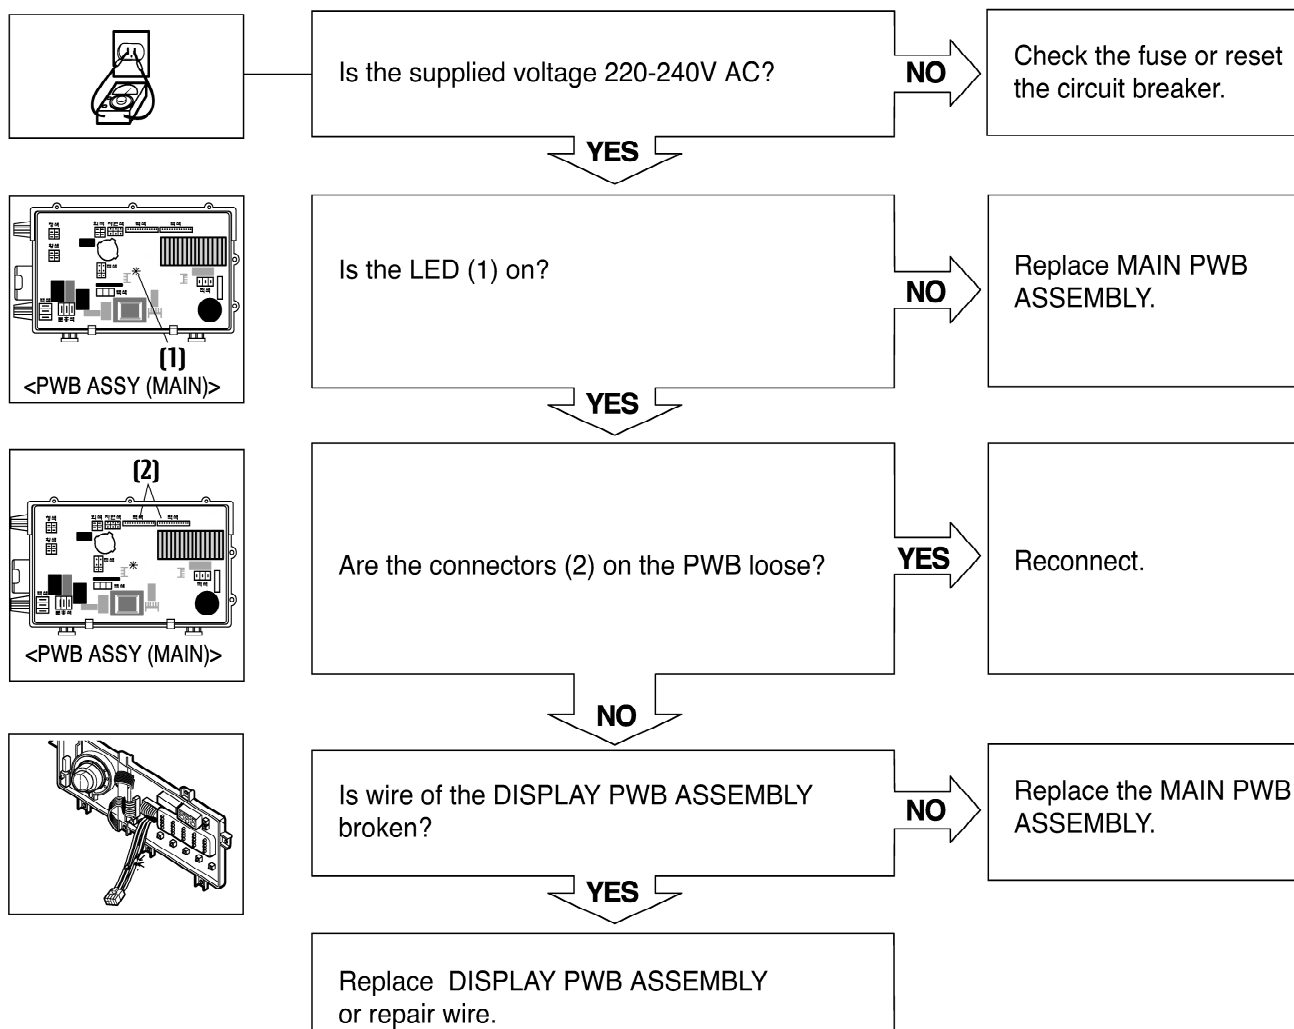

VIBRATION & NOISE IN SPIN

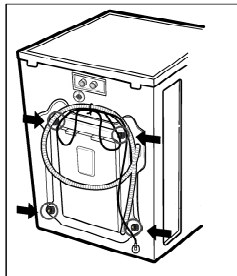

Have all the transit bolts and base packing been removed?

NO

Remove the transit bolts and Base packing.

YES

Is the washer installed on a solidly constructed floor?

NO


Move the washer or reinforce the floor.

YES




Check if the washer is perfectly level as follows:

Level

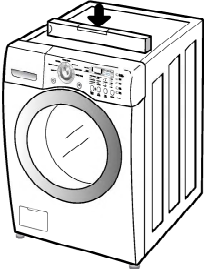

Check the leveling of the washer with a Level and check that the washer is stable.


Put an unbalance part (rubber) inside of drum and start QC test mode and run in high spin (Refer to section 7-2). When the machine is spinning in high speed, verify that it is stable.

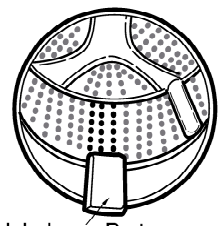

If you do not have the unbalance part, put 4.5 to 6.5 lbs (2 to 3 kg) of clothing. Once loaded, press power, Rinse+Spin and the start/pause button in sequence. When the machine is spinning in high speed, verify that it is stable.

YES


If it is not stable, adjust feet accordingly. After the washer is level, tighten the lock nuts up against of the base of the washer. All lock nuts must be tightened.

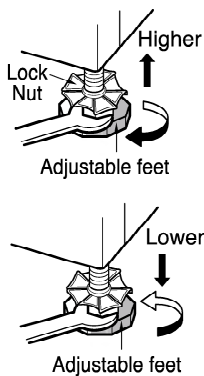


If it still has severe vibration and noise, regulate a specific spin speed that generates excessive vibration and noise as follows:

- 1) Put an unbalance part (rubber) inside of the drum.
 - 2) Start the QC test mode (Refer to section 7-2).
 - 3) Press Delay Wash button, then ' 55 ' is displayed.
 - 4) Press the Spin Speed button repeatedly to select Extra High.
 - 5) Press the Quick Cycle button, the spin speed is displayed.
 - 6) Press the Start/Pause button.
 - 7) Press the Beeper button repeatedly to set spin speed (600, 800, 1000, 1200 rpm) and check if there is vibration and noise.
 - 8) If there is no vibration and noise, increase the spin speed by pressing Beeper button.
 - 9) If there is vibration and noise, rotate the Cycle selector knob clockwise to reduce the Spin Speed (reduce by 50 and 100 rpm). In case of 600 rpm, it can not reduce the spin speed.
 - 10) If vibration and noise are reduced, press the Quick Cycle button to store (2 beep sounds).
- * If you want to return to factory default spin speed setting, repeat above steps except step 9).


NO WATER SUPPLY

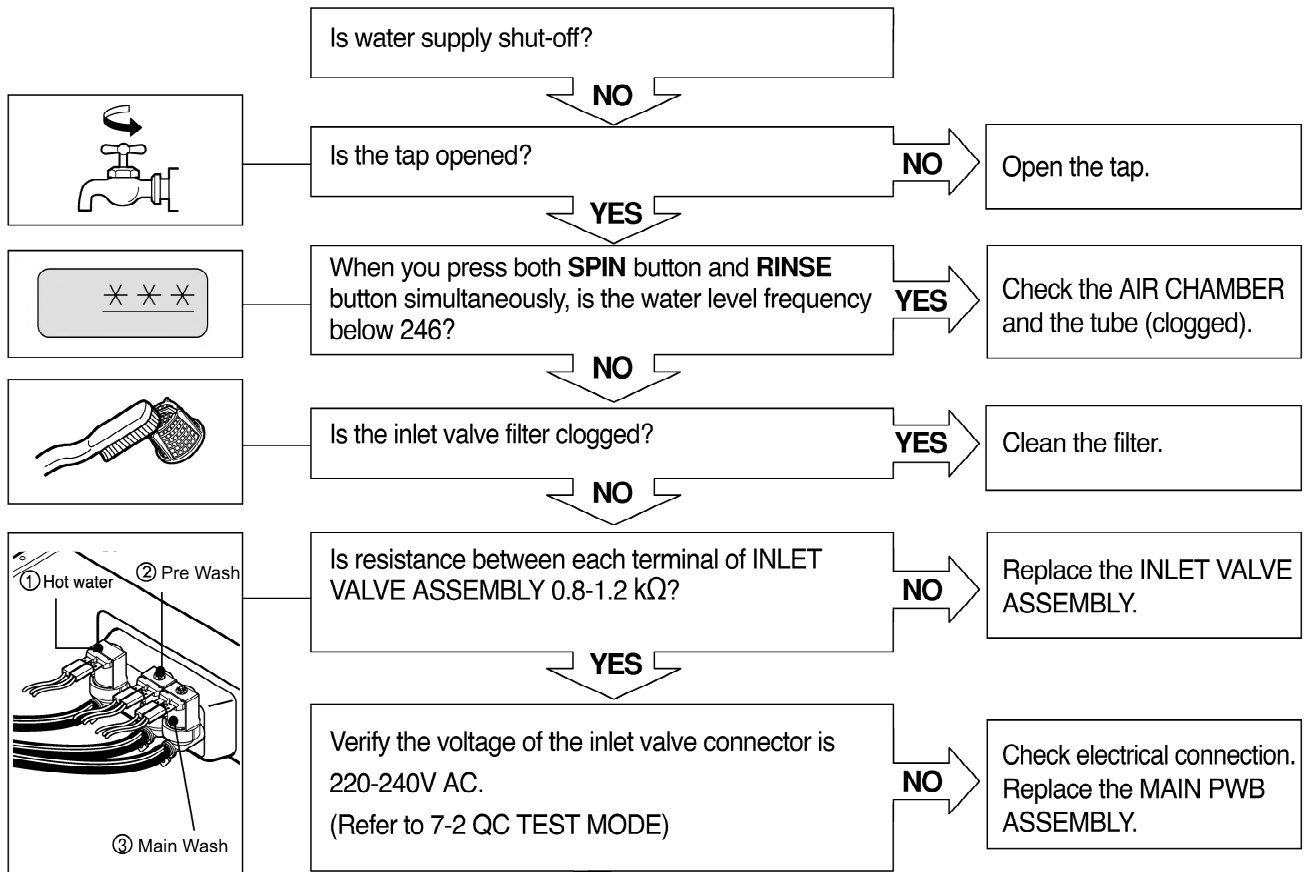

DETERGENT DOES NOT FLOW IN

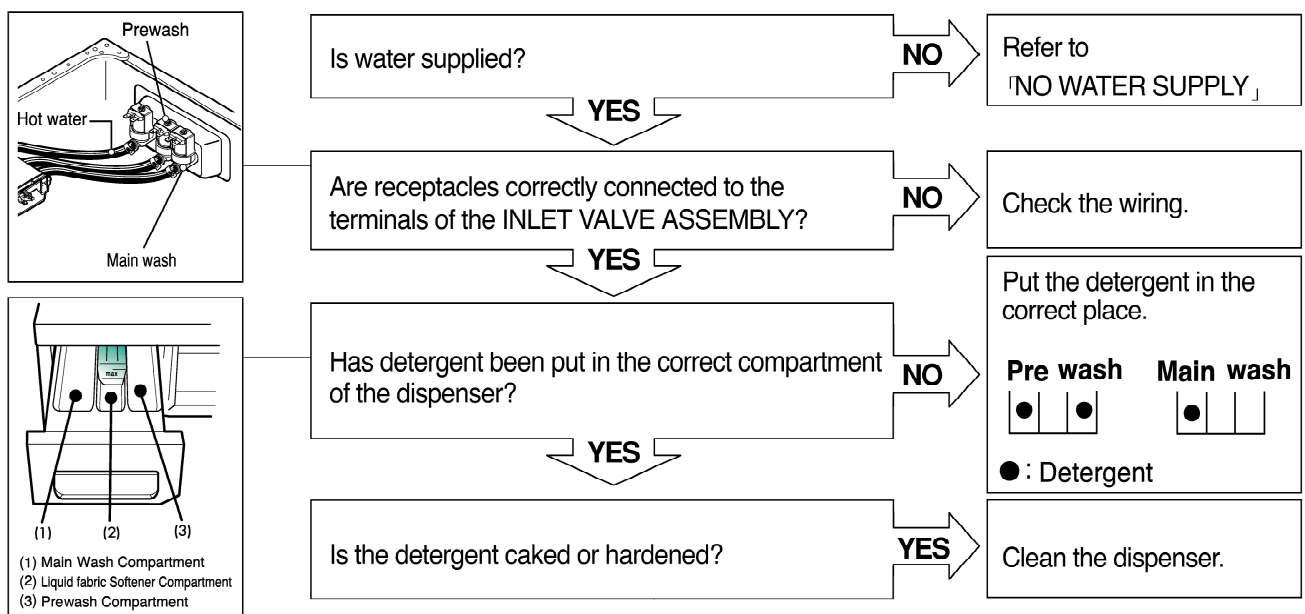

LIQUID DETERGENT/SOFTENER DOES NOT FLOW IN

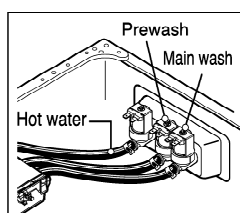

Is water supplied?

NO

Refer to
「NO WATER SUPPLY」

YES

Are the plugs correctly connected to the terminals of
the INLET VALVE ASSEMBLY?

NO

Check the wiring on the
dispenser.



YES

Is liquid detergent/softener/bleach put in the correct
compartment of the drawer?

NO

Put it in the correct
compartment.

YES

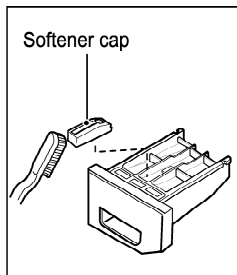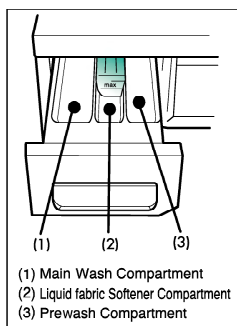


Is the liquid detergent/softener/bleach cap clogged?

YES

Clean the Cap and
Container.

ABNORMAL SOUND

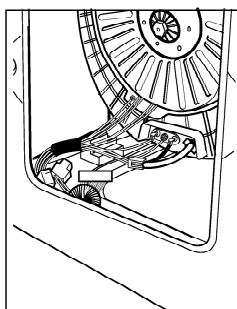

Is the motor bolt loosened?

YES

Secure the bolt.


NO

Is there friction noise coming from the motor?


YES

Replace the STATOR
ASSEMBLY or ROTOR
ASSEMBLY.


HEATING WITHOUT WATER

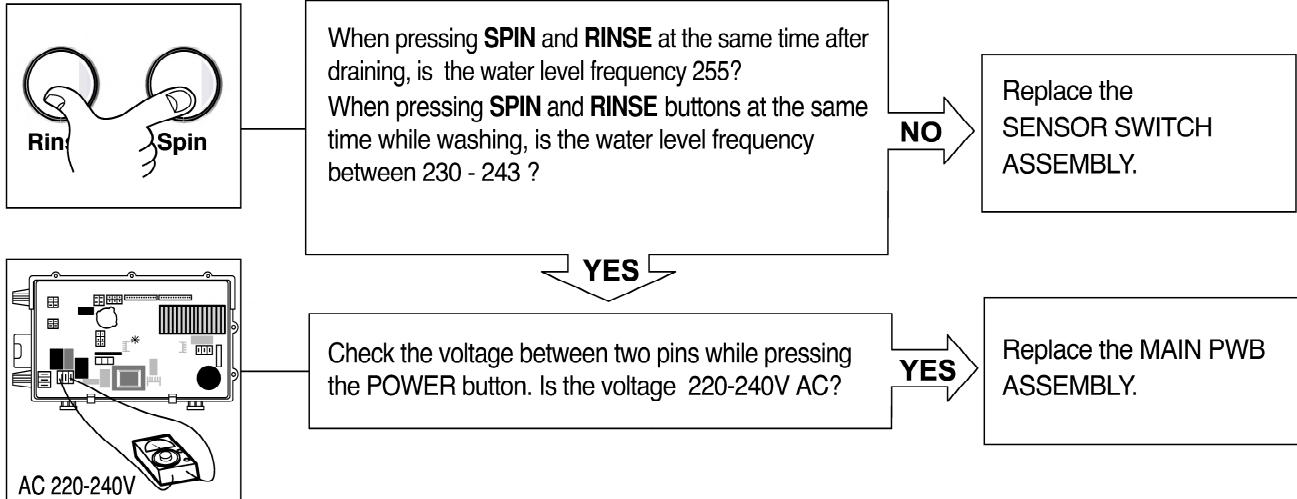


DRAIN MALFUNCTION

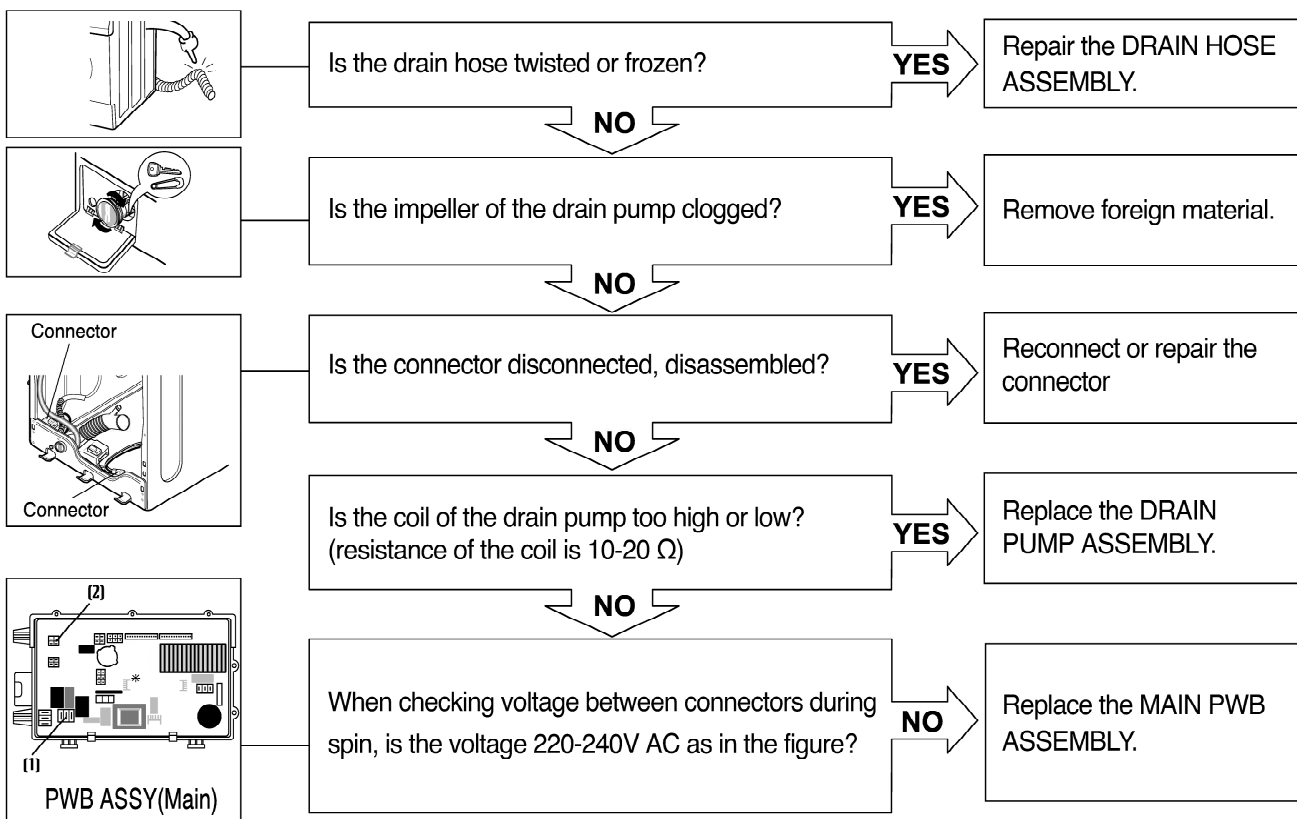


WASH HEATER TROUBLE

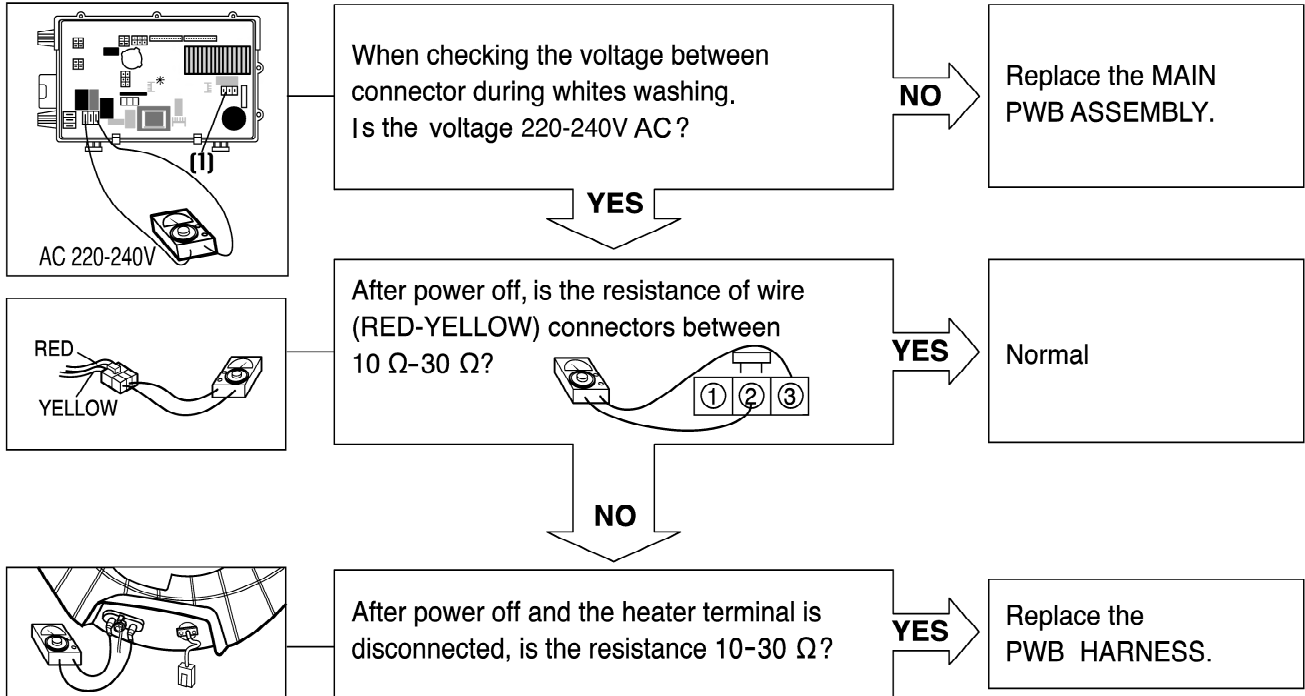

HEATING CONTINUOUSLY ABOVE THE SETTING WATER TEMPERATURE

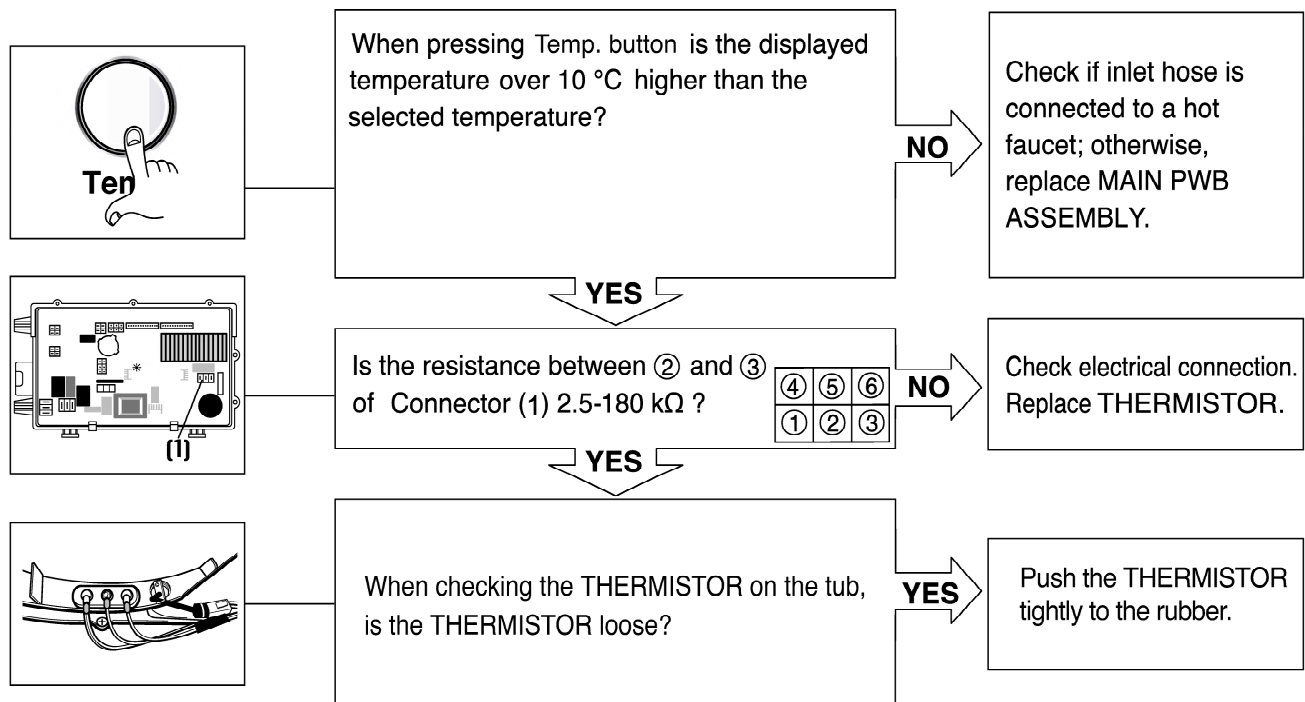

WILL NOT CIRCULATE WATER

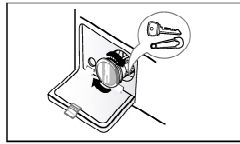


Is the impeller of the drain pump clogged?

YES

Remove foreign material.

NO

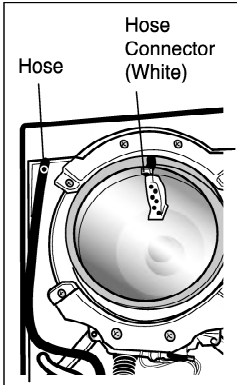


Are the Hose Connector and/or Hose clogged?

YES

Remove foreign material.

NO

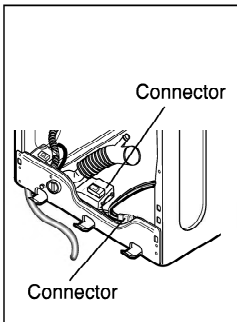

Is the connector disconnected, disassembled?

YES

Reconnect or repair the connector.

NO

Is the coil of the right side of drain pump open or short circuited? (Coil R is 18-30 Ω)

YES

Replace PUMP MOTOR ASSEMBLY.


NO

When checking voltage between the connectors during spin, is the voltage 220-240V AC, as the figure?


NO

Replace the MAIN PWB ASSEMBLY.

SPIN TROUBLE

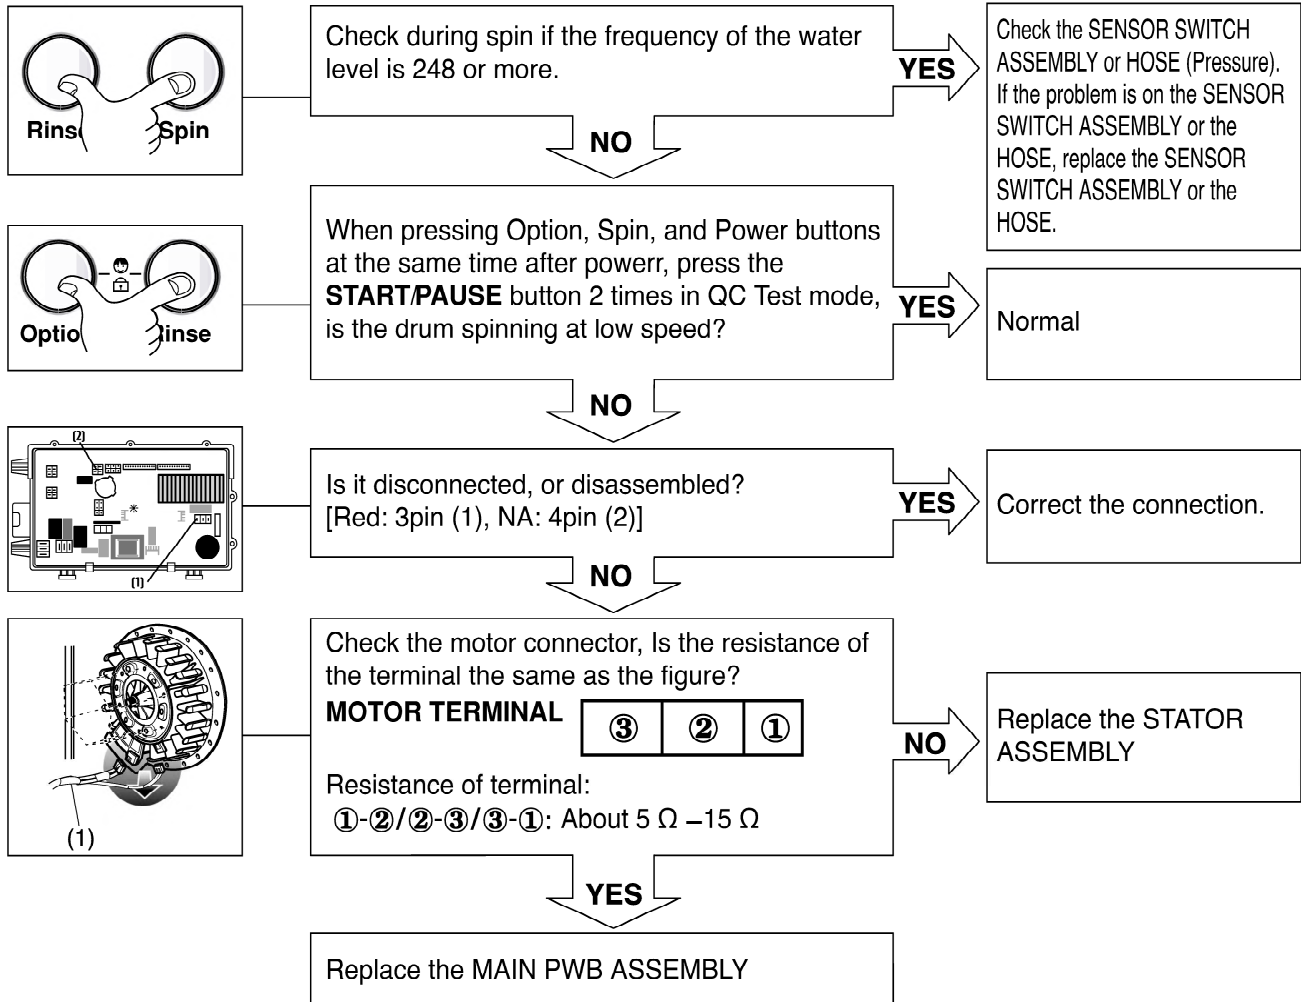


ERROR

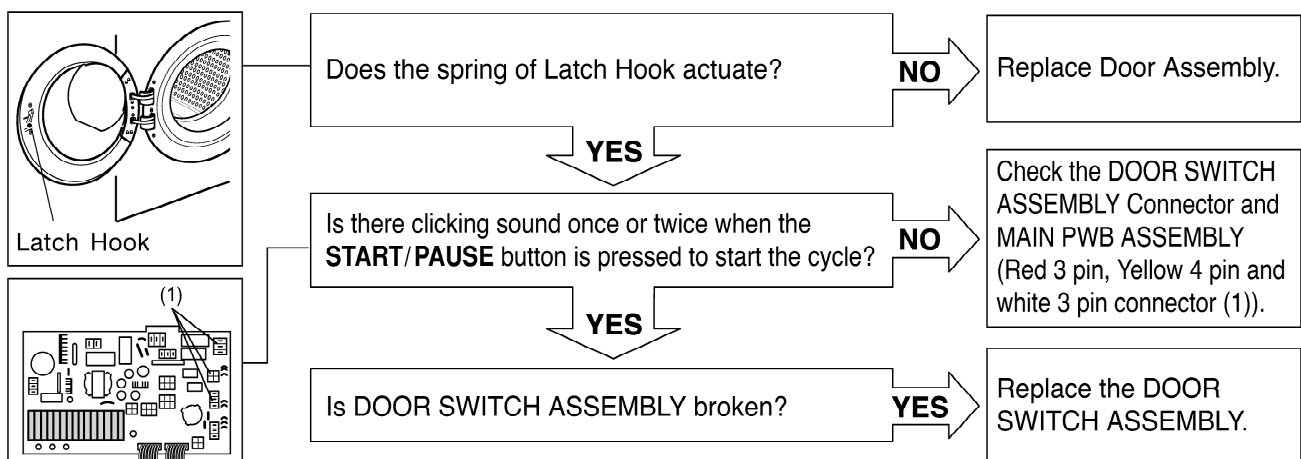


9. DISASSEMBLY INSTRUCTIONS

* Be sure to unplug the machine out of the outlet before disassembling and repairing the parts.



CONTROL PANEL ASSEMBLY

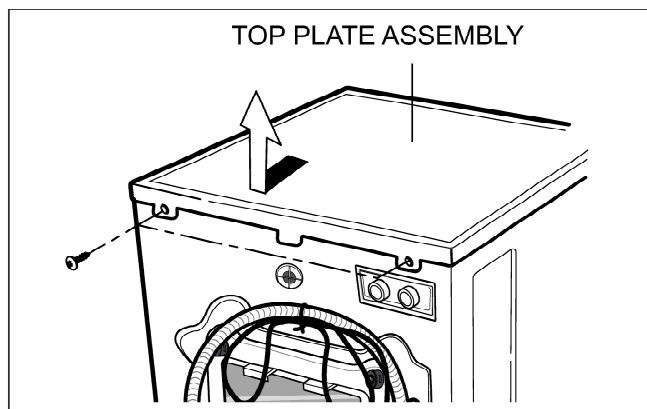

- ① Unscrew 2 screws on the back of the top plate.
- ② Pull the top plate backward and upward as shown.

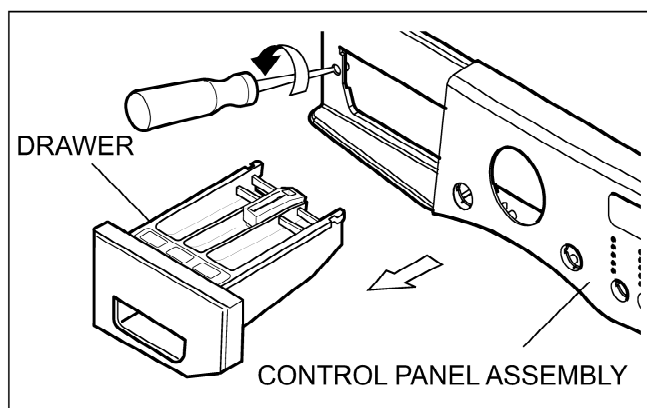


 - ③ Disconnect the Display PWB Assembly connector from Trans cable.
- ④ Pull out the drawer and unscrew 2 screws.
- ⑤ Lift the left side of the Control Panel Assembly and pull it out.

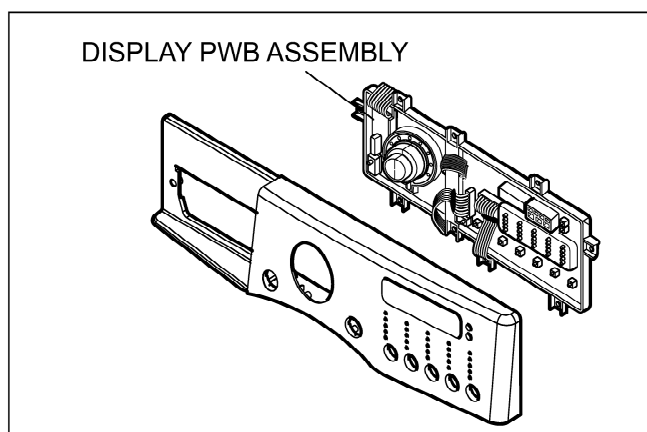


- ⑥ Unscrew the 9 screws from the Control Panel Assembly.
- ⑦ Disassemble the Display PWB Assembly.

MAIN PWB ASSEMBLY(MAIN)

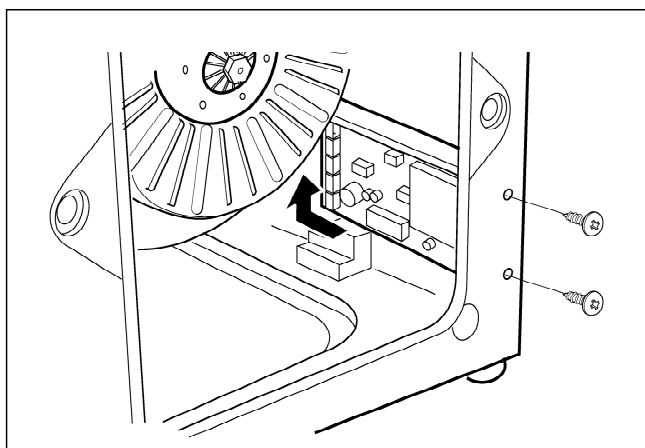


- ① Remove the back cover.
- ② Unscrew 2 screws.
- ③ Pull the Main PWB ASSEMBLY as shown.

DISPENSER ASSEMBLY

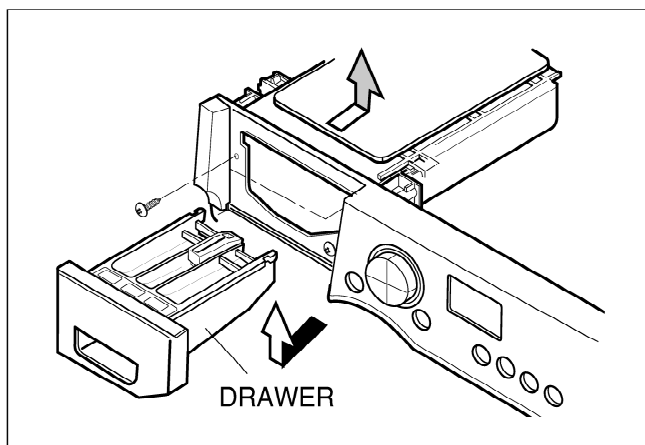

- ① Disassemble the top plate assembly.
- ② Pull out the drawer.
- ③ Push out the DISPENSER ASSEMBLY after unscrew 2 screws.

- ④ Unscrew the nut at the lower part of the dispenser.

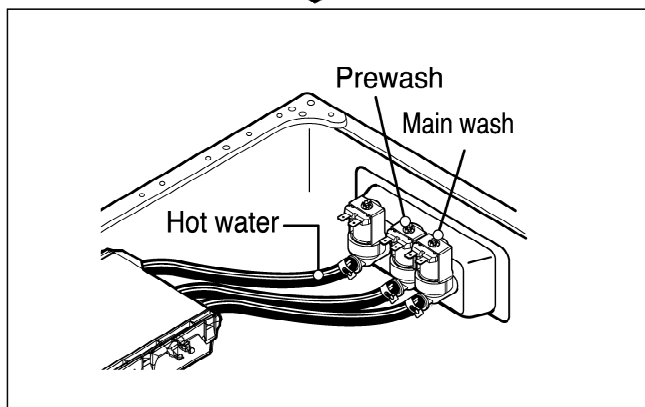


- ⑤ Disassemble the 2 or 3 connectors from the valves.

※ Wire Color

- ① Blue Housing (BK-GR/WH)
- ② White Housing (BK-WH/BK)
- ③ Red Housing (BK-BL/RD)


- ⑥ Unscrew 2 or 4 screws from the back of the cabinet.

VALVE

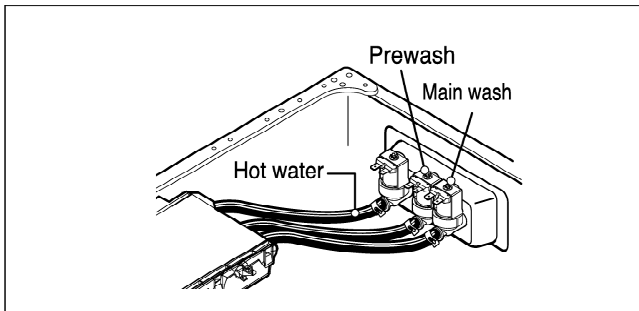


- ① Unscrew a screw from the TOP BRACKET.
- ② Disassemble two connectors from the POWER CORD.


CABINET COVER

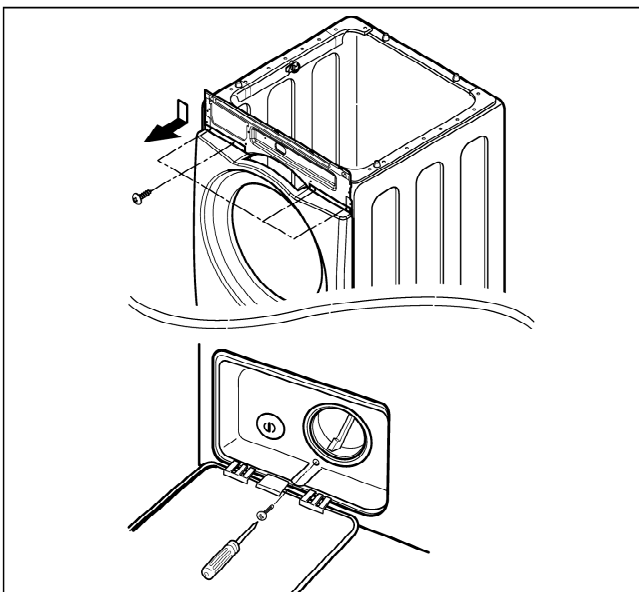


- ① Unscrew the 4 screws from upper of the cabinet cover.
- ② Unscrew the screw from filter cover.

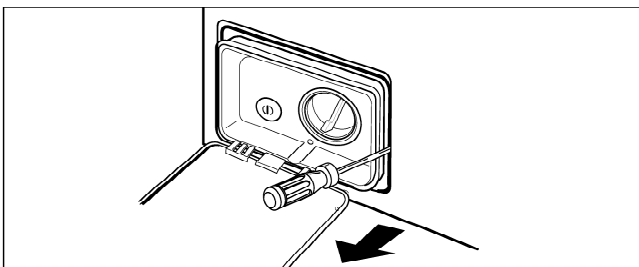

- ③ Put a flat (–) screwdriver or putty knife into the both sides of the filter cover, and pull it out.

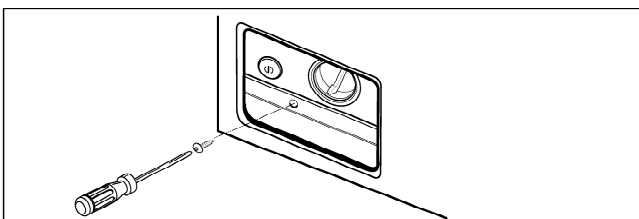


- ④ Unscrew the screw from the lower side of the cabinet cover.

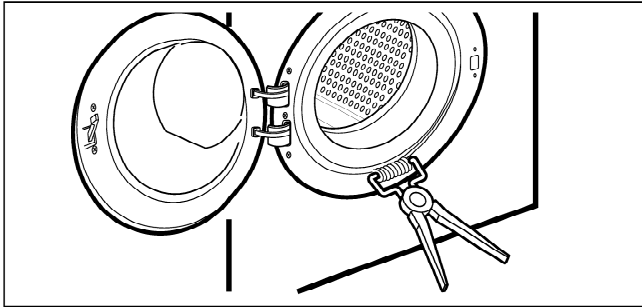

⑤ Open the door.


⑥ Disassemble the clamp assembly.

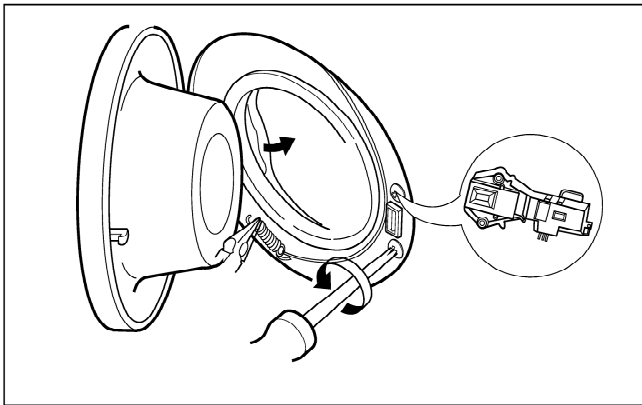


⑦ Tilt the cabinet cover.

⑧ Disconnect the door switch connector.

※ **NOTE:** When assembling the CABINET COVER, connect the connector.

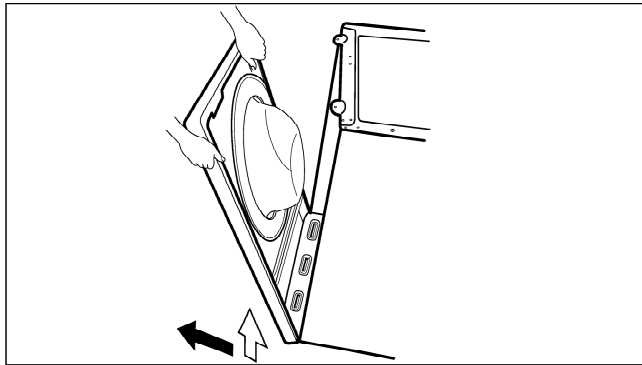


⑨ Lift and separate the cabinet cover.

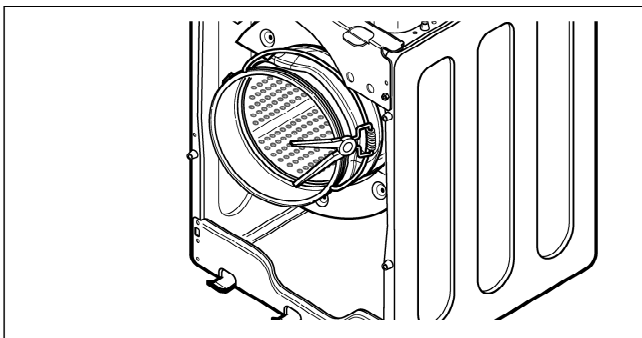

⑩ Disassemble the clamp assembly.

⑪ Disassemble the Gasket.


DOOR

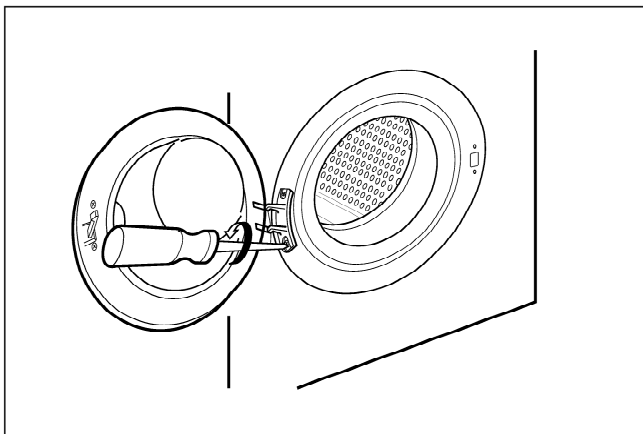

- ① Open the door.
 - ② Remove the two screws from the Hinge.
- ※ When removing the Door Assembly, it is necessary to hold the break is inner of the cabinet cover.

※ **Be careful!** The door is heavy.

DOOR LOCK SWITCH ASSEMBLY

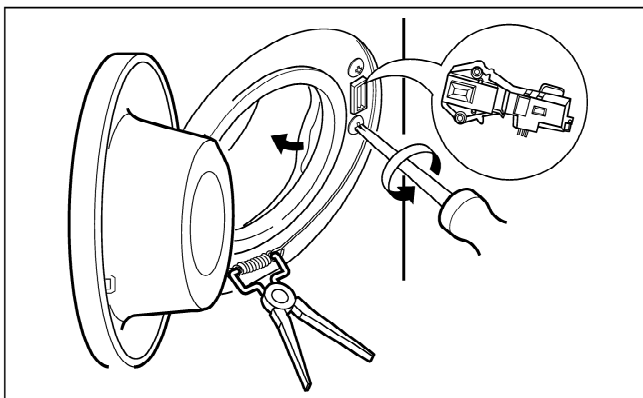


- ① Open the door and disassemble the CLAMP ASSEMBLY.
- ② Unscrew the 2 screws.

※ **NOTE**


- Reconnect the connector after replacing the DOOR SWITCH ASSEMBLY.

PUMP

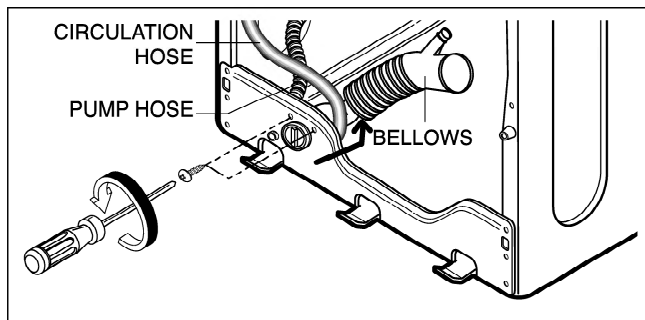

- ① Disassemble the cabinet cover.
- ② Separate the pump hose, the bellows and the circulation hose assembly from the pump assembly.
- ③ Disassemble the pump assembly in arrow direction.

HEATER

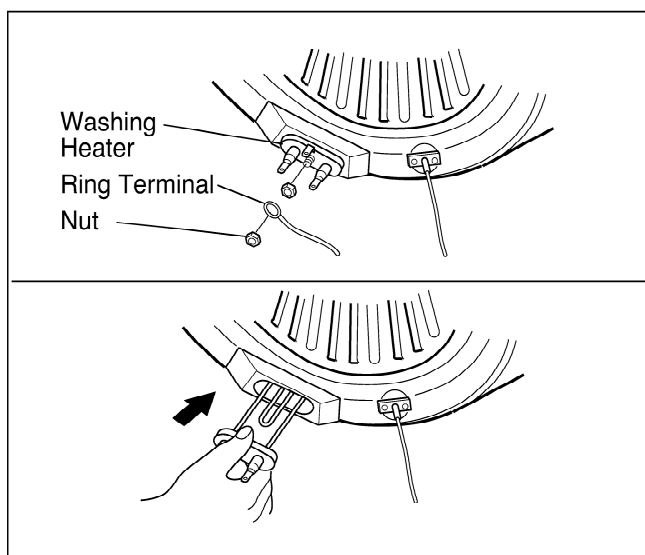


- ① Disassemble the cabinet cover.
- ② Separate 2 connectors from the heater.
- ③ Loosen the nut and pull out the heater.

※ CAUTION


- When assembling the heater, insert the heater into the heater clip on the bottom of the tub.
- Tighten the fastening nut so the heater is secure.

THERMISTOR

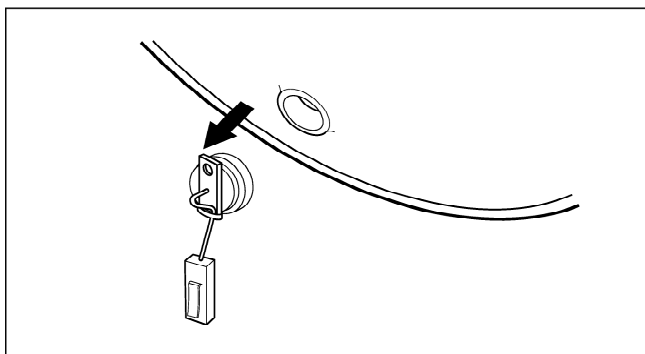


- ① Disassemble the cabinet cover.
- ② Unplug the white connector from the thermistor.
- ③ Pull it out by holding the bracket of the thermistor.

WHEN FOREIGN OBJECT IS STUCK BETWEEN DRUM AND TUB

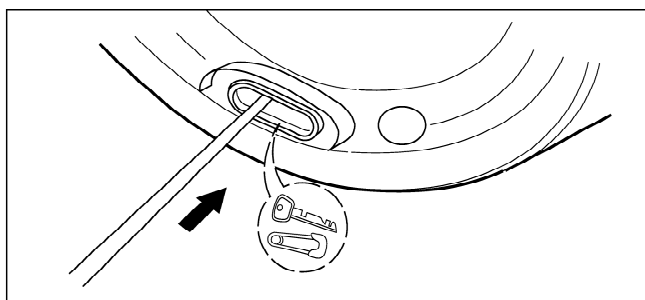


- ① Disassemble the cabinet cover.
- ② Separate the heater from the tub.
- ③ Remove any foreign objects (wire, coin, etc.) by inserting a long bar in the opening.


MOTOR/DAMPER

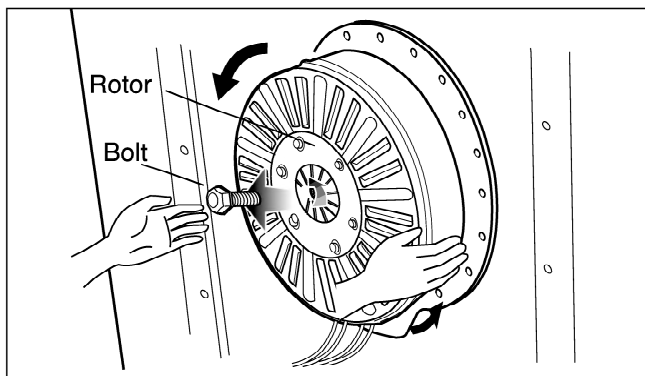

- ① Disassemble the back cover.
- ② Remove the bolt.
- ③ Pull out the Rotor.

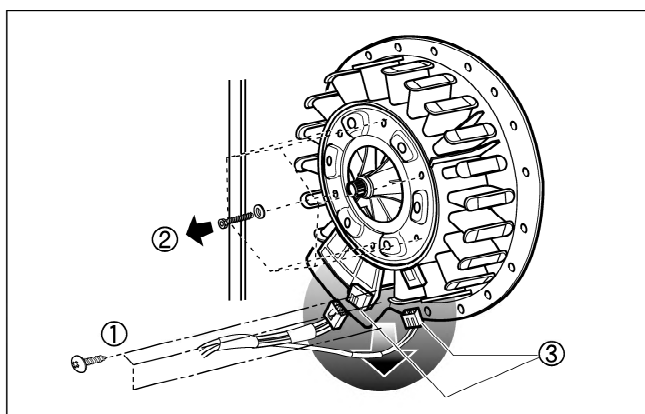

- ① Unscrew the 2 screws from the tub bracket.
- ② Remove the 6 bolts on the stator.
- ③ Unplug the 2 connectors from the stator.

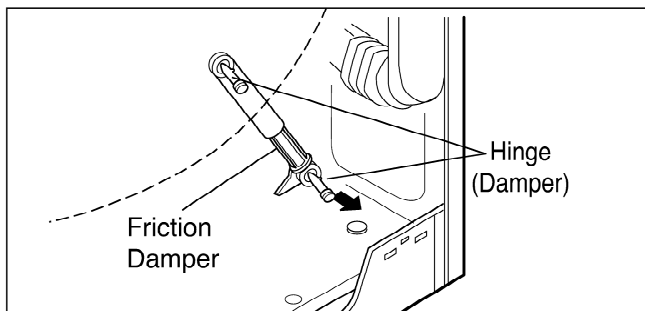


- ① Disassemble the damper hinges from the tub and base.
- ② Separate the dampers.

※ NOTE

- Once removed, replace the damper with new one.



10-2. DRUM & TUB ASSEMBLY

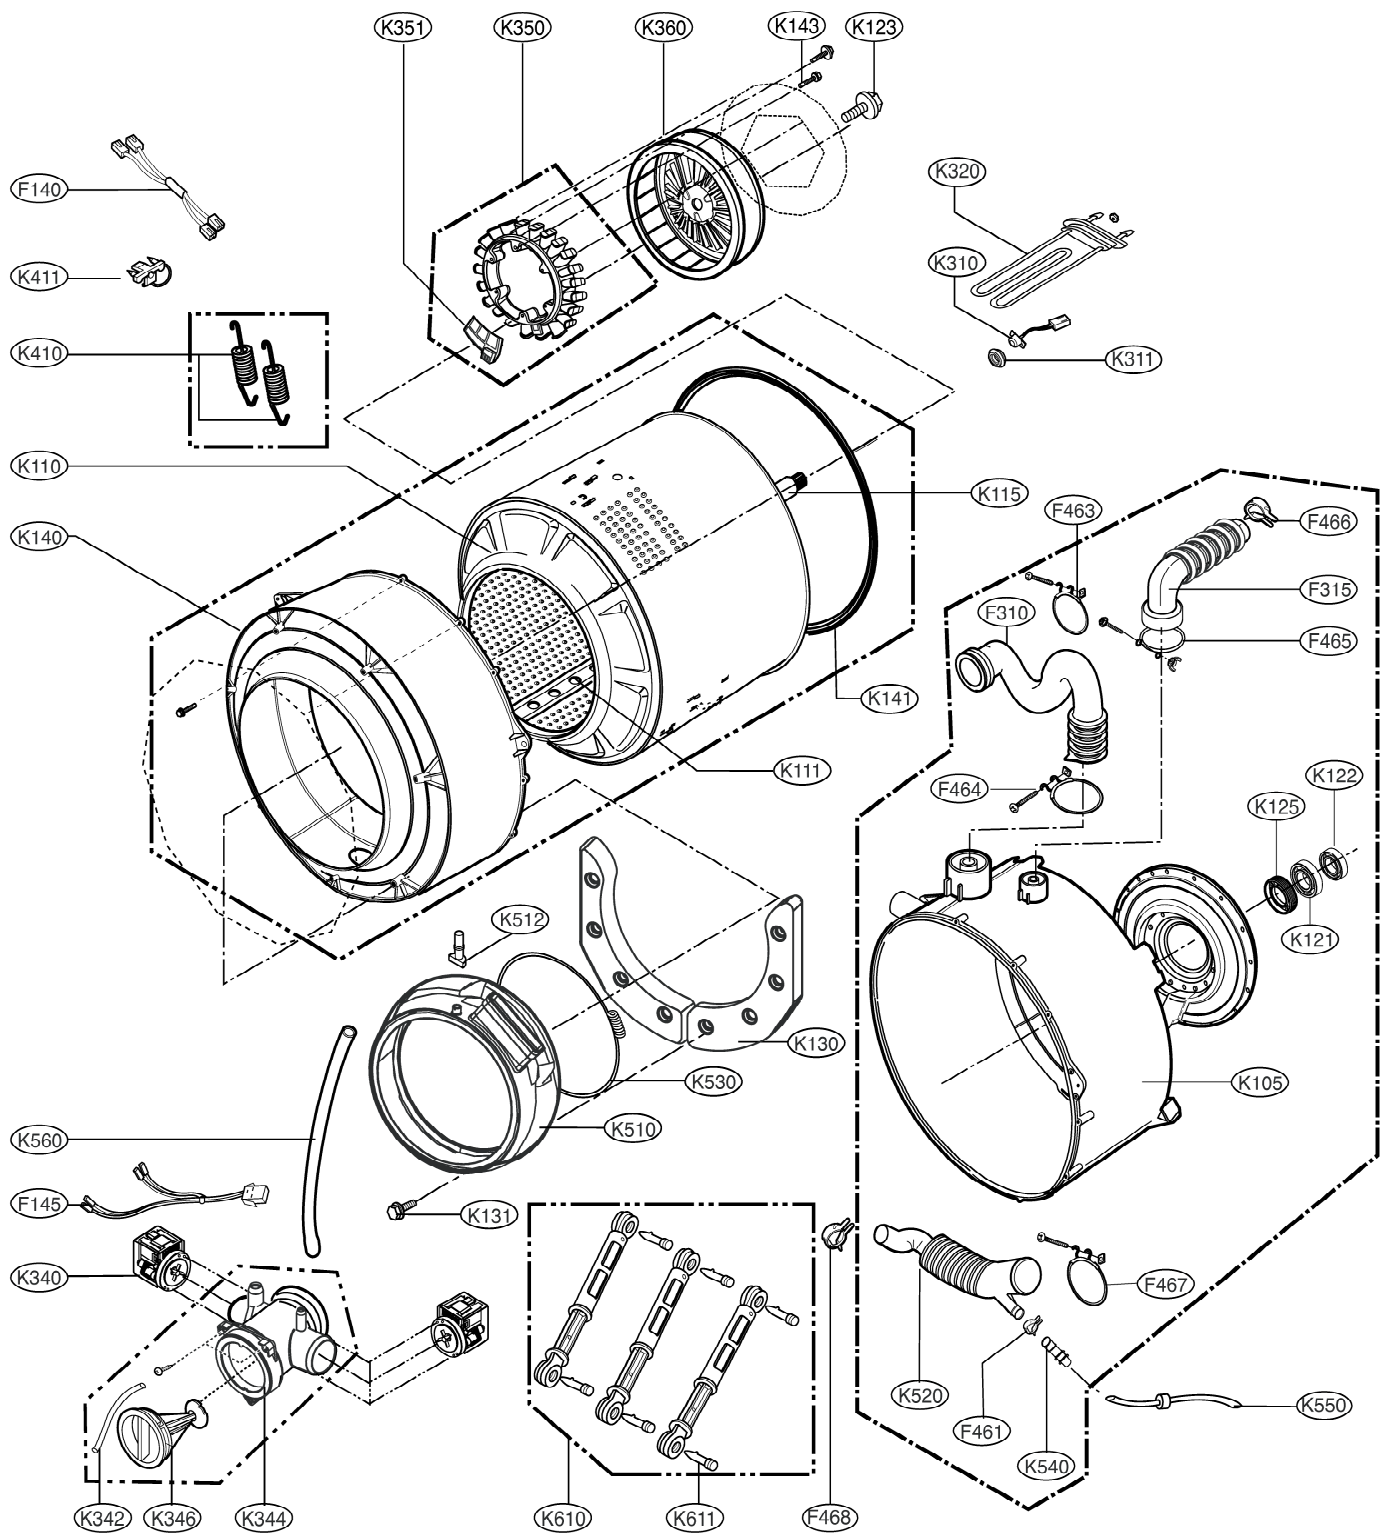

10-3. DISPENSER ASSEMBLY

