

2.2 EXTERIOR (1/3)

Mark No. Description

Part No.

NSP	1	CD SINGLE MECHA ASSY	RXA1672
	2	CD HOLDER L	ANG7023
	3	CD HOLDER R	ANG7024
	4	
	5	
	6	VOL. KNOB	AAB7051
	7	
	8	DECK WINDOW L	AAK7136
	9	DECK WINDOW R	AAK7137
	10	TRAY CAP	AAK7139
	11	MOLD	AAK7142
	12	BONNET	AZN7210
	13	SCREW	BBZ30P080FZK
	14	SCREW	BBZ30P180FMC
	15	FL WINDOW	AAK7138
NSP	16	CAUTION LABEL (G)	VRW-329
NSP	17	CAUTION LABEL (F)	ARW1046
NSP	18	CAUTION LABEL	ARW1050

Avoid flexible JP wire being caught by flame.

Mic Knob
(SD Type Only)

Refer to "2.3 EXTERIOR (2/3)".

NOTE : Screws adjacent to ▼ mark on the product are used for disassembly.

XR-P150

